



SENSES

aroma clock

With Brainwave Music

User Manual



RM661



SENSES Aroma Clock with Brainwave Music

Model: RM661

User Manual

Precautions	7
About Oregon Scientific	8
EU-Declaration Of Conformity	8
FCC Statement.....	8
Declaration Of Conformity	9
Disposal Information For User	9

INDEX

Introduction	2
Package Contents	2
Overview	2
Main Unit.....	2
LCD Display.....	3
Getting Started	3
Insert Aroma Capsules	3
Install Battery	3
Connect Power Adapter.....	3
Download App	4
Bluetooth Pairing	4
Use The Alarm Clock	5
App Operations	5
Clock Time /Calendar	5
Alarm	5
Mood Light.....	6
Aroma Diffusing	6
Brainwave Music.....	6
Specifications	7

INTRODUCTION


Thank you for selecting the Oregon Scientific™ SENSES Aroma Clock (RM661). This product is an aroma alarm clock with an aroma diffuser, Brainwave music and mood light to offer you a relaxing and harmonious effect. Our dedicated **Senses Aroma Clock App** controls aroma diffusing, music, light and other all settings.

NOTE Please keep this manual handy as you use your new product. It contains practical step-by-step instructions, as well as technical specifications and warning you should know about.

PACKAGE CONTENTS



Main unit x 1



Aroma capsule X 2



CR2032 battery x 1




Micro USB Power adapter x 1



User manual x 1

OVERVIEW

MAIN UNIT

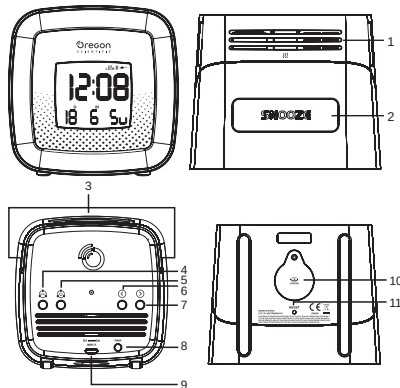


1. Aroma diffusing ports
2. **SNOOZE**
3. Aroma capsule slots
4. **MODE** Press to toggle the functions among aroma diffusing, music and light
5. Press to turn on/off the aroma diffusing, music and light
6. Forward: Next music; Right aroma diffusing; Increase the light brightness



7. ⏮ Backward: Previous music; Left aroma diffusing; Decrease the light brightness
8. **PAIR** Bluetooth pairing button
9. Micro USB input port
10. Battery cover
11. **RESET**

LCD DISPLAY

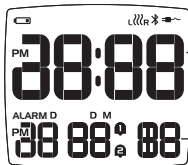

A. Clock time display

B. Calendar/
Weekday display

Symbol	Description
	Low battery indicator
	Aroma diffusing indicator
	Bluetooth icon
	External power supply
	Alarm indicator

GETTING STARTED

INSERT AROMA CAPSULES

There are 2 Aroma slots (left and right) on the two sides of the unit.

Remove the cover of the Aroma slot, insert an aroma capsule, and then replace the cover.

INSTALL BATTERY

1. Screw off the battery compartment cover.
2. Insert a new CR2032 3 V battery, positive (+) side up, and replace the battery compartment cover.
3. Press **RESET**.

NOTE

- The battery is only for back-up use. Always connect the unit to the power grid source via power adapter.
- Keep button-cell battery away from children. Swallowing a button-cell battery can be fatal.
- Replace the battery when displays.

CONNECT POWER ADAPTER

Connect the supplied Micro USB power adapter to the Micro USB input port on the rear of the unit and plug into a standard outlet.

NOTE

- Make sure the adapter is not obstructed and is easily accessible to the unit.
- To completely disconnect from power, unplug adapter from the mains.

DOWNLOAD APP

Ensure your mobile device is compatible with iOS 8 or Android 4.4 with Bluetooth® v4.0.

Search **Senses Aroma Clock** to find the App to download on your smart device. The App is available on both Apple App Store and Google Play store.

OR

Scan the following QR code.



BLUETOOTH PAIRING

1. Press and hold the **PAIR** button for 2 seconds to activate the pairing mode.  icon will flash.
2. Open the App, tap **Search**. Select to connect **OS aroma clock**. The Bluetooth icon lights steady. The home page of the App will display.



**NOTE**


- Bluetooth wireless technology operates within 10 meters (33 ft) range and varies if there are physical obstacles, such as a thick wall in between your smart device and RM661.
- To unpair the device, tap  on the home page of the App, then tap **Unpair**.

USE THE ALARM CLOCK

- Press  to turn on/off the aroma diffusing, music playback and mood light.
- Press **MODE** to toggle the functions among aroma, music and light.
- Press  to listen to the next music; select the right aroma and decrease the light brightness.
- Press  to listen to the previous music; select the left aroma and increase the light brightness.
- Press and hold **SNOOZE** for 3 seconds to turn on/off the backlight of the display.

APP OPERATIONS

You can set the alarm, adjust the mood light color and intensity, and control the Aroma diffusing and music playback on App.

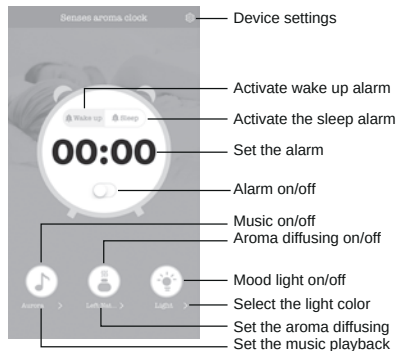**CLOCK TIME /CALENDAR**

The current clock time/calendar will automatically synchronize with the App via Bluetooth.

Tap  on the home page of the App to select the time/date format and the device language. Tap **OK** to save your settings.

ALARM

Tap **Wake up** or **Sleep** on the home page to activate the alarm, then tap the digits or the blank space beside to set the alarm.

NOTE If the two alarms are set on the same day, only the alarm icon of the earlier time will display. If the two alarms are set on different day, the two alarm icons will display at the same time.

Wake up alarm

- Aroma, Mood light and Brainwave music will turn on.
- Only one scent will diffuse in one time, the capsule can not mix to use.
- Only the 4 pieces of music in **Energetic** mode can be selected as the alarm music.
- At scheduled alarm time (T), the alarm cycle starts:
 - T: The scent is diffused.
 - T+2 minutes: The music sounds with light and scent.
 - T+ 4 minutes: The alarm cycle is stopped by user or the Snooze is automatically activated 2 times.
 - Snooze 10 minutes.

Sleep reminder

- Aroma and Brainwave music will turn on.
- Only the 4 pieces of music in **Good Night** mode can be selected as the alarm music.
- At scheduled alarm time (T), the sleep reminder cycle starts:
 - T: Scent and Brainwave music activate together. Only operate one time, no recycle and snooze.
 - T: The scent is diffused, selectable slot L/R, scent diffusing time lasts 10 minutes.
 - T: Brainwave music: selectable music and lasting time on App (10, 20, 30 minutes).
 - No snooze function.

SNOOZE

- Press and hold **SOONZE** for 2 seconds to turn off all alarm functions. The alarm will reactivate the next scheduled alarm time unless deactivated.
- Press **SNOOZE** on the main unit to stop the wake up alarm for 10 minutes.

MOOD LIGHT

Tap  on App to turn on/off the light. Tap **Light** to select the light color and adjust the brightness.

NOTE The actual mood light color may not match the selected color in App.

AROMA DIFFUSING

Tap  on App to turn on/off the aroma diffusing. Tap **Aroma** to set the aroma duration (5, 10, 15 minutes) and select aroma scent. Tap **OK** to save your settings.

BRAINWAVE MUSIC

There are 3 music modes with 12 embedded brainwave music. Tap  on App to turn on/off the music and tap **Music** to select the music to play.



Mood Type	Brainwave Music Name (#)			
	Music 0	Music 1	Music 2	Music 3
Energetic	Aurora	Ener-gise	Revital-ise	Garden
Stress Relief	Whale	Sea-shore	Jungle	Thunder
Good Night	Summer	Tran-quility	Hawaii	Unwind

SPECIFICATIONS

Input power	5 V, 2 A Micro USB power adapter
Battery	CR2032 (for back-up source)
Frequency range	2.40 GHz - 2.48 GHz
Bluetooth	Version 4.0
L x W x H	10.95 x 10.95 x 8.88 cm (4.3 x 4.3 x 3.5 in)
Weight	380 g (0.84 lb)

PRECAUTIONS

- Use only fresh battery of the required size and type.
- Do not dispose old batteries as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.
- If you do not plan to use the unit for a long time, remove the battery. Battery can leak chemicals that can damage electronic parts.
- Do not subject the device to excessive force, shock, dust, temperature or humidity.
- Do not immerse the device in water. If you spill liquid over it, dry it immediately with a soft, lint-free cloth.
- Do not clean the device with abrasive or corrosive materials.
- Do not tamper with the device's internal components. Doing so invalidates the warranty.
- Images shown in this manual may differ from the actual display.
- When disposing of this product, ensure it is collected separately for special treatment.
- The contents of this manual may not be reproduced without the permission of the manufacturer.

NOTE The technical specifications for this product and the contents of the user manual are subject to change without notice.

NOTE Features and accessories will not be available in all countries. For more information, please contact your local retailer. To download an electronic version of the user manual, please visit <http://global.oregonscientific.com/customerSupport.php>.

ABOUT OREGON SCIENTIFIC

Visit our website www.oregonscientific.com to learn more about Oregon Scientific products.

For any inquiry, please contact our Customer Service at info@oregonscientific.com.

Oregon Scientific Global Distribution Limited reserves the right to interpret and construe any contents, terms and provisions in this user manual and to amend it, at its sole discretion, at any time without prior notice. To the extent that there is any inconsistency between the English version and any other language versions, the English version shall prevail.

EU-DECLARATION OF CONFORMITY

Hereby the manufacturer, Oregon Scientific Global Distribution Limited, declares that the radio equipment type SENSES Aroma Clock with Brainwave Music (Model: RM661) is in compliance with 2014/53/EU Directive. The full text of the EU Declaration of Conformity is available at the following internet address:

<http://global.oregonscientific.com/customerSupport.php>



COUNTRIES RED APPROVED COMPLIED

All EU countries, Switzerland 
and Norway 

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.



- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

DECLARATION OF CONFORMITY

The following information is not to be used as contact for support or sales. Please call our customer service number (listed on our website at www.oregonscientific.com), or on the warranty card for this product) for all inquiries instead.

declare that the product

Product No.: RM661
Product Name: SENSES Aroma Clock
with Brainwave Music

is in conformity with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
1) This device may not cause harmful interference. 2) This device must accept any interference received, including interference that may cause undesired operation.

DISPOSAL INFORMATION FOR USER



Pursuant to and in accordance with Article 14 of the Directive 2012/19/EU of the European Parliament on waste electrical and electronic equipment (WEEE), and pursuant to and in accordance with Article 20 of the Directive 2013/56/EU of the European Parliament on batteries and accumulators and waste batteries.

The barred symbol of the rubbish bin shown on the equipment indicates that, at the end of its useful life, the product must be collected separately from other waste.

Please note that the batteries/rechargeable batteries must be removed from the equipment before it is given as waste. To remove the batteries/accumulators refer to the specifications in the user manual. Therefore, any products that have reached the end of their useful life must be given to waste disposal centers specializing in separate collection of waste electrical and electronic equipment, or given back to the dealer when purchasing a new WEEE, pursuant to and in accordance with Article 14 as implemented in the country.



EN

The adequate separate collection for the subsequent start-up of the equipment sent to be recycled, treated and disposal of in an environmentally compatible way contributes to preventing possible negative effects on the environment and health and optimizes the recycling and reuse of components making up the apparatus.

Abusive disposal of the product by the user involves application of the administrative sanctions according to the laws in force.

