





## Freq. Stability NVNT a 5240MHz Ant0

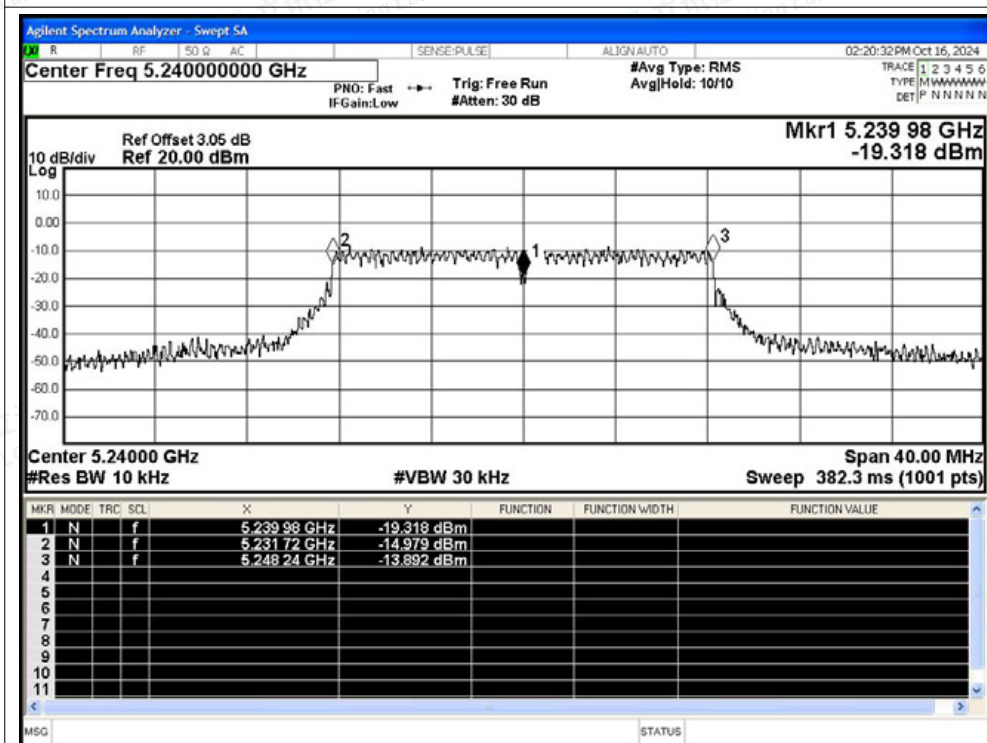


## Freq. Stability NVNT n20 5180MHz Ant0

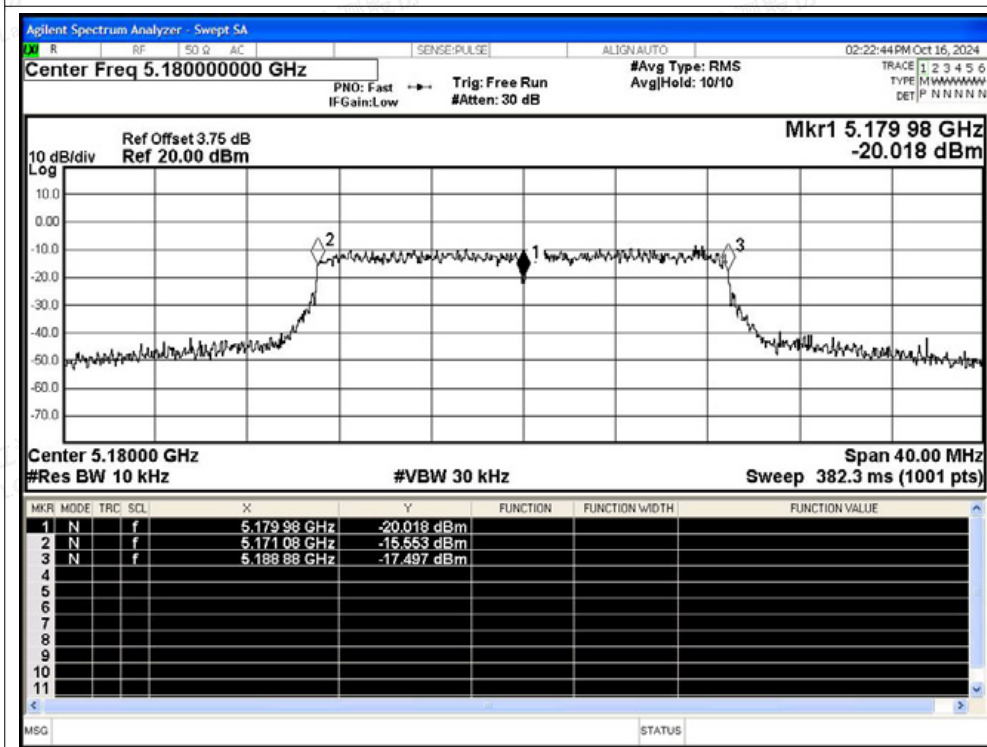




## Freq. Stability NVNT n20 5200MHz Ant0

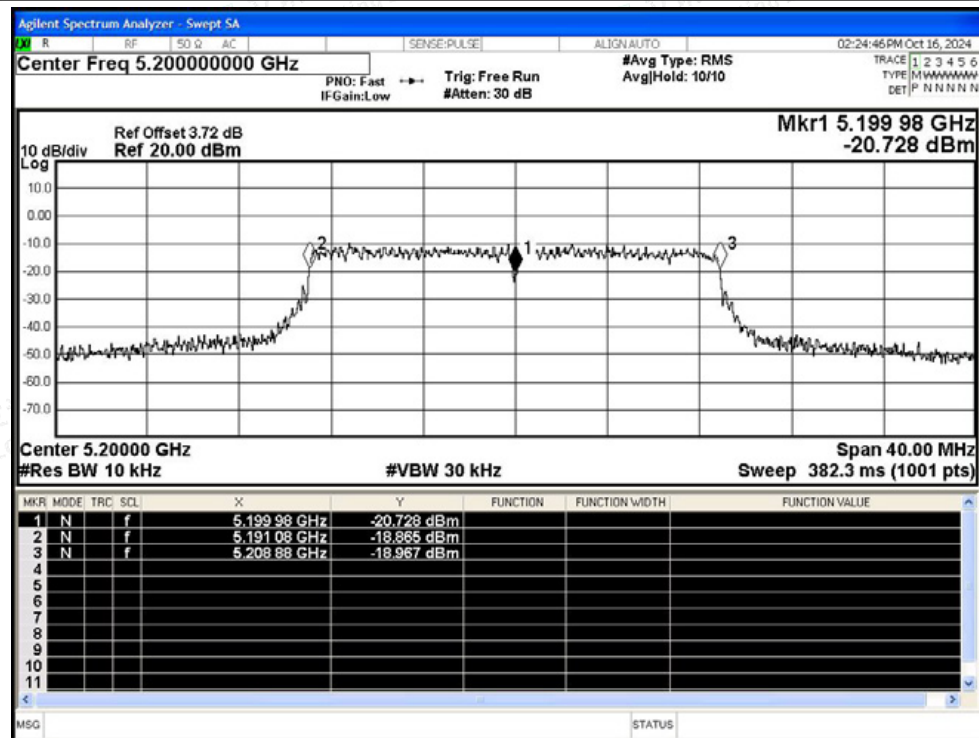


## Freq. Stability NVNT n20 5240MHz Ant0

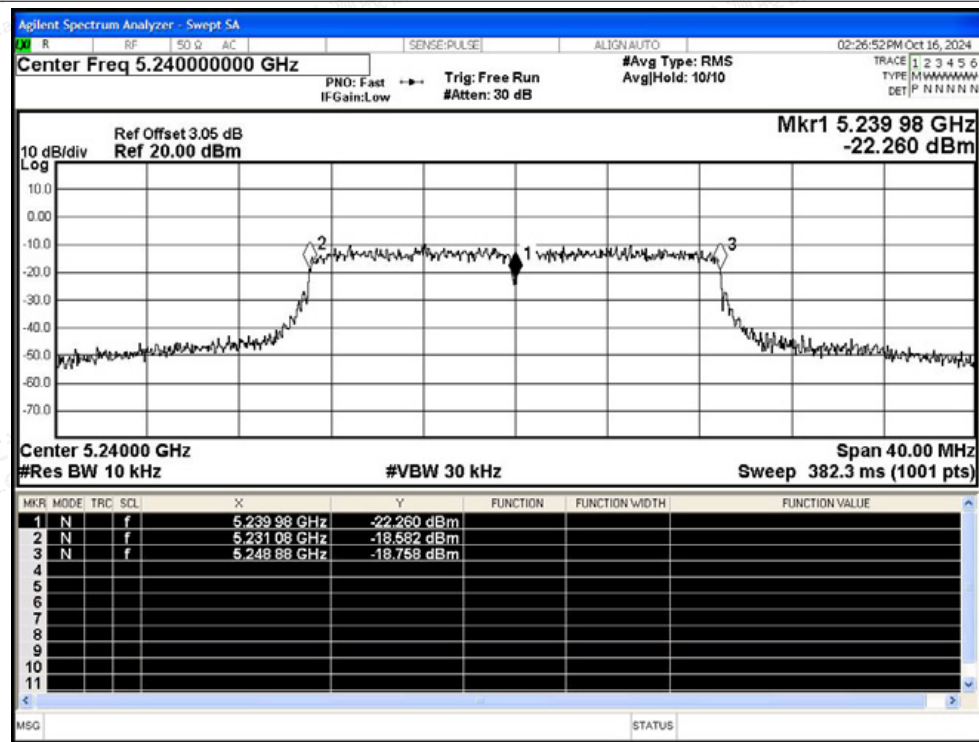




## Freq. Stability NVNT n40 5190MHz Ant0

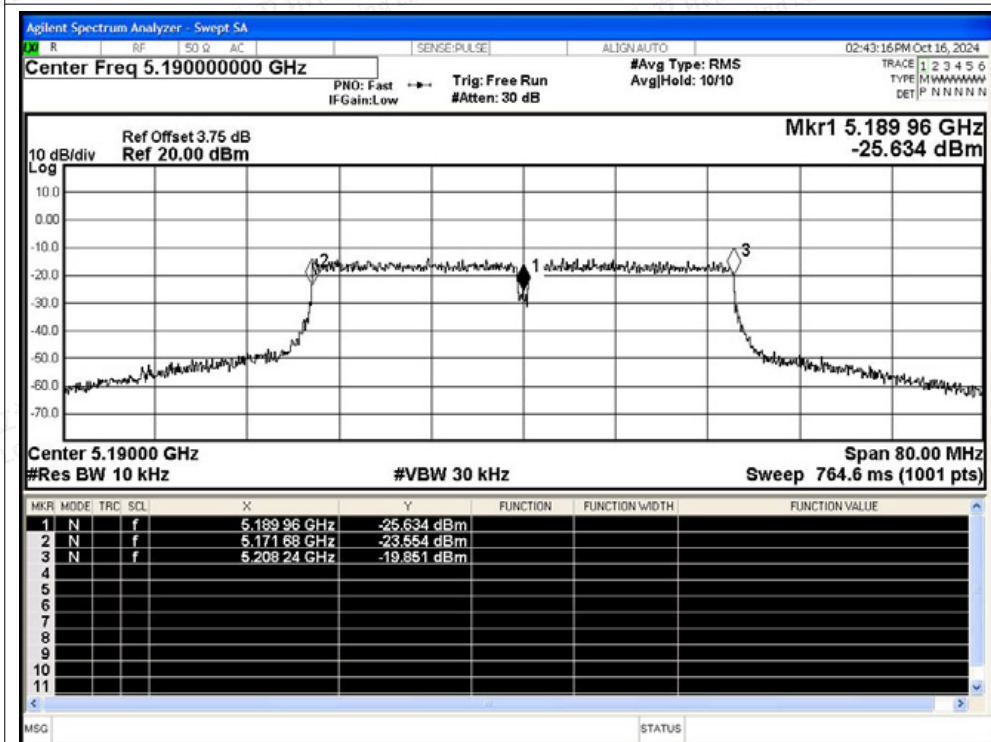


## Freq. Stability NVNT n40 5230MHz Ant0

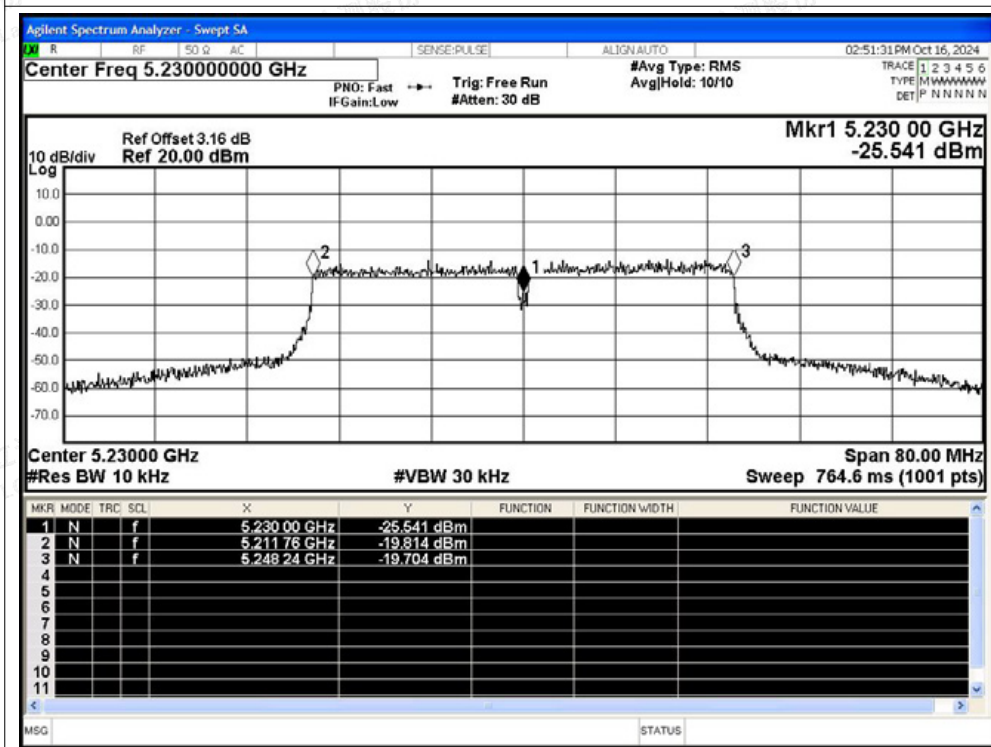




## Freq. Stability NVNT ac20 5180MHz Ant0

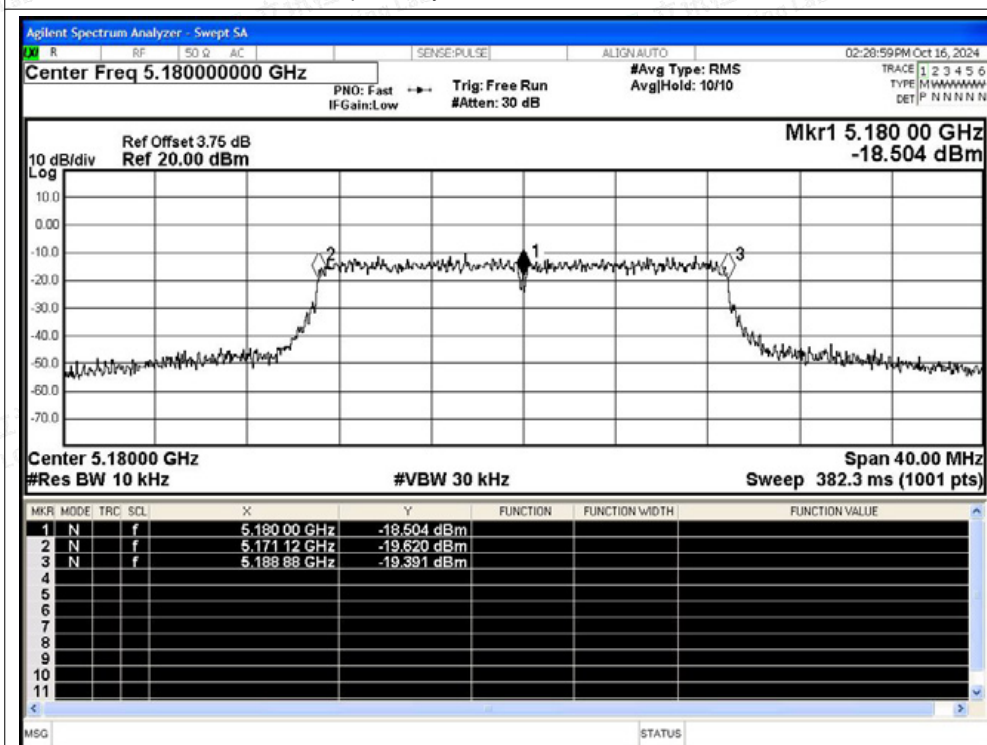


## Freq. Stability NVNT ac20 5200MHz Ant0

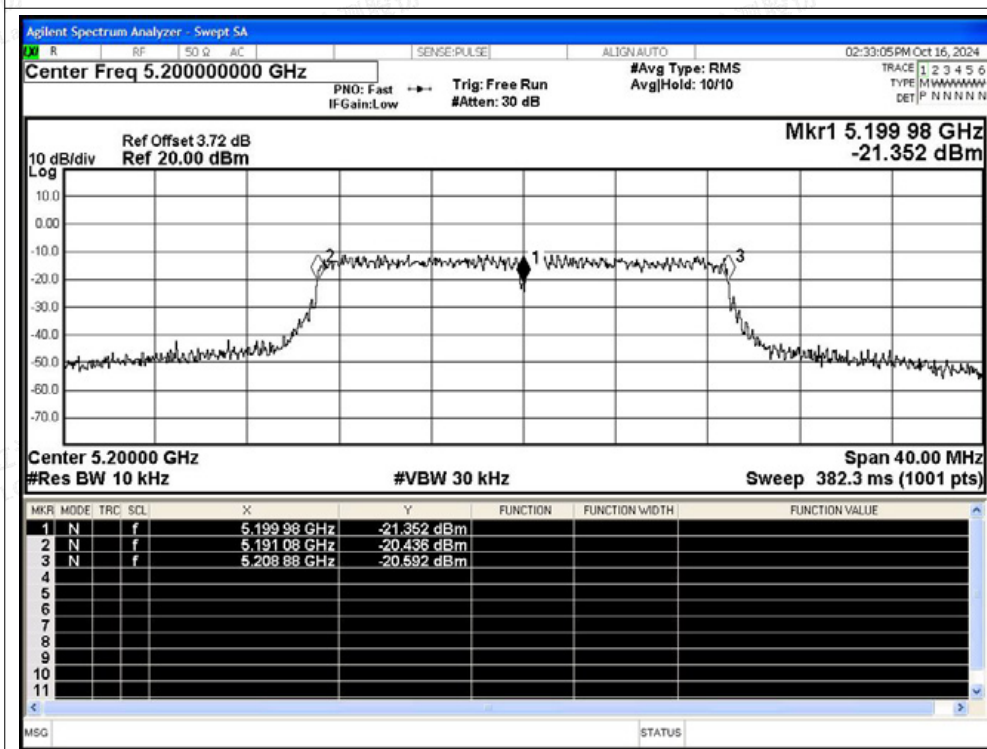





## Freq. Stability NVNT ac20 5240MHz Ant0

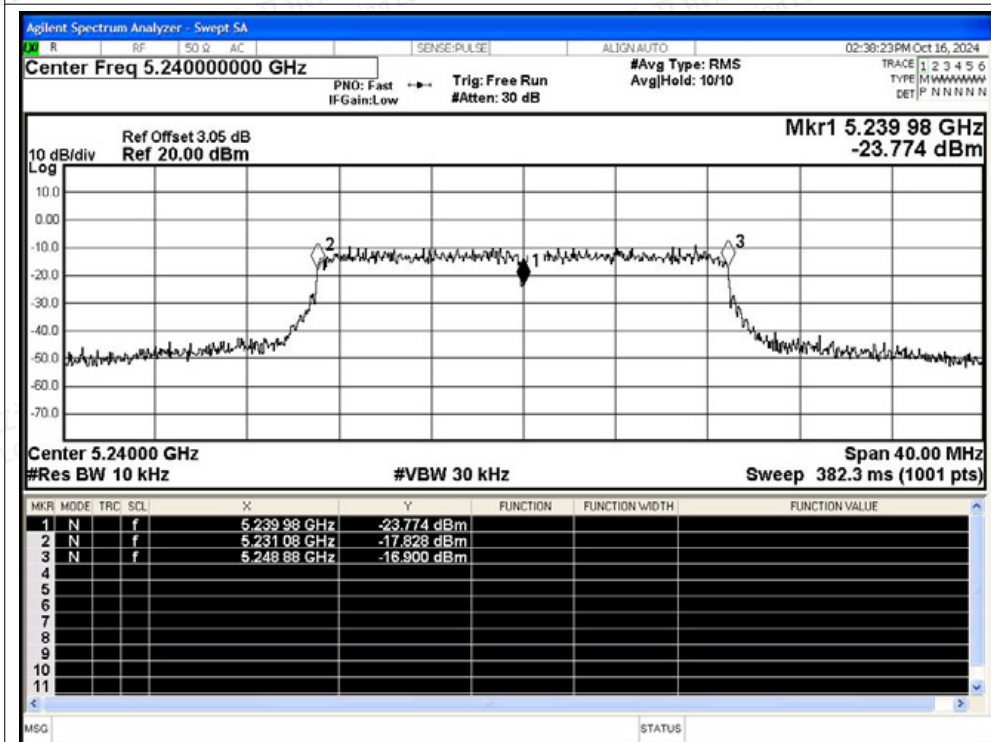


## Freq. Stability NVNT ac40 5190MHz Ant0

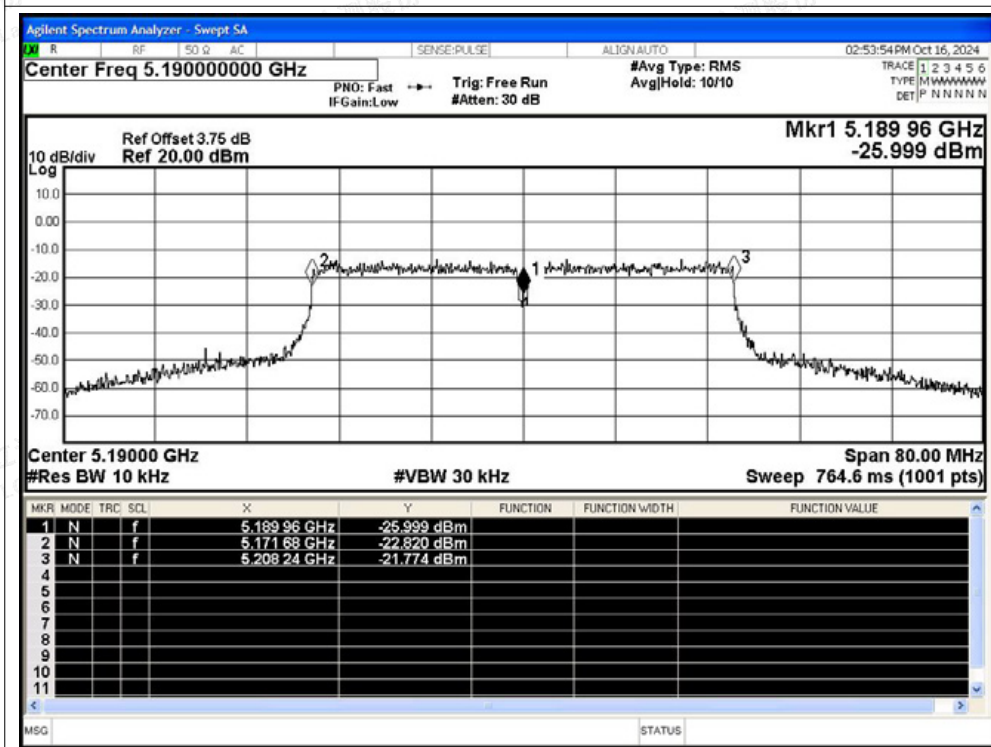

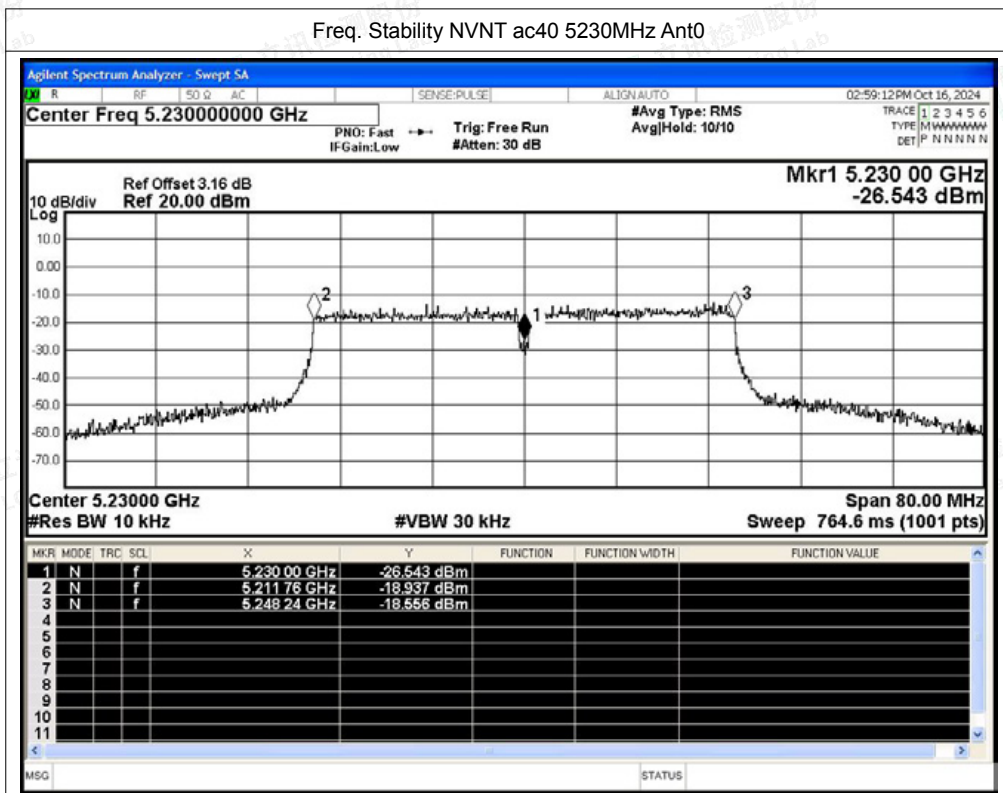




## Freq. Stability NVNT ax20 5180MHz Ant0

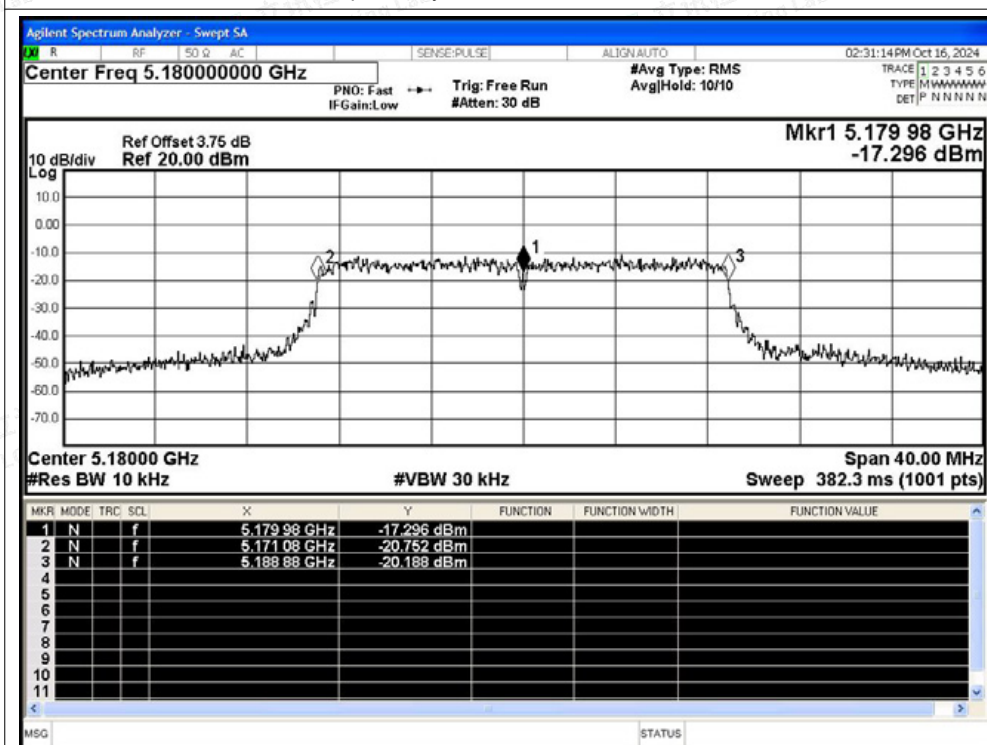


## Freq. Stability NVNT ax20 5200MHz Ant0

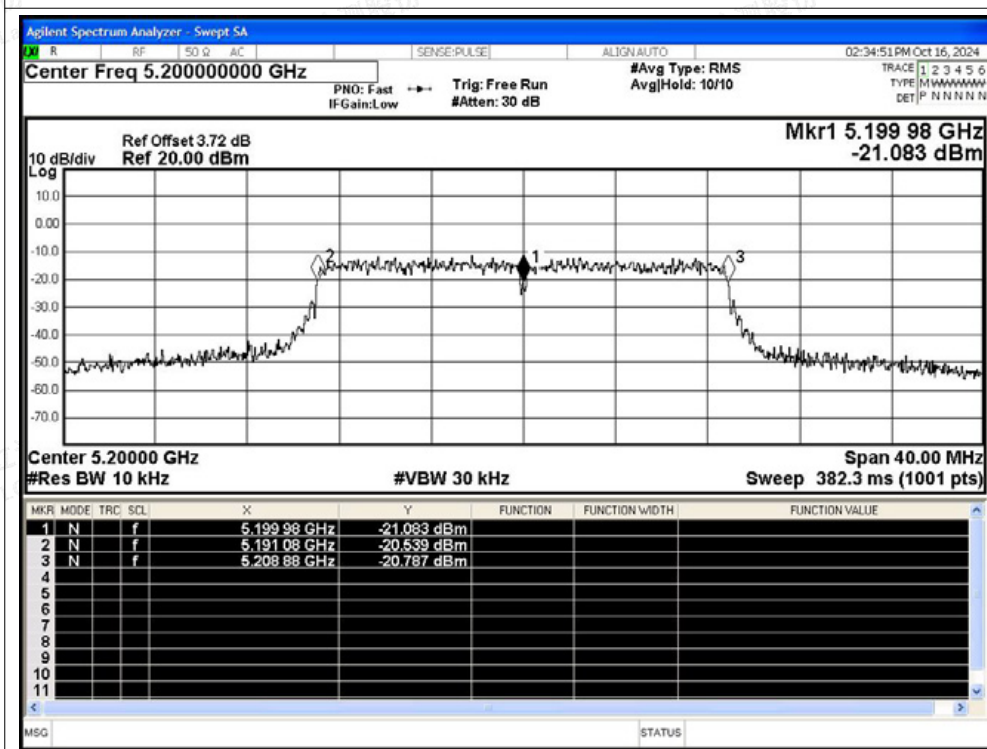





## Freq. Stability NVNT ax20 5240MHz Ant0

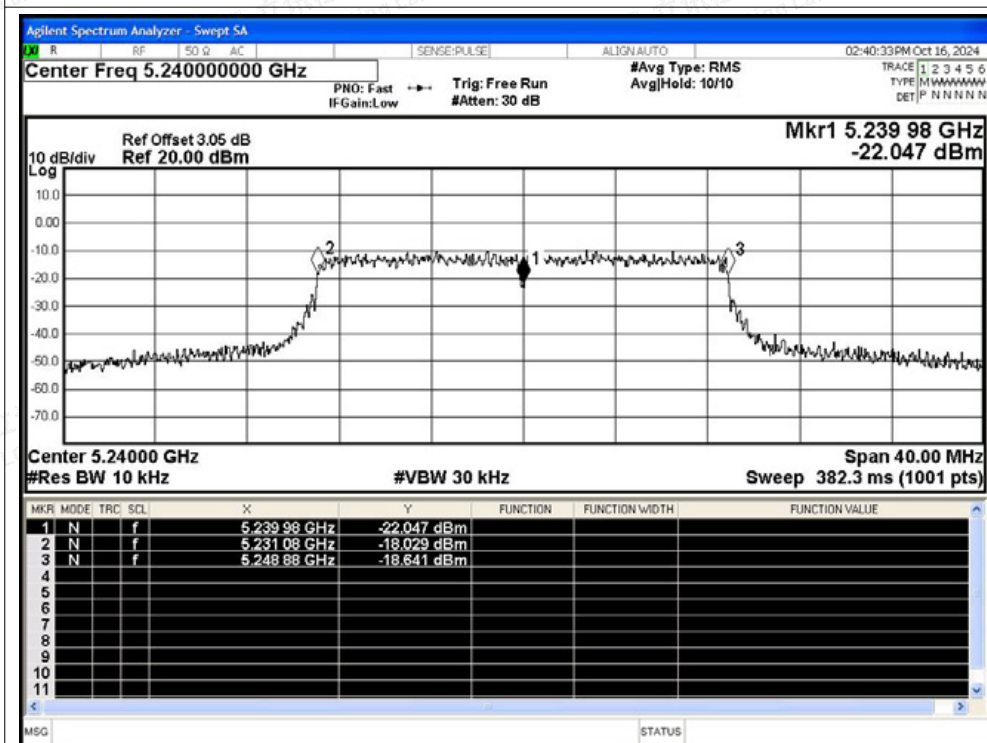

## Freq. Stability NVNT ax40 5190MHz Ant0

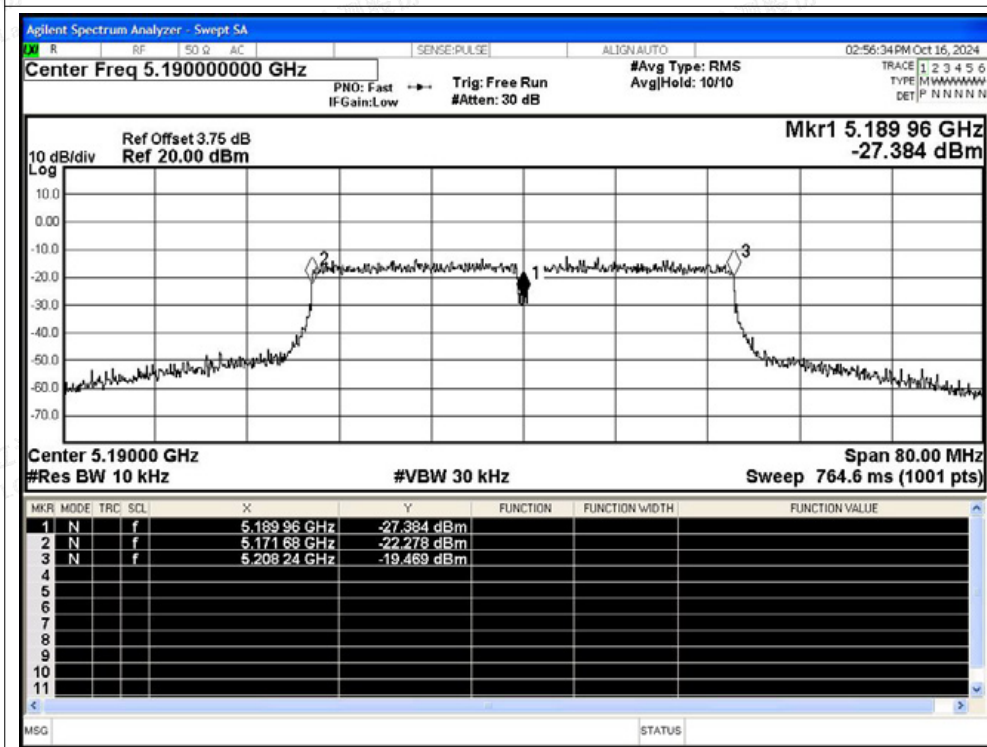

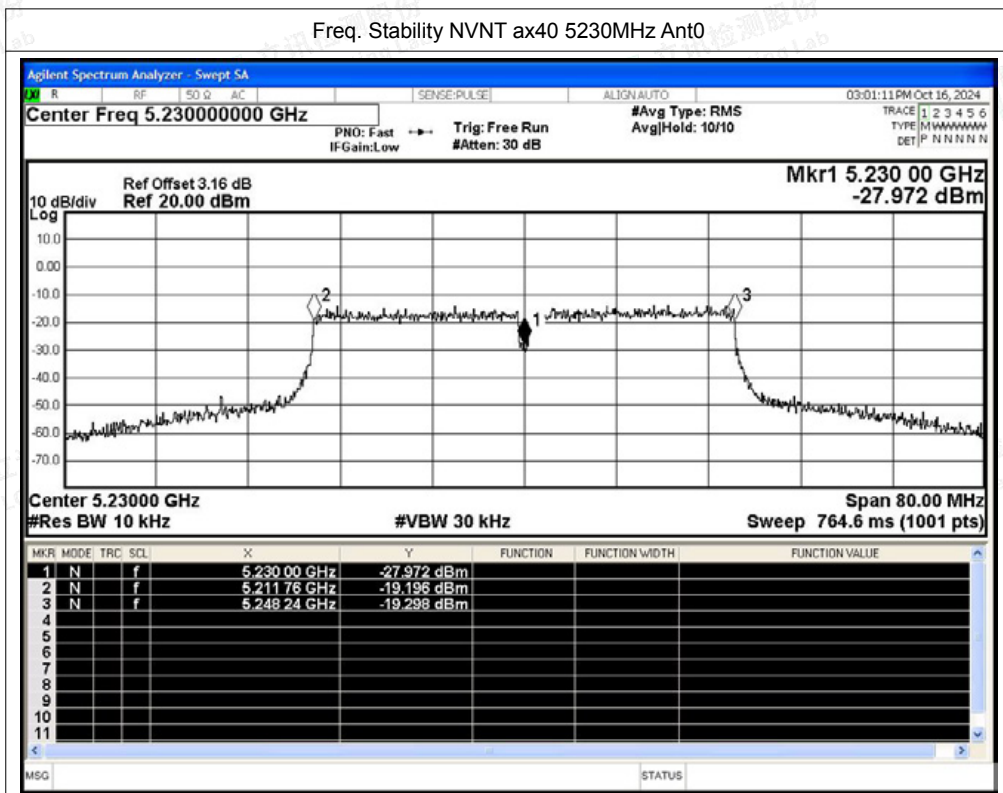




| Condition | Mode | Frequency (MHz) | Antenna | Measured Frequency (MHz) | Frequency Error (Hz) | Deviation (ppm) | Limit (ppm) | Verdict |
|-----------|------|-----------------|---------|--------------------------|----------------------|-----------------|-------------|---------|
| NVNT      | a    | 5180            | Ant1    | 5179.98                  | -20000               | -3.86           | 25          | Pass    |
| NVNT      | a    | 5200            | Ant1    | 5200                     | 0                    | 0               | 25          | Pass    |
| NVNT      | a    | 5240            | Ant1    | 5239.98                  | -20000               | -3.82           | 25          | Pass    |
| NVNT      | n20  | 5180            | Ant1    | 5179.98                  | -20000               | -3.86           | 25          | Pass    |
| NVNT      | n20  | 5200            | Ant1    | 5199.98                  | -20000               | -3.85           | 25          | Pass    |
| NVNT      | n20  | 5240            | Ant1    | 5239.98                  | -20000               | -3.82           | 25          | Pass    |
| NVNT      | n40  | 5190            | Ant1    | 5190                     | 0                    | 0               | 25          | Pass    |
| NVNT      | n40  | 5230            | Ant1    | 5230                     | 0                    | 0               | 25          | Pass    |
| NVNT      | ac20 | 5180            | Ant1    | 5180                     | 0                    | 0               | 25          | Pass    |
| NVNT      | ac20 | 5200            | Ant1    | 5199.98                  | -20000               | -3.85           | 25          | Pass    |
| NVNT      | ac20 | 5240            | Ant1    | 5240                     | 0                    | 0               | 25          | Pass    |
| NVNT      | ac40 | 5190            | Ant1    | 5190                     | 0                    | 0               | 25          | Pass    |
| NVNT      | ac40 | 5230            | Ant1    | 5230                     | 0                    | 0               | 25          | Pass    |
| NVNT      | ax20 | 5180            | Ant1    | 5180.02                  | 20000                | 3.86            | 25          | Pass    |
| NVNT      | ax20 | 5200            | Ant1    | 5199.98                  | -20000               | -3.85           | 25          | Pass    |
| NVNT      | ax20 | 5240            | Ant1    | 5240                     | 0                    | 0               | 25          | Pass    |
| NVNT      | ax40 | 5190            | Ant1    | 5189.96                  | -40000               | -7.71           | 25          | Pass    |
| NVNT      | ax40 | 5230            | Ant1    | 5230.04                  | 40000                | 7.65            | 25          | Pass    |






## Test Graphs

## Freq. Stability NVNT a 5180MHz Ant1

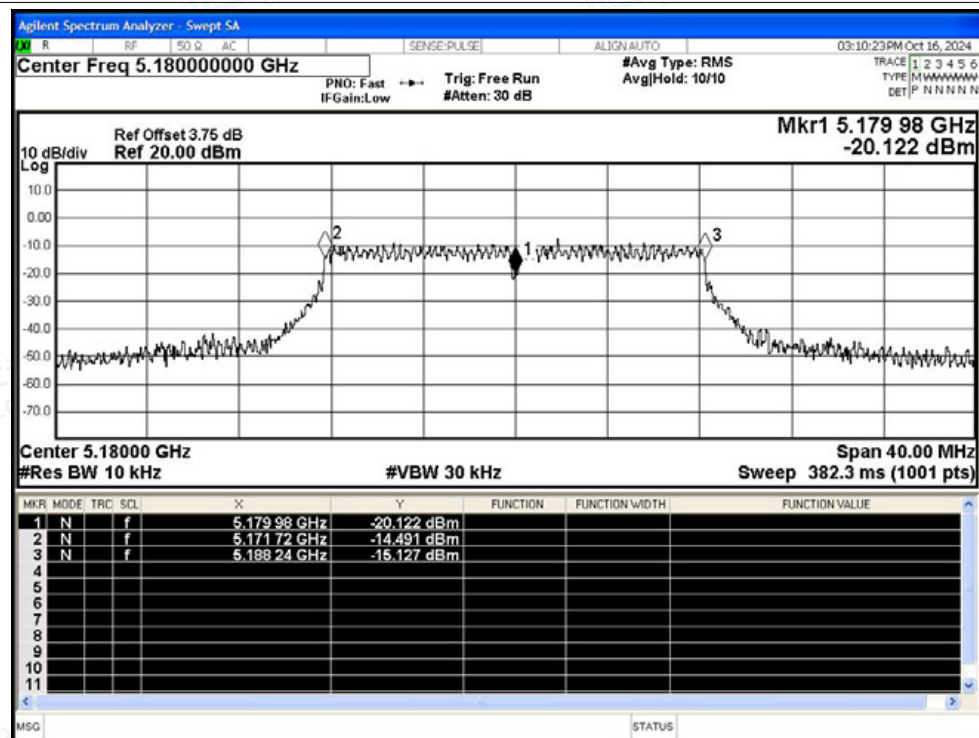


## Freq. Stability NVNT a 5200MHz Ant1

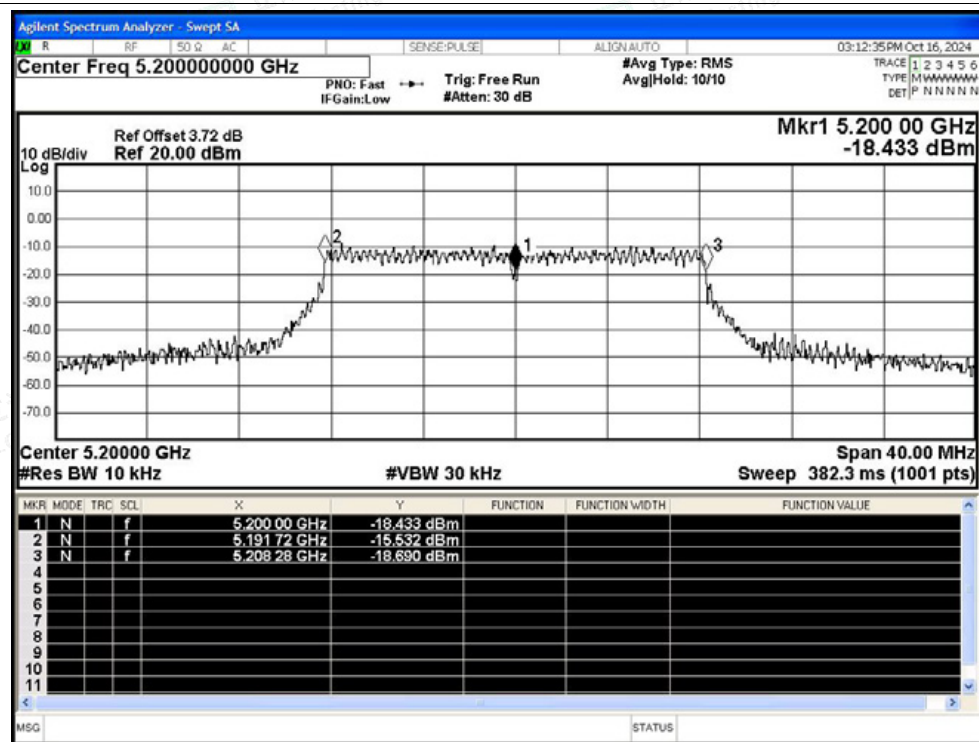




## Freq. Stability NVNT a 5240MHz Ant1

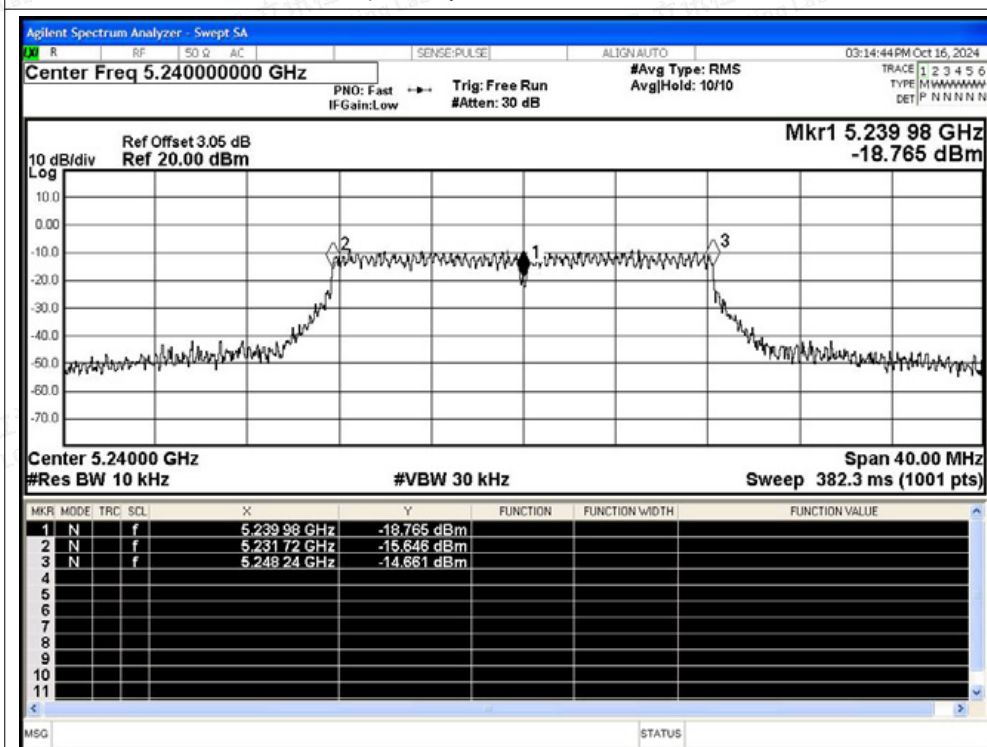

## Freq. Stability NVNT n20 5180MHz Ant1

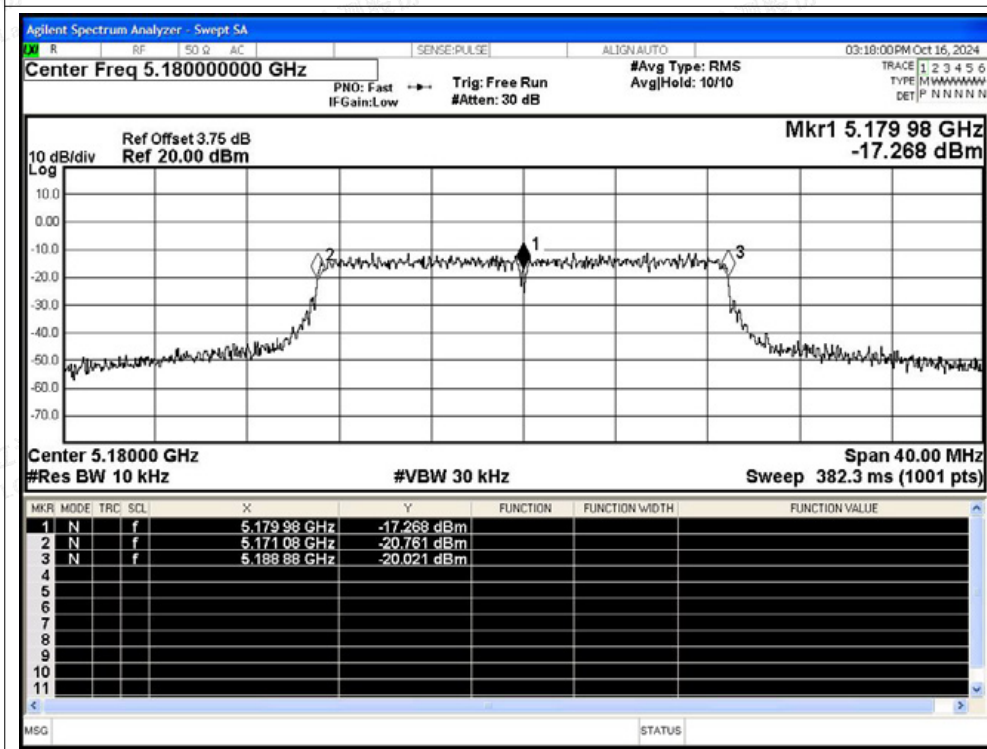

Shenzhen LCS Compliance Testing Laboratory Ltd.


Add: 101, 201 Bldg A &amp; 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China

Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com


Scan code to check authenticity



## Freq. Stability NVNT n20 5200MHz Ant1

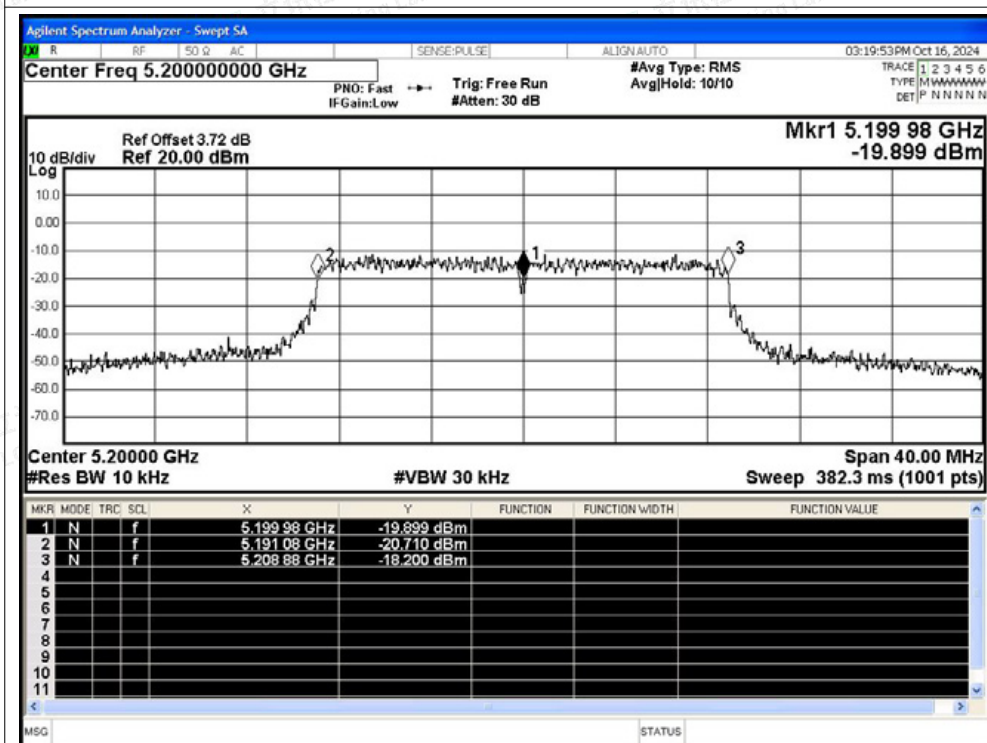


## Freq. Stability NVNT n20 5240MHz Ant1

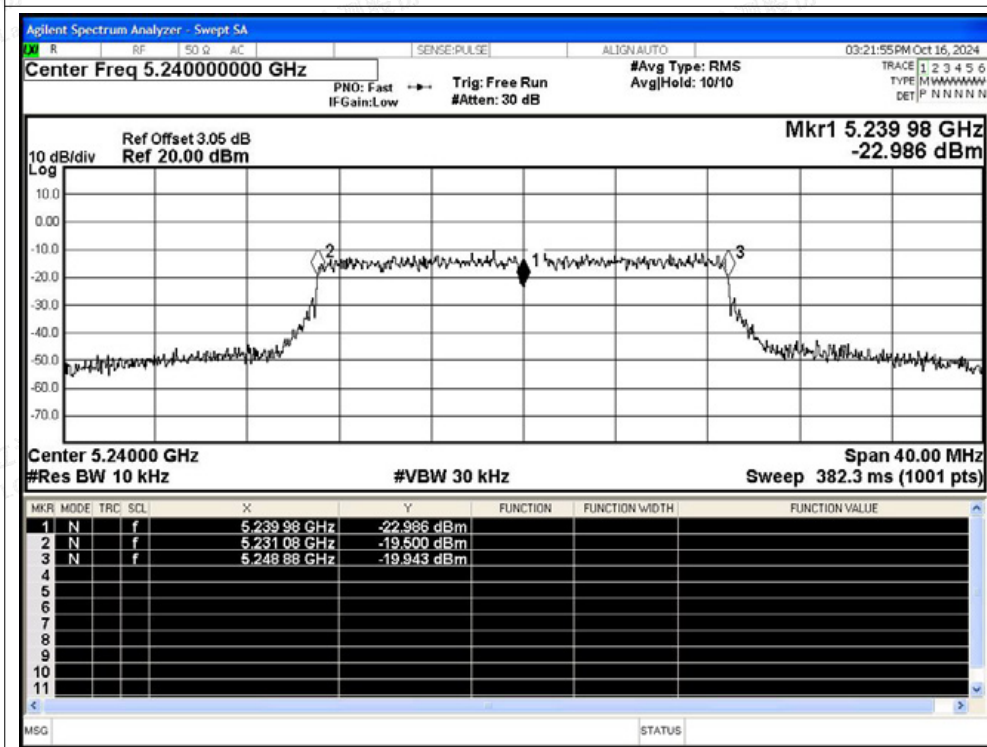




## Freq. Stability NVNT n40 5190MHz Ant1

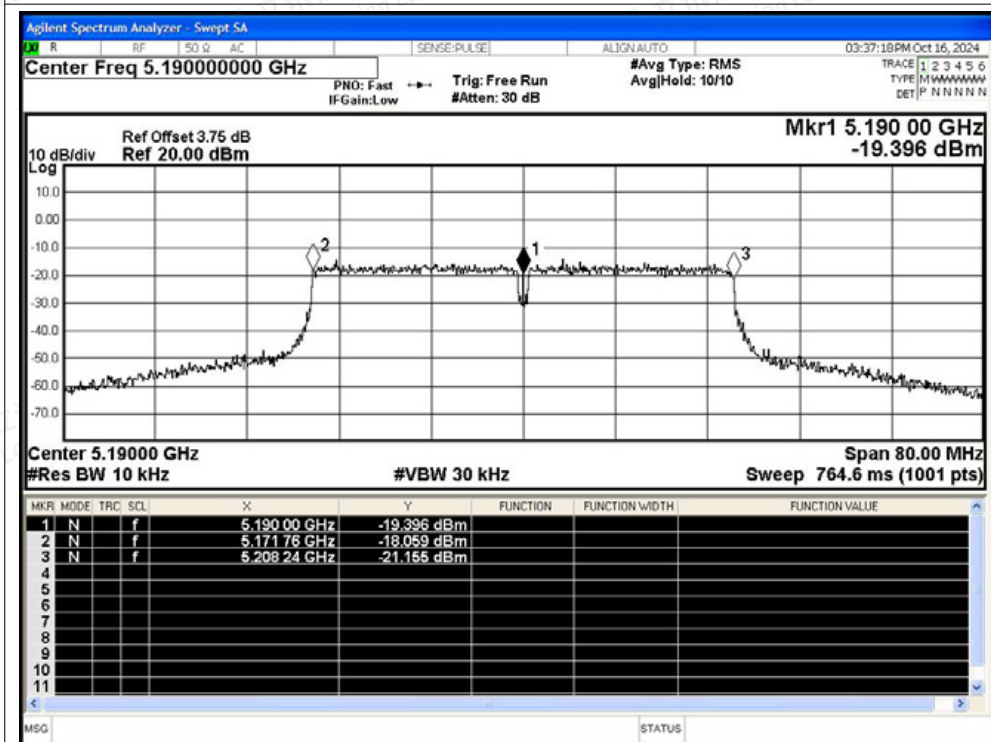


## Freq. Stability NVNT n40 5230MHz Ant1

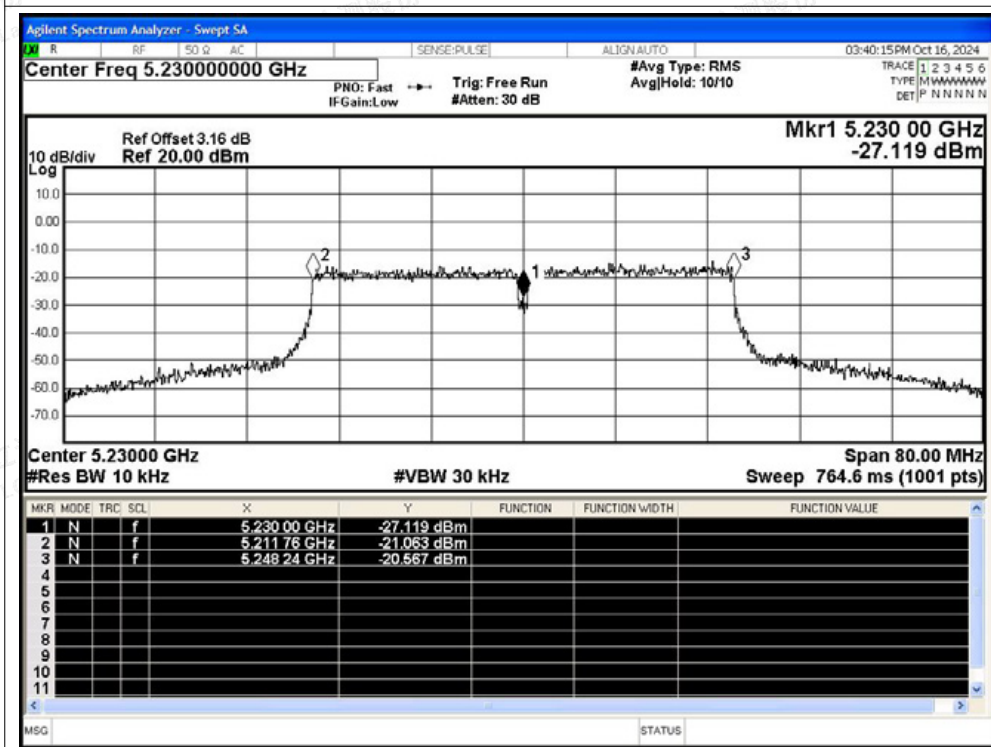




## Freq. Stability NVNT ac20 5180MHz Ant1

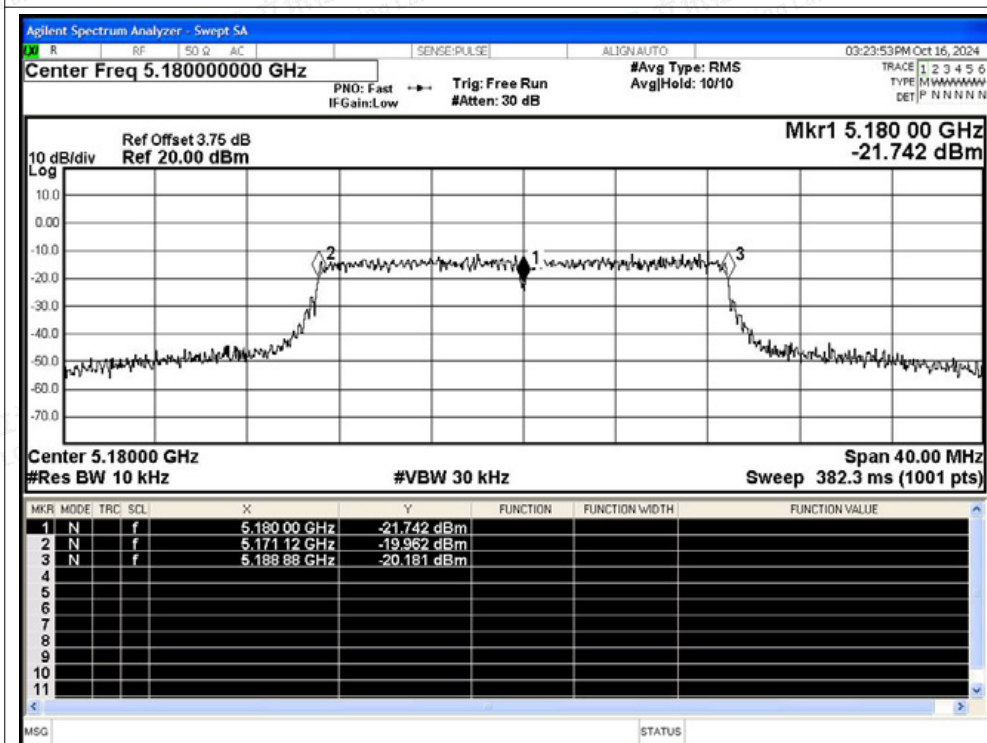


## Freq. Stability NVNT ac20 5200MHz Ant1

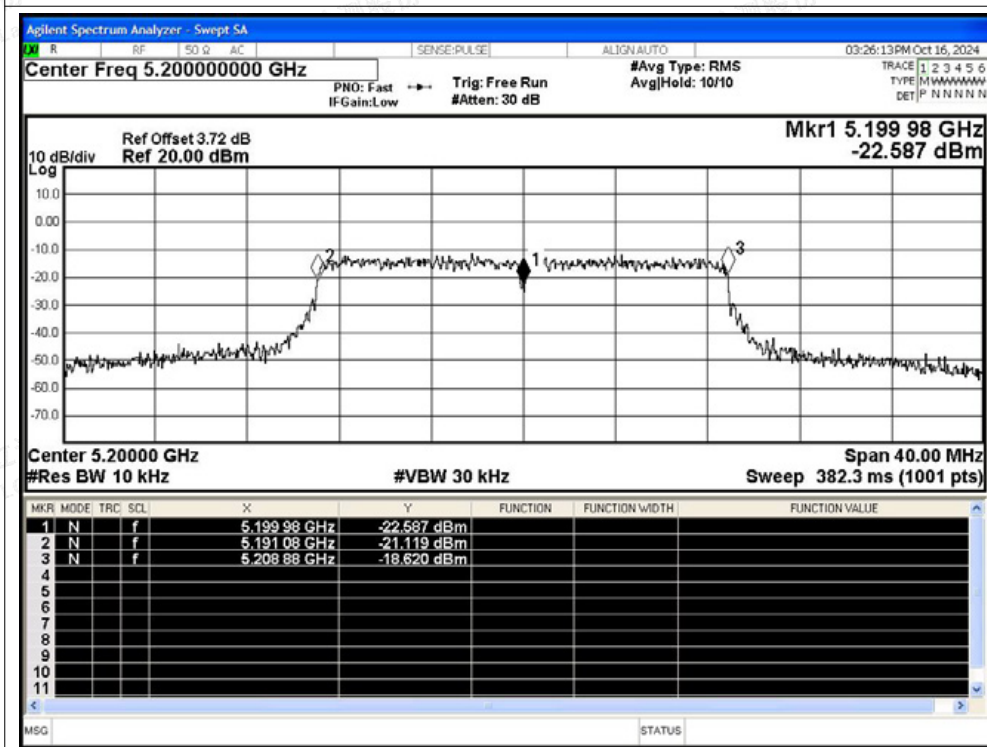




## Freq. Stability NVNT ac20 5240MHz Ant1

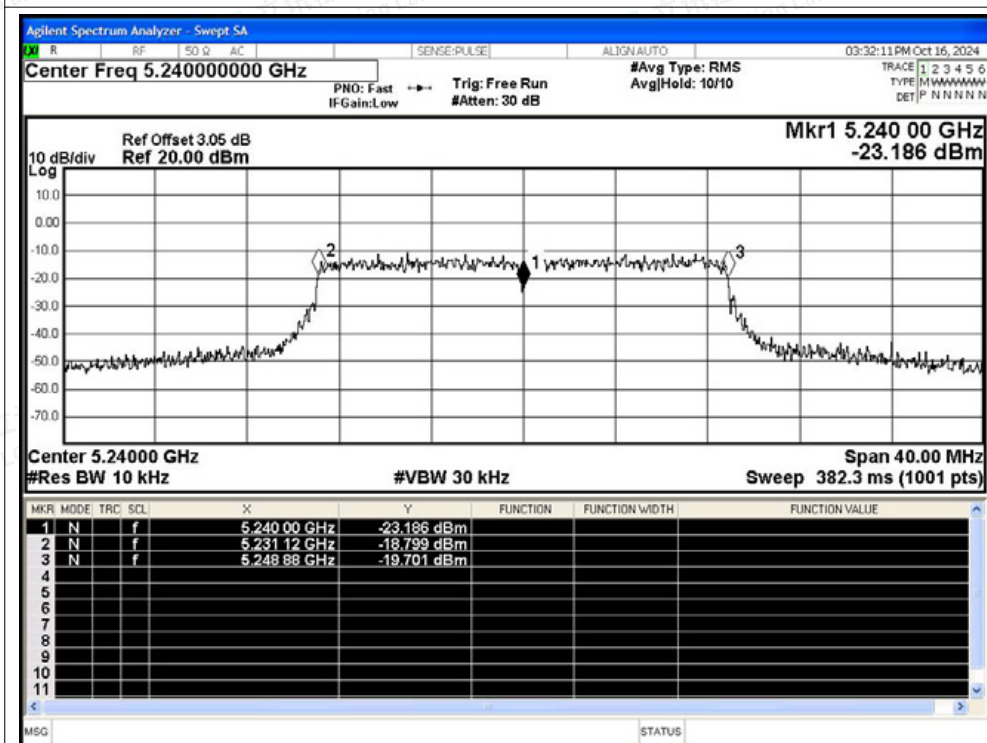


## Freq. Stability NVNT ac40 5190MHz Ant1

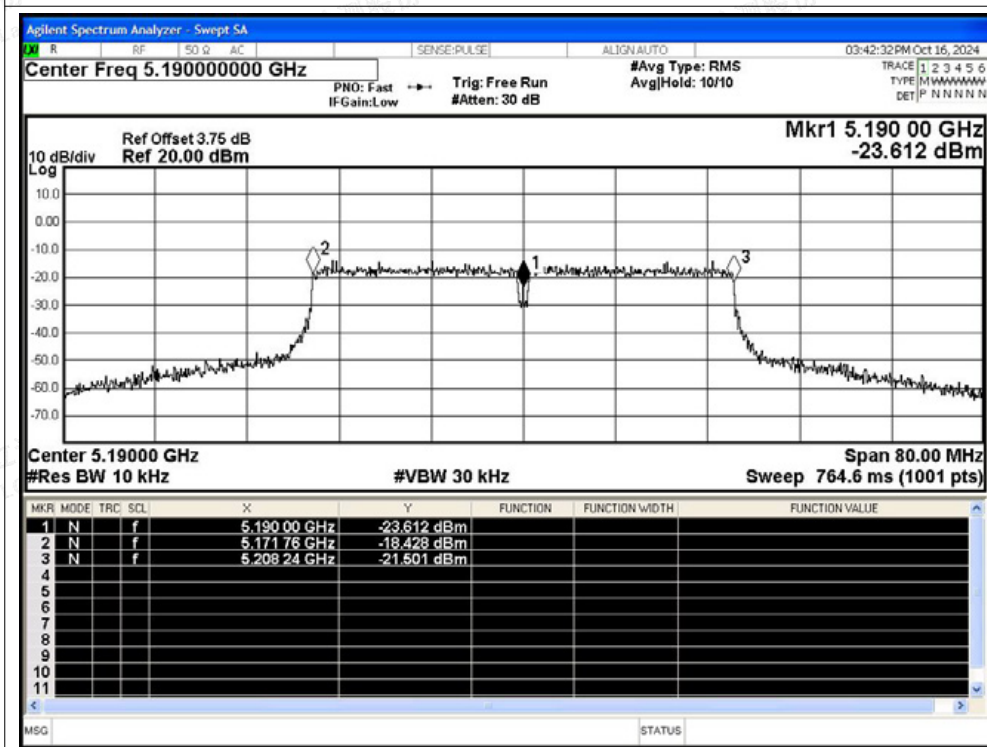



Freq. Stability NVNT ac40 5230MHz Ant1

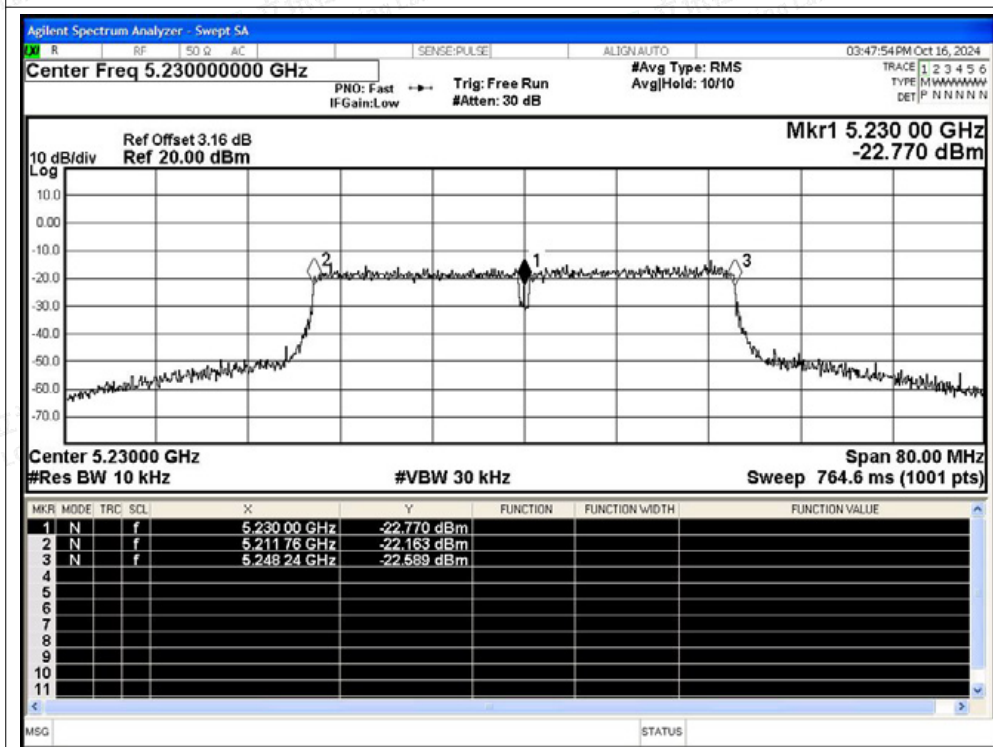

Shenzhen LCS Compliance Testing Laboratory Ltd.


Add: 101, 201 Bldg A &amp; 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China

Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com


Scan code to check authenticity



## Freq. Stability NVNT ax20 5180MHz Ant1

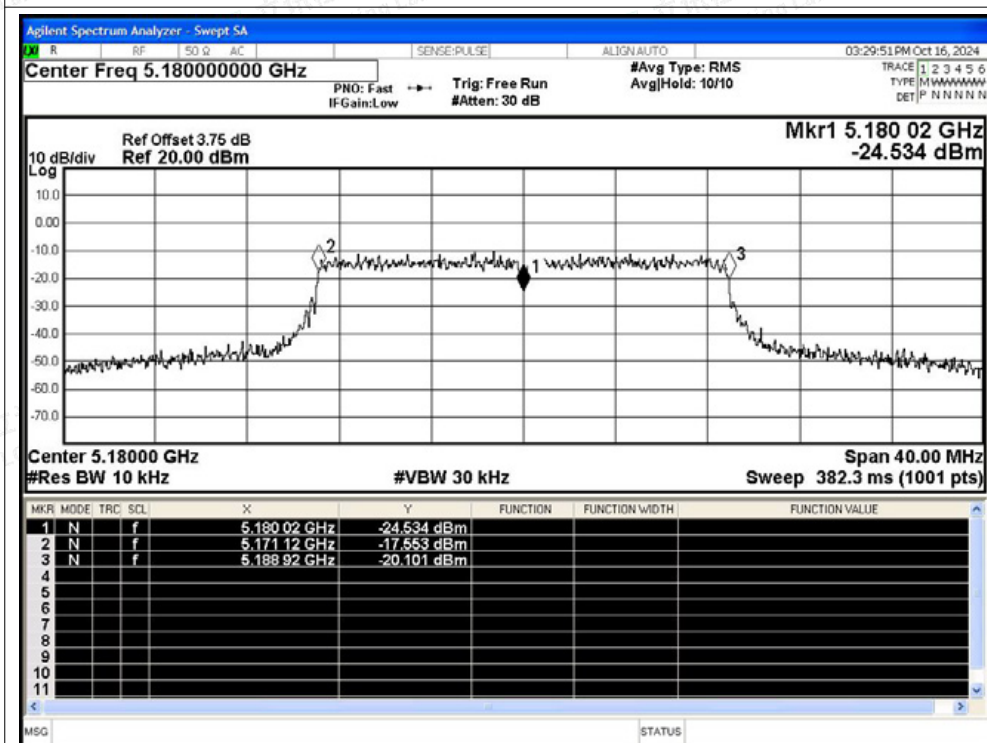


## Freq. Stability NVNT ax20 5200MHz Ant1

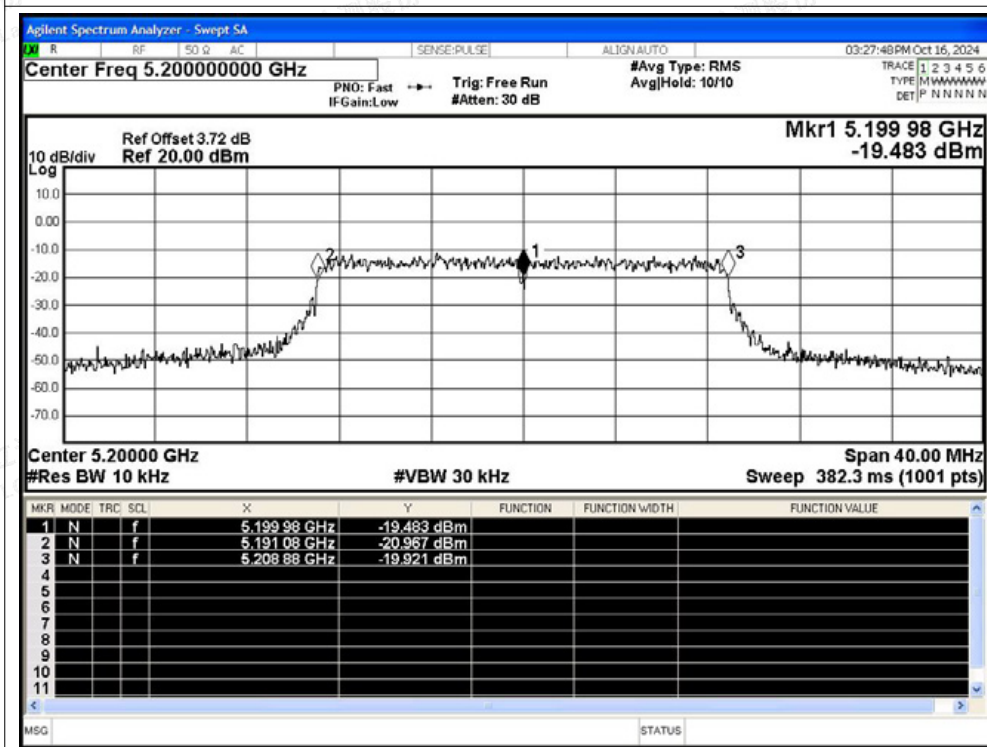




## Freq. Stability NVNT ax20 5240MHz Ant1

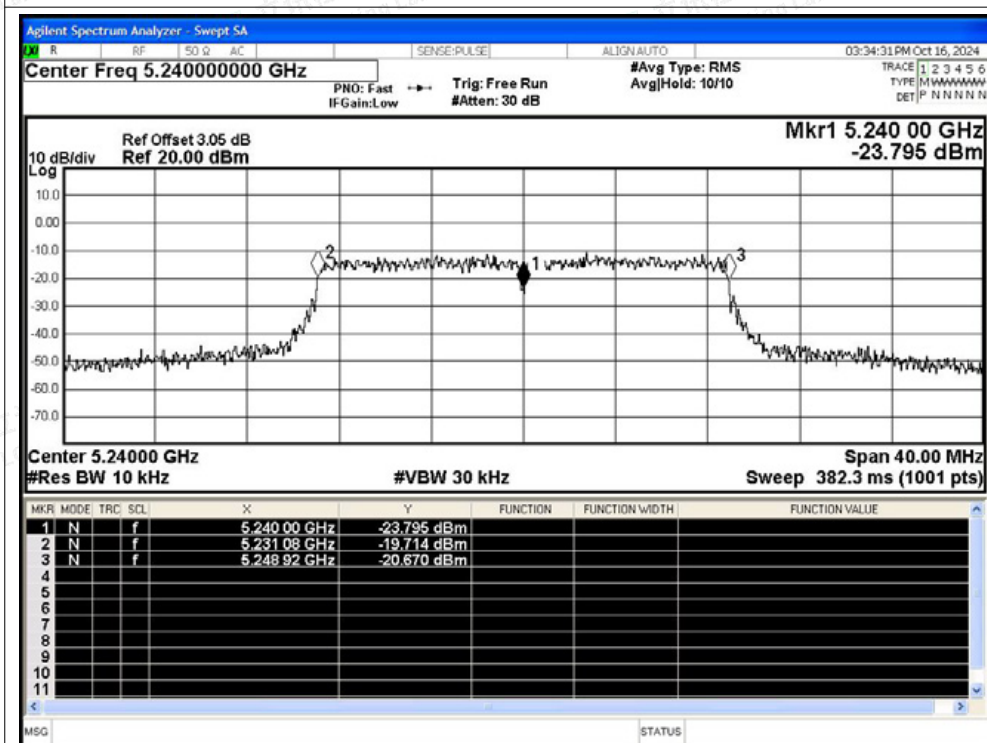


## Freq. Stability NVNT ax40 5190MHz Ant1

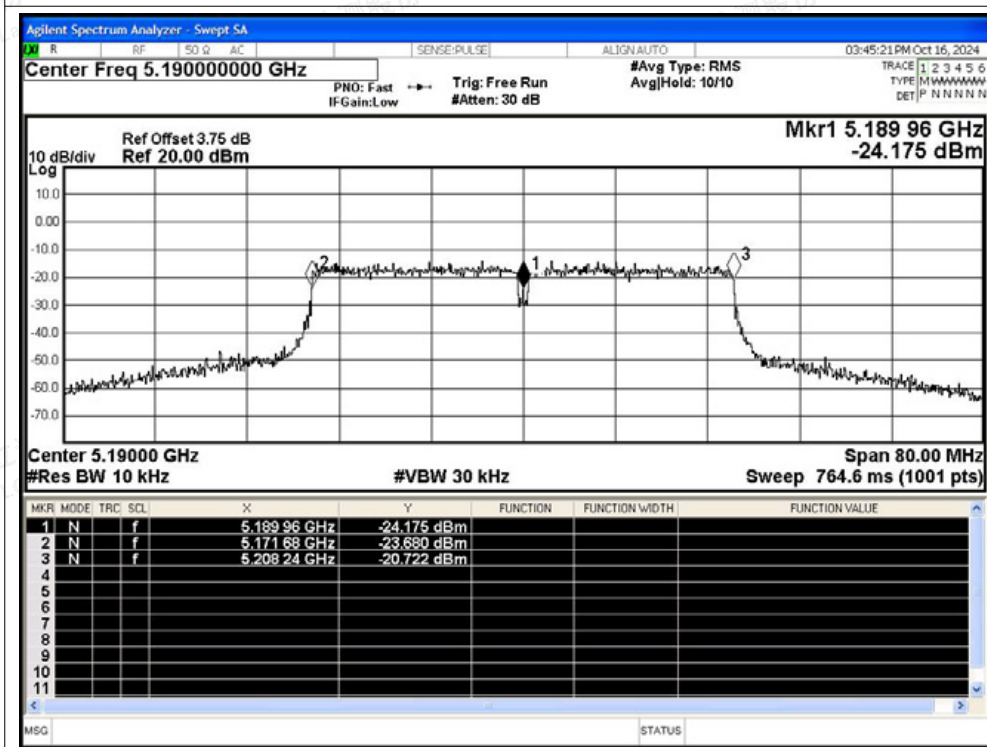



Freq. Stability NVNT ax40 5230MHz Ant1

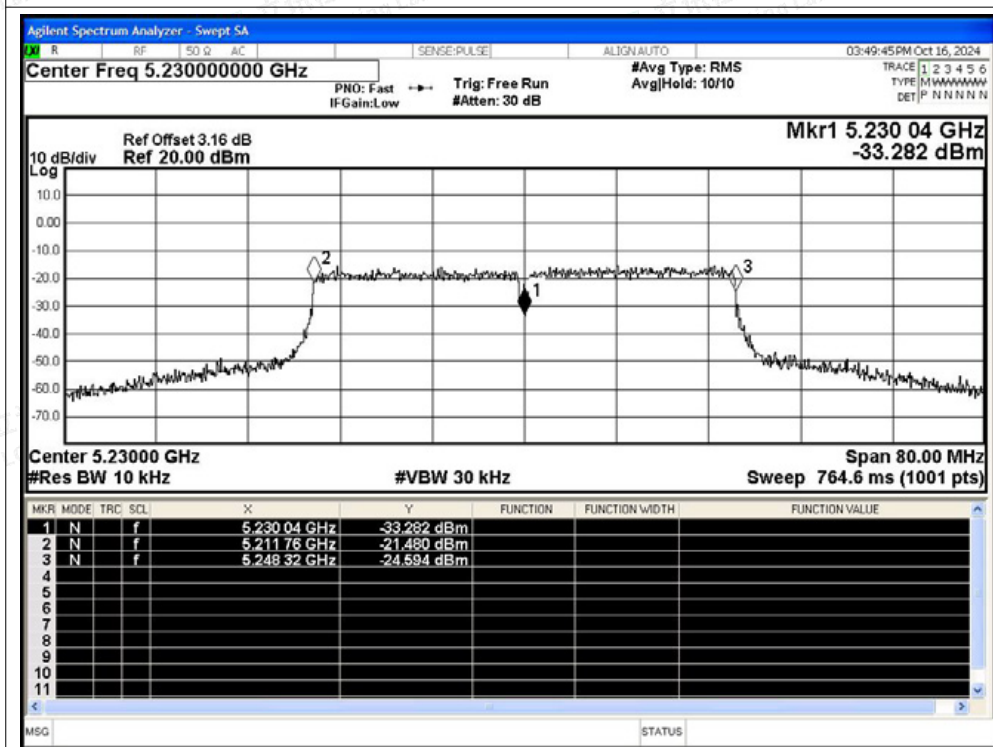

Shenzhen LCS Compliance Testing Laboratory Ltd.

Add: 101, 201 Bldg A &amp; 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China

Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com

Scan code to check authenticity



## D.6 Duty Cycle

| Condition | Mode | Frequency (MHz) | Antenna | Duty Cycle (%) | Correction Factor (dB) | 1/T (kHz) |
|-----------|------|-----------------|---------|----------------|------------------------|-----------|
| NVNT      | a    | 5180            | Ant0    | 94.65          | 0.24                   | 0.91      |
| NVNT      | a    | 5200            | Ant0    | 94.56          | 0.24                   | 0.91      |
| NVNT      | a    | 5240            | Ant0    | 94.56          | 0.24                   | 0.91      |
| NVNT      | n20  | 5180            | Ant0    | 97.29          | 0.12                   | 0.44      |
| NVNT      | n20  | 5200            | Ant0    | 97.29          | 0.12                   | 0.44      |
| NVNT      | n20  | 5240            | Ant0    | 97.29          | 0.12                   | 0.44      |
| NVNT      | n40  | 5190            | Ant0    | 97.18          | 0.12                   | 0.46      |
| NVNT      | n40  | 5230            | Ant0    | 97.23          | 0.12                   | 0.46      |
| NVNT      | ac20 | 5180            | Ant0    | 97.34          | 0.12                   | 0.44      |
| NVNT      | ac20 | 5200            | Ant0    | 97.34          | 0.12                   | 0.44      |
| NVNT      | ac20 | 5240            | Ant0    | 97.34          | 0.12                   | 0.44      |
| NVNT      | ac40 | 5190            | Ant0    | 97.19          | 0.12                   | 0.46      |
| NVNT      | ac40 | 5230            | Ant0    | 97.19          | 0.12                   | 0.46      |
| NVNT      | ax20 | 5180            | Ant0    | 97.34          | 0.12                   | 0.44      |
| NVNT      | ax20 | 5200            | Ant0    | 97.34          | 0.12                   | 0.44      |
| NVNT      | ax20 | 5240            | Ant0    | 97.3           | 0.12                   | 0.44      |
| NVNT      | ax40 | 5190            | Ant0    | 97.24          | 0.12                   | 0.46      |
| NVNT      | ax40 | 5230            | Ant0    | 97.24          | 0.12                   | 0.46      |




Shenzhen LCS Compliance Testing Laboratory Ltd.  
Add: 101, 201 Bldg A & 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China  
Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com  
Scan code to check authenticity




## Test Graphs

## Duty Cycle NVNT a 5180MHz Ant0

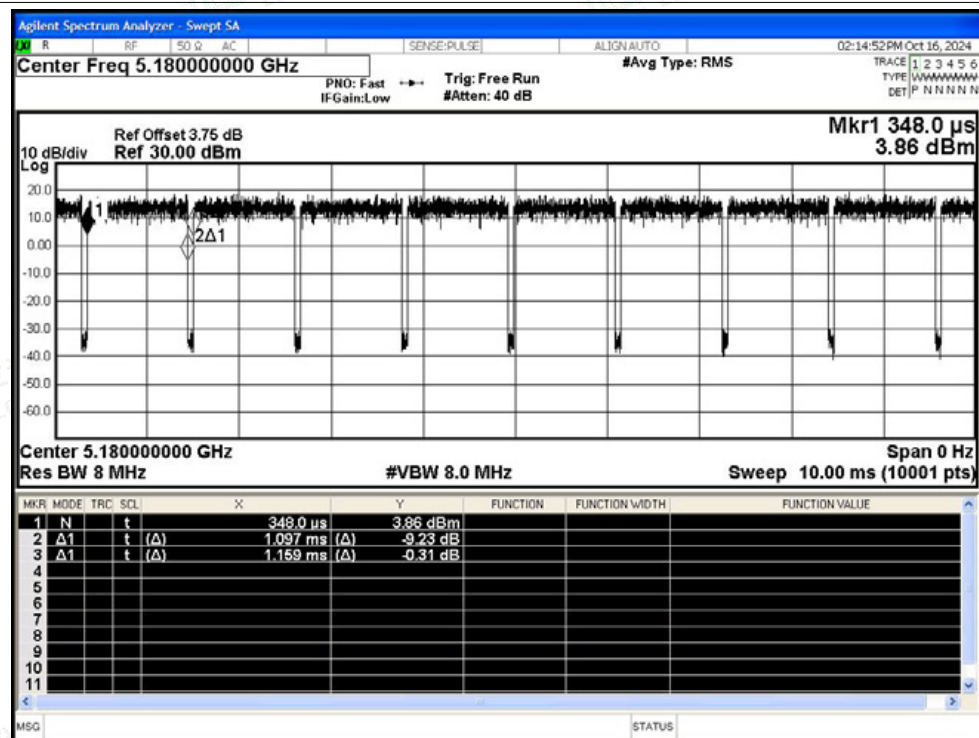


## Duty Cycle NVNT a 5200MHz Ant0

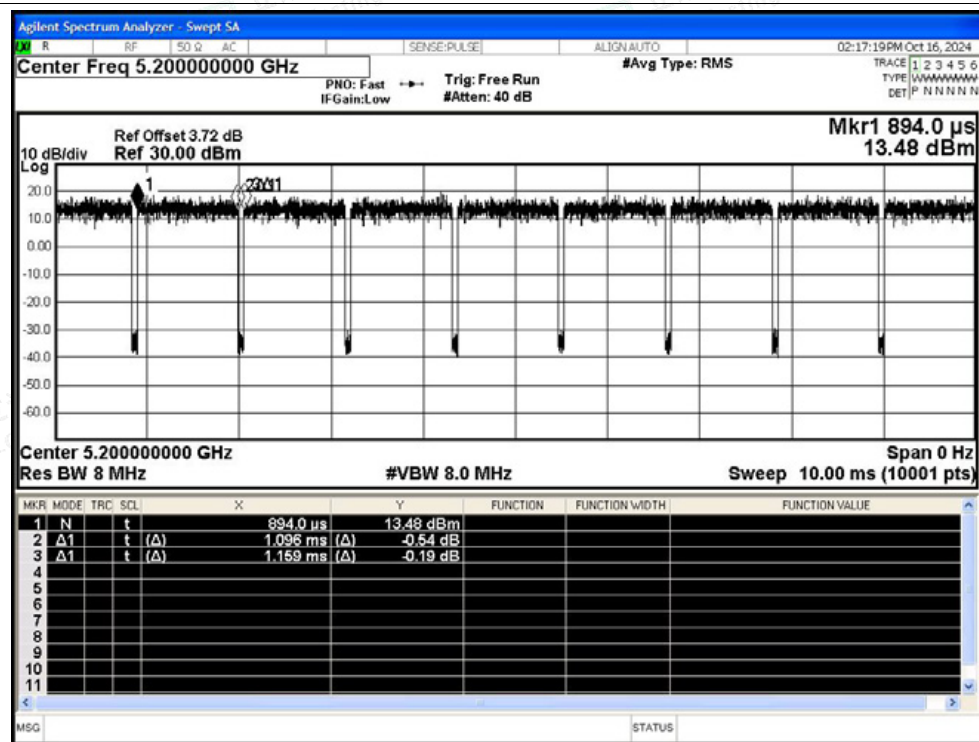




## Duty Cycle NVNT a 5240MHz Ant0

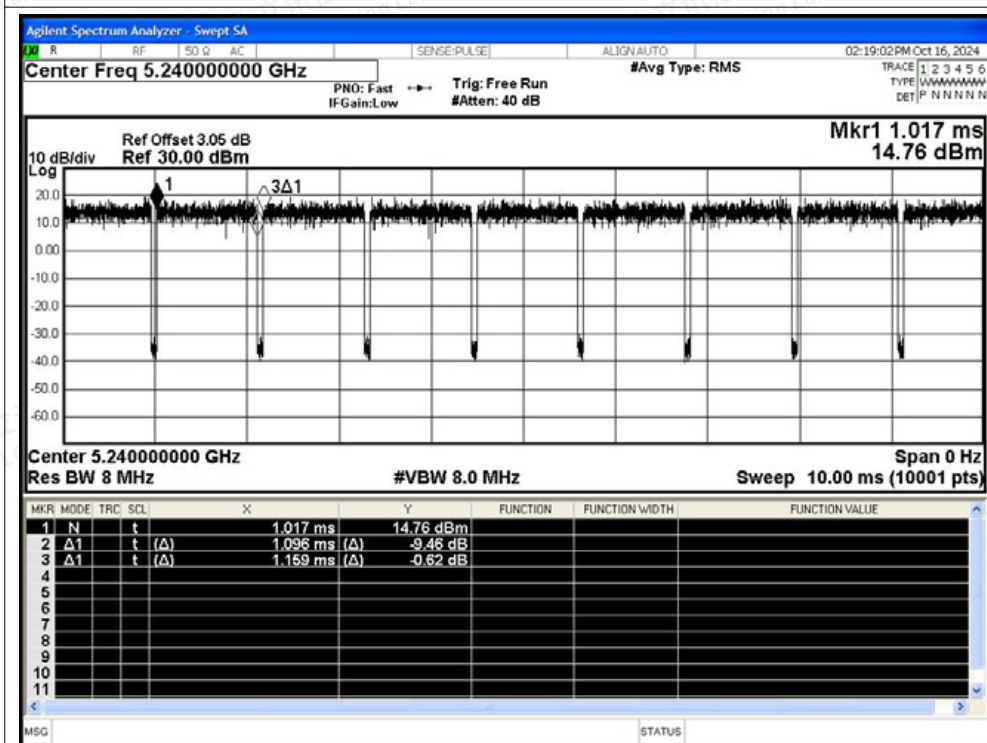


## Duty Cycle NVNT n20 5180MHz Ant0

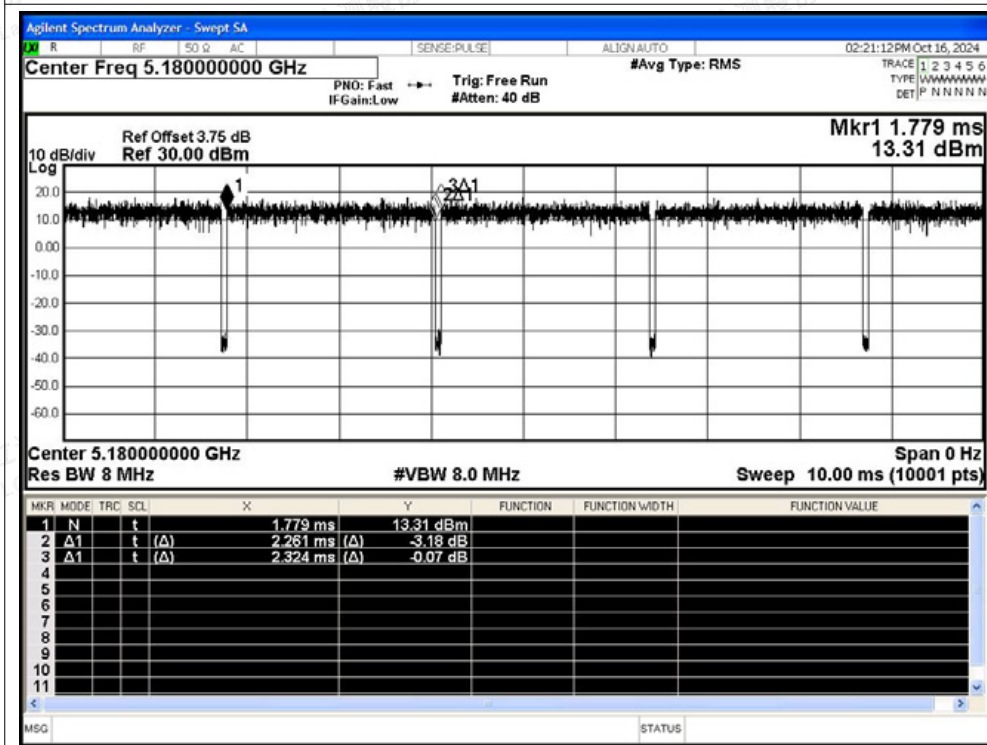




## Duty Cycle NVNT n20 5200MHz Ant0

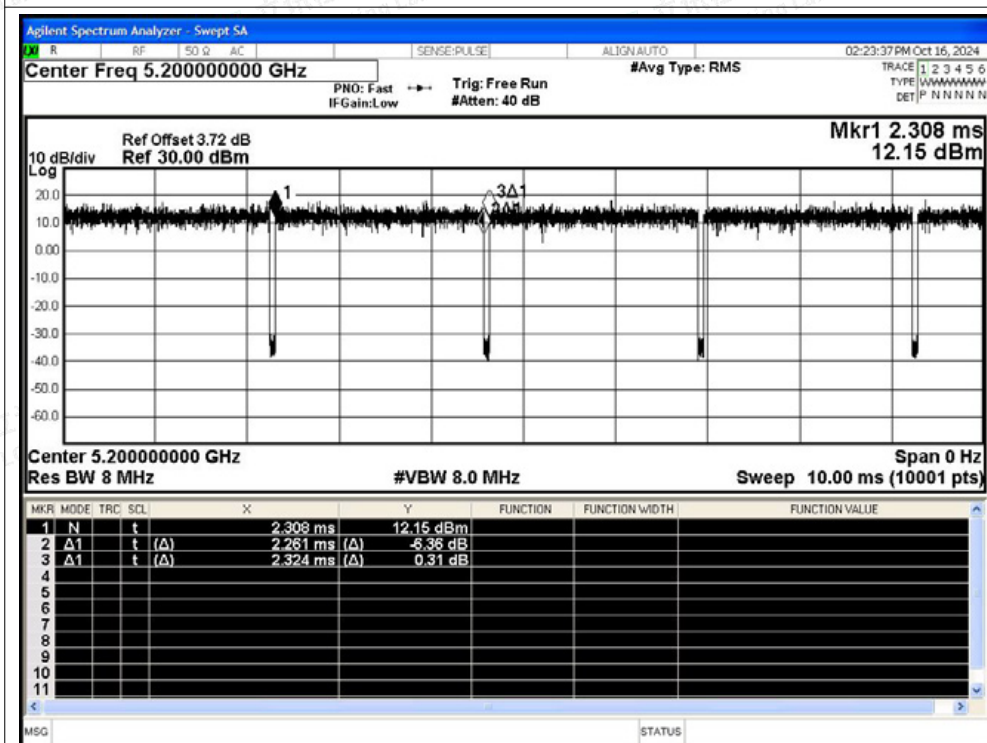


## Duty Cycle NVNT n20 5240MHz Ant0

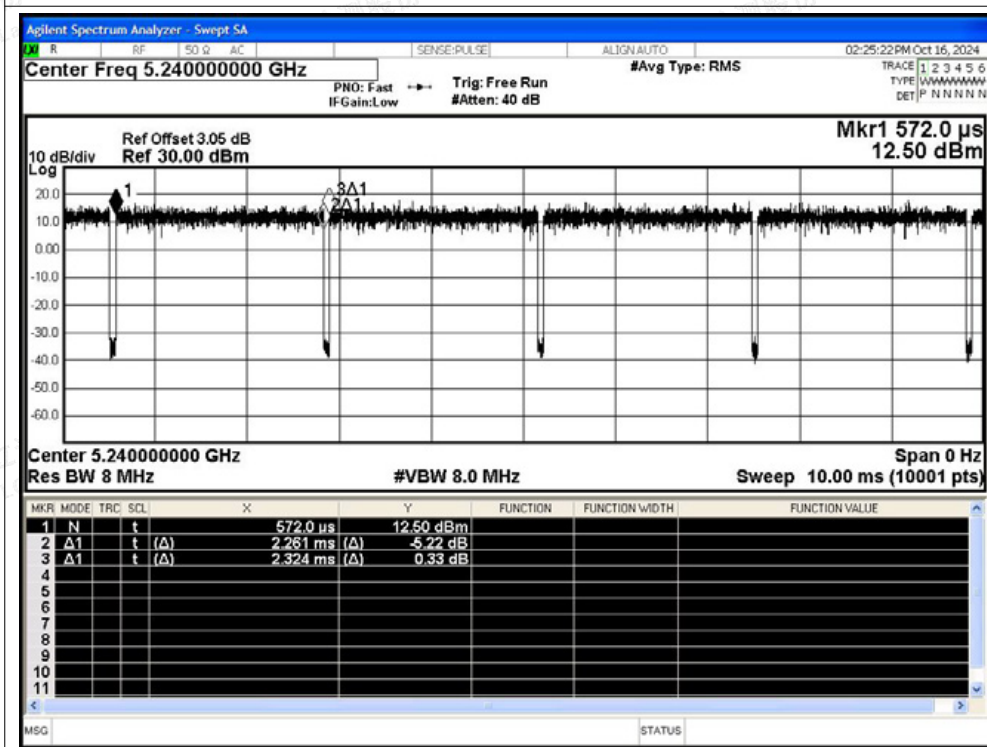




## Duty Cycle NVNT n40 5190MHz Ant0

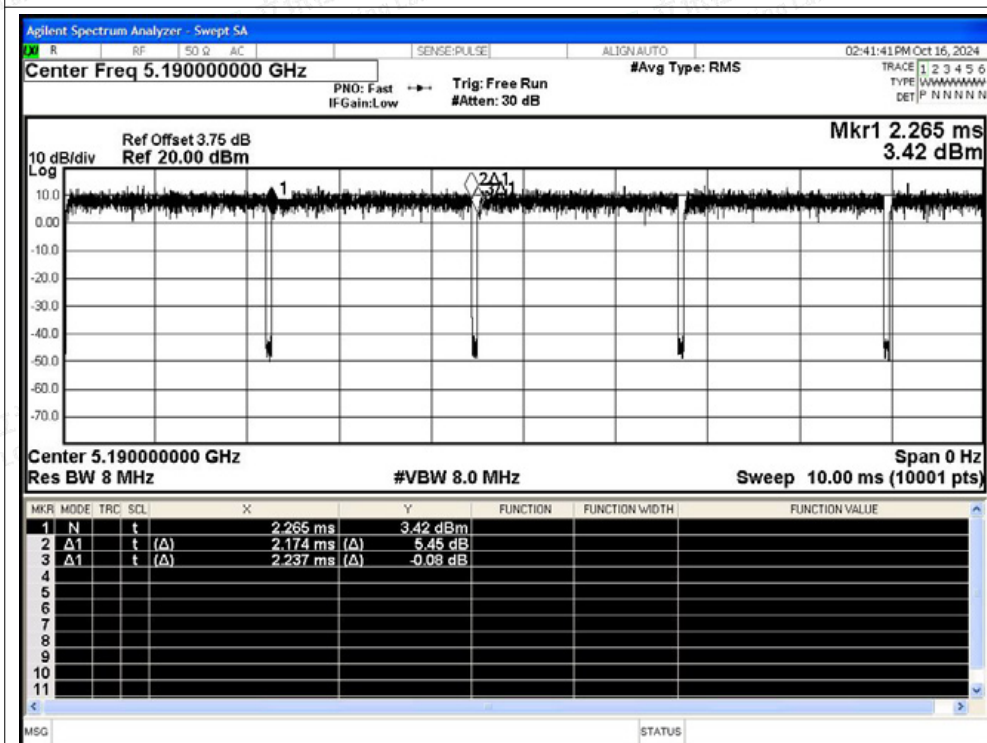


## Duty Cycle NVNT n40 5230MHz Ant0

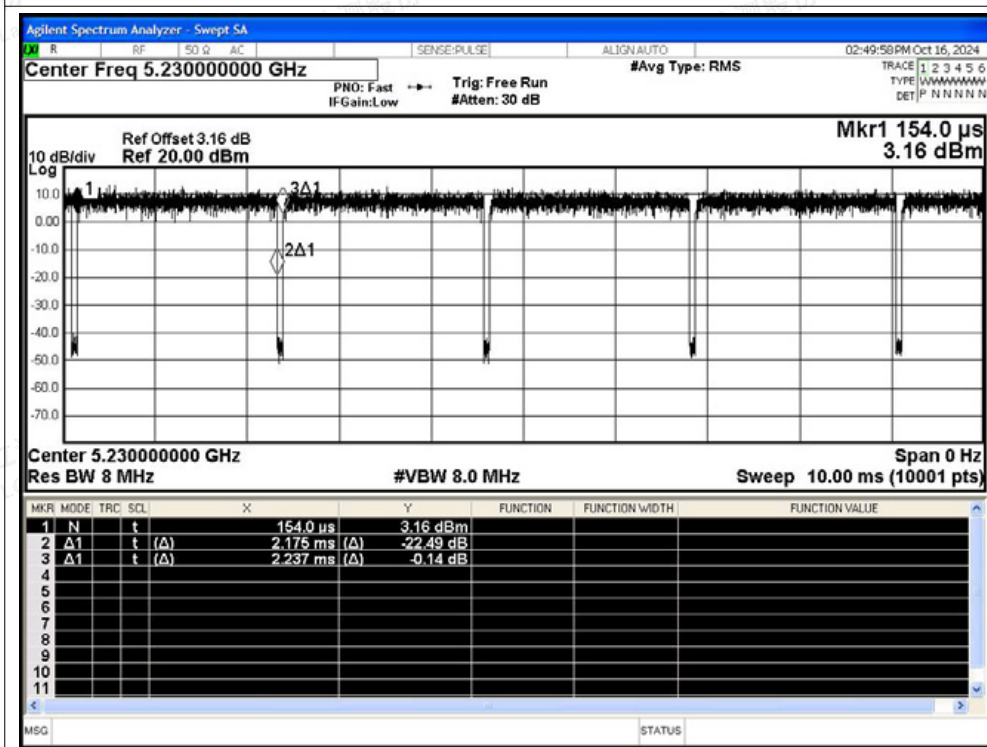




## Duty Cycle NVNT ac20 5180MHz Ant0

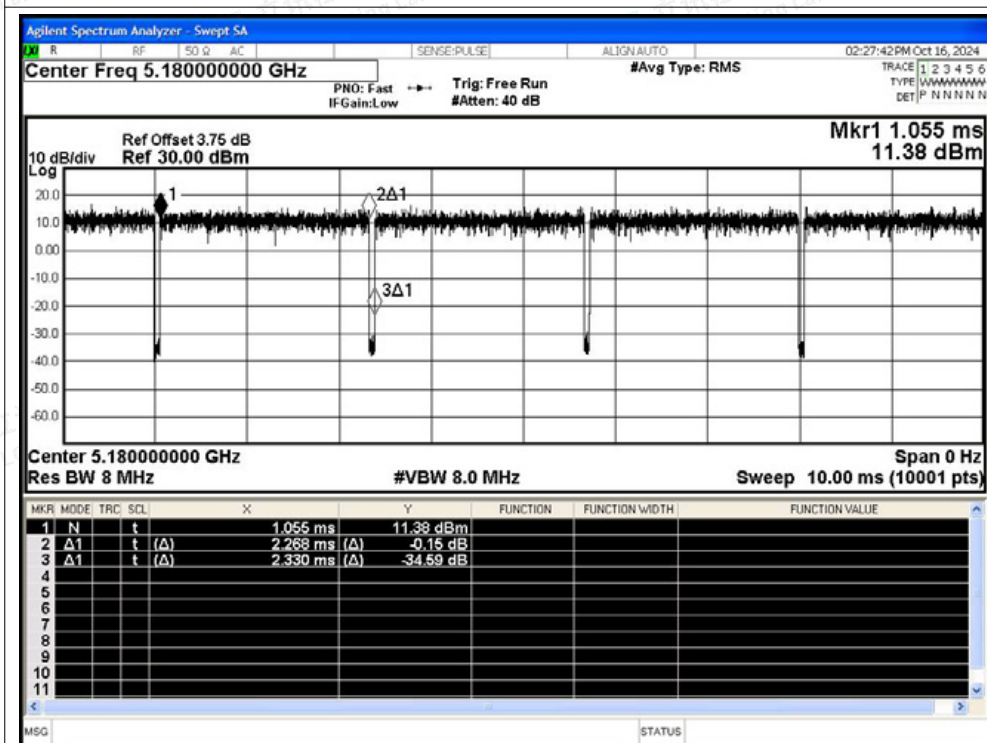


## Duty Cycle NVNT ac20 5200MHz Ant0

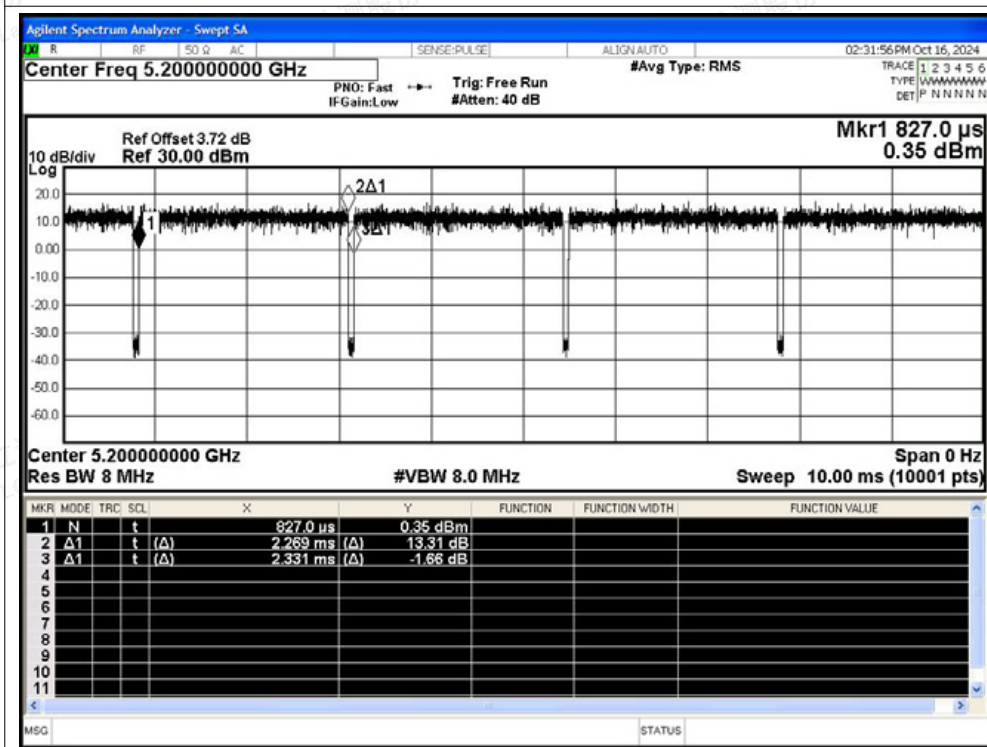




## Duty Cycle NVNT ac20 5240MHz Ant0

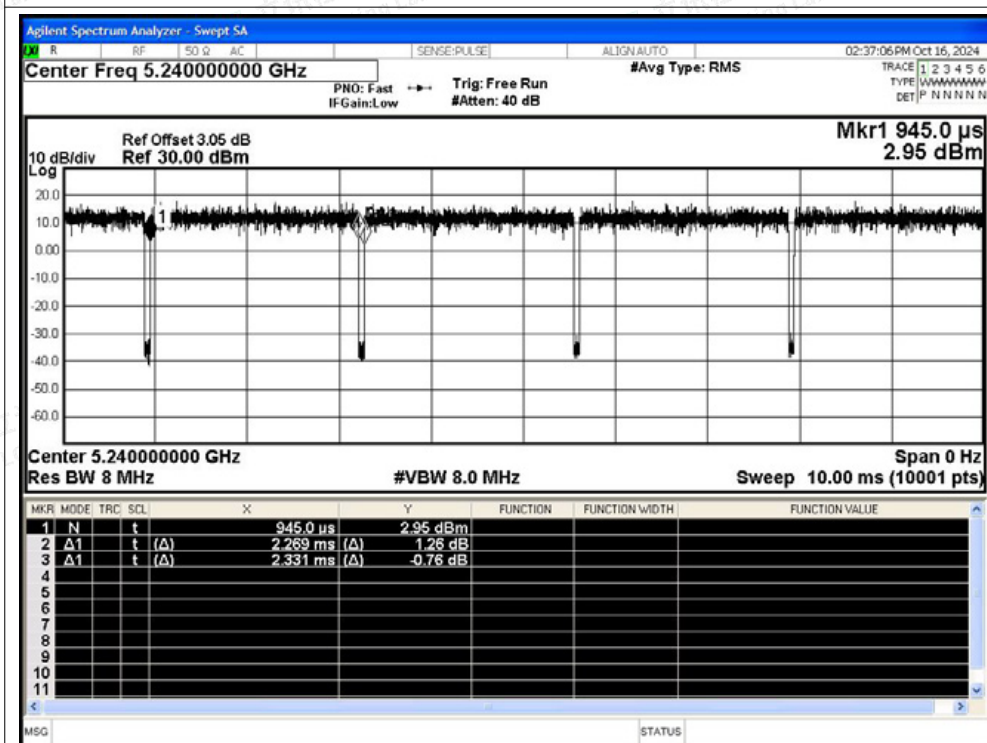

## Duty Cycle NVNT ac40 5190MHz Ant0

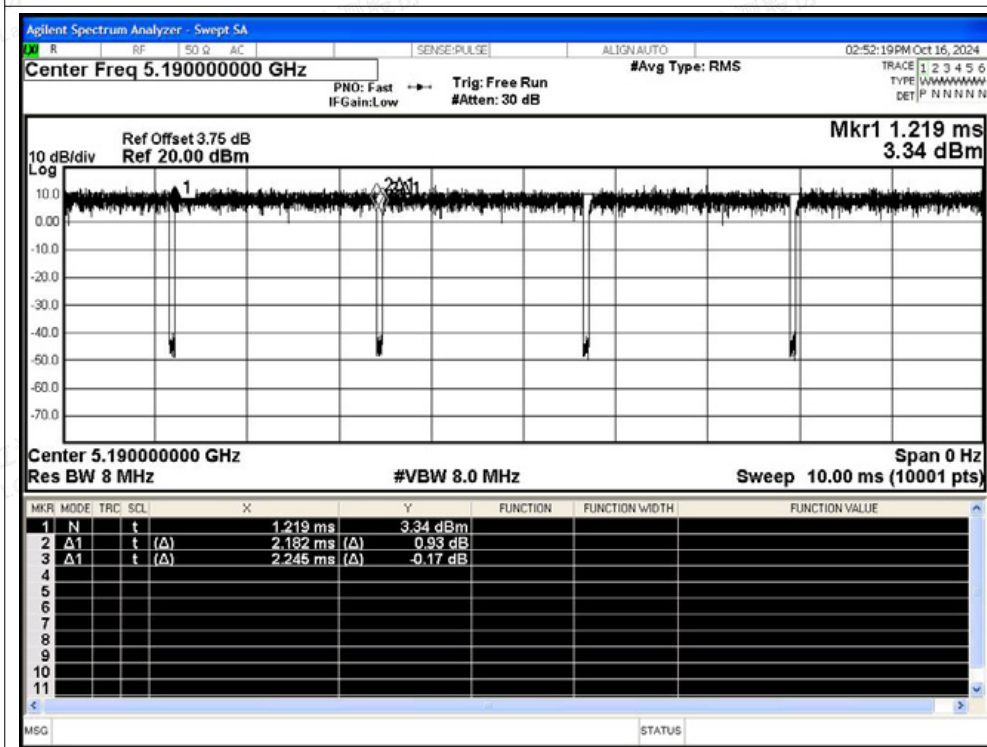


Shenzhen LCS Compliance Testing Laboratory Ltd.

Add: 101, 201 Bldg A &amp; 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China


Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com

Scan code to check authenticity

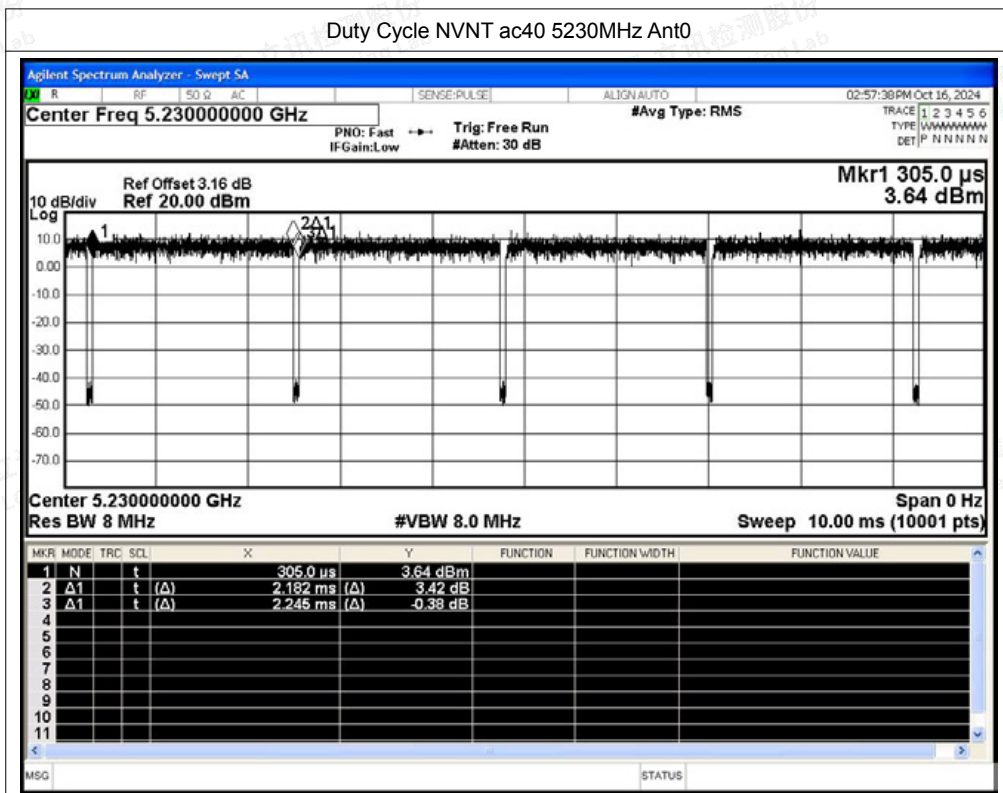




## Duty Cycle NVNT ax20 5180MHz Ant0

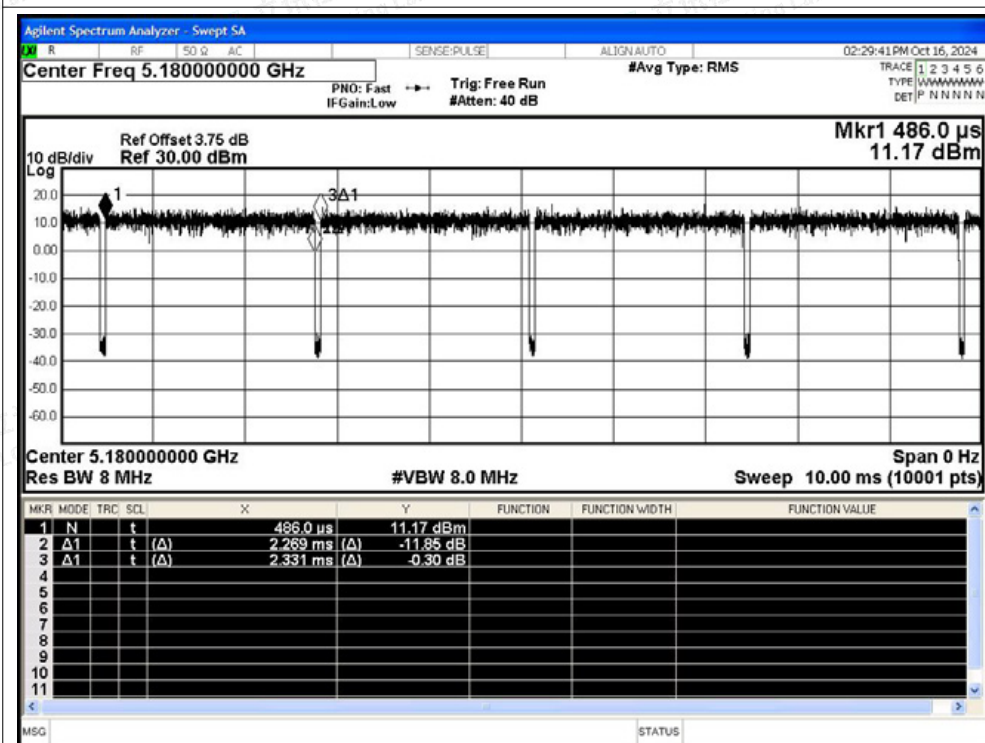


## Duty Cycle NVNT ax20 5200MHz Ant0

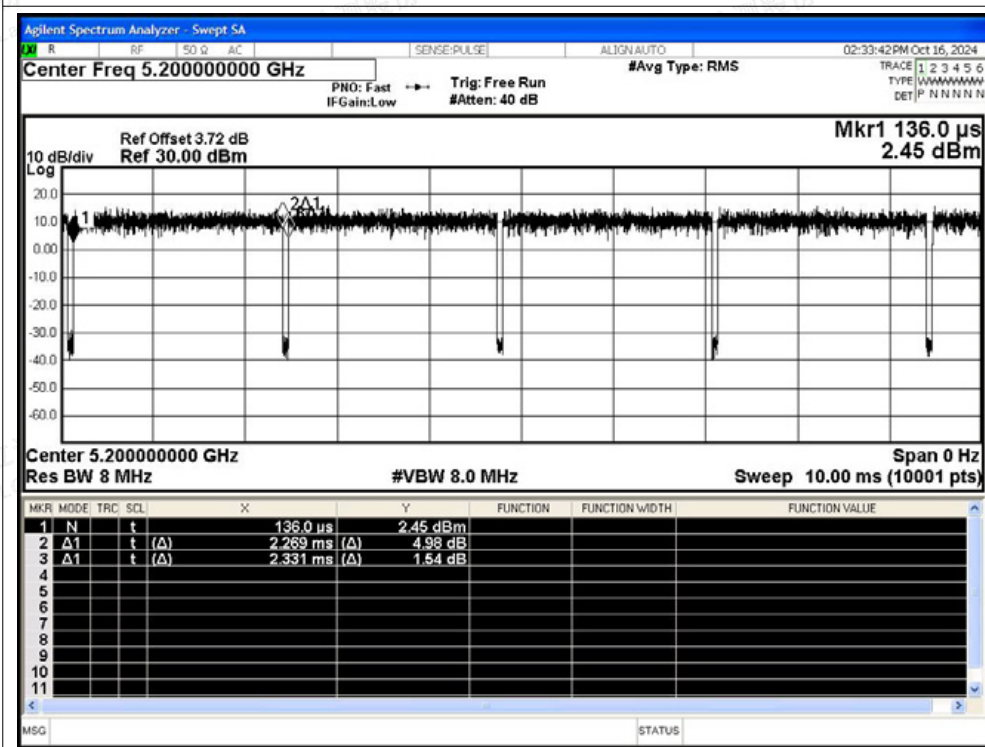




## Duty Cycle NVNT ax20 5240MHz Ant0

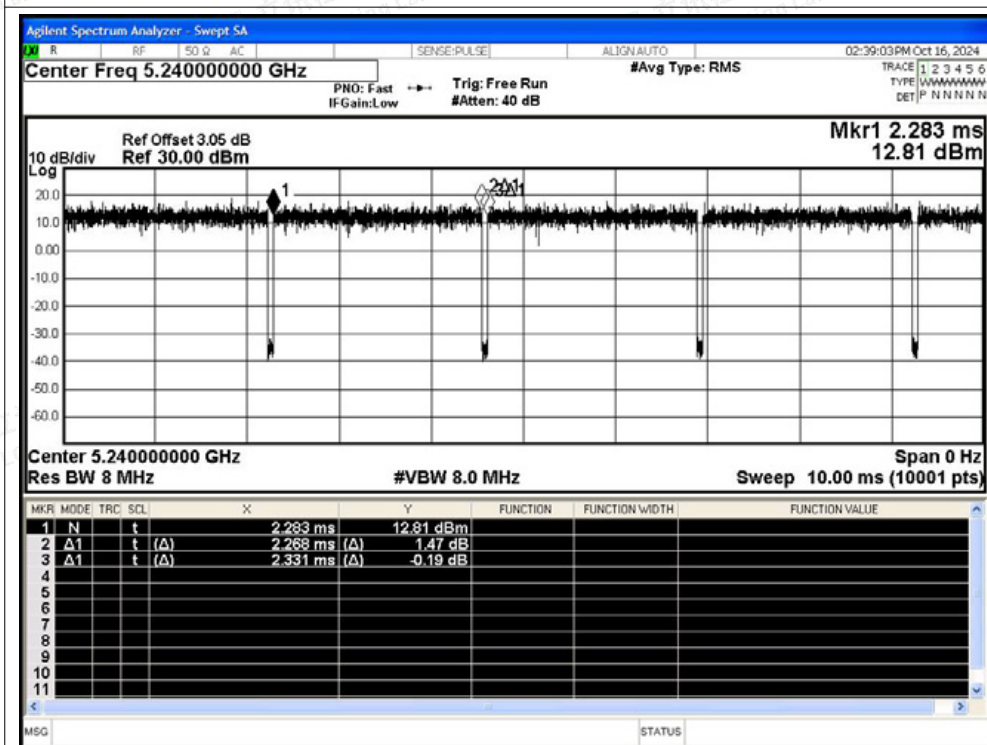

## Duty Cycle NVNT ax40 5190MHz Ant0

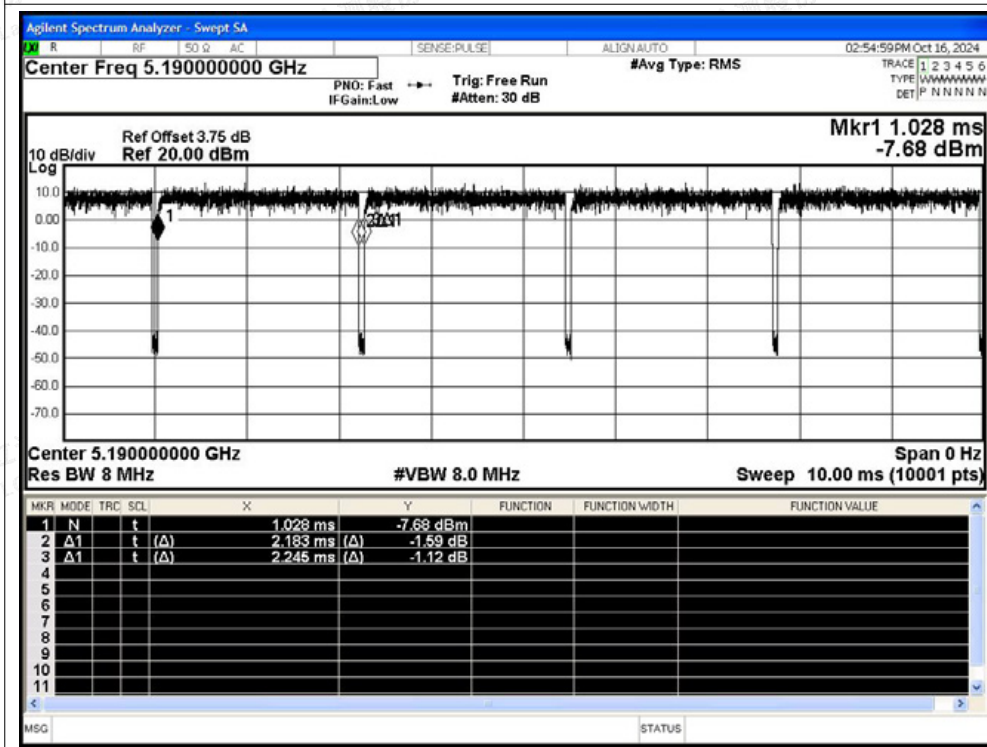


Shenzhen LCS Compliance Testing Laboratory Ltd.

Add: 101, 201 Bldg A &amp; 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China

Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com

Scan code to check authenticity

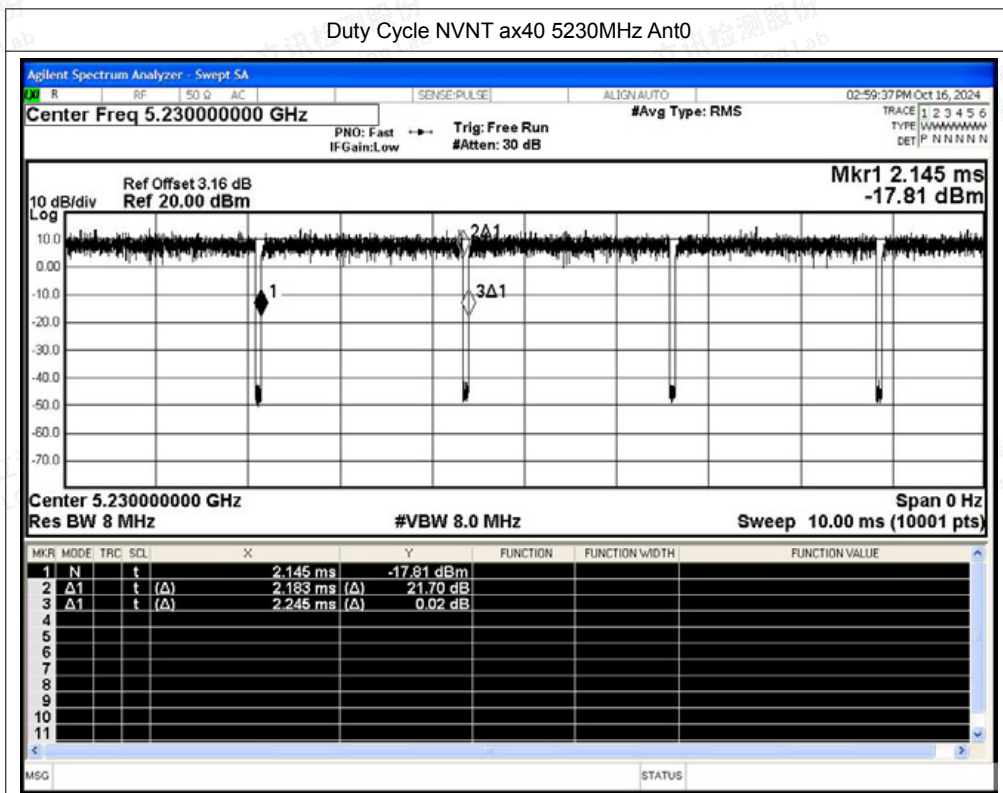




| Condition | Mode | Frequency (MHz) | Antenna | Duty Cycle (%) | Correction Factor (dB) | 1/T (kHz) |
|-----------|------|-----------------|---------|----------------|------------------------|-----------|
| NVNT      | a    | 5180            | Ant1    | 94.56          | 0.24                   | 0.91      |
| NVNT      | a    | 5200            | Ant1    | 94.56          | 0.24                   | 0.91      |
| NVNT      | a    | 5240            | Ant1    | 94.65          | 0.24                   | 0.91      |
| NVNT      | n20  | 5180            | Ant1    | 97.29          | 0.12                   | 0.44      |
| NVNT      | n20  | 5200            | Ant1    | 97.29          | 0.12                   | 0.44      |
| NVNT      | n20  | 5240            | Ant1    | 97.29          | 0.12                   | 0.44      |
| NVNT      | n40  | 5190            | Ant1    | 97.23          | 0.12                   | 0.46      |
| NVNT      | n40  | 5230            | Ant1    | 97.23          | 0.12                   | 0.46      |
| NVNT      | ac20 | 5180            | Ant1    | 97.3           | 0.12                   | 0.44      |
| NVNT      | ac20 | 5200            | Ant1    | 97.34          | 0.12                   | 0.44      |
| NVNT      | ac20 | 5240            | Ant1    | 97.3           | 0.12                   | 0.44      |
| NVNT      | ac40 | 5190            | Ant1    | 97.19          | 0.12                   | 0.46      |
| NVNT      | ac40 | 5230            | Ant1    | 97.19          | 0.12                   | 0.46      |
| NVNT      | ax20 | 5180            | Ant1    | 97.34          | 0.12                   | 0.44      |
| NVNT      | ax20 | 5200            | Ant1    | 97.34          | 0.12                   | 0.44      |
| NVNT      | ax20 | 5240            | Ant1    | 97.34          | 0.12                   | 0.44      |
| NVNT      | ax40 | 5190            | Ant1    | 97.19          | 0.12                   | 0.46      |
| NVNT      | ax40 | 5230            | Ant1    | 97.19          | 0.12                   | 0.46      |






## Test Graphs

Duty Cycle NVNT a 5180MHz Ant1

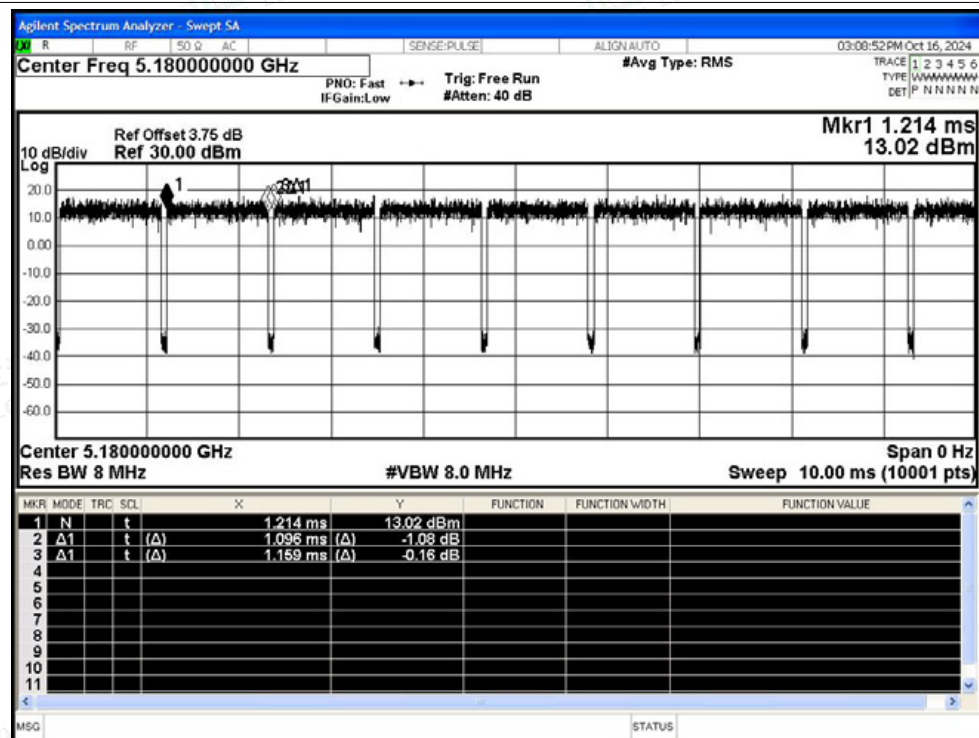


Duty Cycle NVNT a 5200MHz Ant1

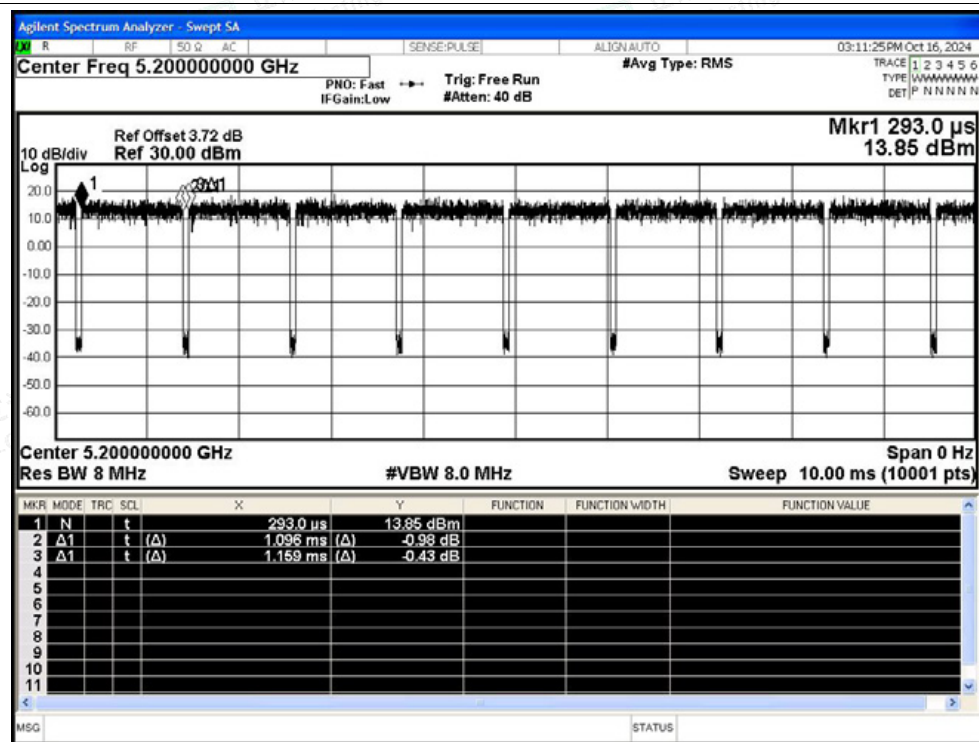



## Duty Cycle NVNT a 5240MHz Ant1

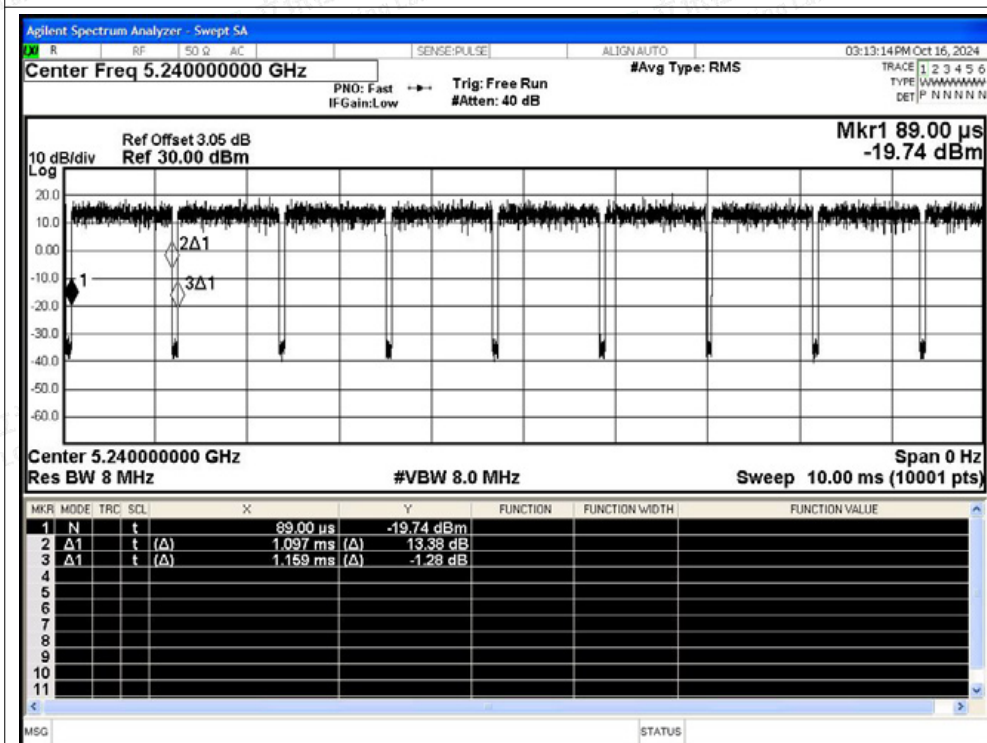

## Duty Cycle NVNT n20 5180MHz Ant1

