





Restrict Band NVNT ac40 5270MHz Ant1 Peak

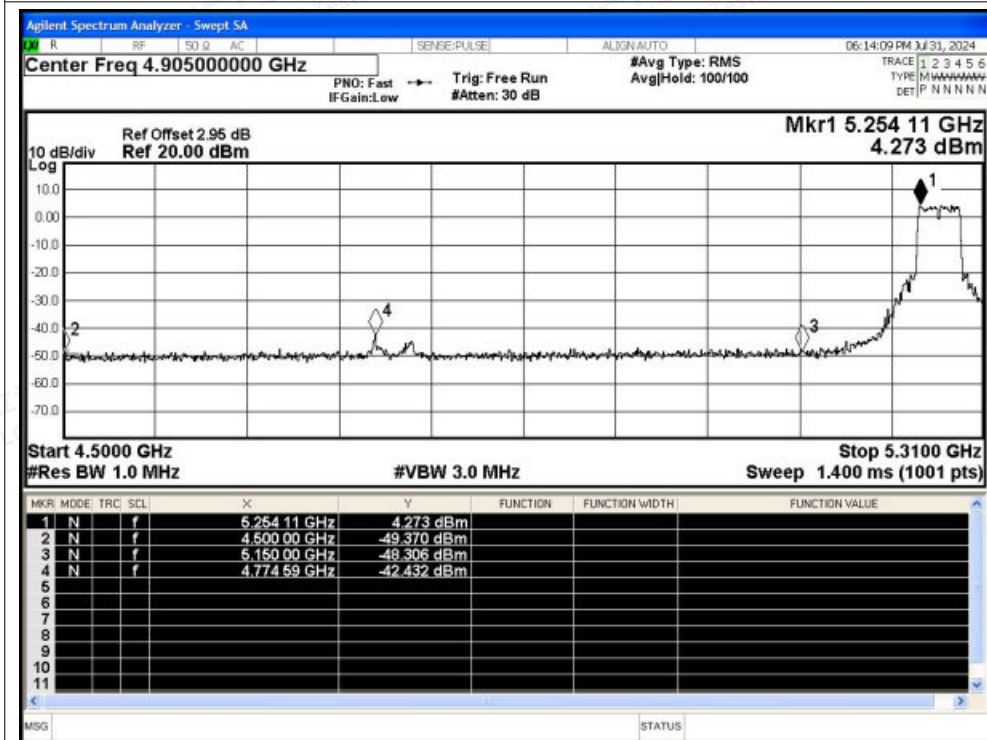


Restrict Band NVNT ac40 5270MHz Ant1 Average

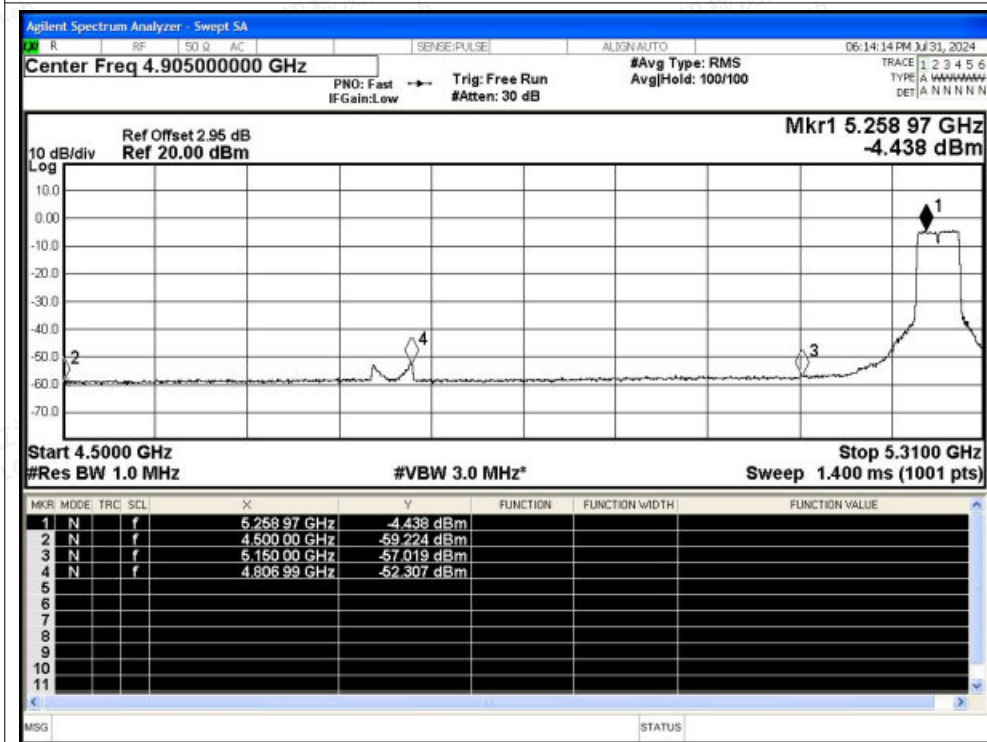




Restrict Band NVNT ac40 5310MHz Ant1 Peak

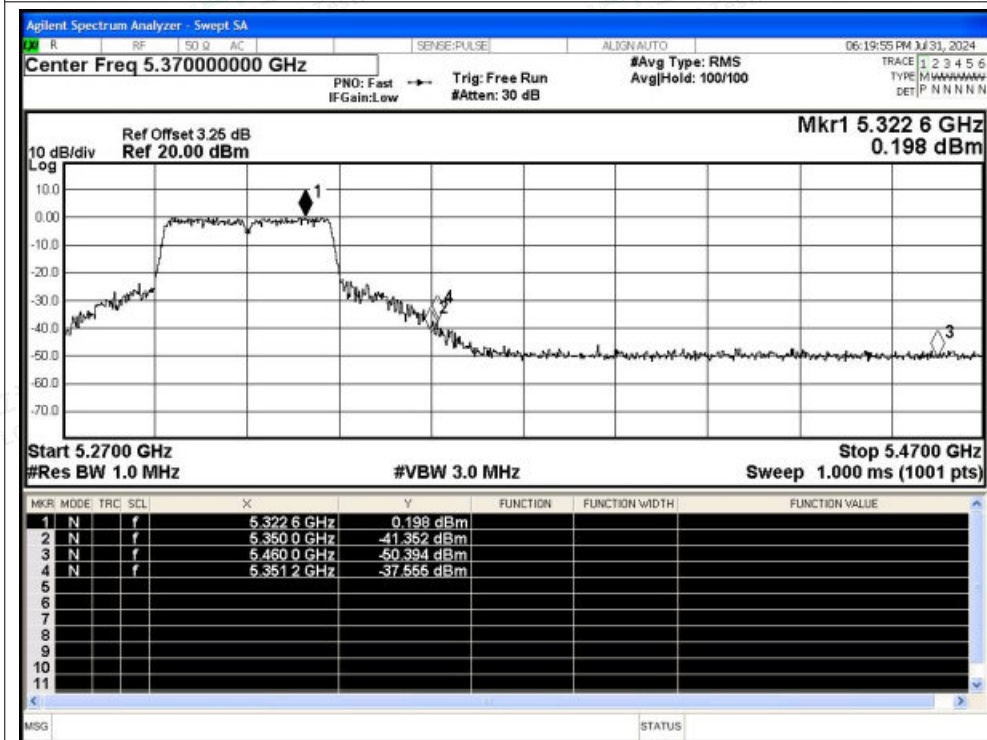


Restrict Band NVNT ac40 5310MHz Ant1 Average

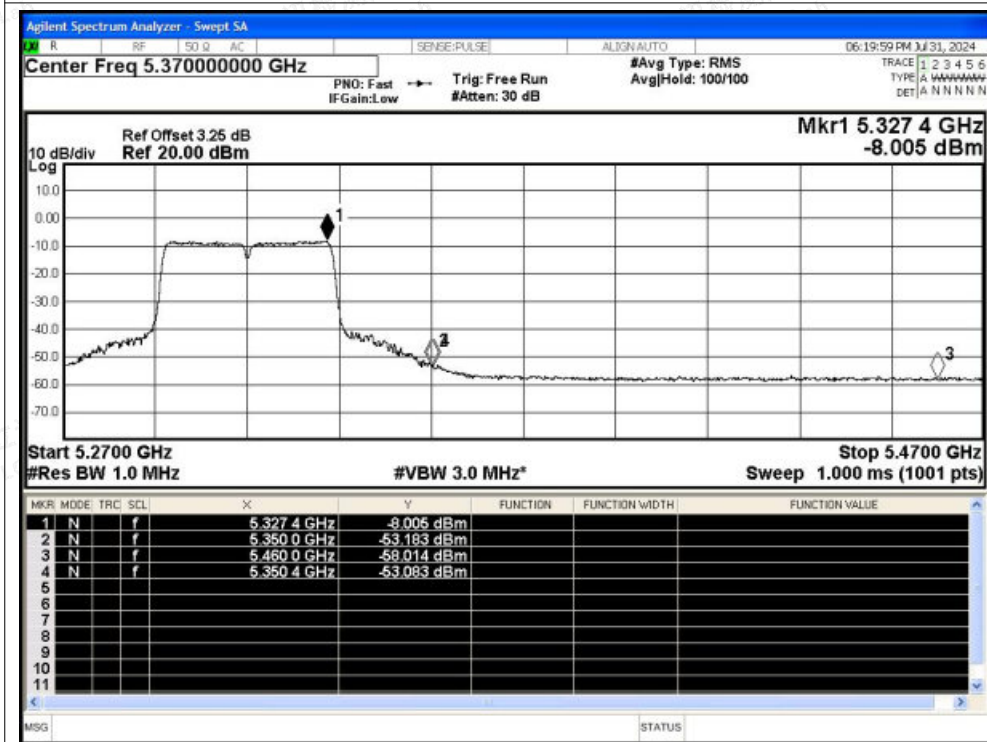




Restrict Band NVNT ac80 5290MHz Ant1 Peak

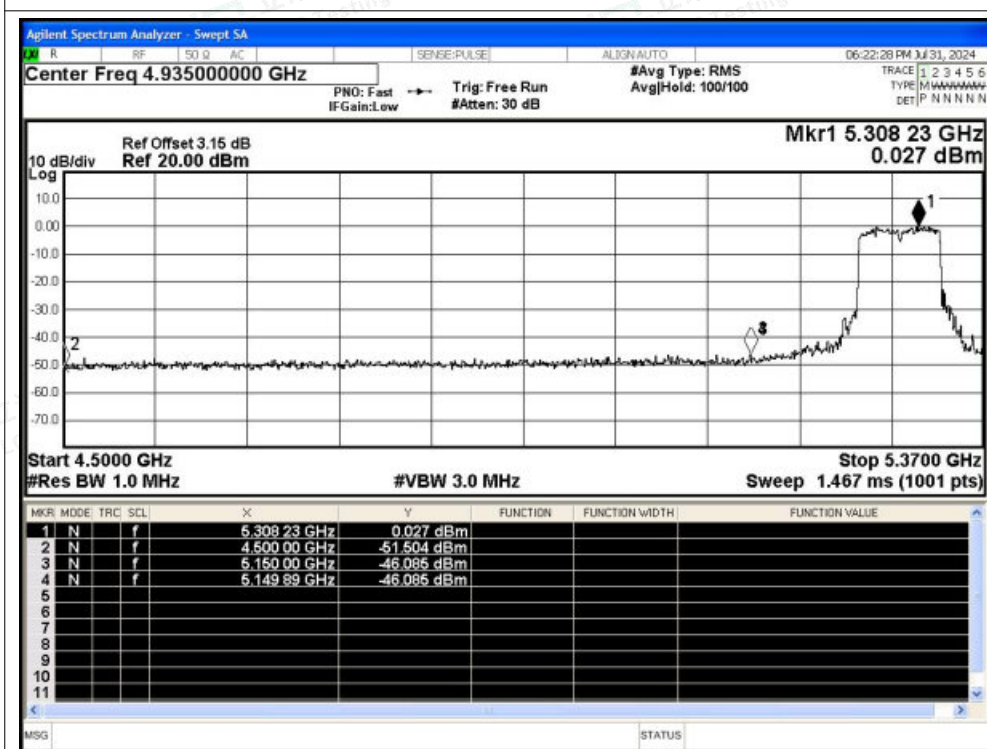


Restrict Band NVNT ac80 5290MHz Ant1 Average

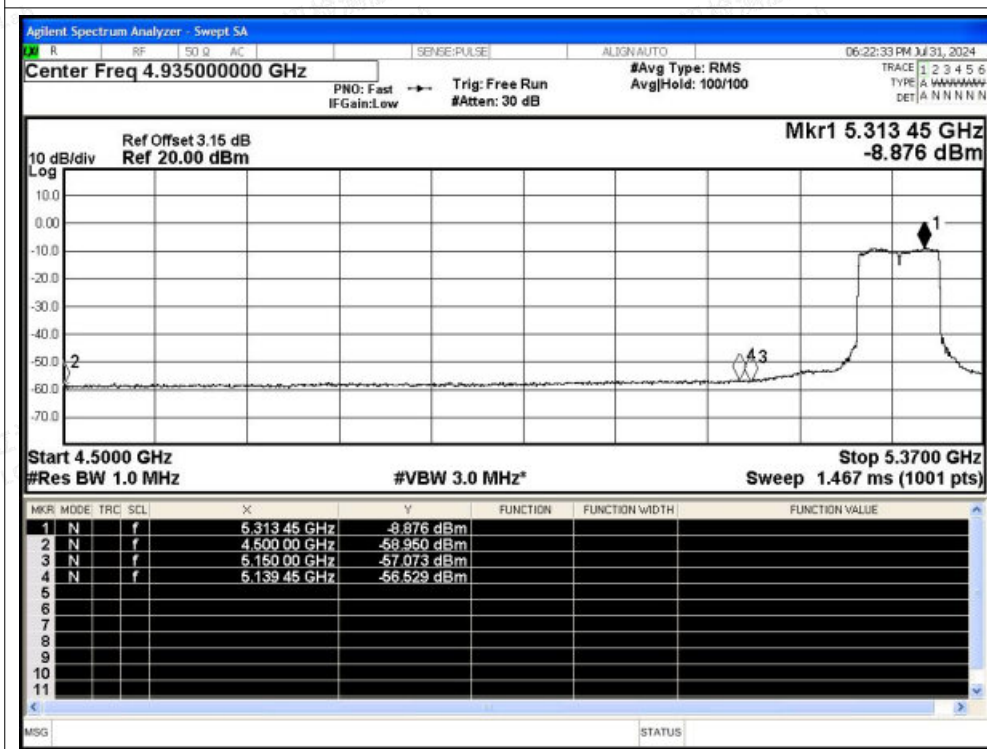




Restrict Band NVNT ac80 5290MHz Ant1 Peak

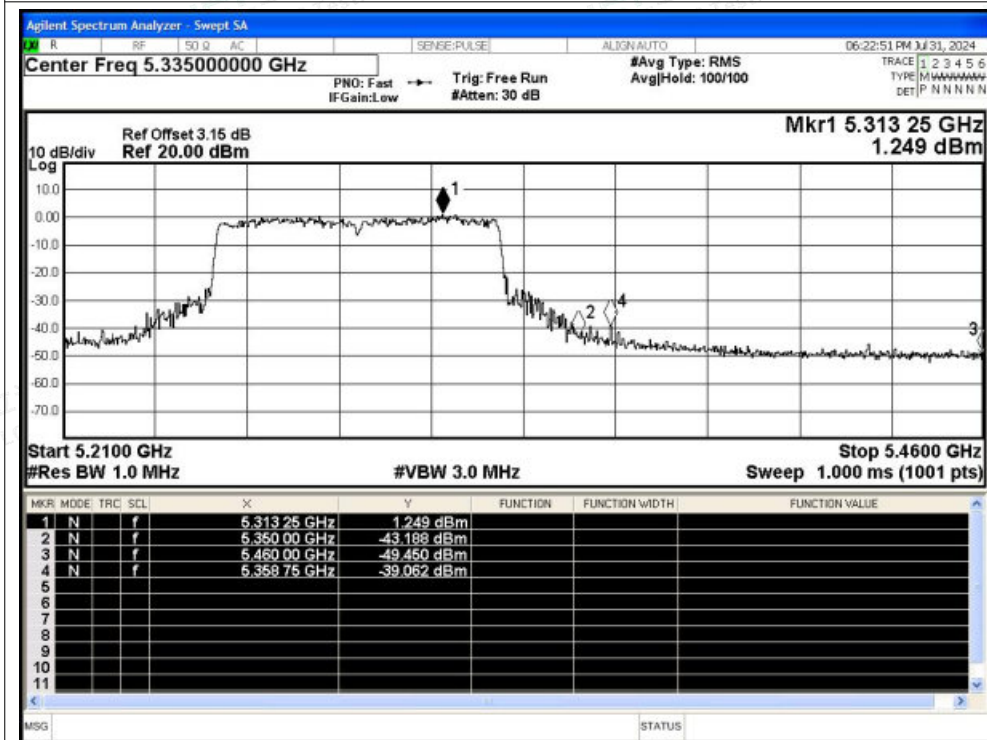


Restrict Band NVNT ac80 5290MHz Ant1 Average

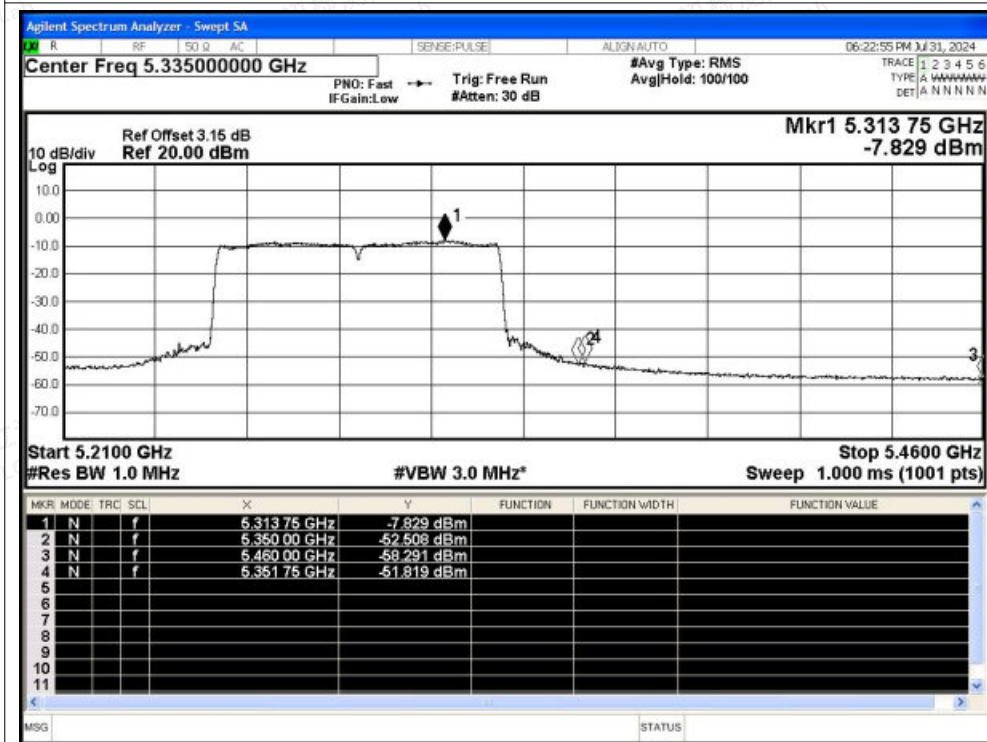




Restrict Band NVNT ax20 5260MHz Ant1 Peak

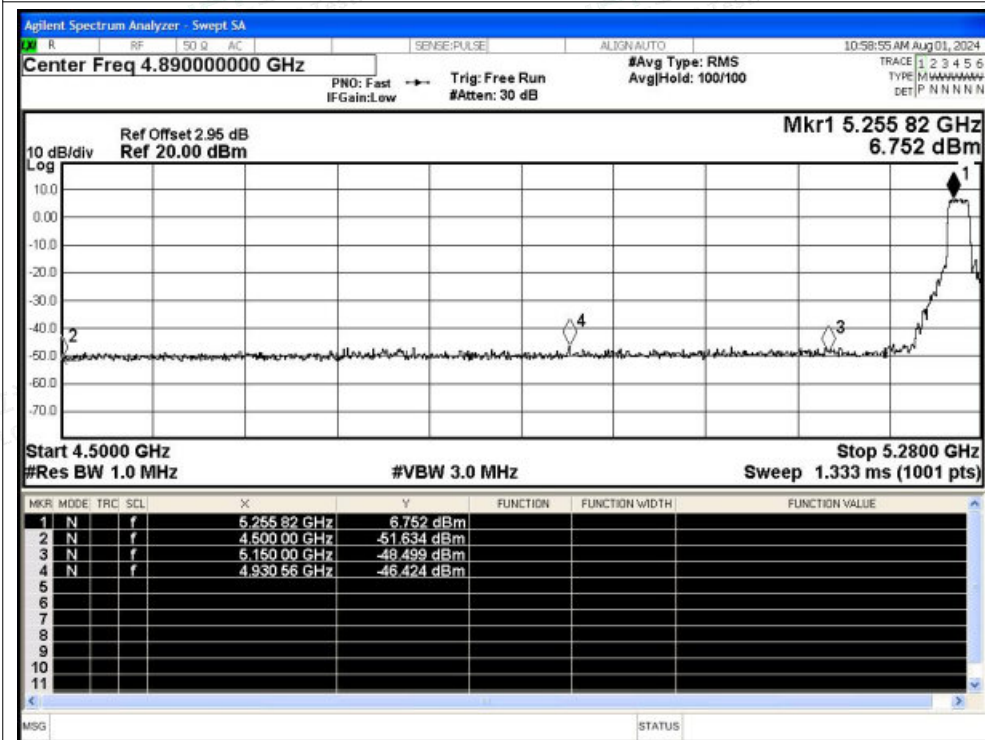


Restrict Band NVNT ax20 5260MHz Ant1 Average

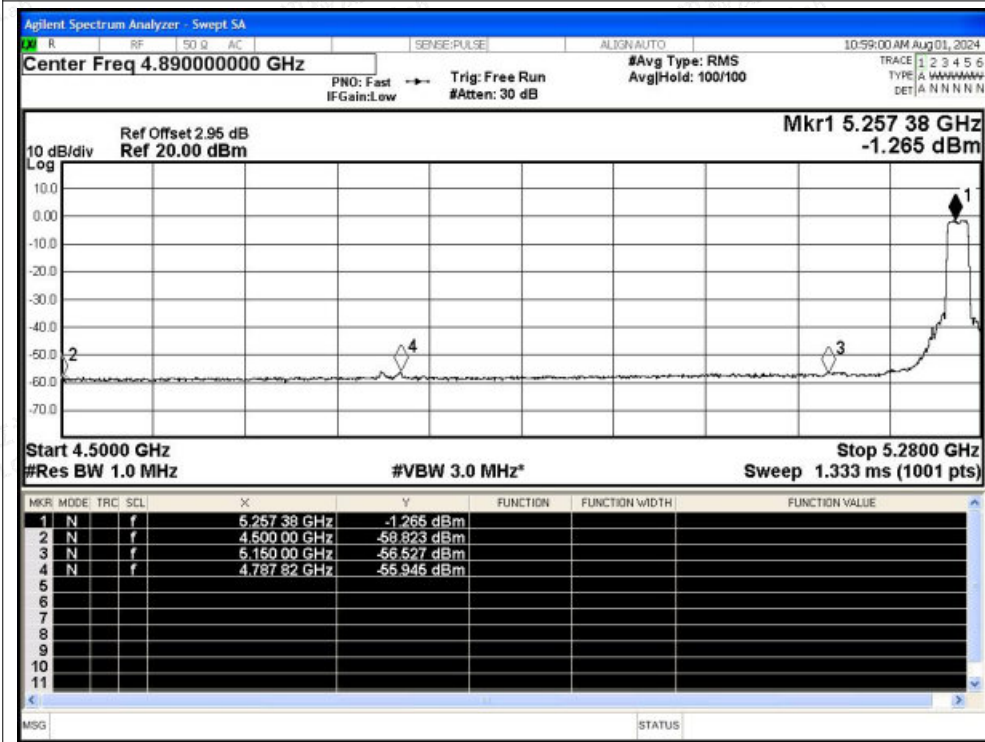




Restrict Band NVNT ax20 5320MHz Ant1 Peak

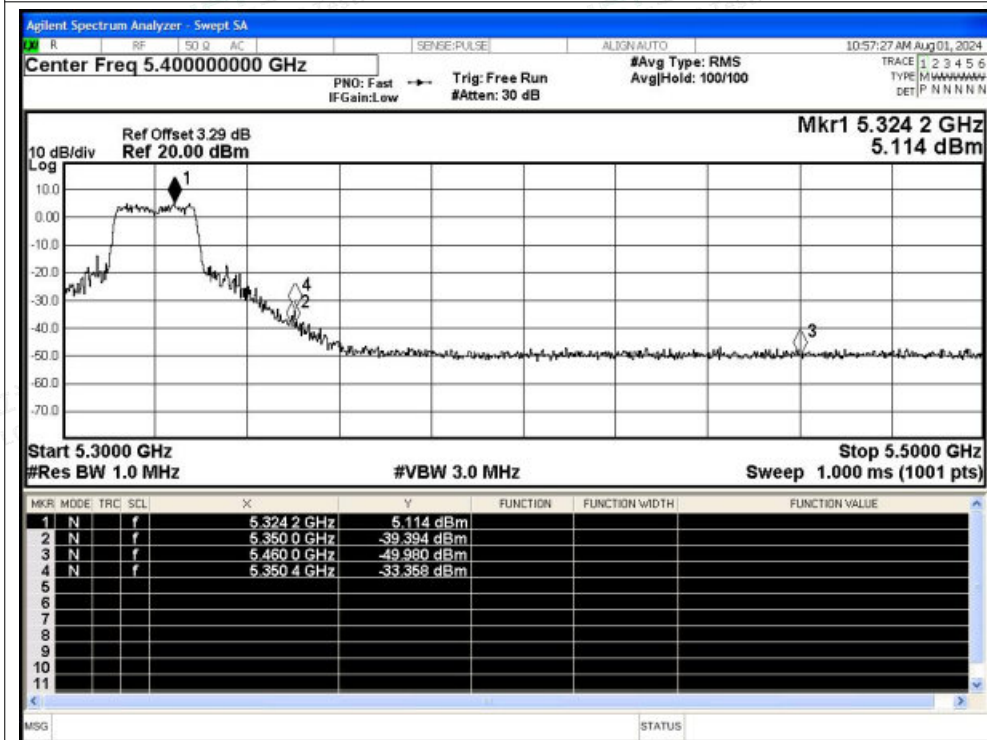


Restrict Band NVNT ax20 5320MHz Ant1 Average

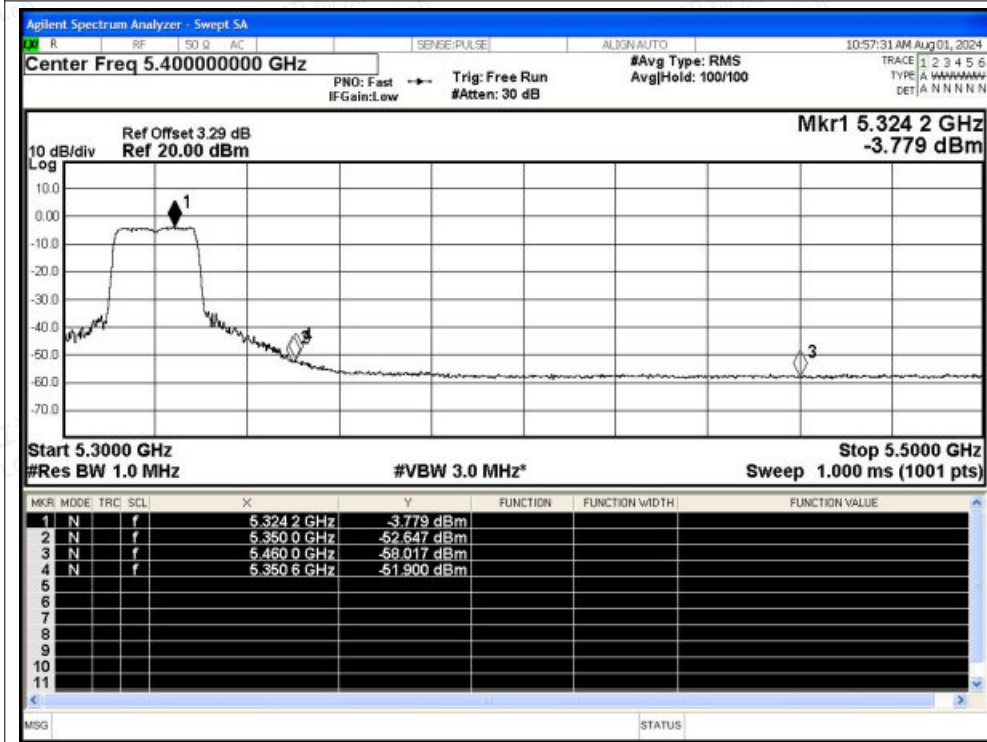




Restrict Band NVNT ax40 5270MHz Ant1 Peak

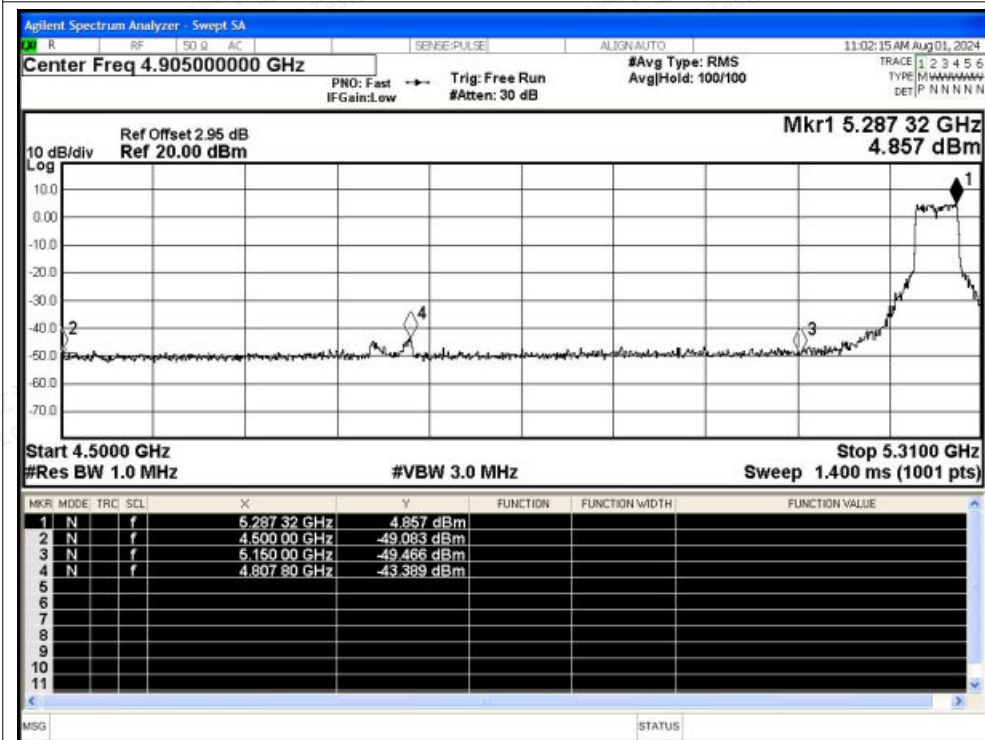


Restrict Band NVNT ax40 5270MHz Ant1 Average

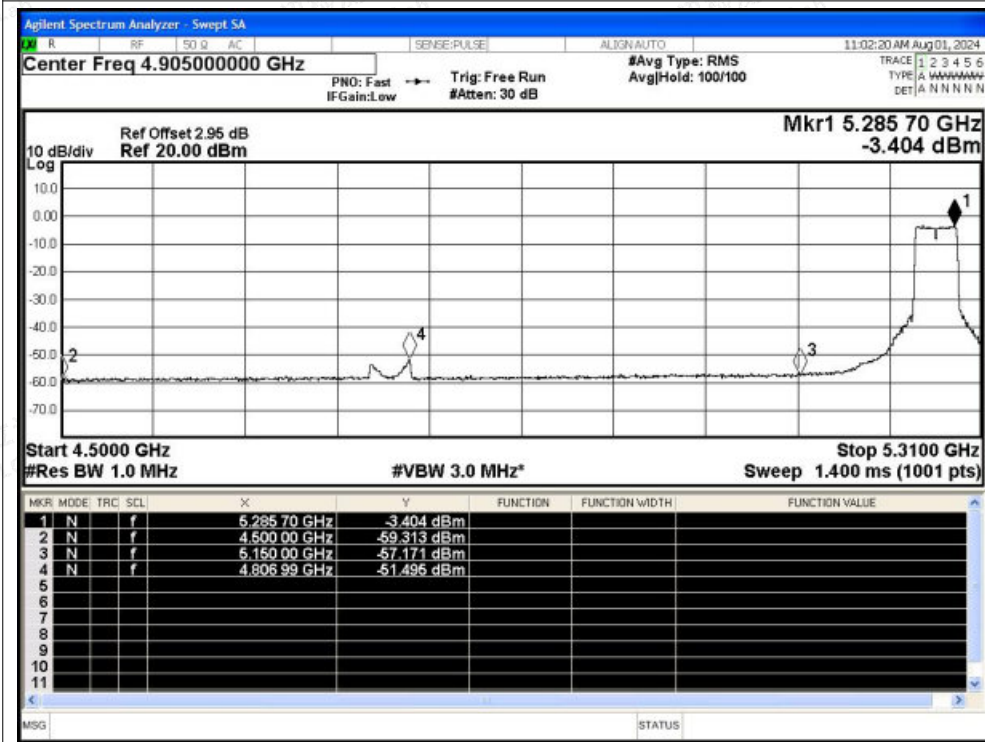




Restrict Band NVNT ax40 5310MHz Ant1 Peak

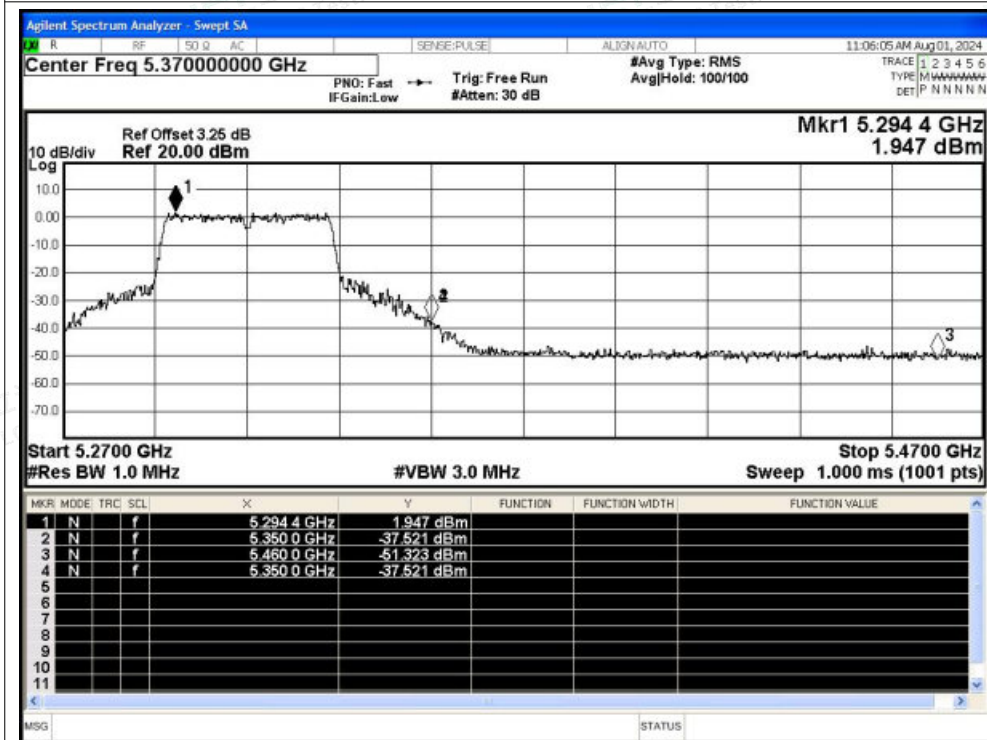


Restrict Band NVNT ax40 5310MHz Ant1 Average

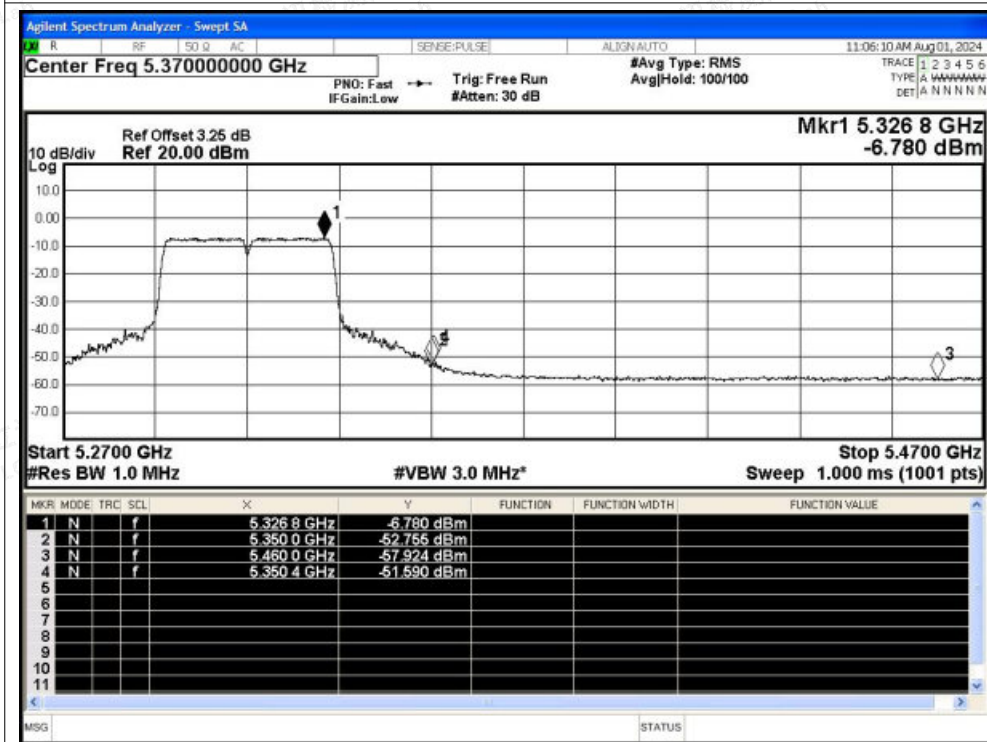




Restrict Band NVNT ax80 5290MHz Ant1 Peak

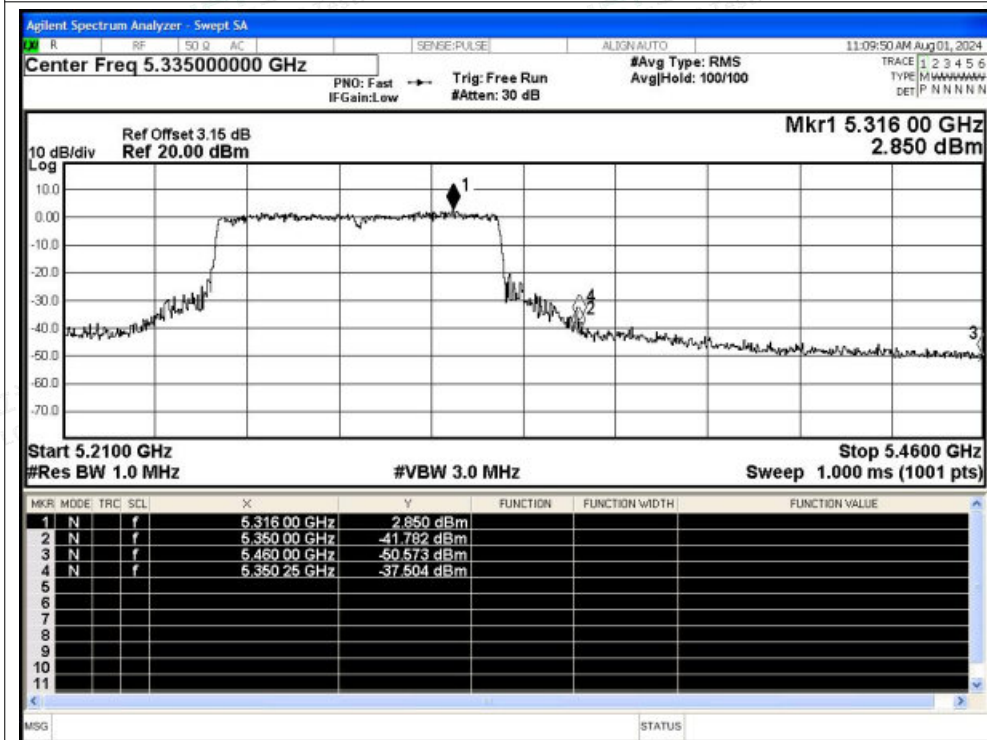


Restrict Band NVNT ax80 5290MHz Ant1 Average

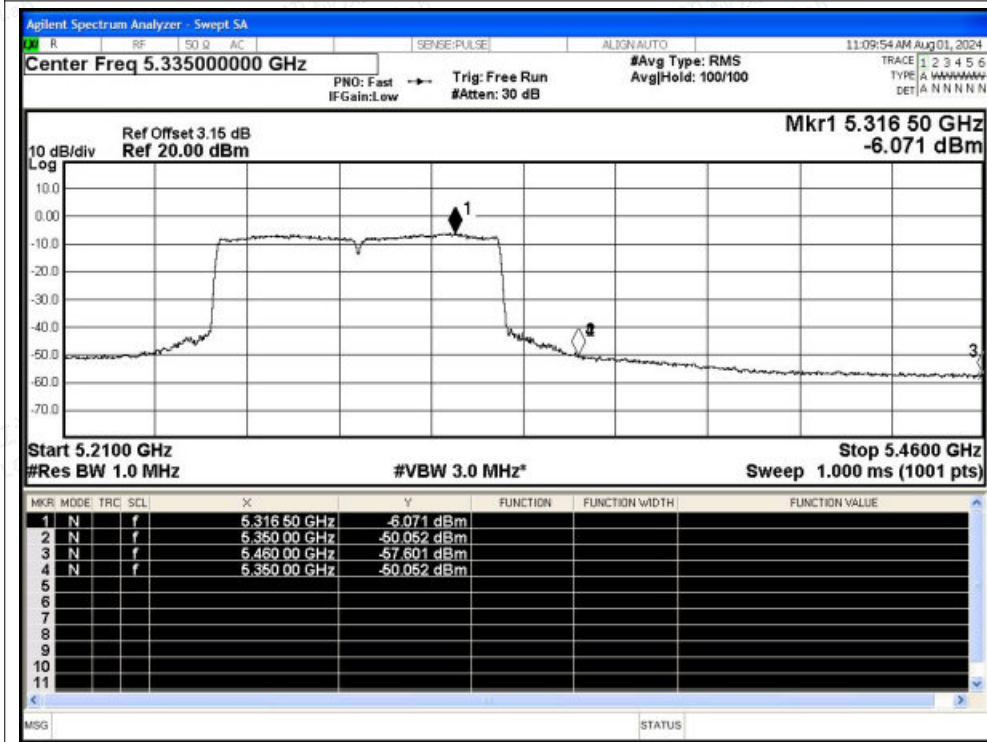




Restrict Band NVNT ax80 5290MHz Ant1 Peak

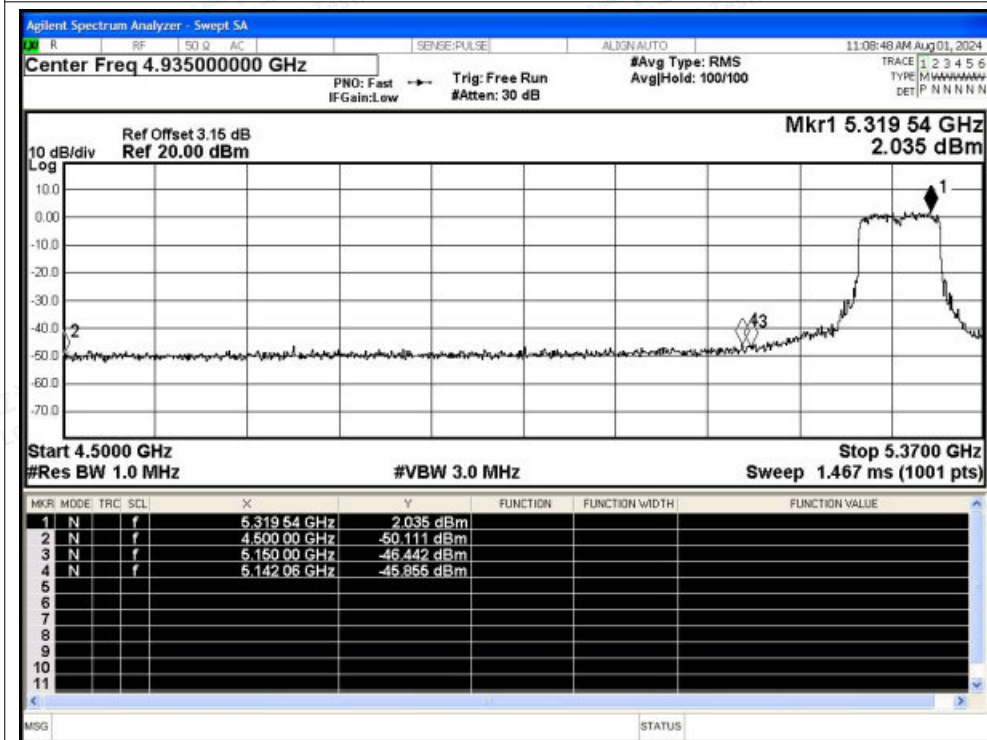

Restrict Band NVNT ax80 5290MHz Ant1 Average

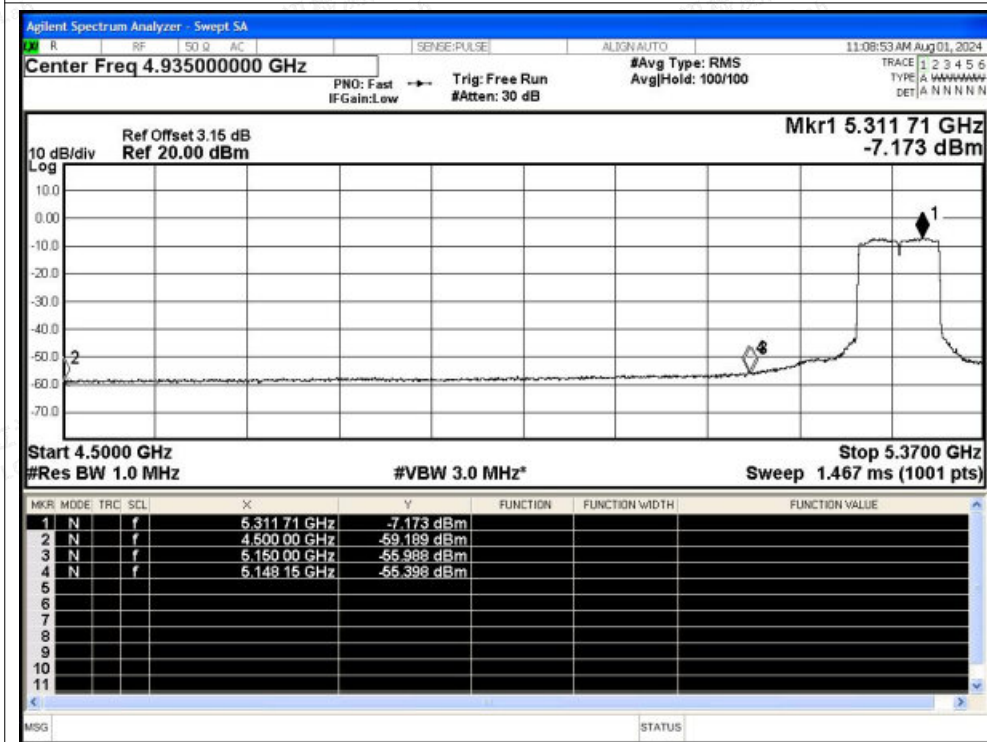



E.5 Frequency Stability


Condition	Mode	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Frequency Error (Hz)	Deviation (ppm)	Limit (ppm)	Verdict
NVNT	a	5260	Ant1	5260	0	0	25	Pass
NVNT	a	5300	Ant1	5300	0	0	25	Pass
NVNT	a	5320	Ant1	5320	0	0	25	Pass
NVNT	n20	5260	Ant1	5260	0	0	25	Pass
NVNT	n20	5300	Ant1	5299.96	-40000	-7.55	25	Pass
NVNT	n20	5320	Ant1	5319.98	-20000	-3.76	25	Pass
NVNT	n40	5270	Ant1	5270	0	0	25	Pass
NVNT	n40	5310	Ant1	5310	0	0	25	Pass
NVNT	ac20	5260	Ant1	5259.98	-20000	-3.8	25	Pass
NVNT	ac20	5300	Ant1	5299.98	-20000	-3.77	25	Pass
NVNT	ac20	5320	Ant1	5320	0	0	25	Pass
NVNT	ac40	5270	Ant1	5270	0	0	25	Pass
NVNT	ac40	5310	Ant1	5310	0	0	25	Pass
NVNT	ac80	5290	Ant1	5290	0	0	25	Pass
NVNT	ax20	5260	Ant1	5260	0	0	25	Pass
NVNT	ax20	5300	Ant1	5299.98	-20000	-3.77	25	Pass
NVNT	ax20	5320	Ant1	5320	0	0	25	Pass
NVNT	ax40	5270	Ant1	5270	0	0	25	Pass
NVNT	ax40	5310	Ant1	5309.96	-40000	-7.53	25	Pass
NVNT	ax80	5290	Ant1	5290	0	0	25	Pass






Test Graphs

Freq. Stability NVNT a 5260MHz Ant1

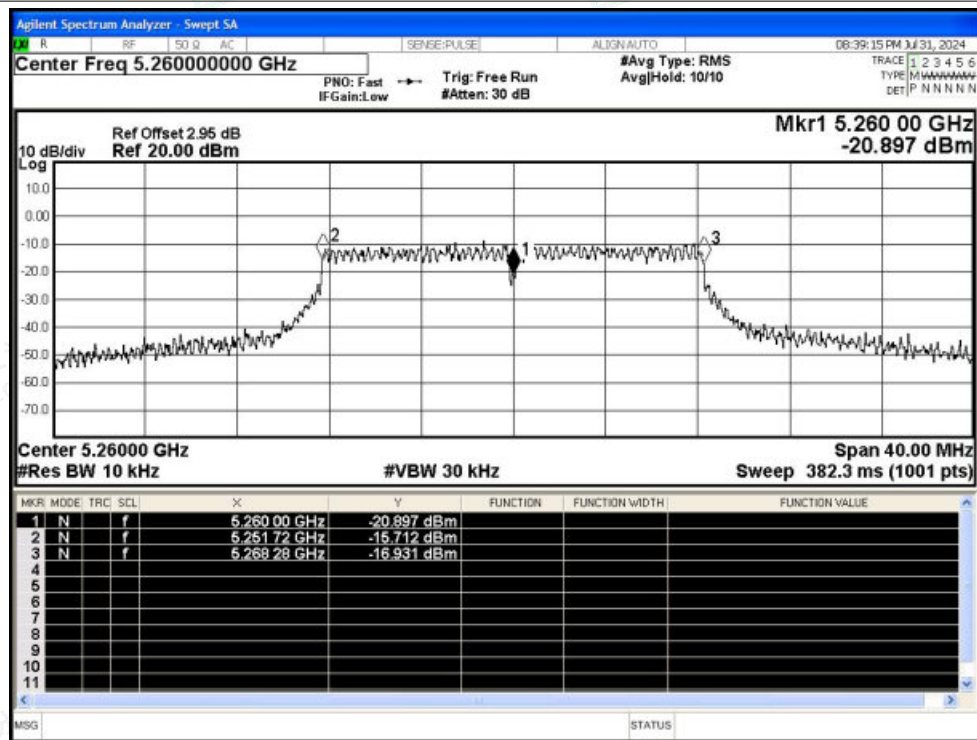


Freq. Stability NVNT a 5300MHz Ant1

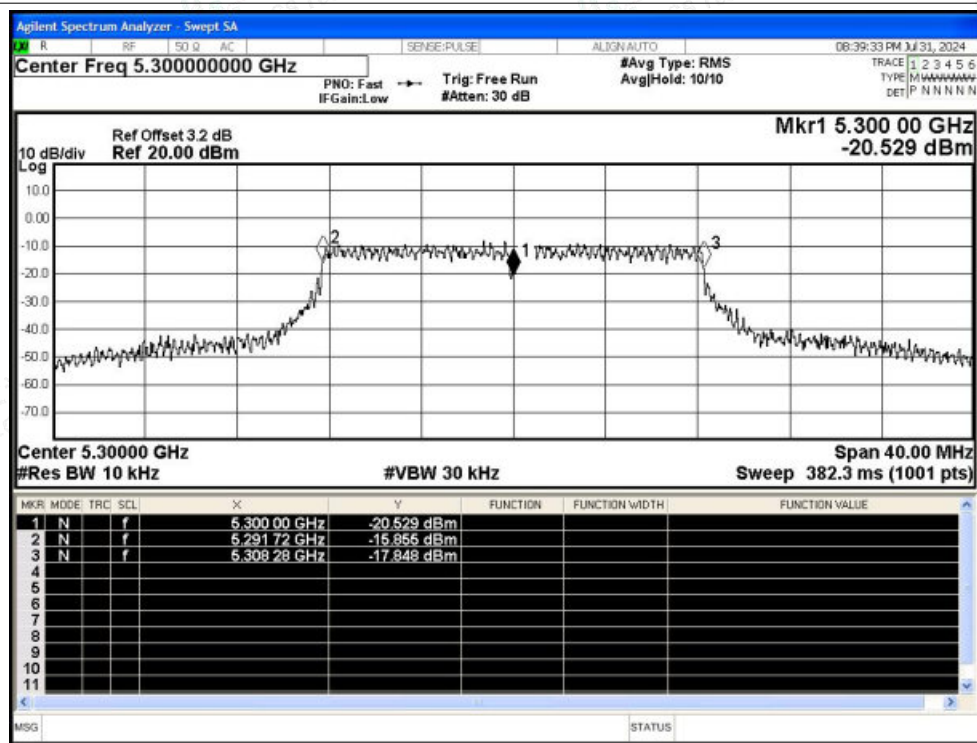




Freq. Stability NVNT a 5320MHz Ant1

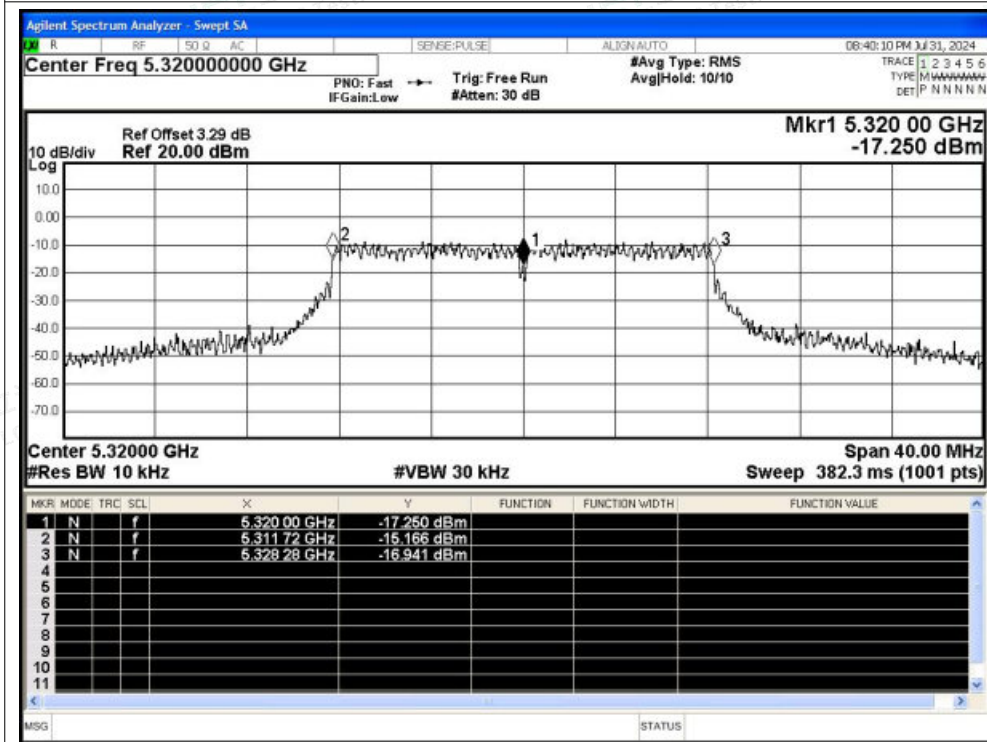


Freq. Stability NVNT n20 5260MHz Ant1

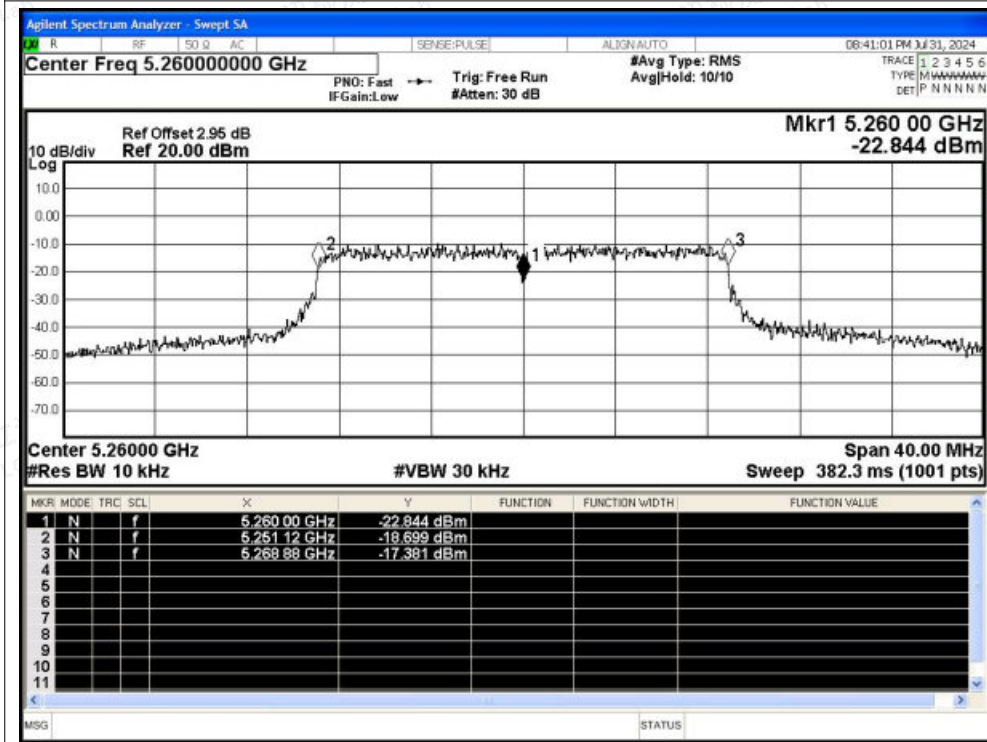




Freq. Stability NVNT n20 5300MHz Ant1

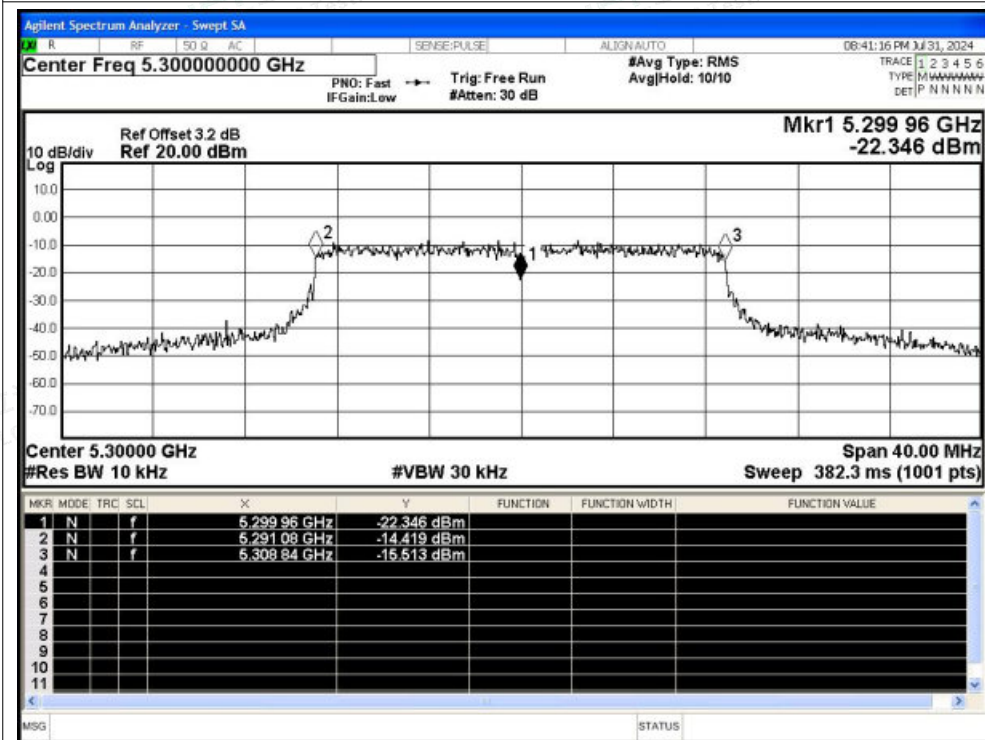


Freq. Stability NVNT n20 5320MHz Ant1

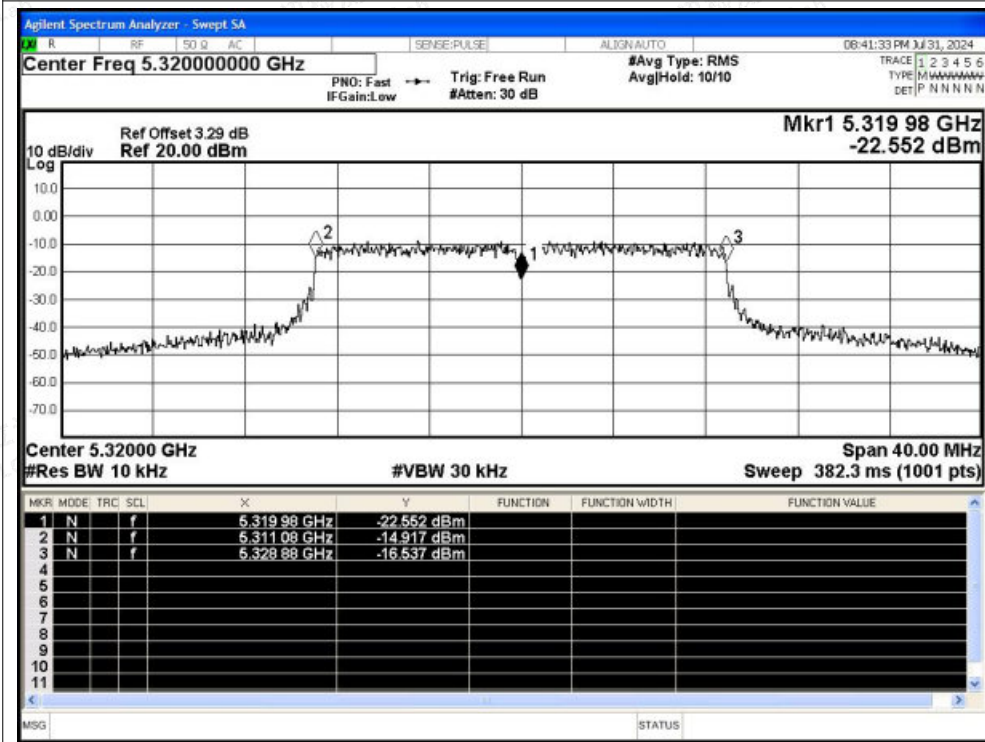




Freq. Stability NVNT n40 5270MHz Ant1

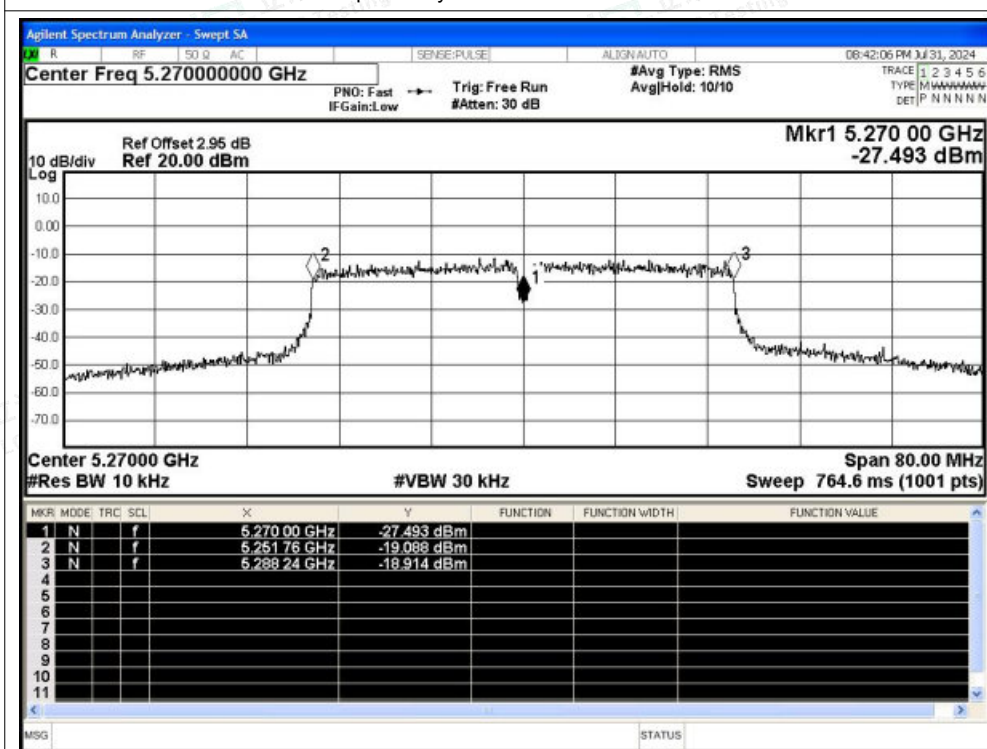


Freq. Stability NVNT n40 5310MHz Ant1

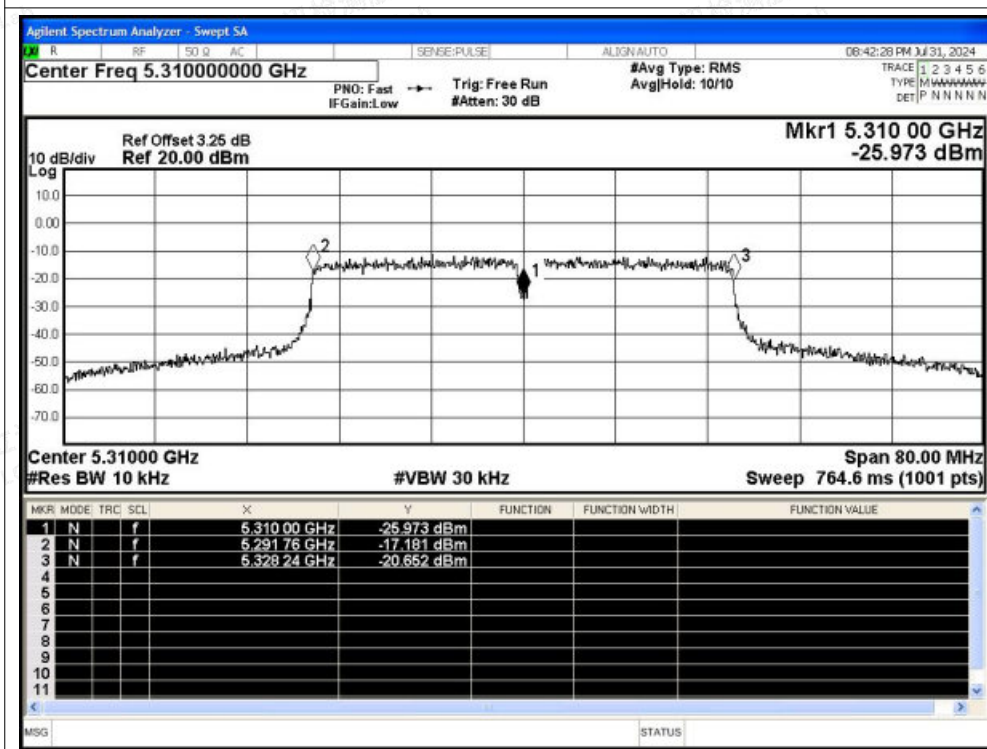




Freq. Stability NVNT ac20 5260MHz Ant1

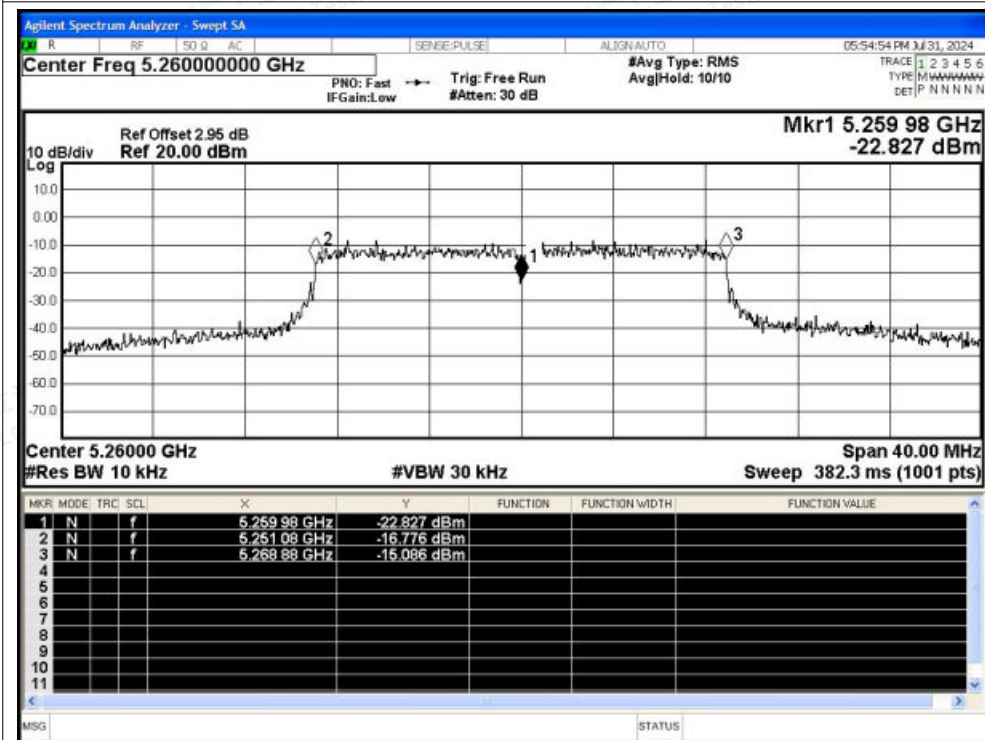


Freq. Stability NVNT ac20 5300MHz Ant1

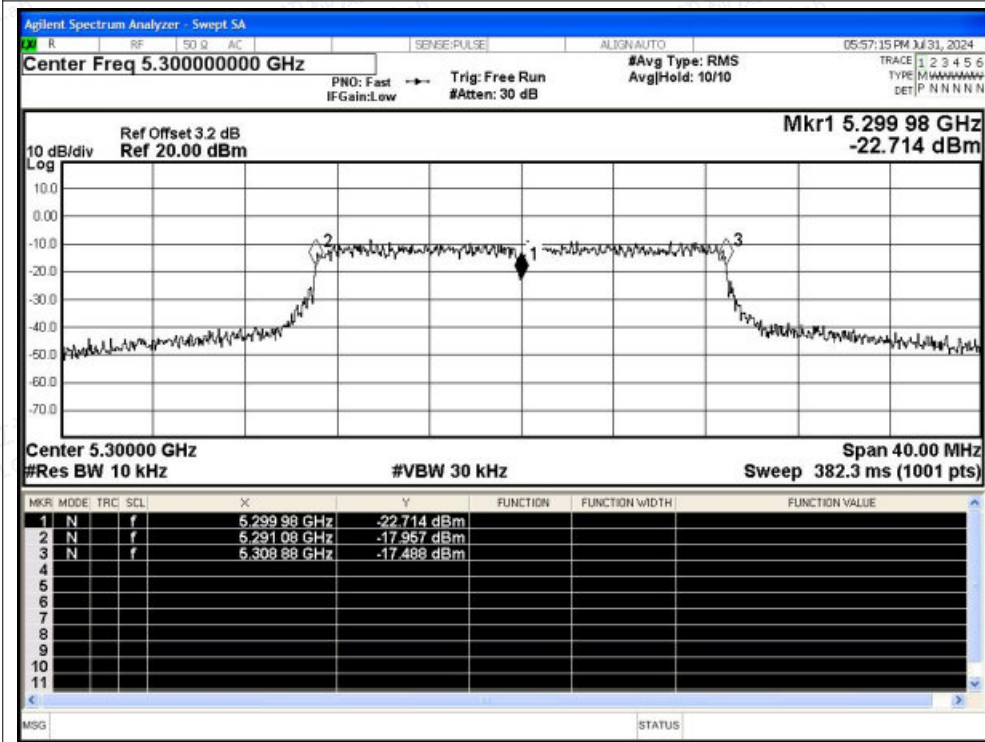




Freq. Stability NVNT ac20 5320MHz Ant1

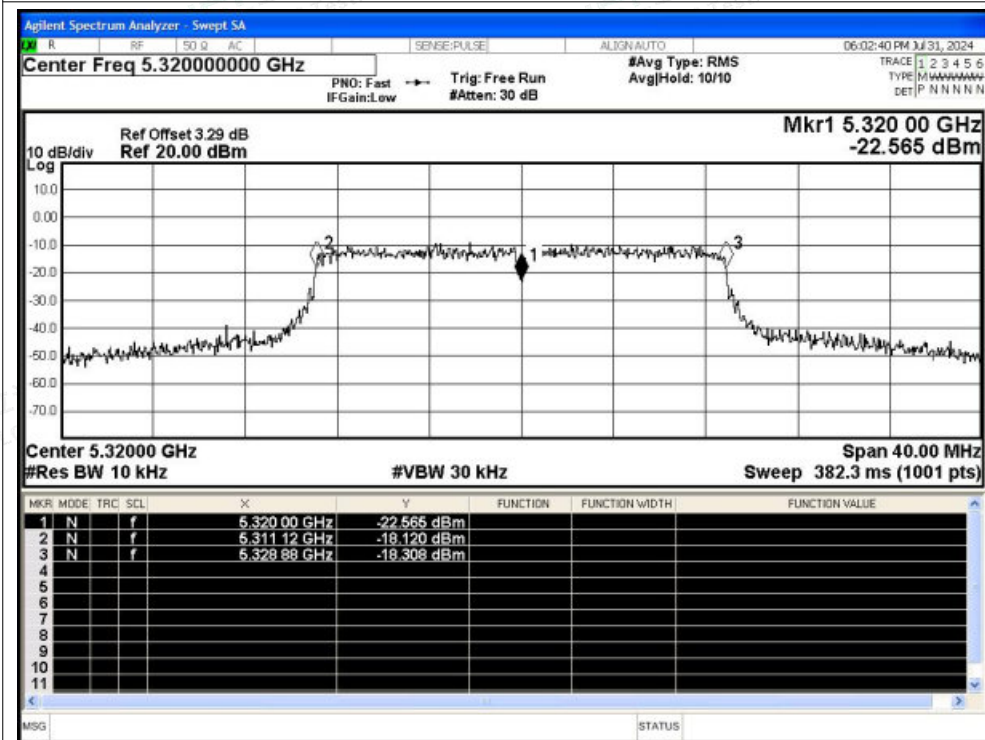


Freq. Stability NVNT ac40 5270MHz Ant1

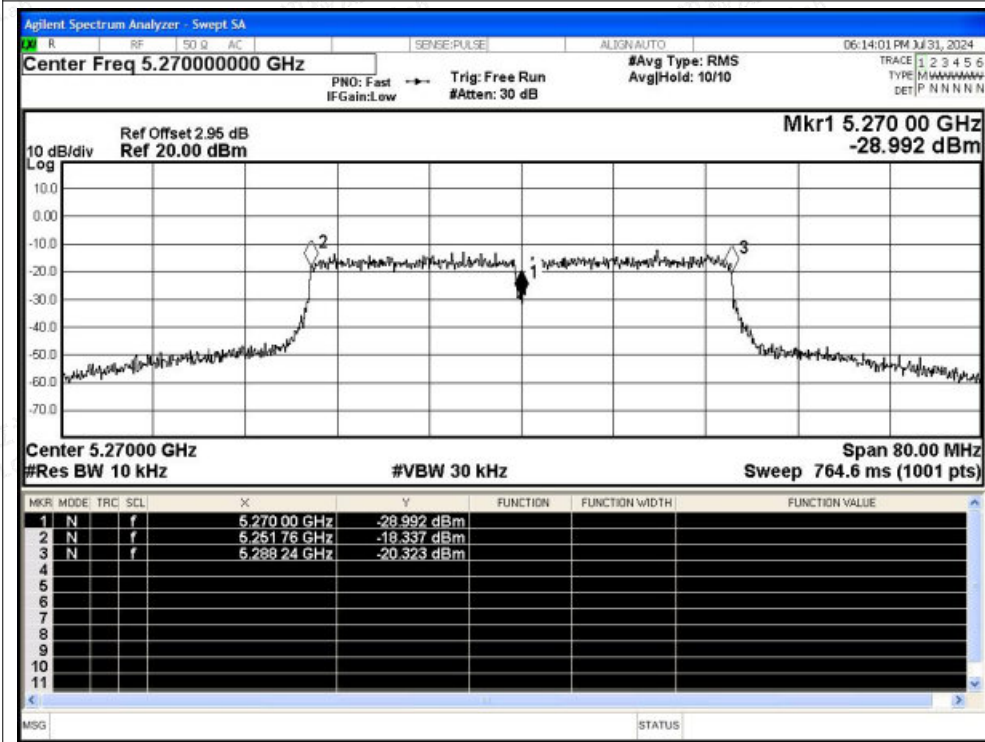




Freq. Stability NVNT ac40 5310MHz Ant1

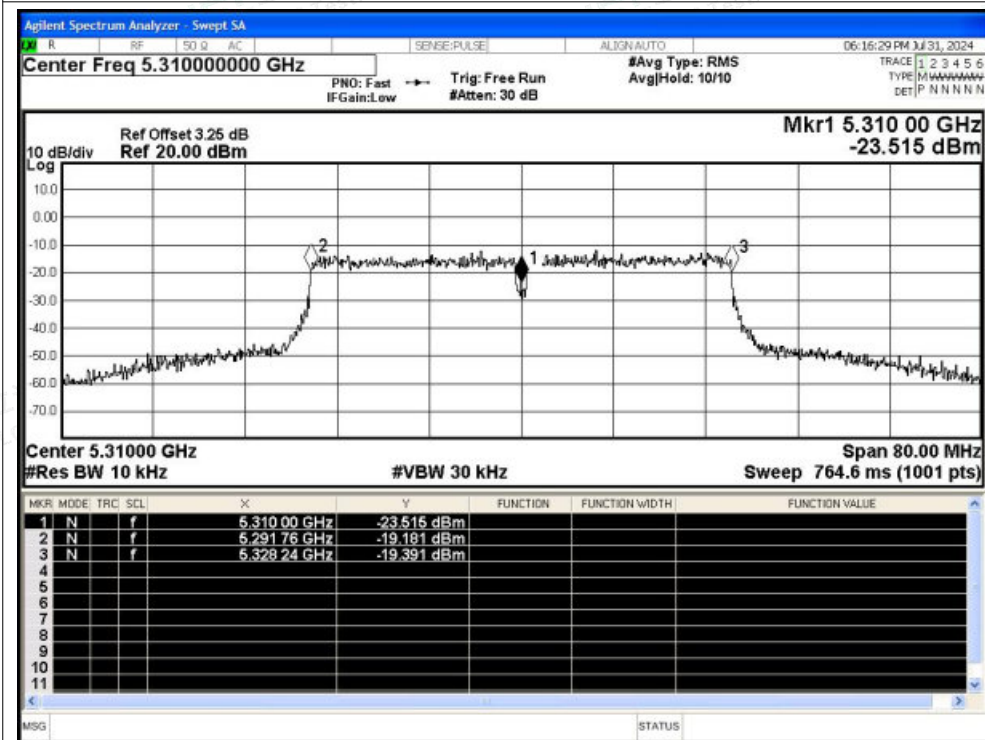


Freq. Stability NVNT ac80 5290MHz Ant1

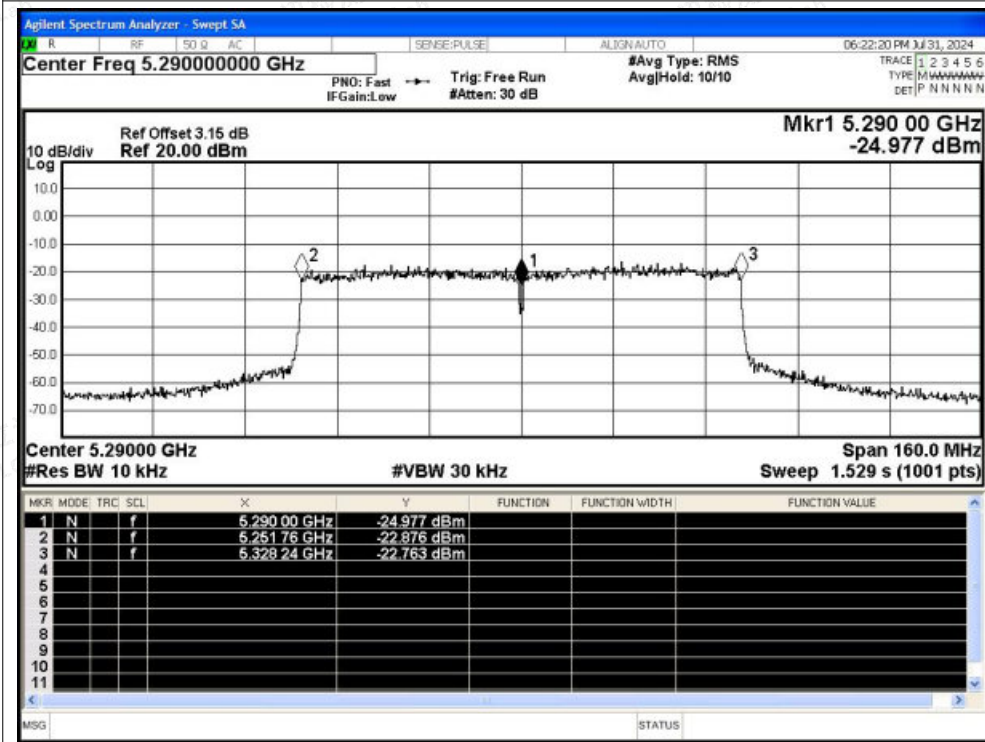




Freq. Stability NVNT ax20 5260MHz Ant1

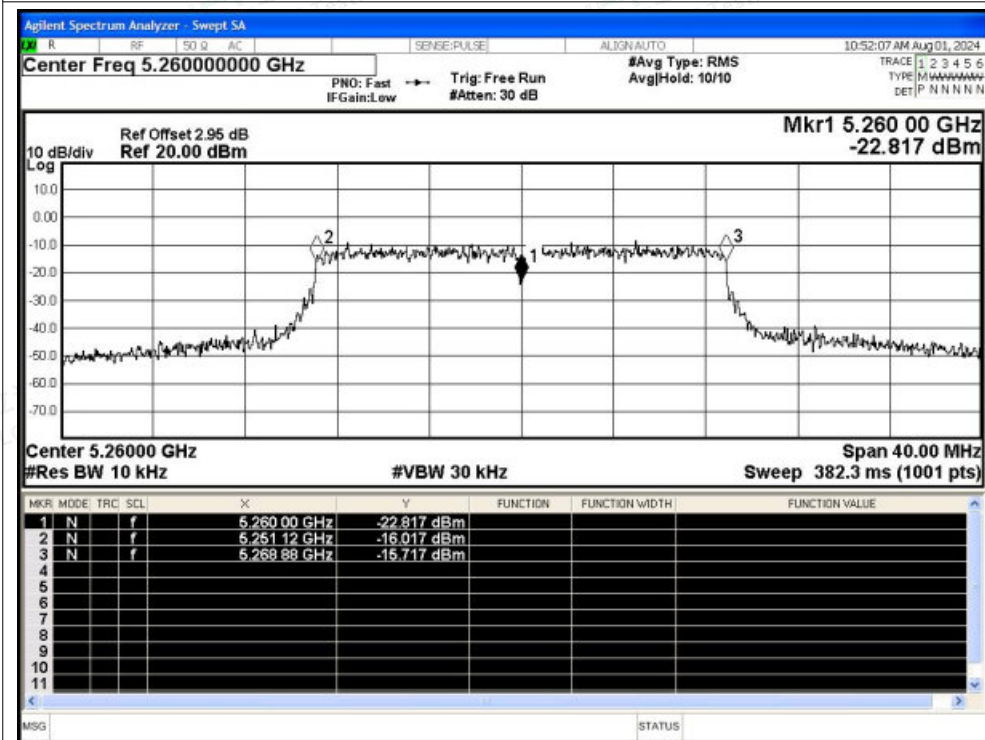


Freq. Stability NVNT ax20 5300MHz Ant1

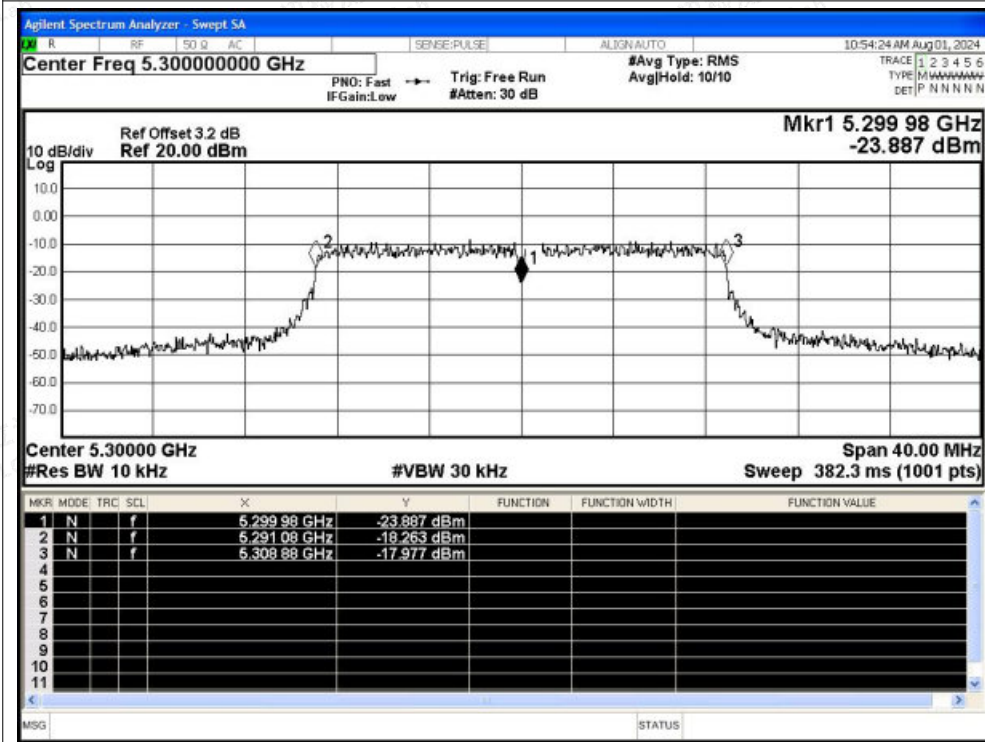




Freq. Stability NVNT ax20 5320MHz Ant1

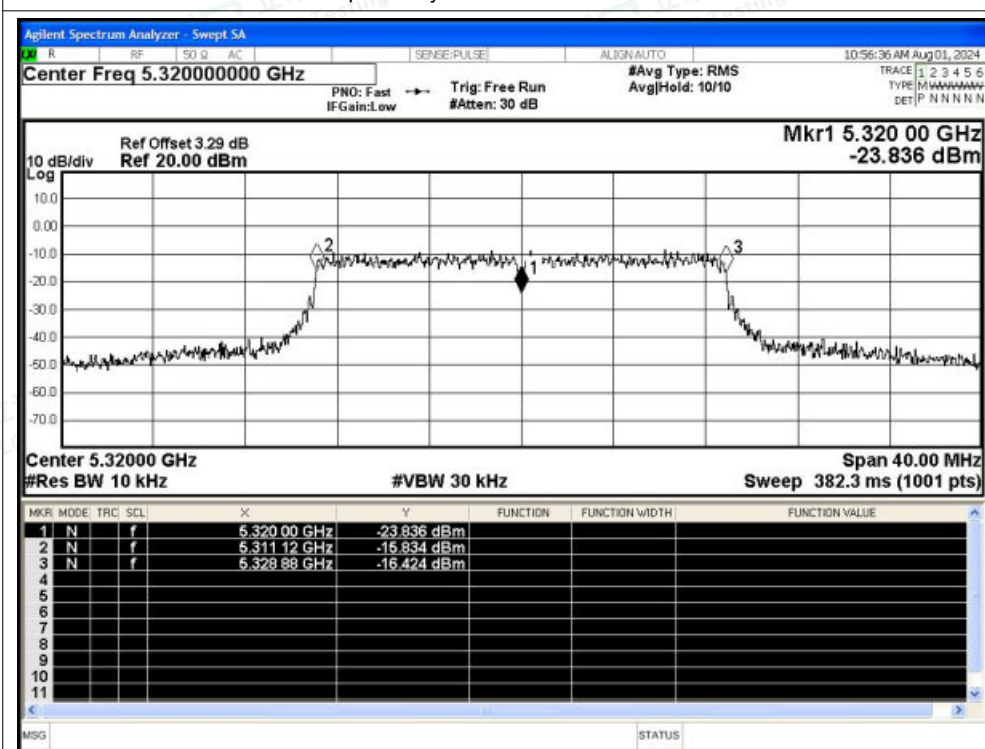


Freq. Stability NVNT ax40 5270MHz Ant1

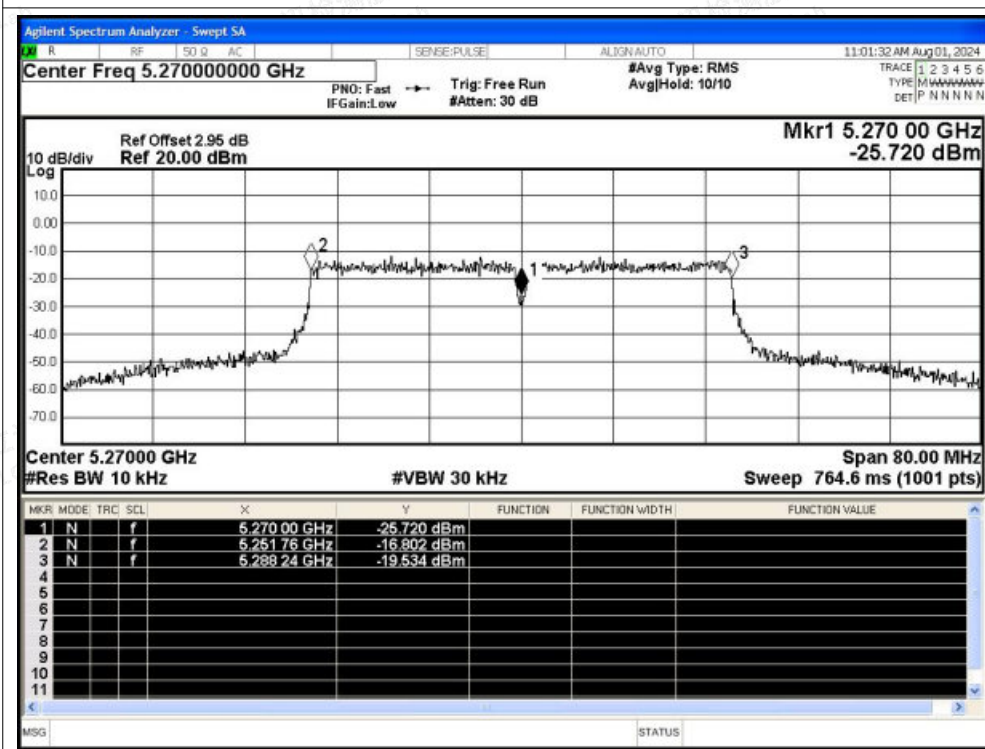




Freq. Stability NVNT ax40 5310MHz Ant1

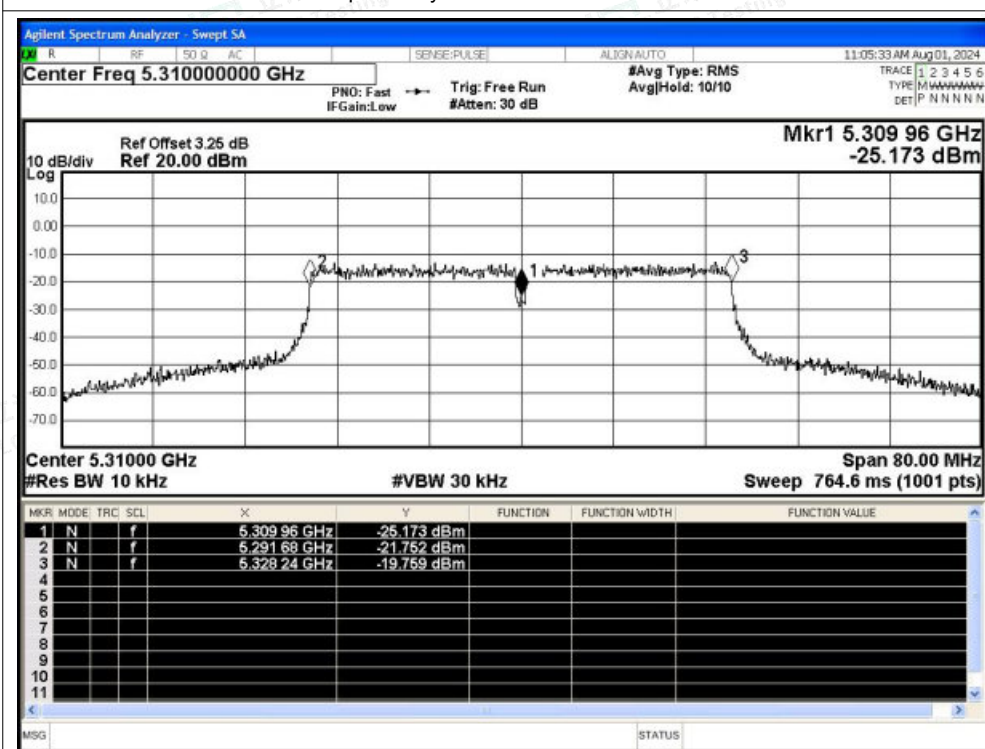

Freq. Stability NVNT ax80 5290MHz Ant1

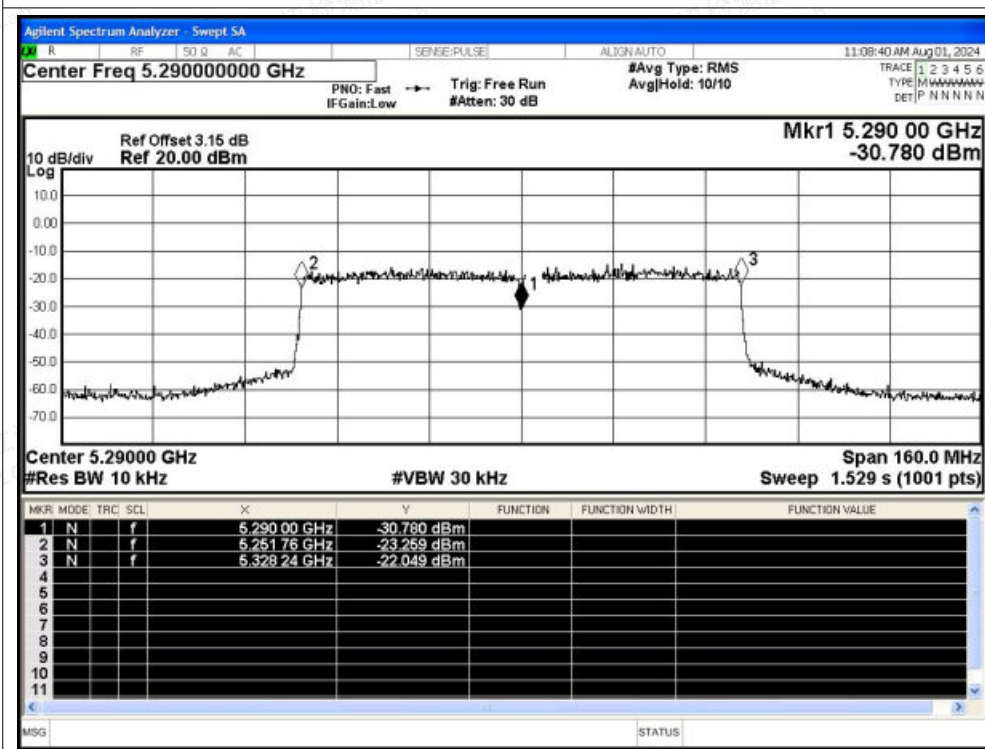



E.6 Duty Cycle

Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5260	Ant1	94.56	0.24	0.91
NVNT	a	5300	Ant1	94.65	0.24	0.91
NVNT	a	5320	Ant1	94.65	0.24	0.91
NVNT	n20	5260	Ant1	93.77	0.28	1.07
NVNT	n20	5300	Ant1	93.77	0.28	1.07
NVNT	n20	5320	Ant1	93.77	0.28	1.07
NVNT	n40	5270	Ant1	90.14	0.45	1.74
NVNT	n40	5310	Ant1	90.14	0.45	1.74
NVNT	ac20	5260	Ant1	93.82	0.28	1.06
NVNT	ac20	5300	Ant1	93.72	0.28	1.06
NVNT	ac20	5320	Ant1	93.82	0.28	1.06
NVNT	ac40	5270	Ant1	90.2	0.45	1.72
NVNT	ac40	5310	Ant1	90.2	0.45	1.72
NVNT	ac80	5290	Ant1	86.79	0.62	2.42
NVNT	ax20	5260	Ant1	93.72	0.28	1.06
NVNT	ax20	5300	Ant1	93.72	0.28	1.06
NVNT	ax20	5320	Ant1	93.82	0.28	1.06
NVNT	ax40	5270	Ant1	90.2	0.45	1.72
NVNT	ax40	5310	Ant1	90.2	0.45	1.72
NVNT	ax80	5290	Ant1	87	0.6	2.41




Shenzhen LCS Compliance Testing Laboratory Ltd.
Add: 101, 201 Bldg A & 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China
Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com
Scan code to check authenticity




Test Graphs

Duty Cycle NVNT a 5260MHz Ant1

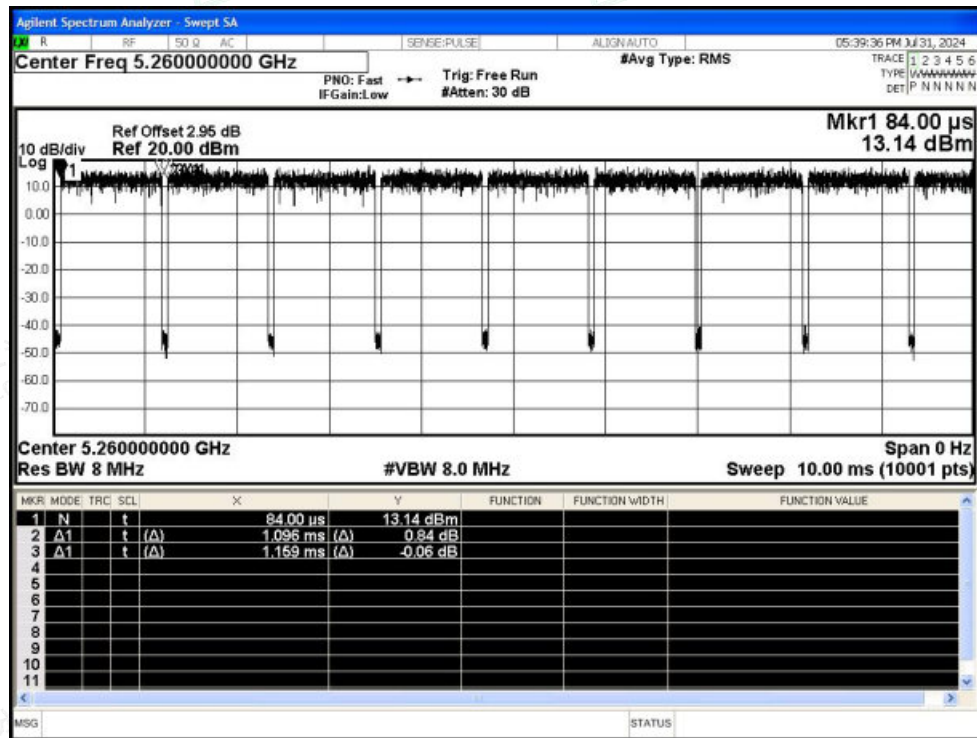


Duty Cycle NVNT a 5300MHz Ant1

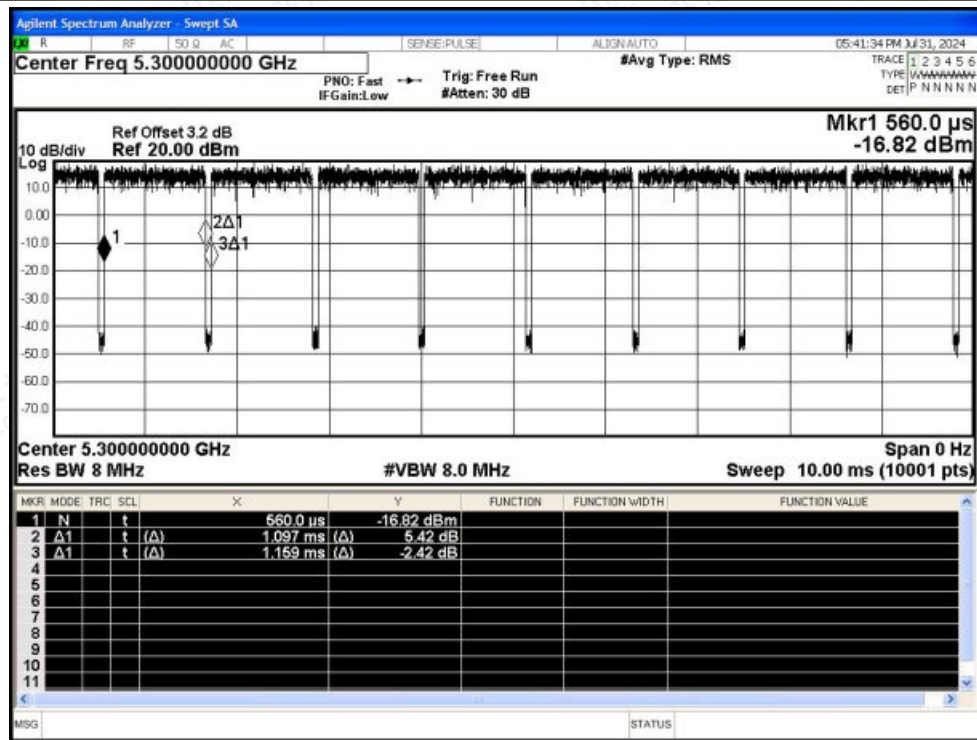




Duty Cycle NVNT a 5320MHz Ant1

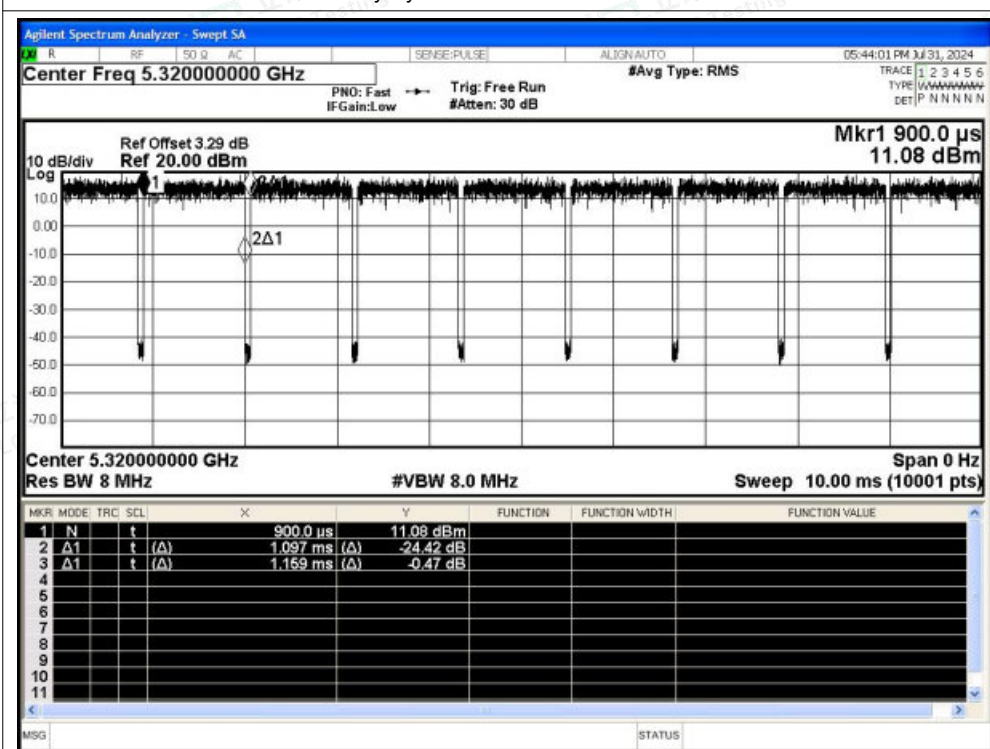


Duty Cycle NVNT n20 5260MHz Ant1

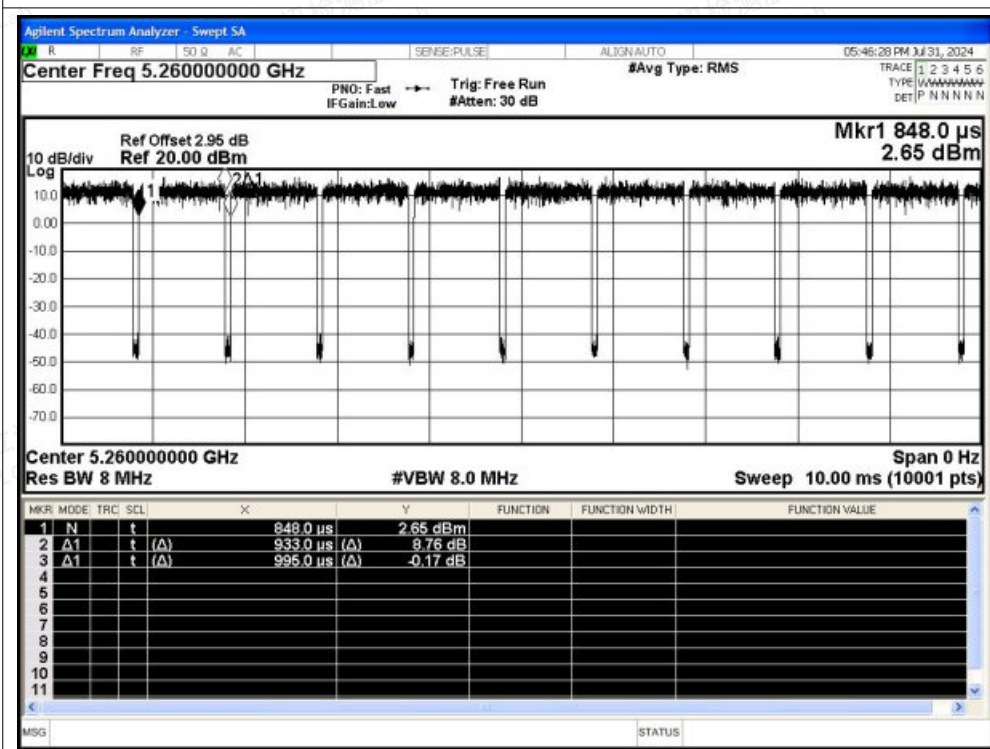




Duty Cycle NVNT n20 5300MHz Ant1

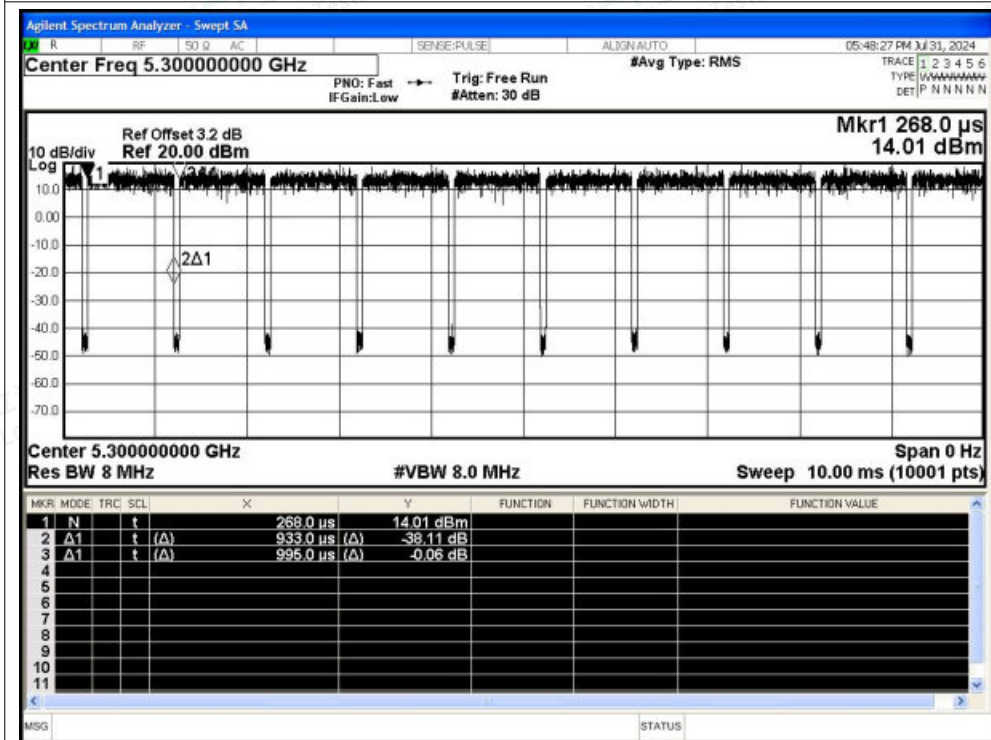


Duty Cycle NVNT n20 5320MHz Ant1

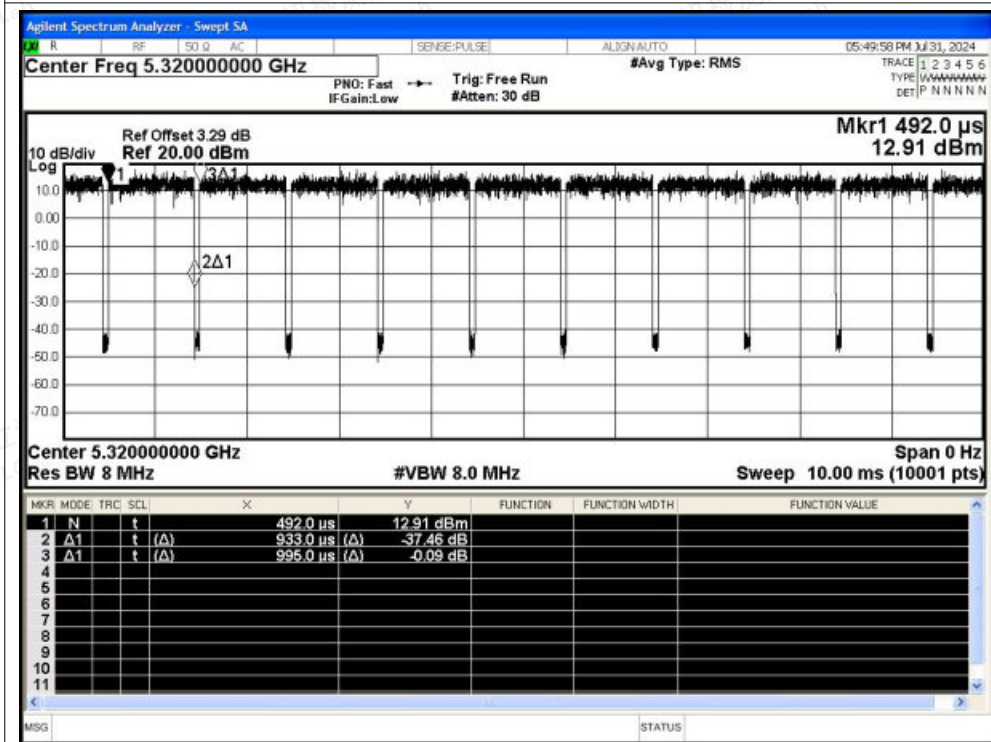




Duty Cycle NVNT n40 5270MHz Ant1

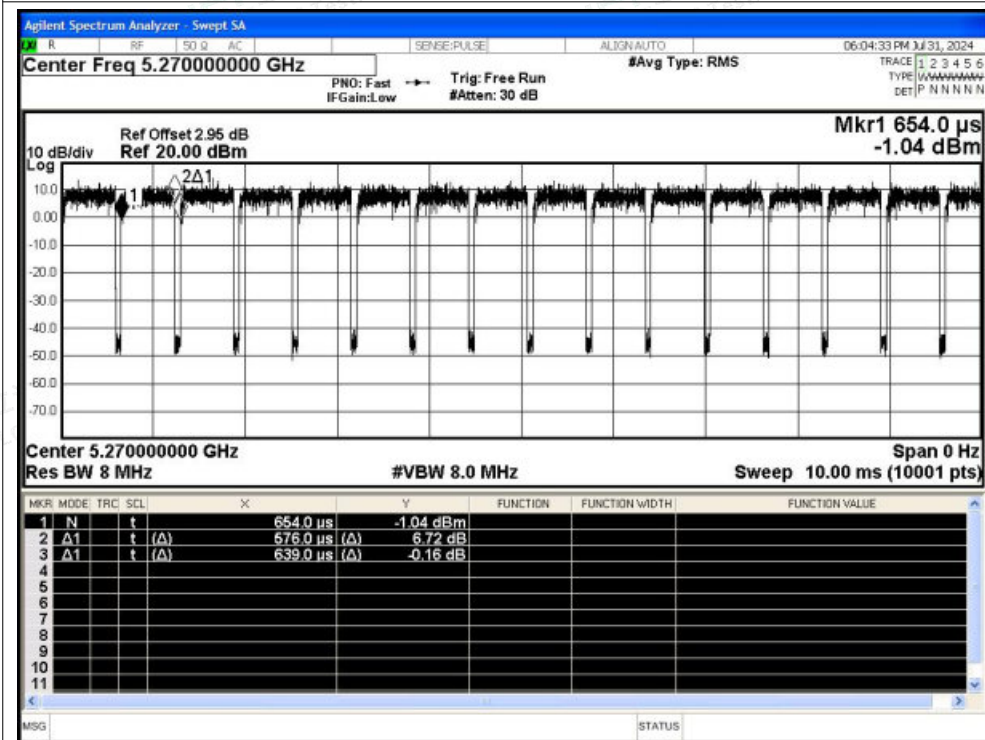


Duty Cycle NVNT n40 5310MHz Ant1

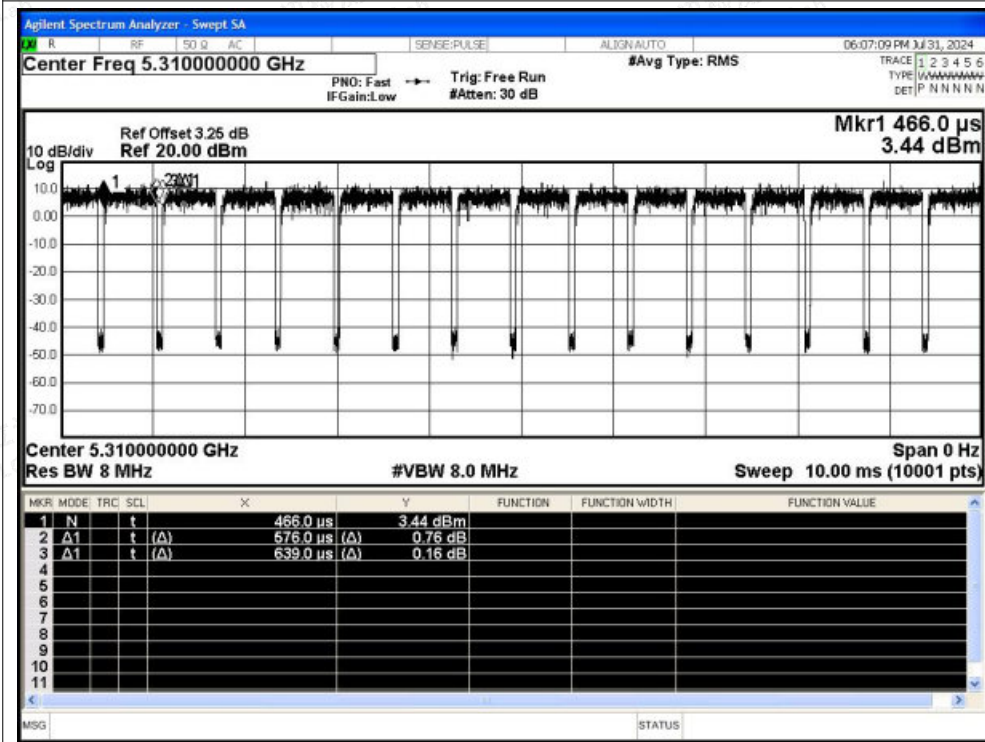




Duty Cycle NVNT ac20 5260MHz Ant1

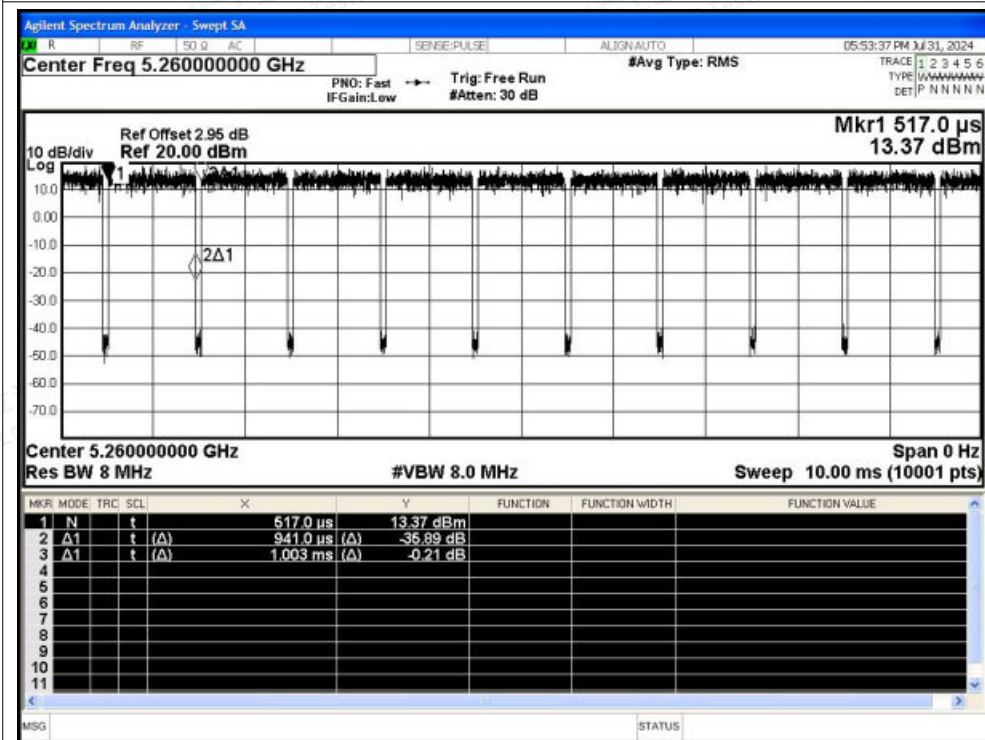

Duty Cycle NVNT ac20 5300MHz Ant1

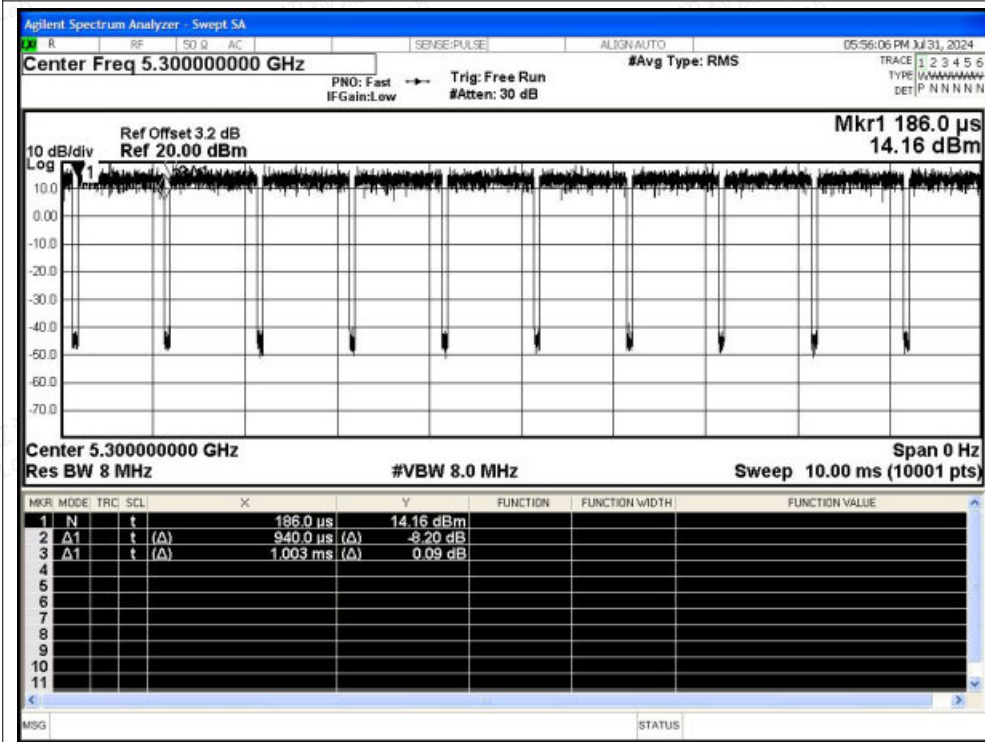

Shenzhen LCS Compliance Testing Laboratory Ltd.


Add: 101, 201 Bldg A & 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China

Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com


Scan code to check authenticity



Duty Cycle NVNT ac20 5320MHz Ant1

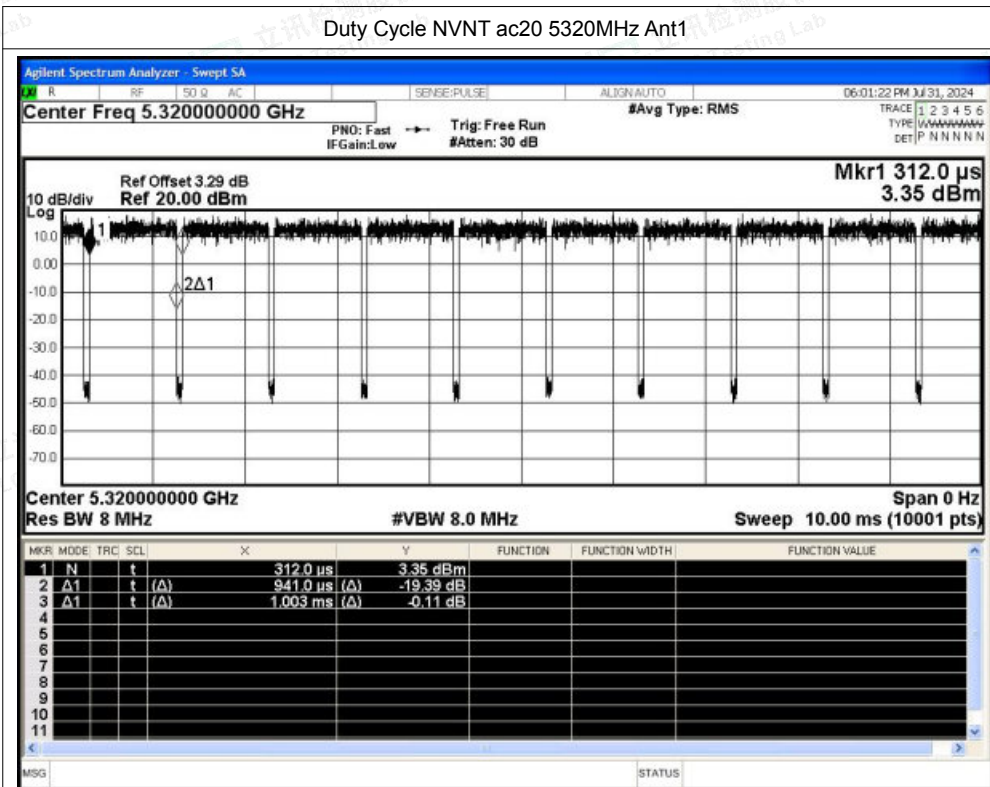


Duty Cycle NVNT ac40 5270MHz Ant1

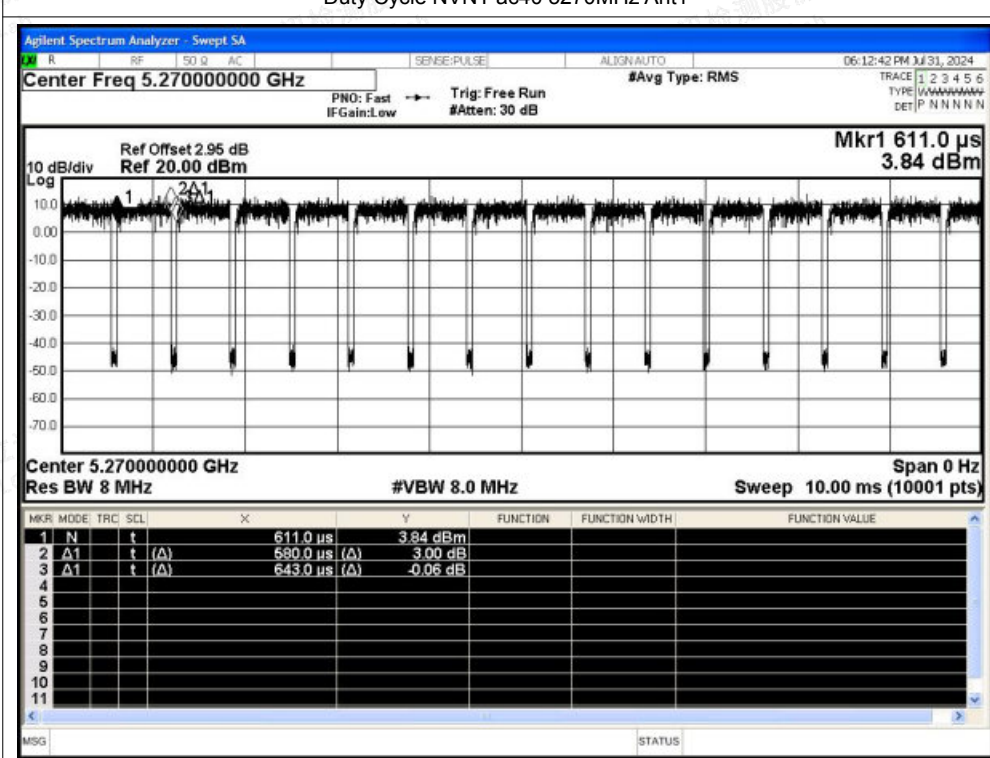




Duty Cycle NVNT ac40 5310MHz Ant1

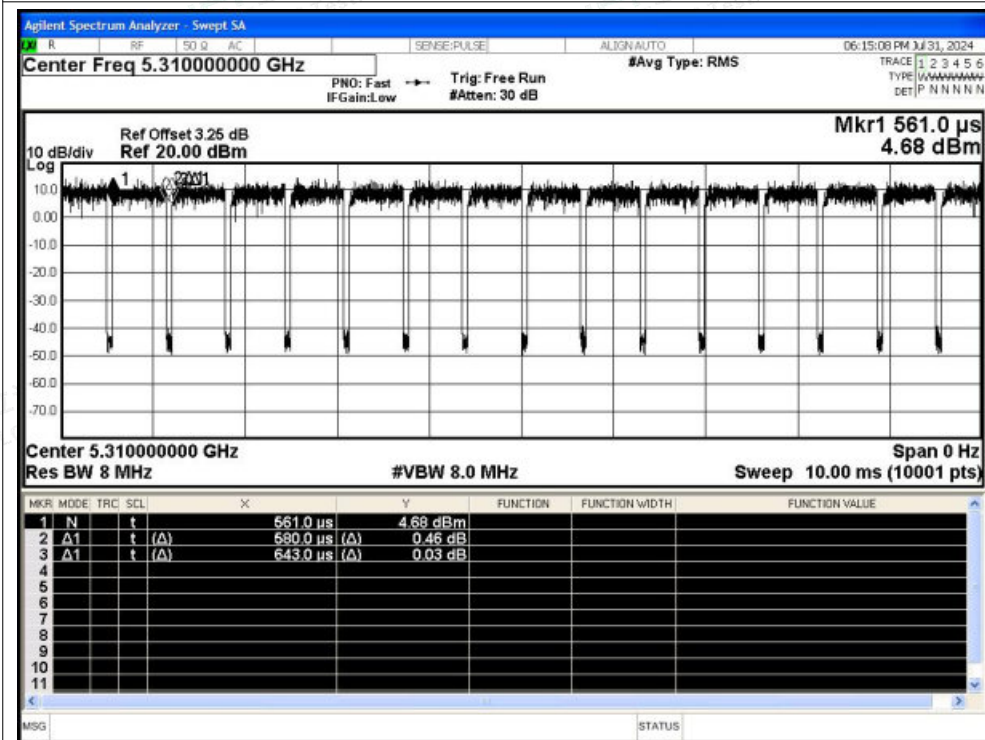


Duty Cycle NVNT ac80 5290MHz Ant1

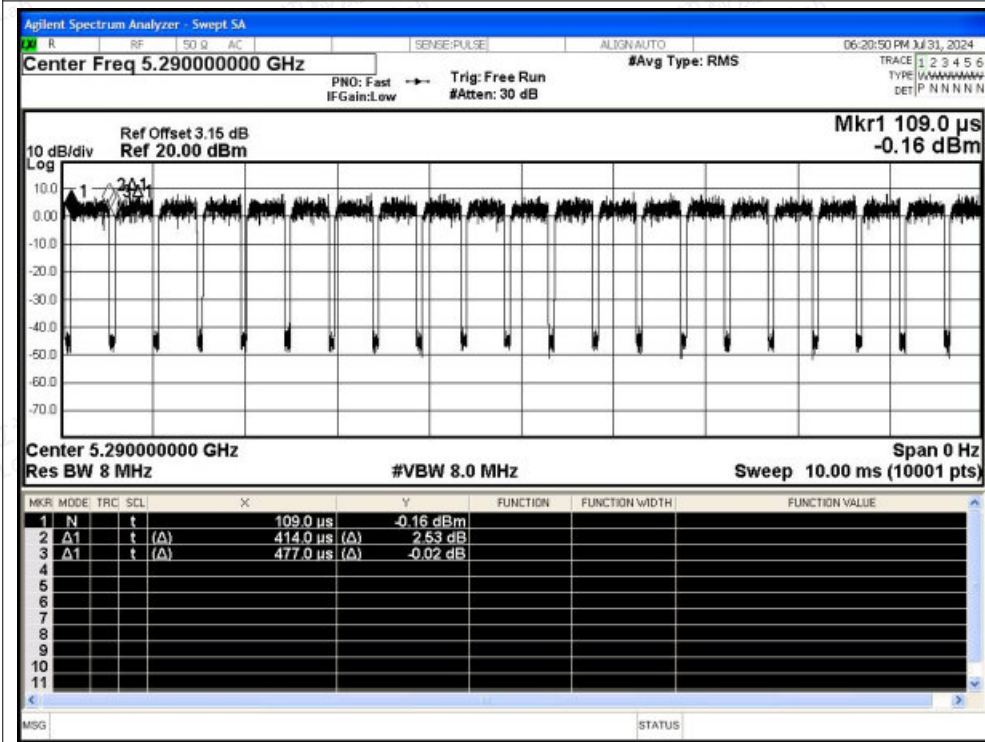




Duty Cycle NVNT ax20 5260MHz Ant1

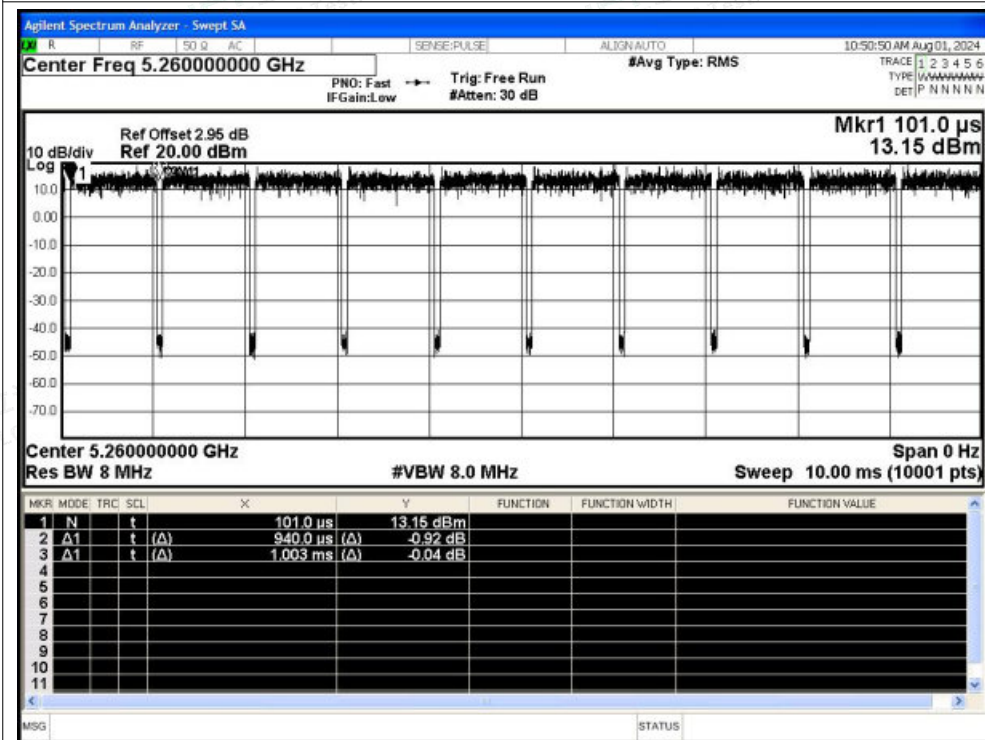


Duty Cycle NVNT ax20 5300MHz Ant1

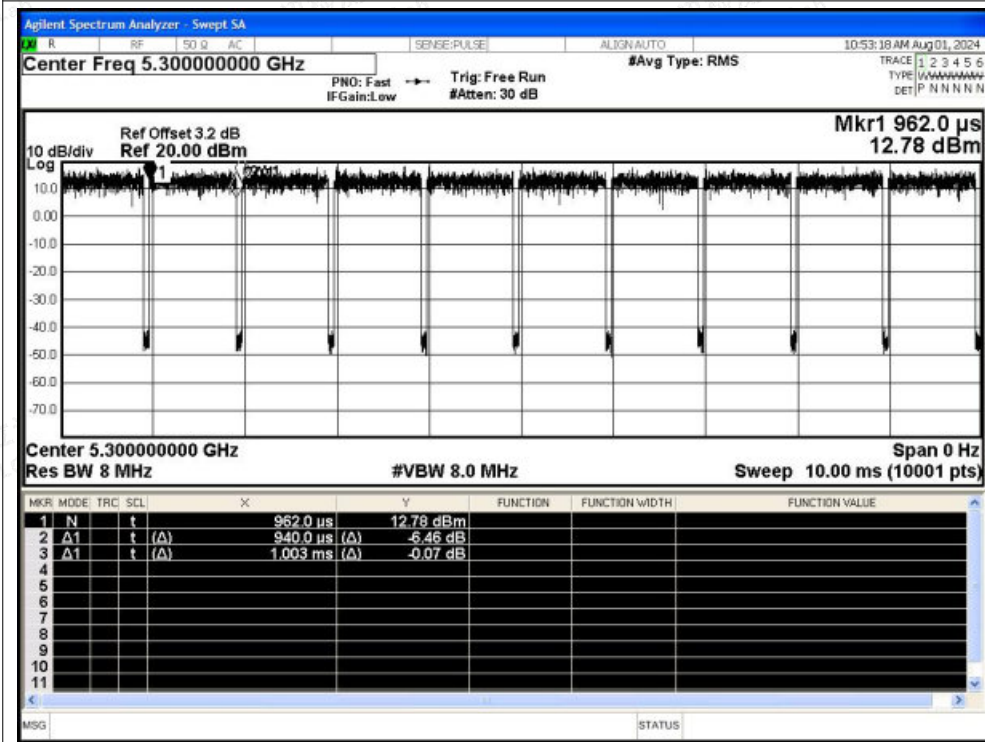




Duty Cycle NVNT ax20 5320MHz Ant1

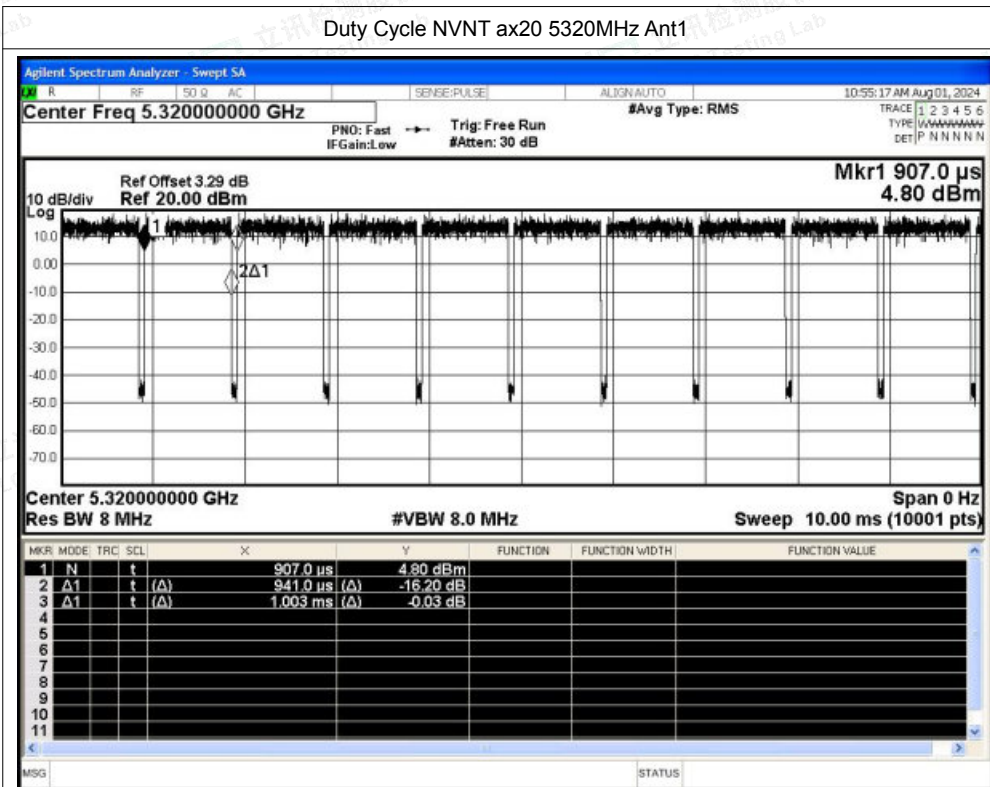


Duty Cycle NVNT ax40 5270MHz Ant1

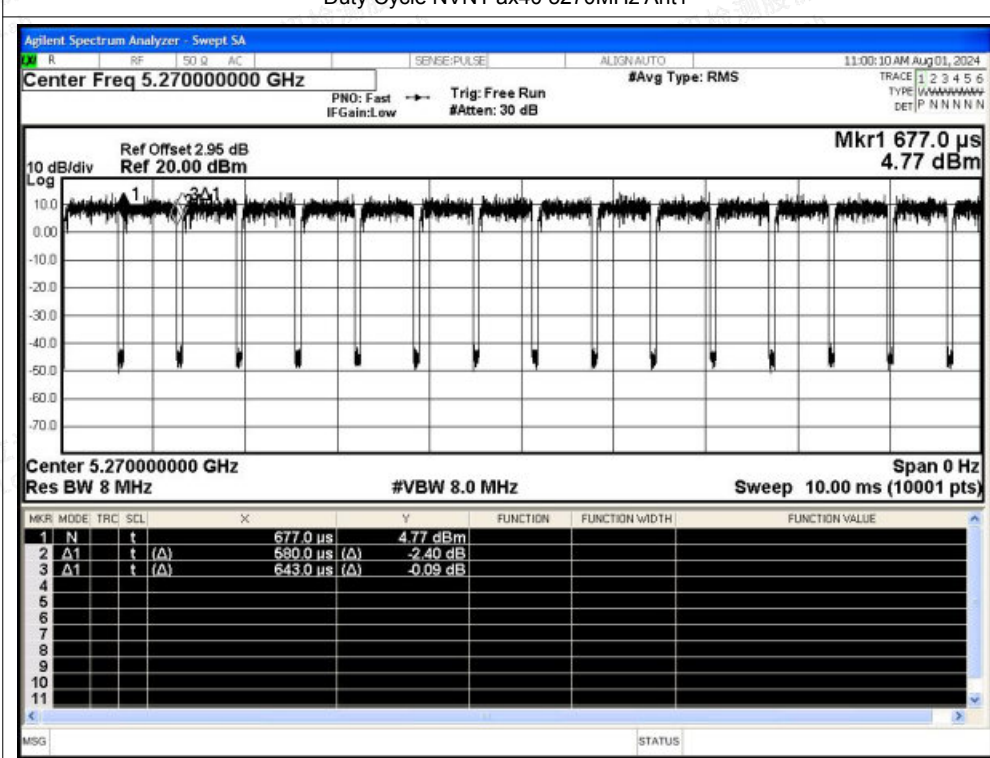



Duty Cycle NVNT ax40 5310MHz Ant1

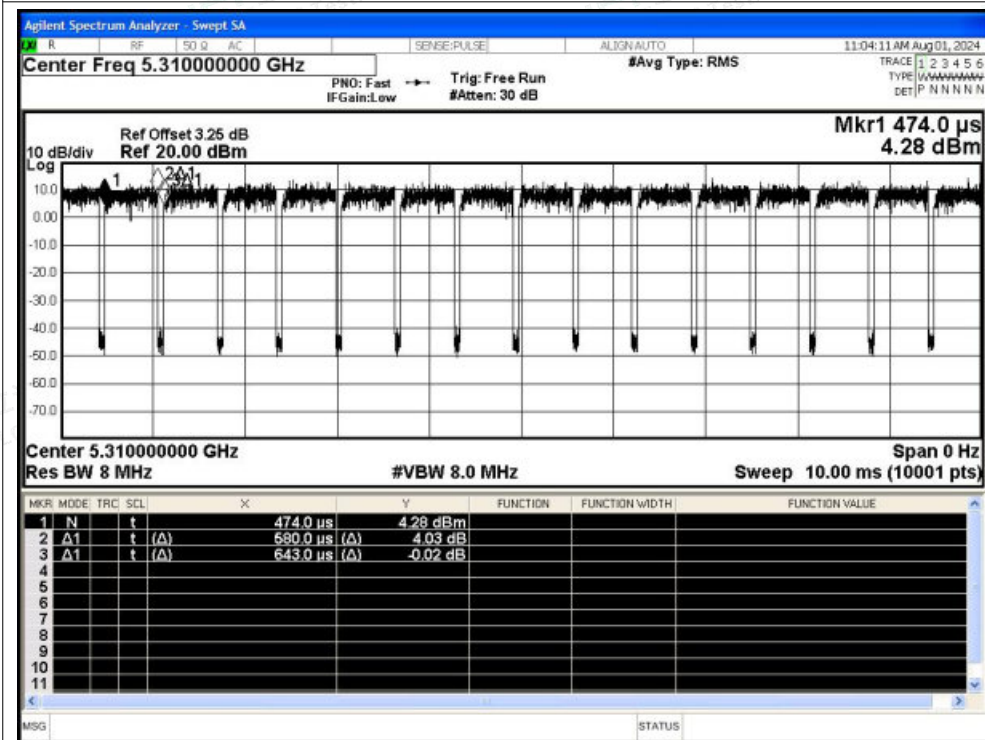

Duty Cycle NVNT ax80 5290MHz Ant1

