




Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com

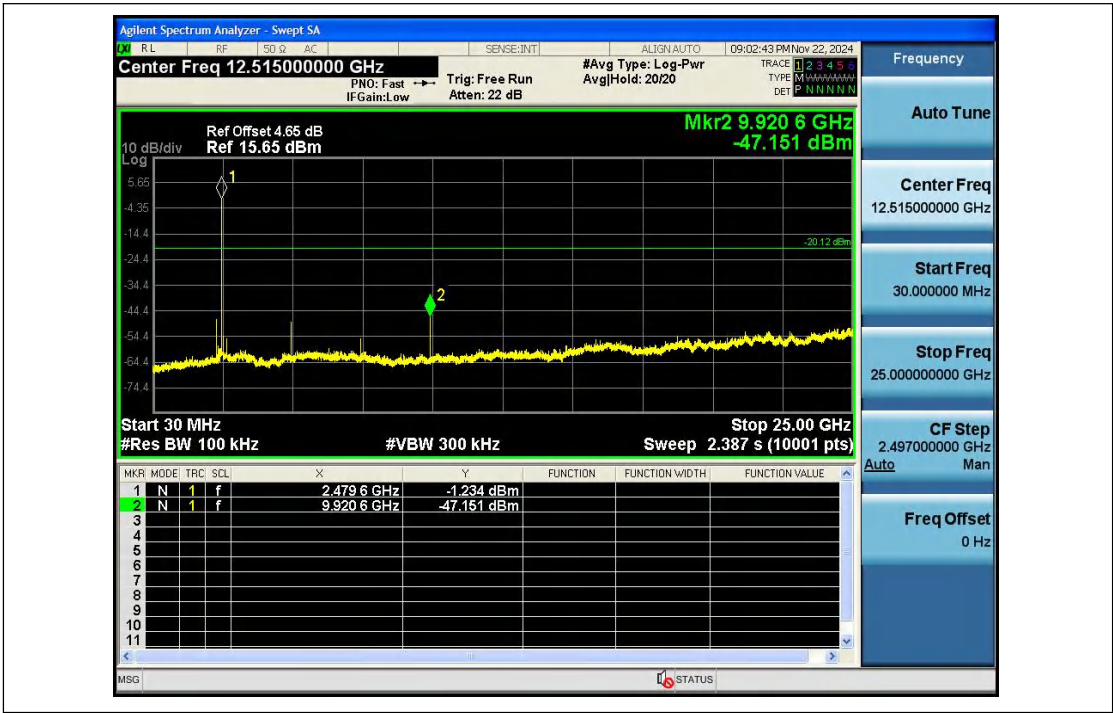

Appendix F: Bandedge

Condition	Antenna	Modulation	TX Mode	Bandedge MAX.Value	Limit	Result
NVNT	ANT1	1-DH5	2402.00	-46.159	-18.756	Pass
NVNT	ANT1	1-DH5	Hopping_LCH	-47.845	-18.915	Pass
NVNT	ANT1	1-DH5	2480.00	-57.640	-19.957	Pass
NVNT	ANT1	1-DH5	Hopping_HCH	-40.658	-19.256	Pass
NVNT	ANT1	2-DH5	2402.00	-47.881	-18.658	Pass
NVNT	ANT1	2-DH5	Hopping_LCH	-49.215	-19.165	Pass
NVNT	ANT1	2-DH5	2480.00	-57.607	-20.137	Pass
NVNT	ANT1	2-DH5	Hopping_HCH	-44.952	-19.236	Pass
NVNT	ANT1	3-DH5	2402.00	-48.220	-18.704	Pass
NVNT	ANT1	3-DH5	Hopping_LCH	-50.191	-18.811	Pass
NVNT	ANT1	3-DH5	2480.00	-59.457	-20.123	Pass
NVNT	ANT1	3-DH5	Hopping_HCH	-42.815	-19.615	Pass

1_Reference_Level_NVNT_ANT1_1-DH5_2402_00




2_Bandedge_NVNT_ANT1_1-DH5_2402_00






1_Reference_Level_Hopping_NVNT_ANT1_1-DH5_Hopping

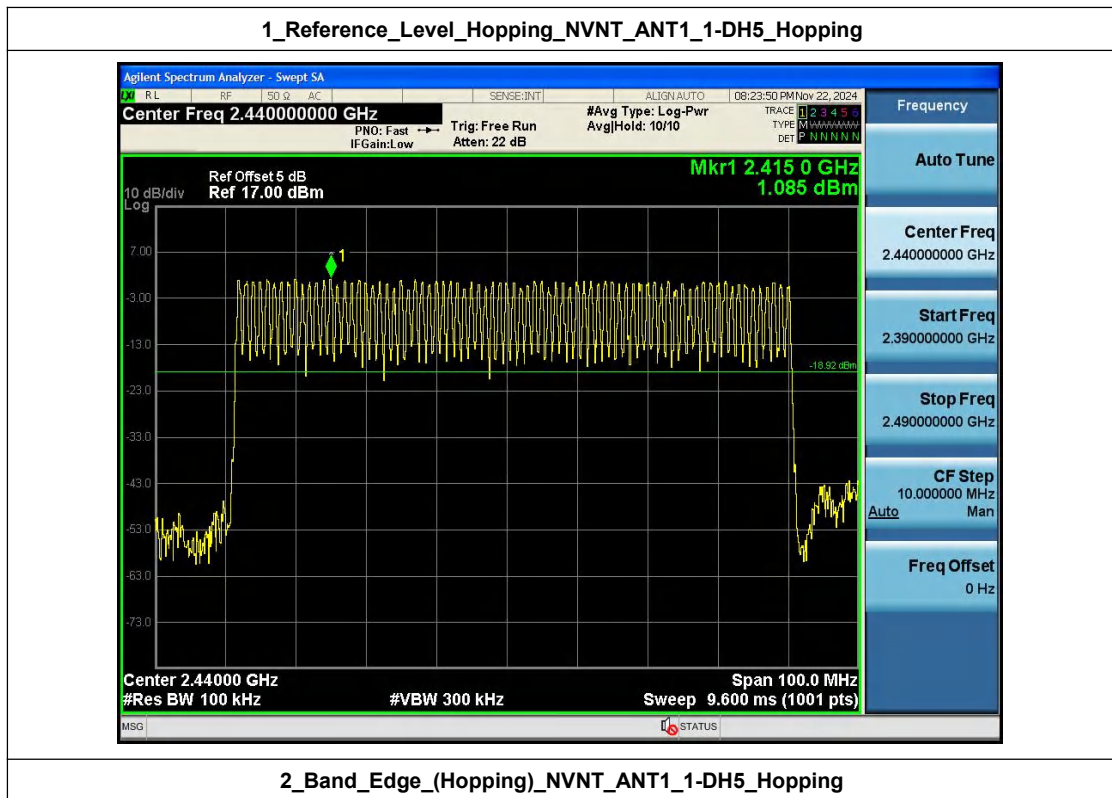


2_Band_Edge_(Hopping)_NVNT_ANT1_1-DH5_Hopping



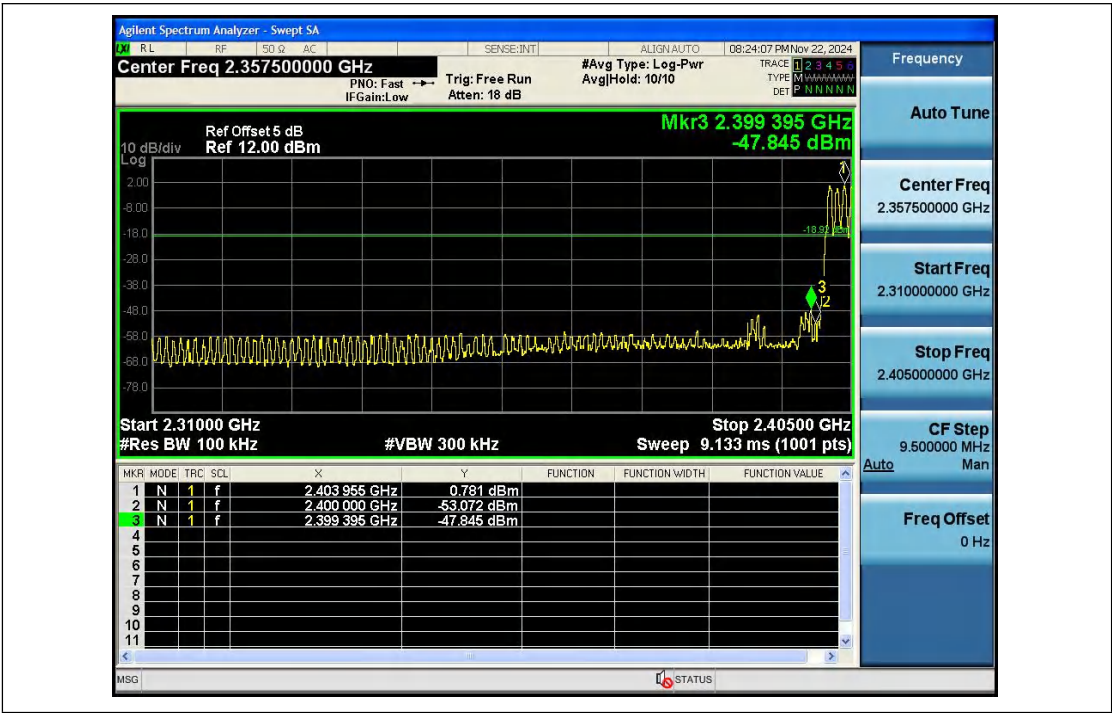


1_Reference_Level_NVNT_ANT1_1-DH5_2480_00

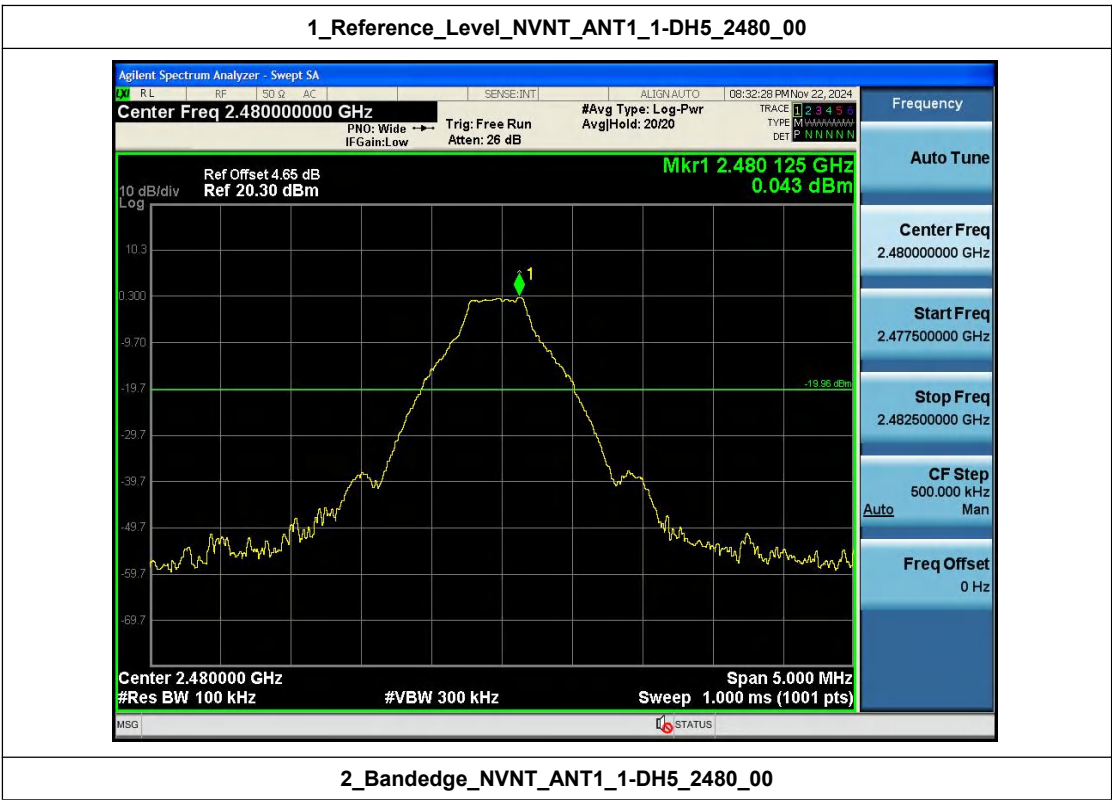


2_Bandedge_NVNT_ANT1_1-DH5_2480_00



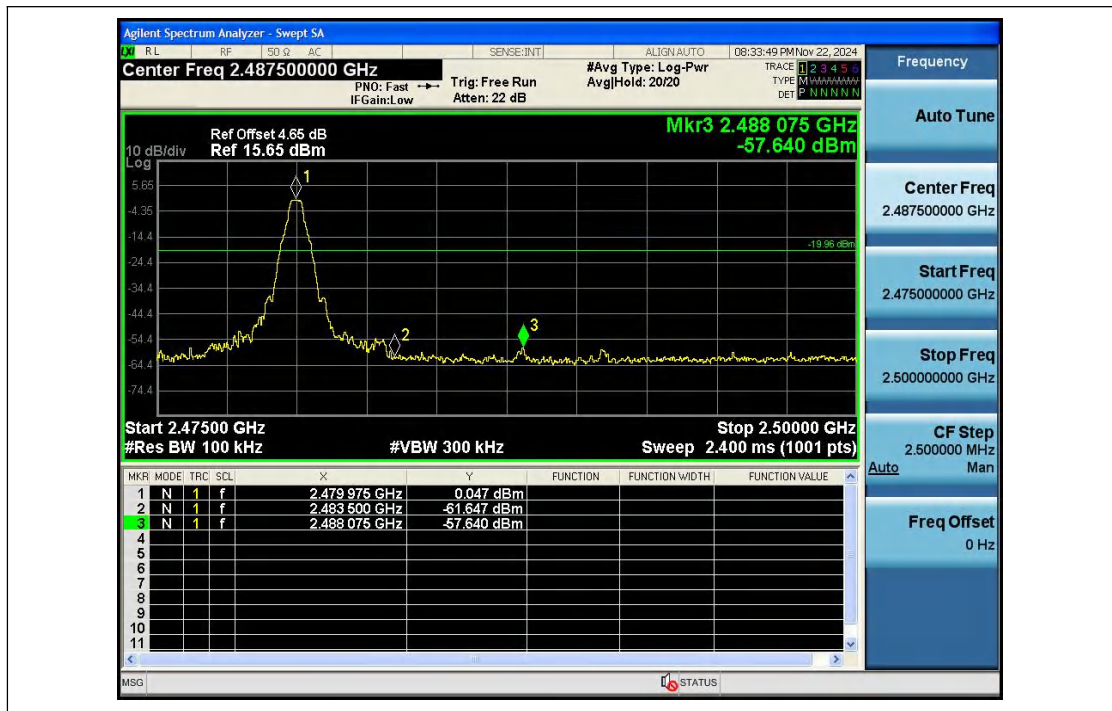

1_Reference_Level_Hopping_NVNT_ANT1_1-DH5_Hopping

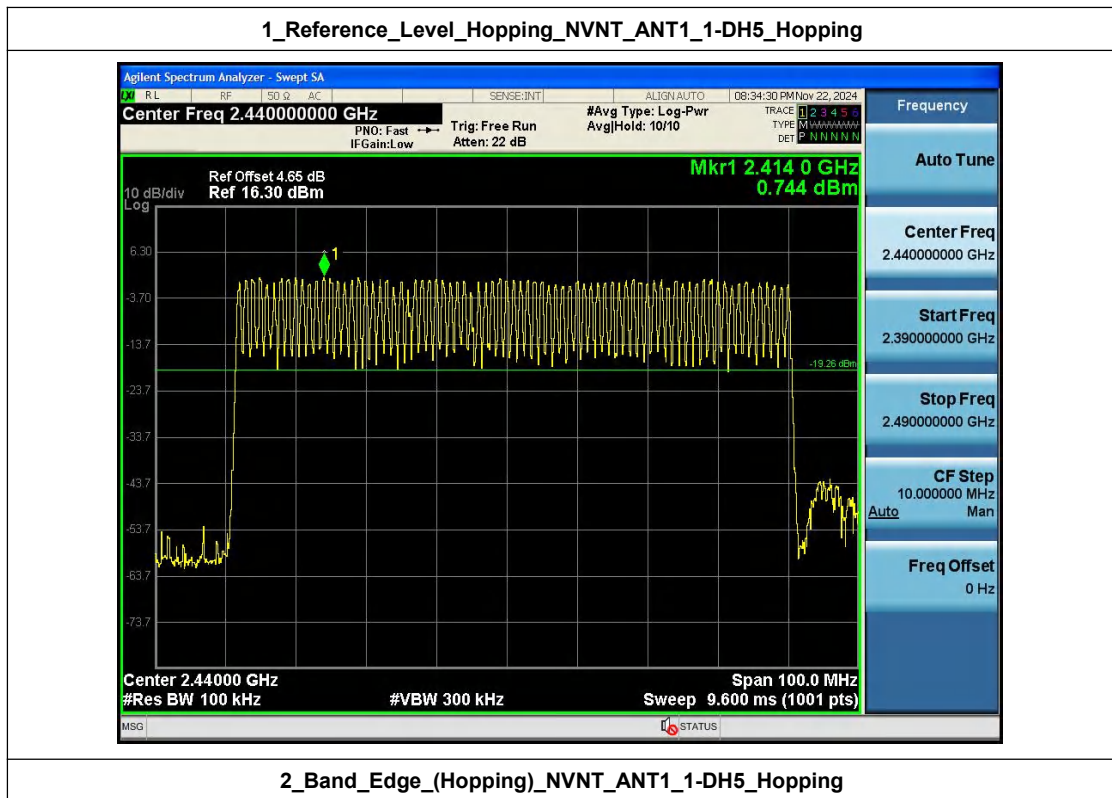


2_Band_Edge_(Hopping)_NVNT_ANT1_1-DH5_Hopping





1_Reference_Level_NVNT_ANT1_2-DH5_2402_00

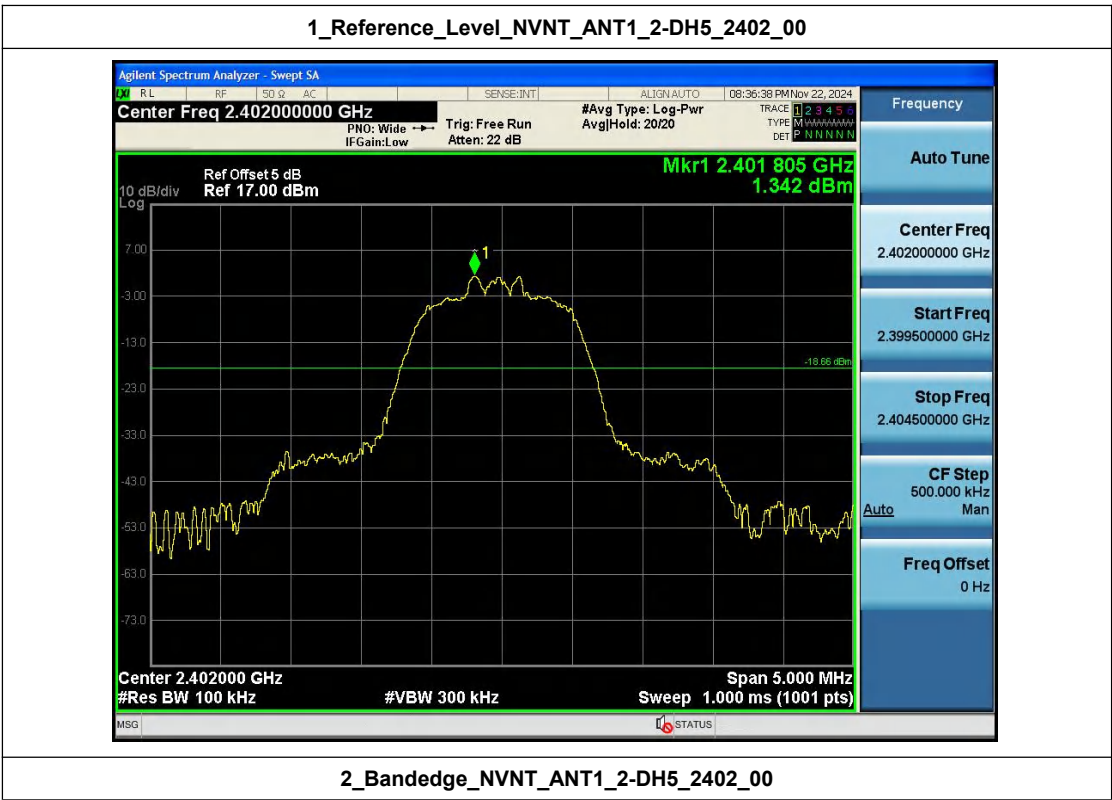


2_Bandedge_NVNT_ANT1_2-DH5_2402_00






1_Reference_Level_Hopping_NVNT_ANT1_2-DH5_Hopping

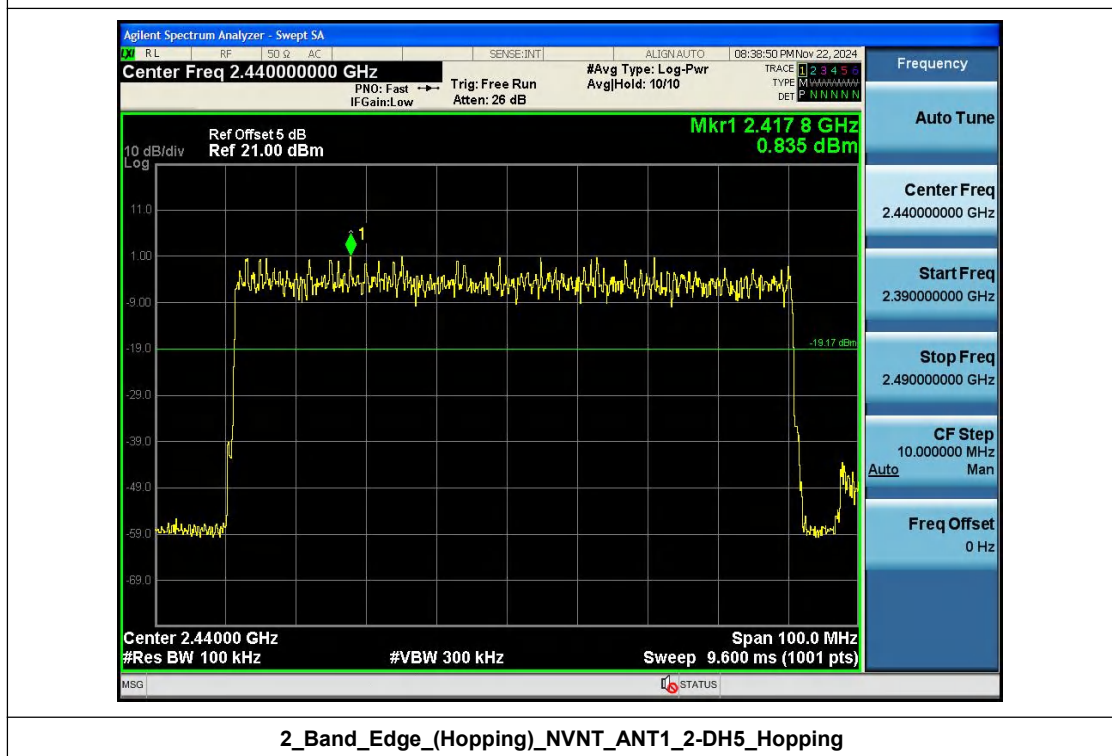


2_Band_Edge_(Hopping)_NVNT_ANT1_2-DH5_Hopping



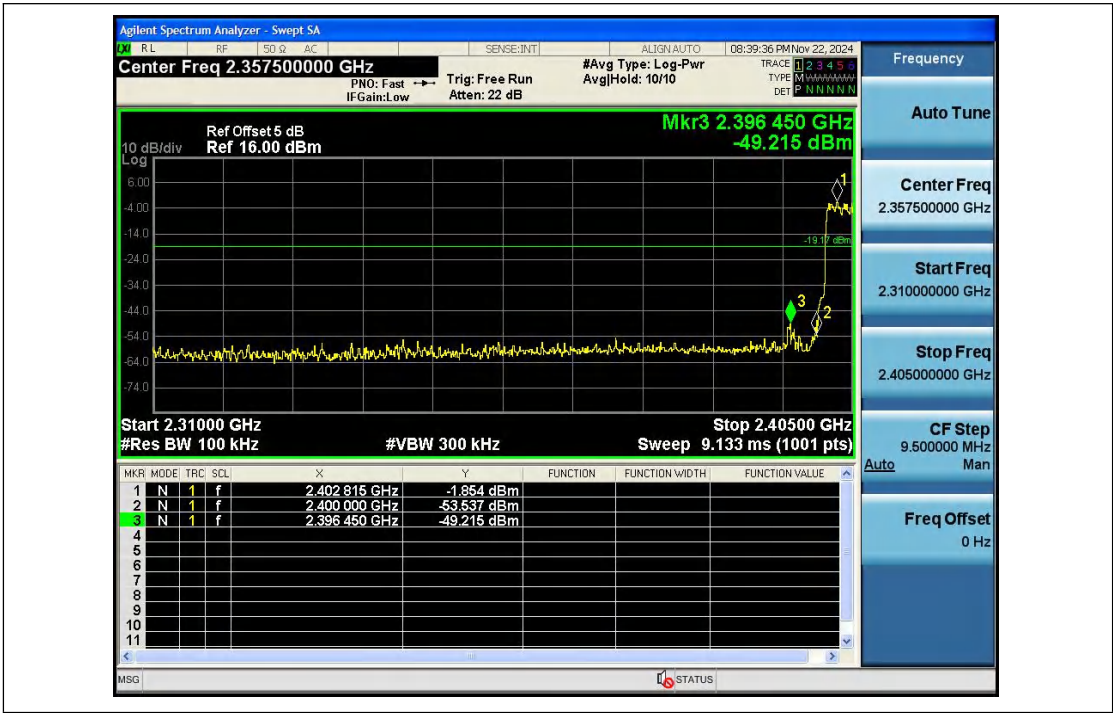


1_Reference_Level_NVNT_ANT1_2-DH5_2480_00

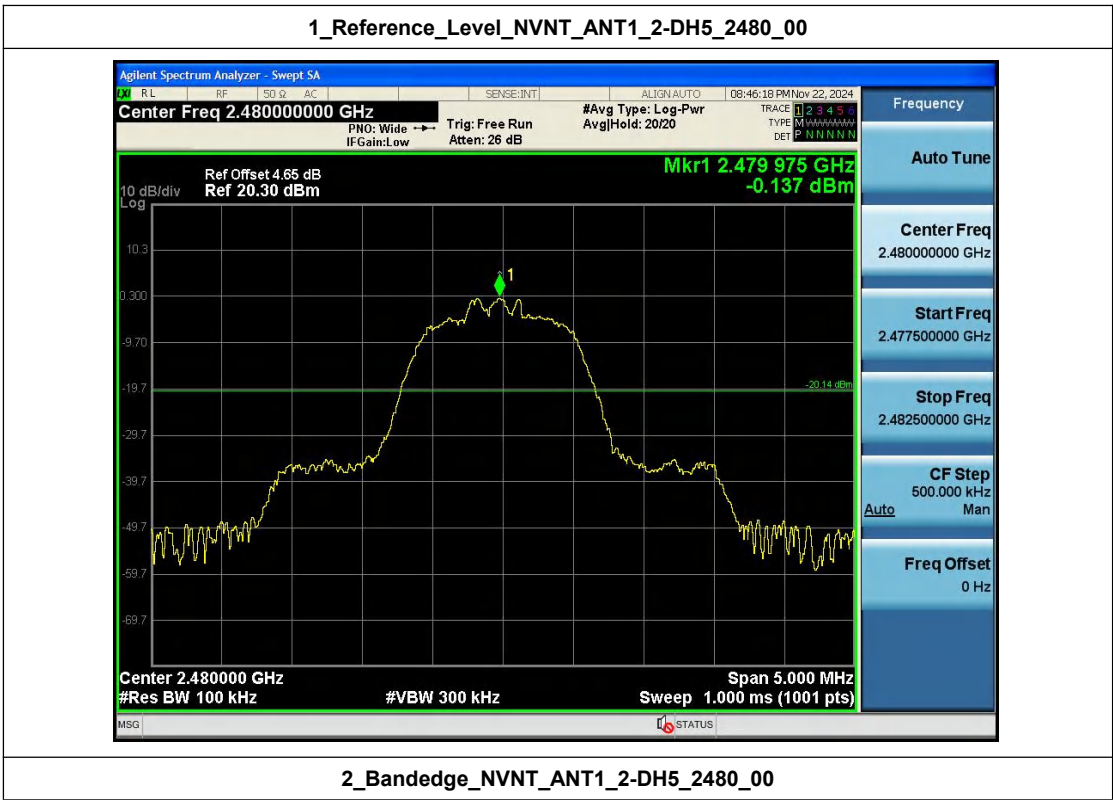


2_Bandedge_NVNT_ANT1_2-DH5_2480_00



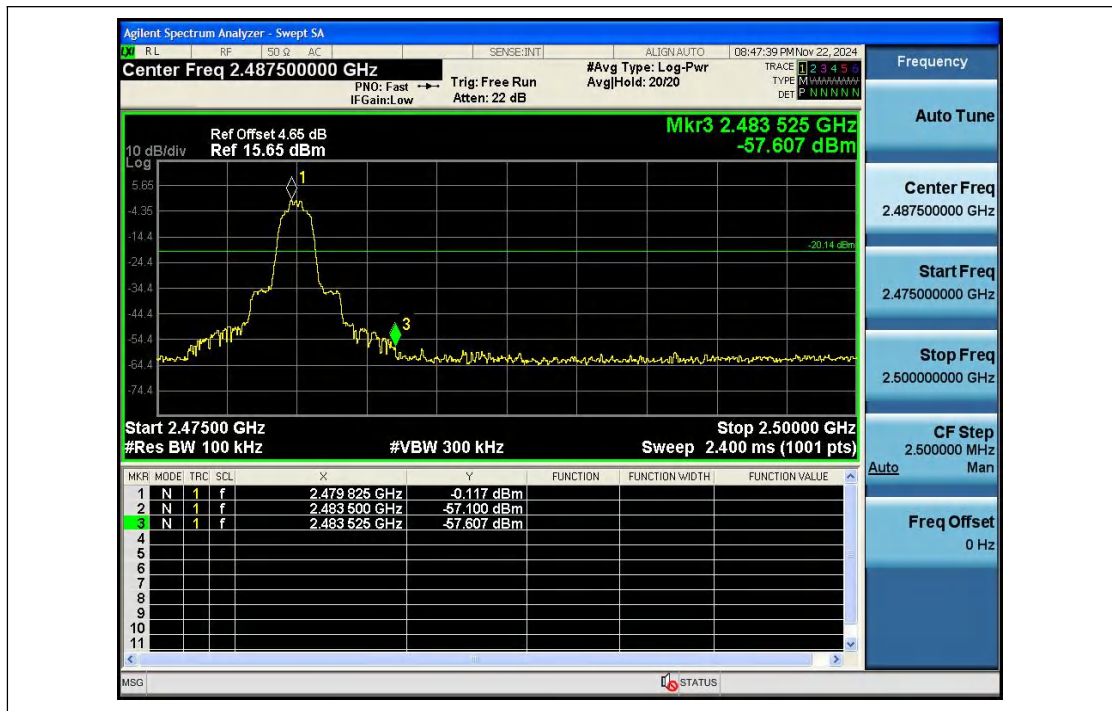


1_Reference_Level_Hopping_NVNT_ANT1_2-DH5_Hopping

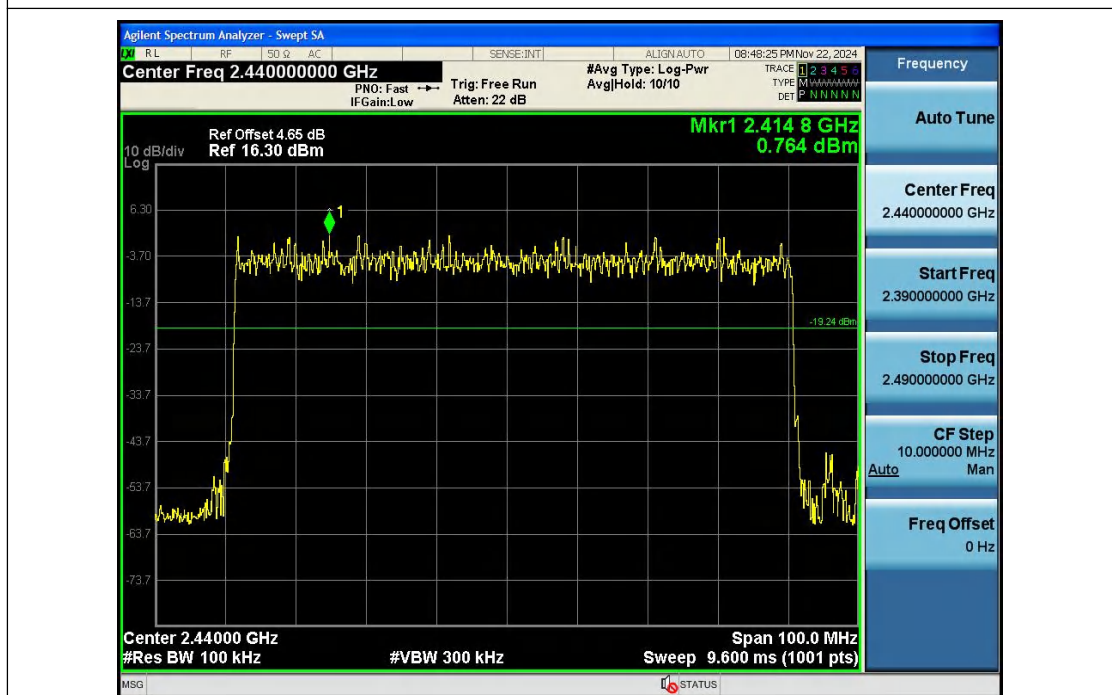


2_Band_Edge_(Hopping)_NVNT_ANT1_2-DH5_Hopping



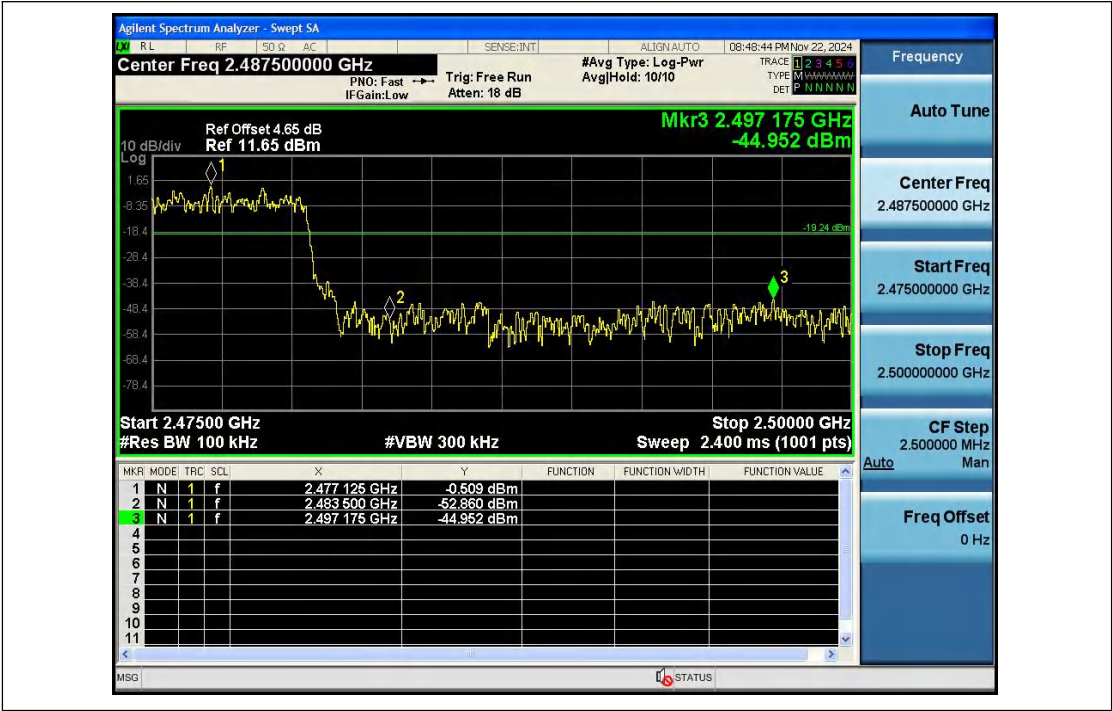

1_Reference_Level_NVNT_ANT1_3-DH5_2402_00

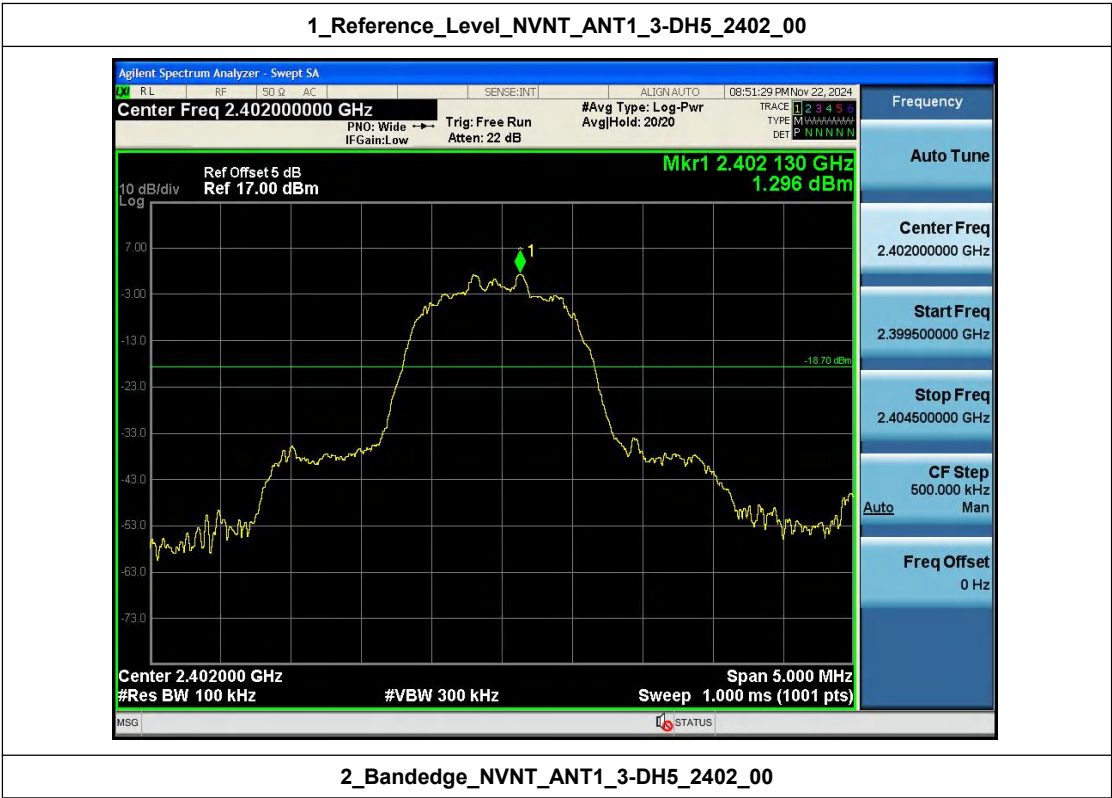


2_Bandedge_NVNT_ANT1_3-DH5_2402_00






1_Reference_Level_Hopping_NVNT_ANT1_3-DH5_Hopping

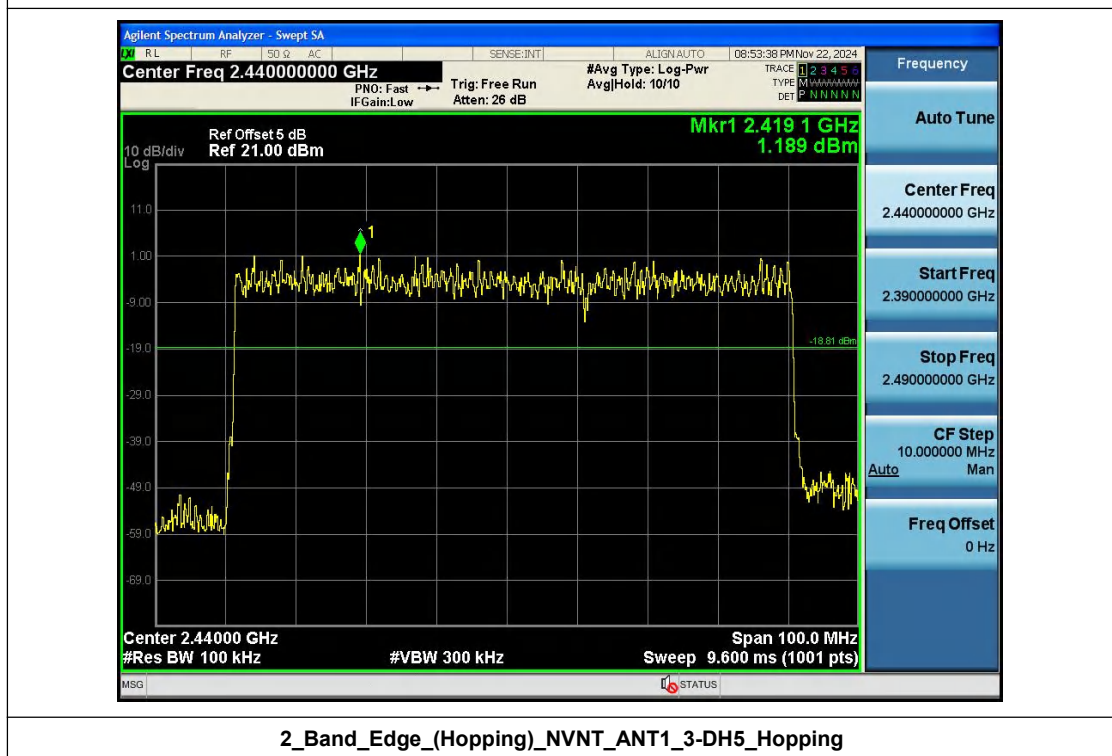


2_Band_Edge_(Hopping)_NVNT_ANT1_3-DH5_Hopping



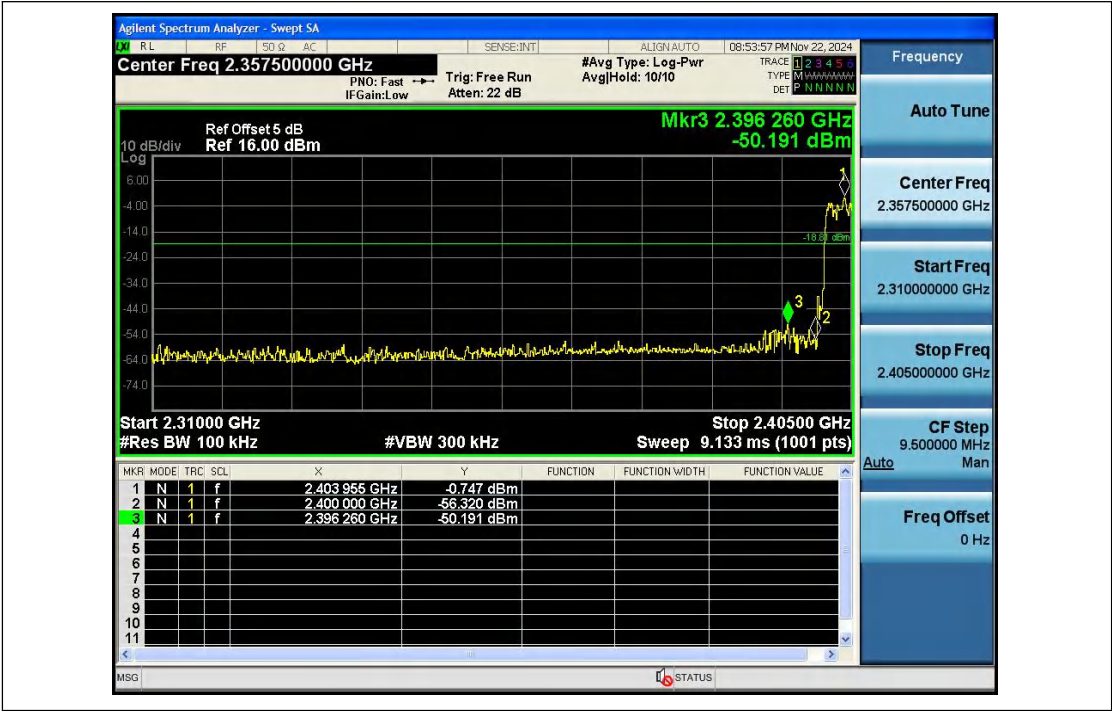


1_Reference_Level_NVNT_ANT1_3-DH5_2480_00

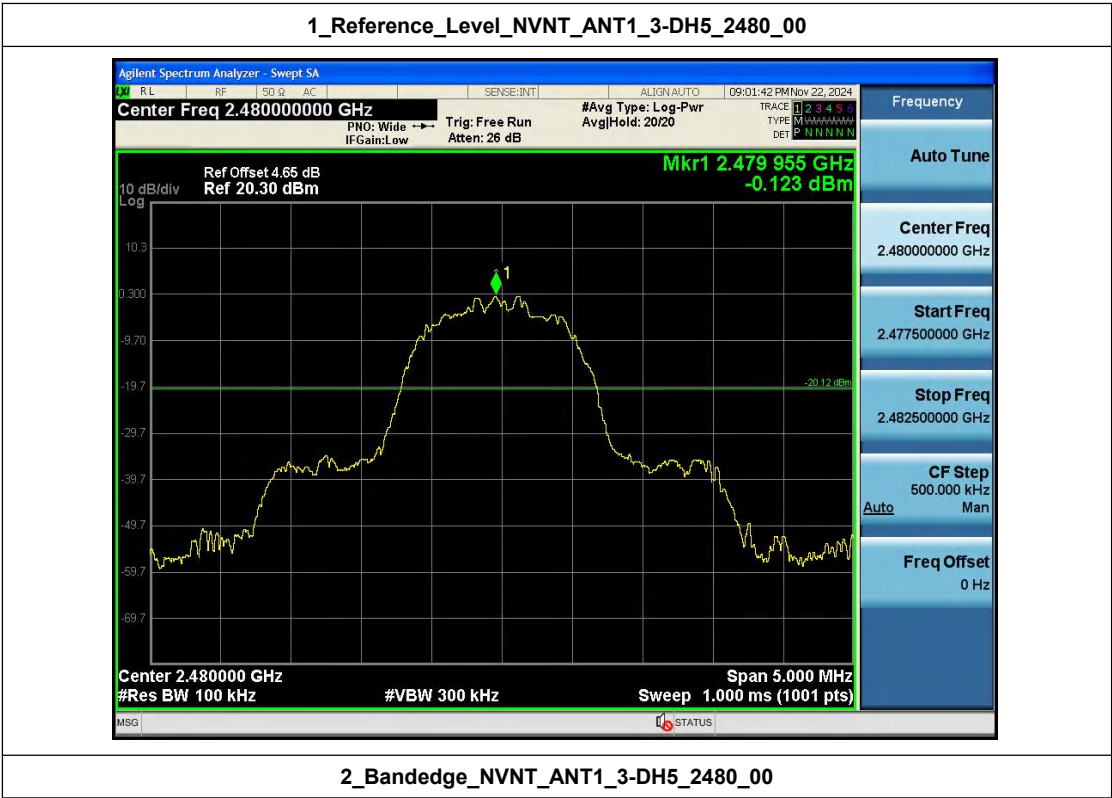


2_Bandedge_NVNT_ANT1_3-DH5_2480_00



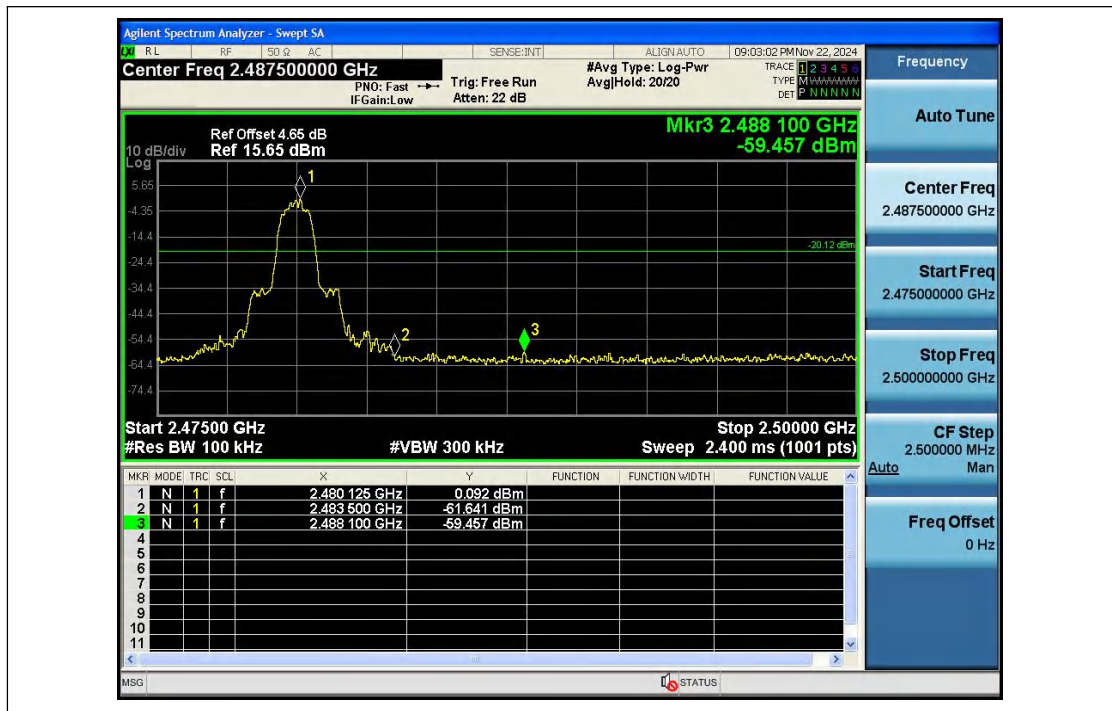


1_Reference_Level_Hopping_NVNT_ANT1_3-DH5_Hopping

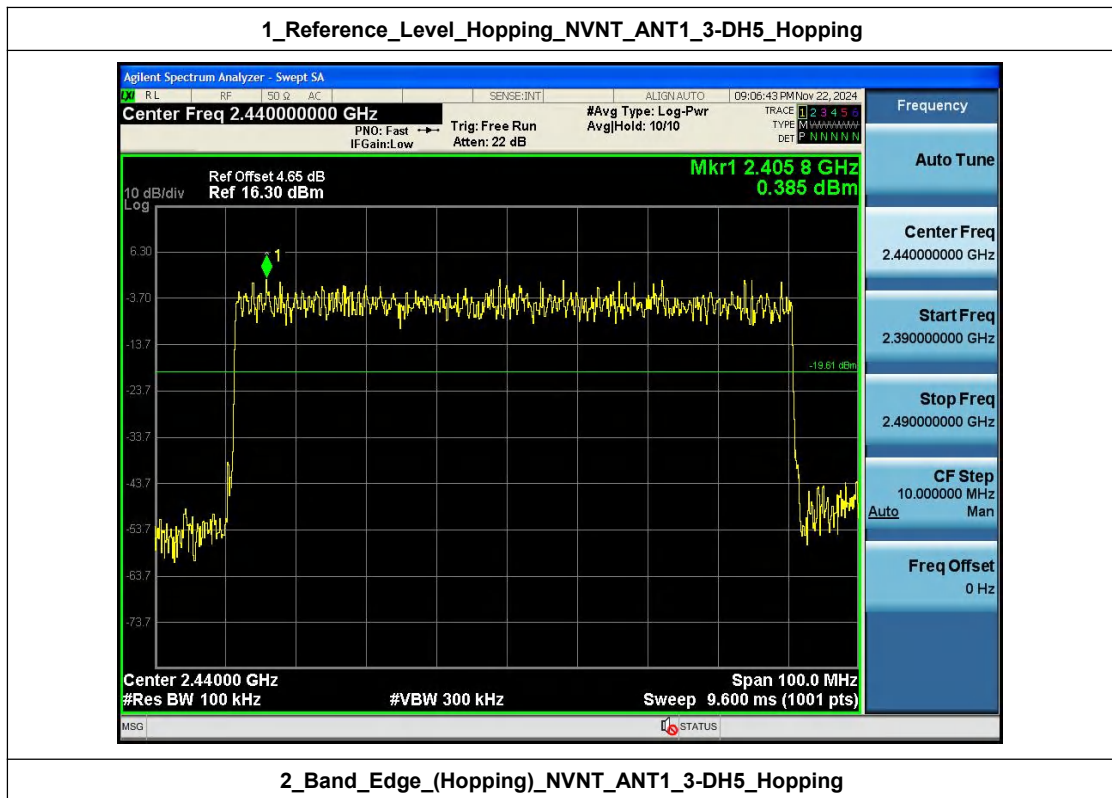

2_Band_Edge_(Hopping)_NVNT_ANT1_3-DH5_Hopping



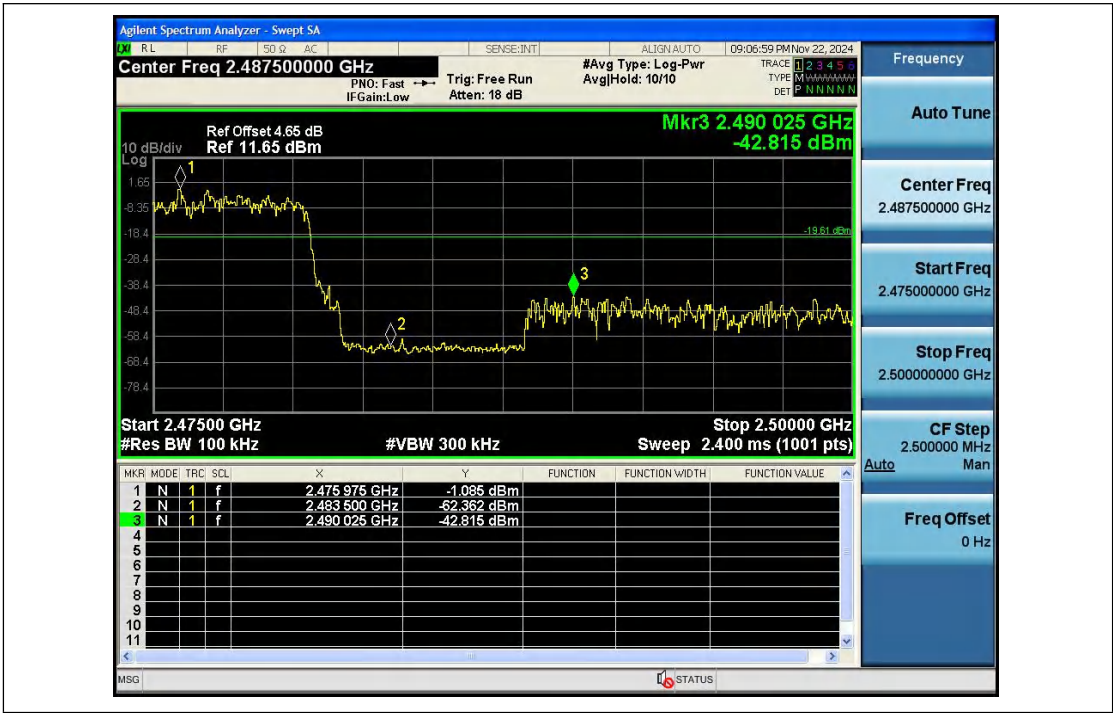

Shenzhen Anbotek Compliance Laboratory Limited


Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com




Appendix G: Carrier Frequencies Separation (Hopping)

Condition	Antenna	Modulation	Frequency(MHz)	Hopping NO.0 (MHz)	Hopping NO.1 (MHz)	Carrier Frequencies Separation(MHz)	Limit(MHz)	Result
NVNT	ANT1	1-DH5	2441.00	2440.795	2441.827	1.03	0.675	Pass
NVNT	ANT1	2-DH5	2441.00	2440.783	2442.067	1.28	0.875	Pass
NVNT	ANT1	3-DH5	2441.00	2440.804	2442.028	1.22	0.870	Pass

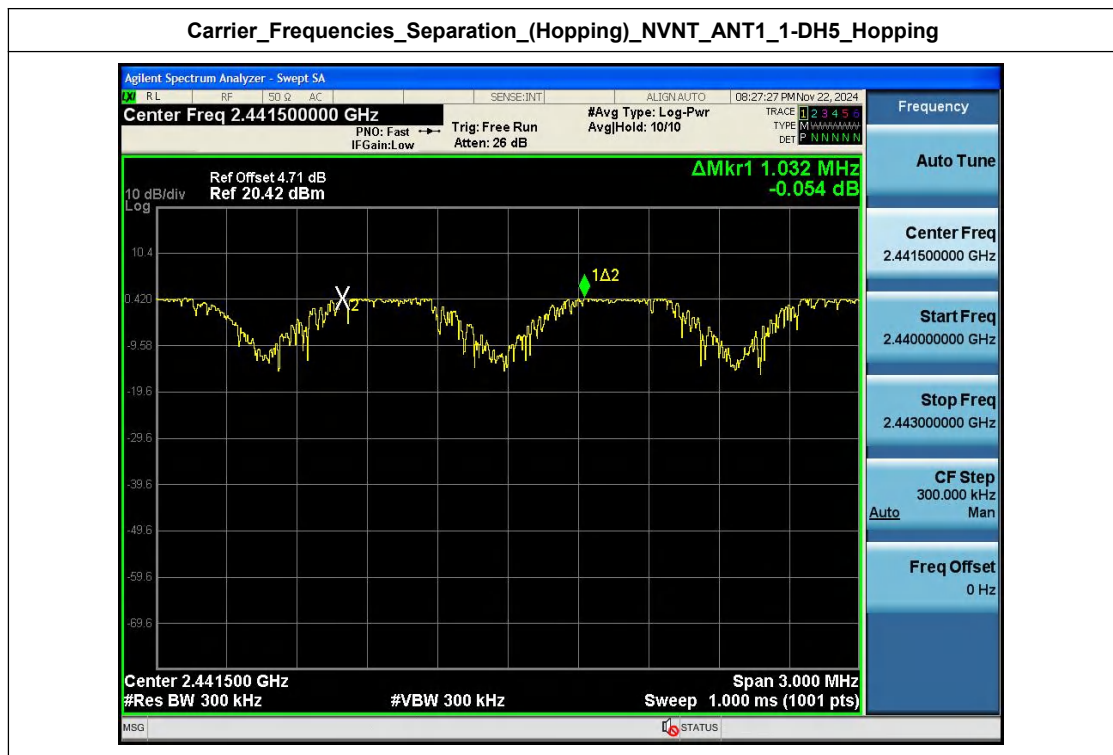


Carrier_Frequencies_Separation_(Hopping)_NVNT_ANT1_2-DH5_Hopping




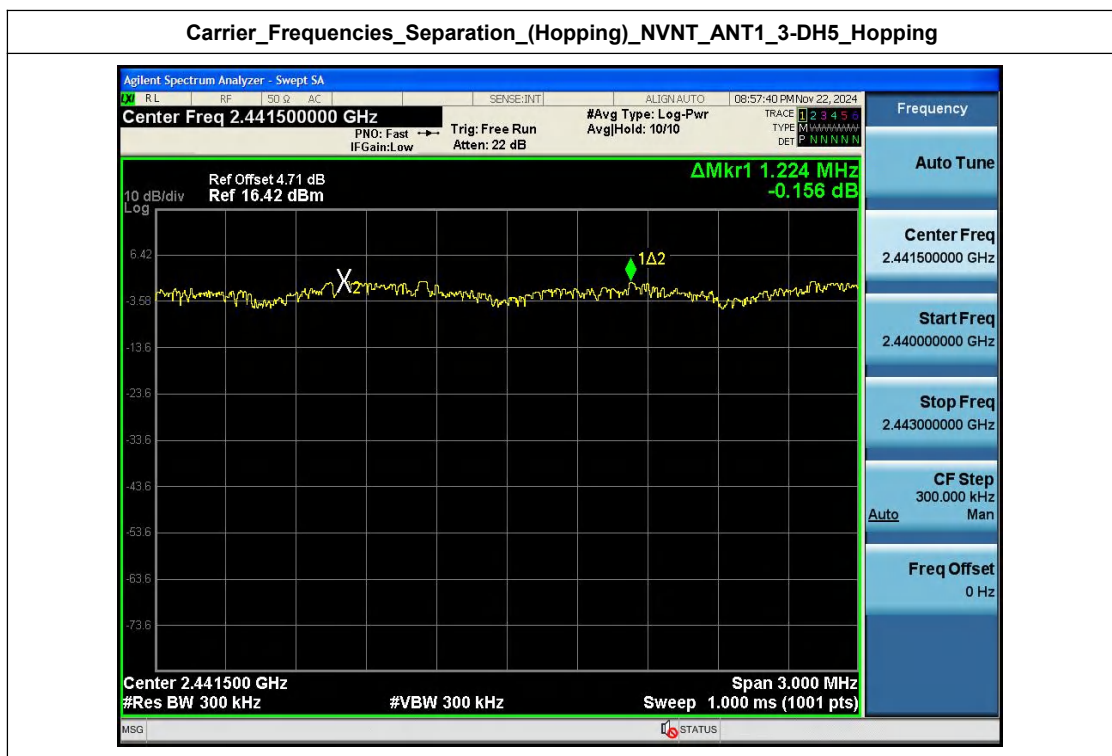



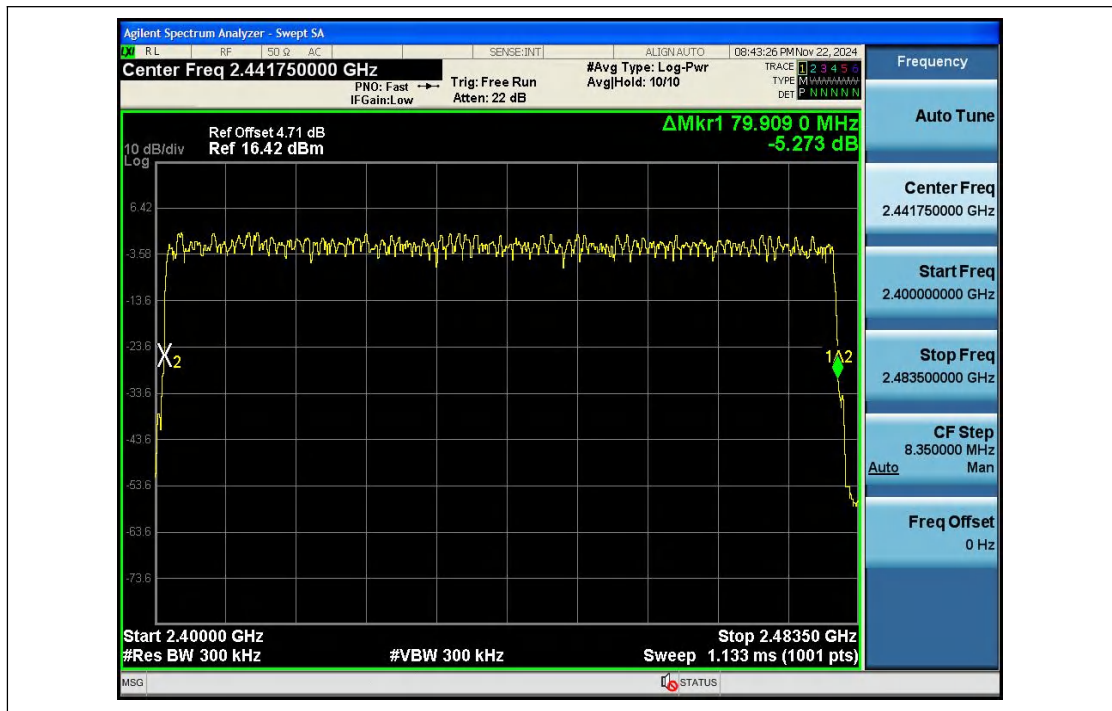


Number_of_Hopping_Channel_(Hopping)_NVNT_ANT1_3-DH5_Hopping

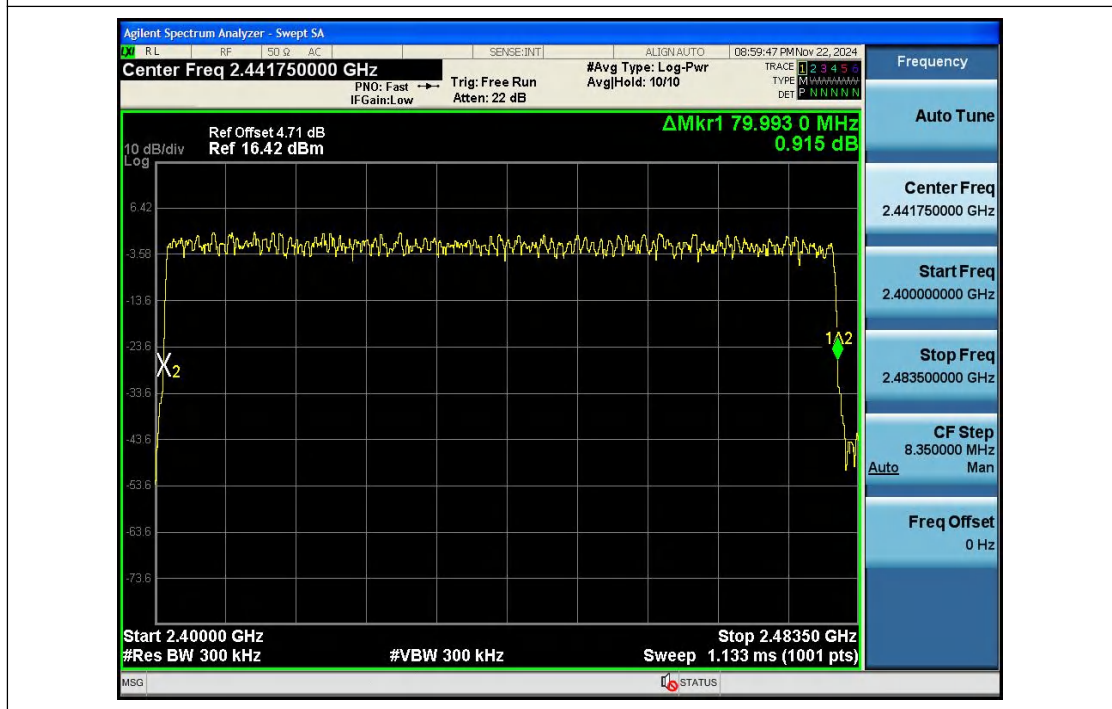

Appendix I: Dwell Time (Hopping)



Condition	Antenna	Packet Type	Pulse Time(ms)	Hops	Dwell Time(ms)	Limit(s)	Result
NVNT	ANT1	1-DH5	2.888	104.00	300.352	0.40	Pass
NVNT	ANT1	2-DH5	2.893	109.00	315.337	0.40	Pass
NVNT	ANT1	3-DH5	2.895	111.00	321.345	0.40	Pass
NVNT	ANT1	1-DH1	0.384	320.00	122.880	0.40	Pass
NVNT	ANT1	1-DH3	1.640	162.00	265.680	0.40	Pass
NVNT	ANT1	2-DH1	0.393	320.00	125.760	0.40	Pass
NVNT	ANT1	2-DH3	1.645	155.00	254.975	0.40	Pass
NVNT	ANT1	3-DH1	0.393	320.00	125.760	0.40	Pass
NVNT	ANT1	3-DH3	1.644	166.00	272.904	0.40	Pass

Dwell_Time_(Hopping)_NVNT_ANT1_1-DH5_2441_00_One_Burst_Time

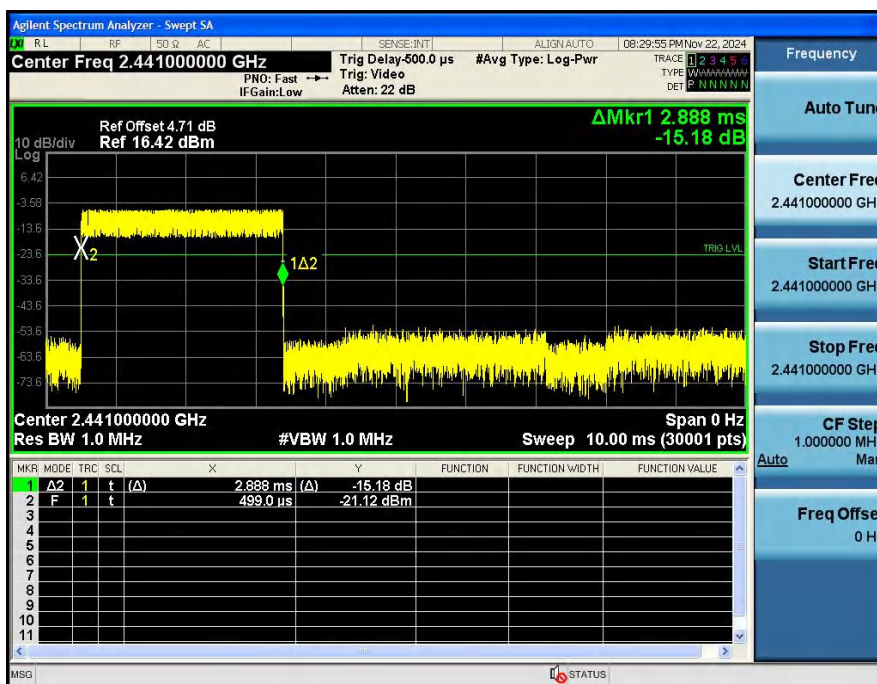


Dwell_Time_(Hopping)_NVNT_ANT1_1-DH5_2441_00_Accumulated



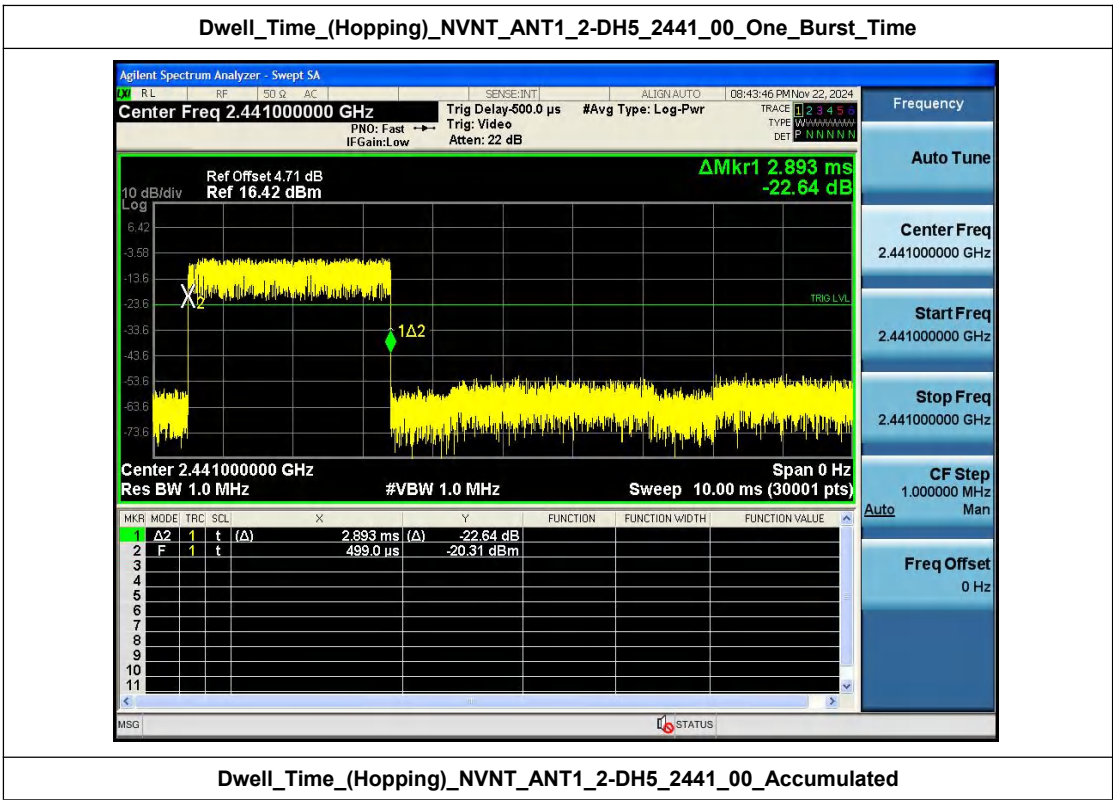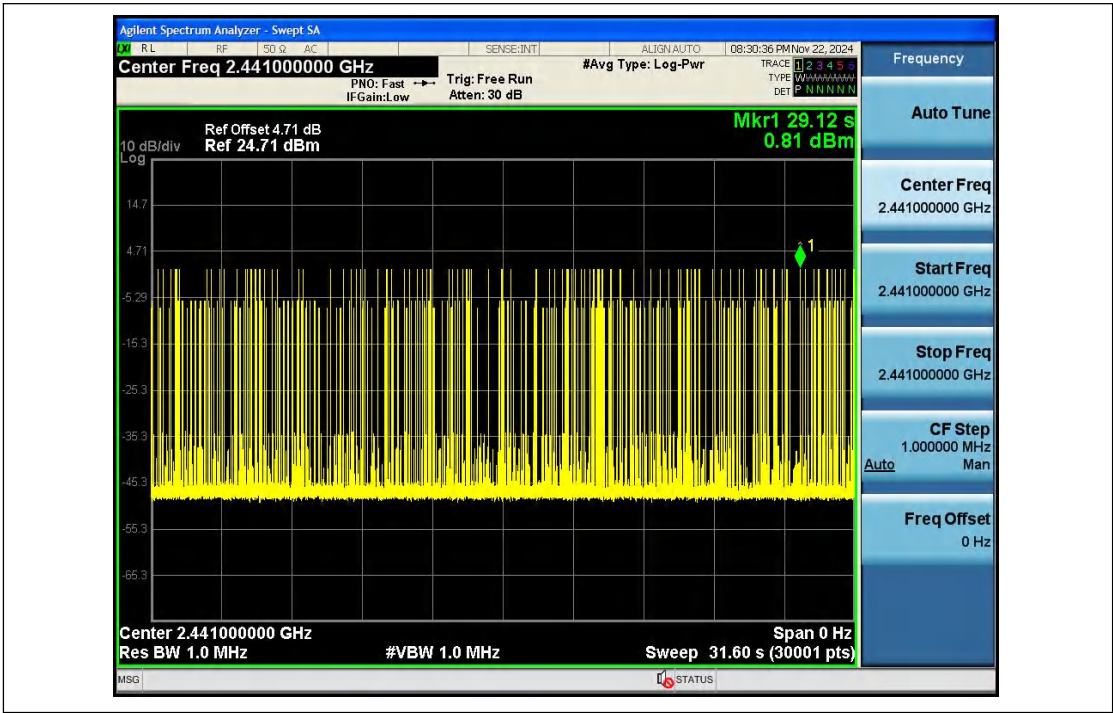




Dwell_Time_(Hopping)_NVNT_ANT1_2-DH5_2441_00_Accumulated



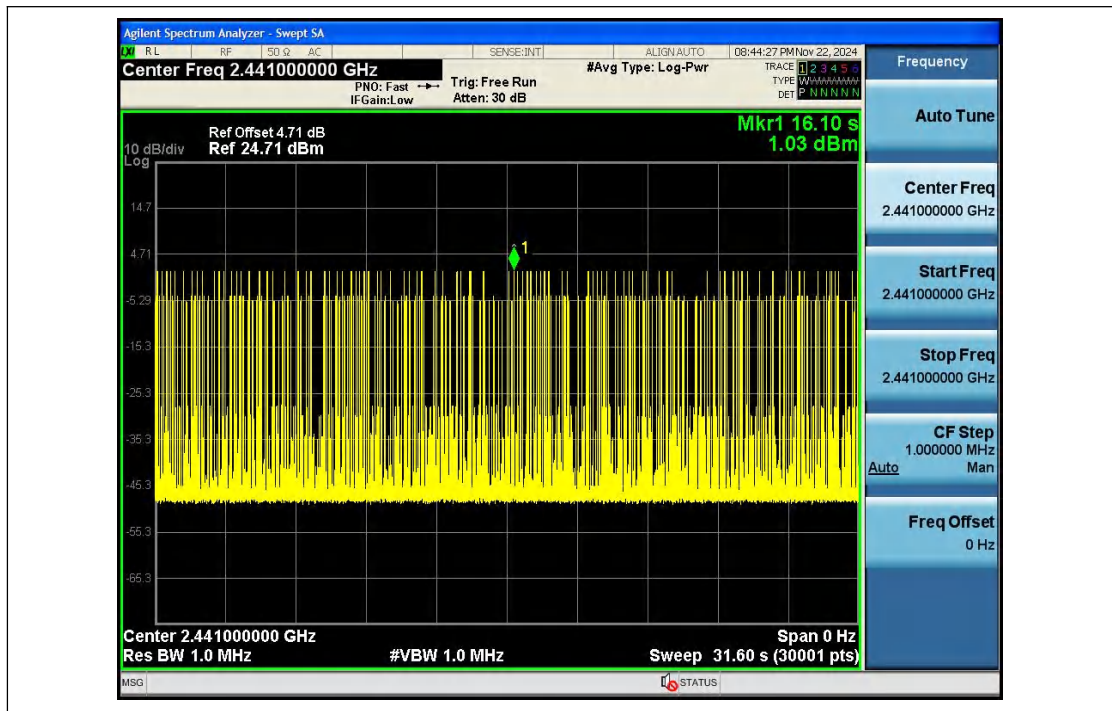



Dwell_Time_(Hopping)_NVNT_ANT1_3-DH5_2441_00_One_Burst_Time

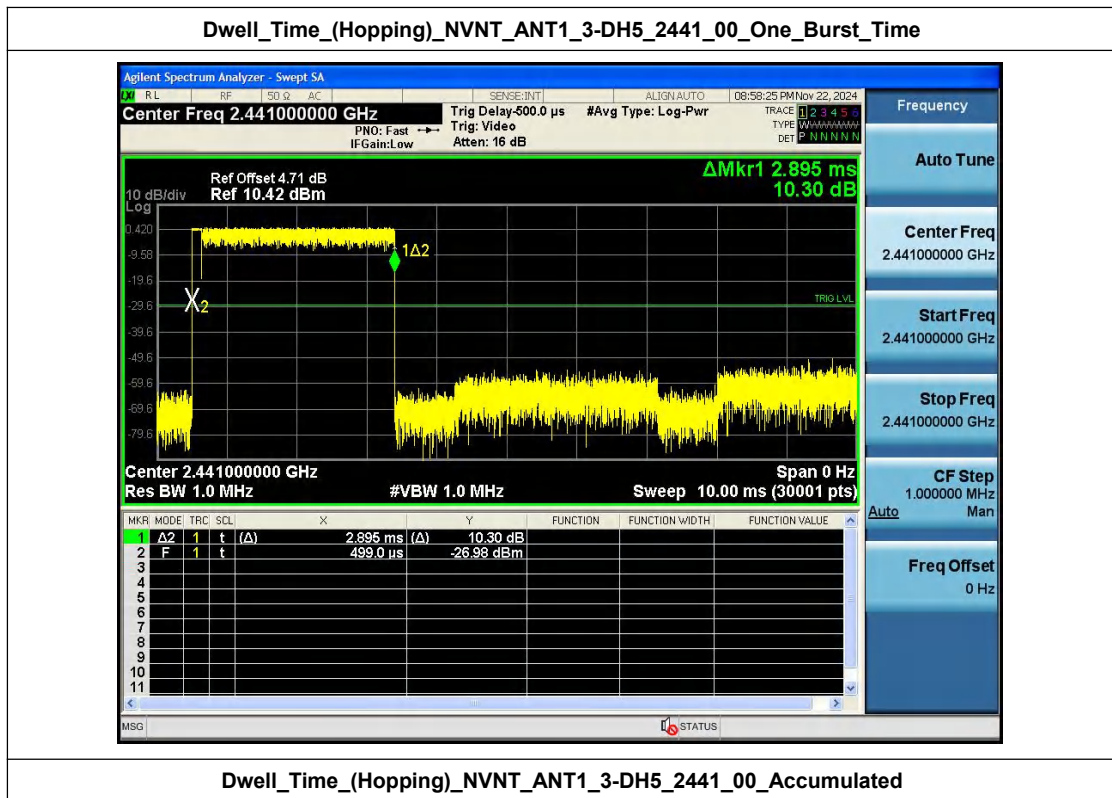


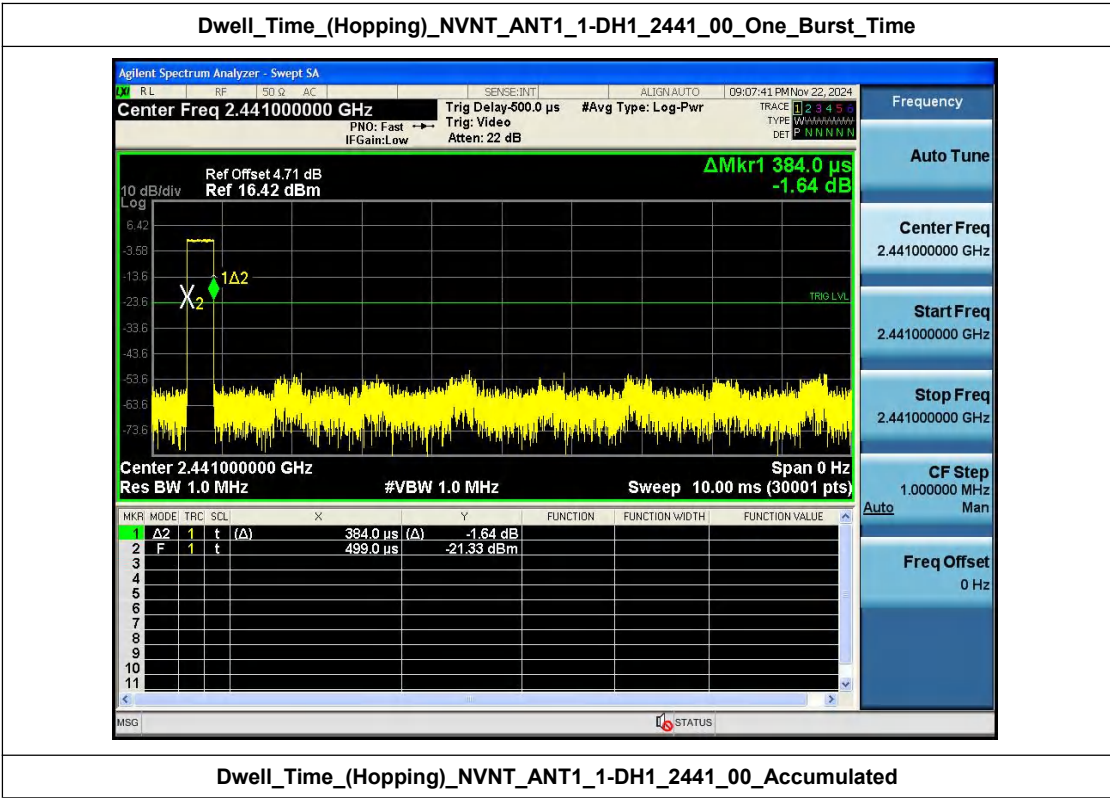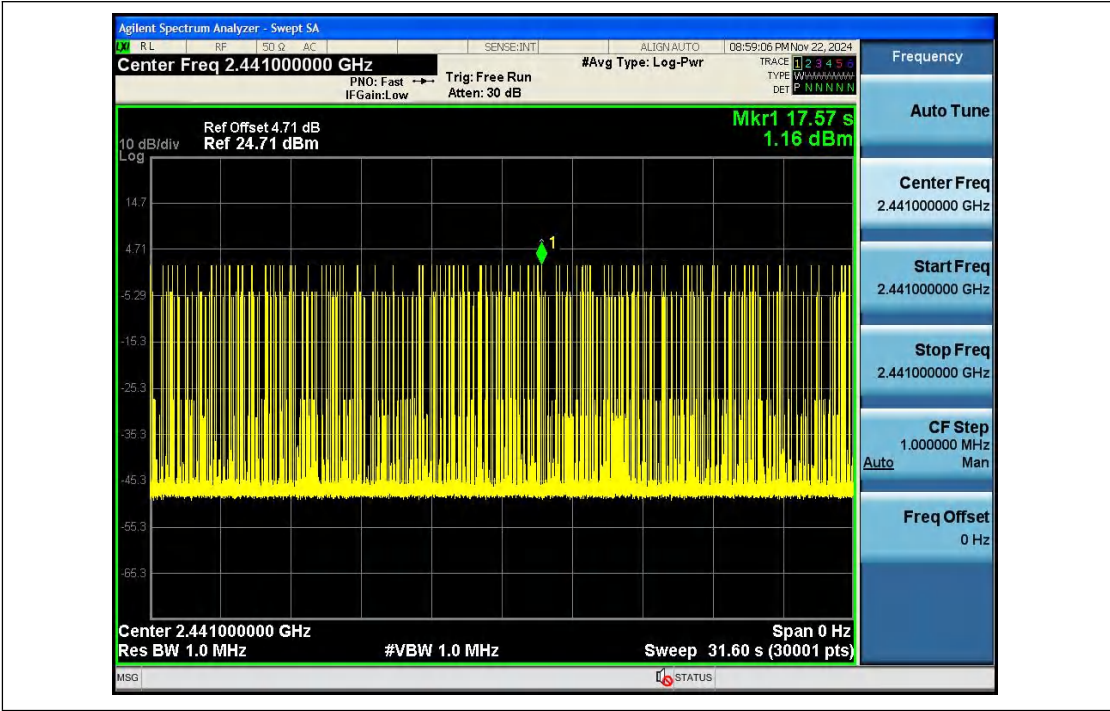


Dwell_Time_(Hopping)_NVNT_ANT1_1-DH1_2441_00_Accumulated



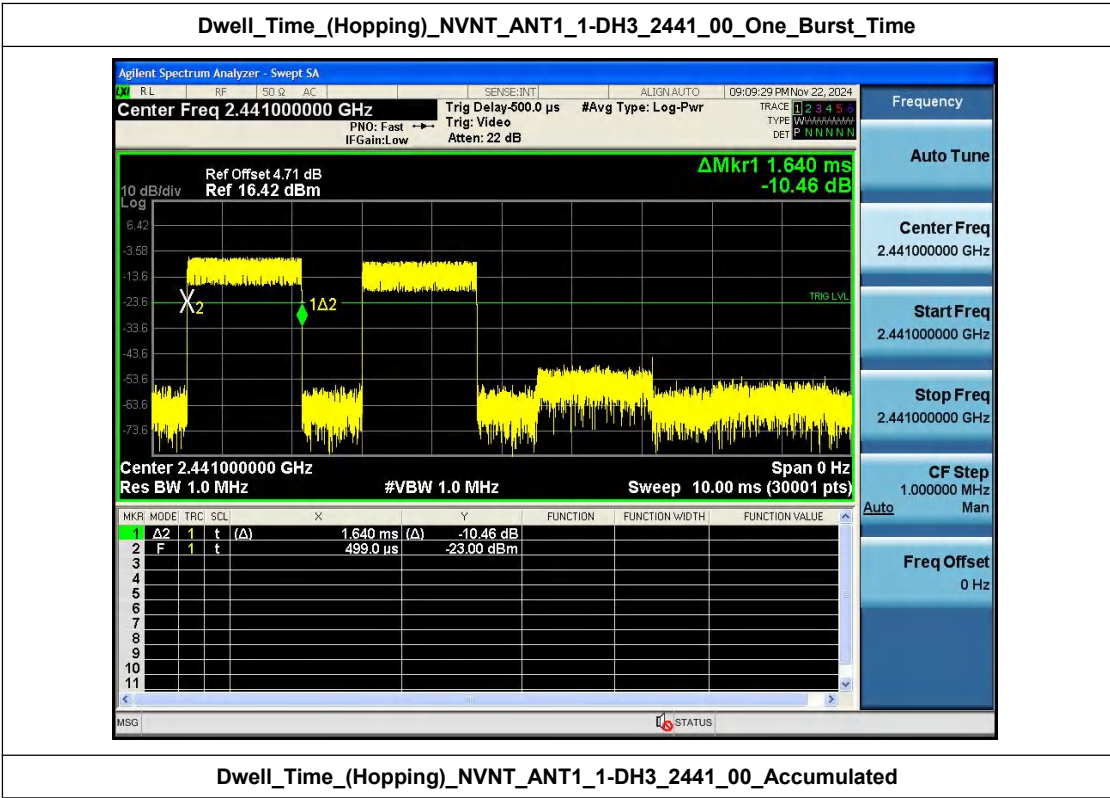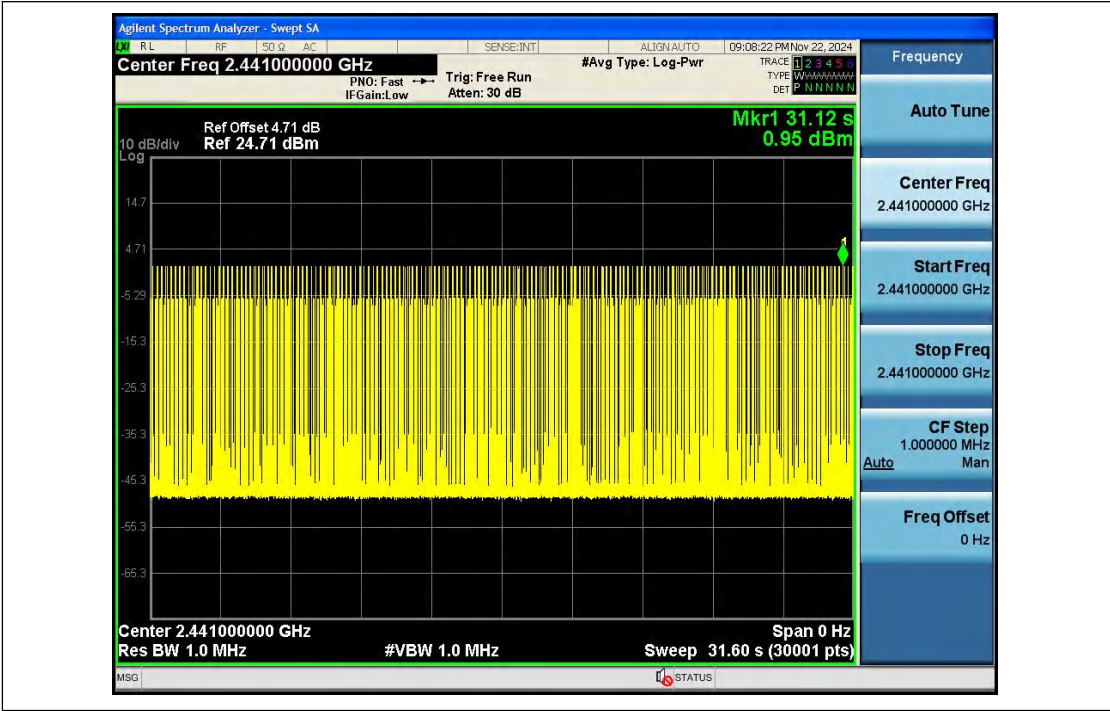

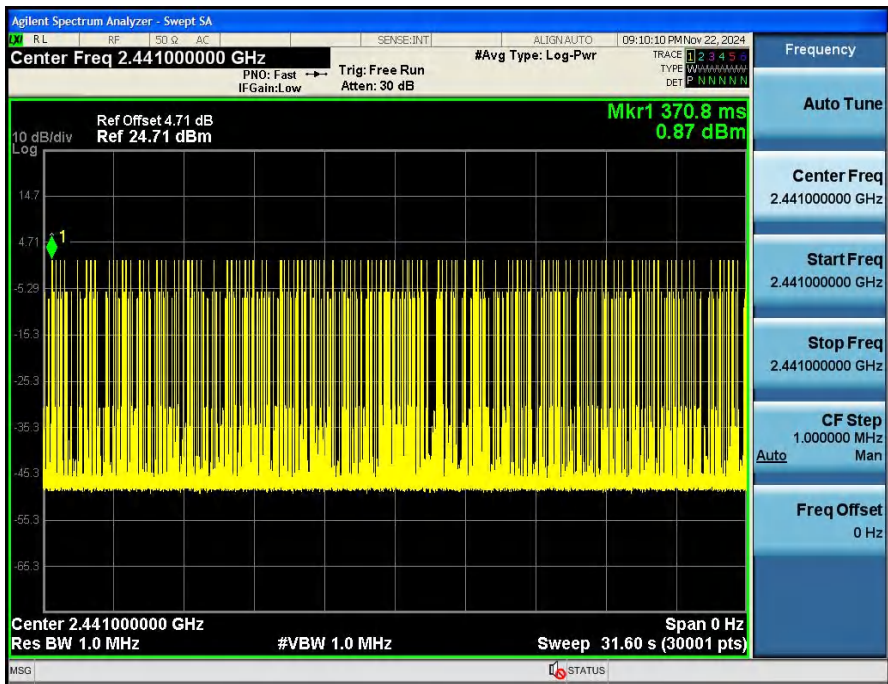


Dwell_Time_(Hopping)_NVNT_ANT1_2-DH1_2441_00_One_Burst_Time

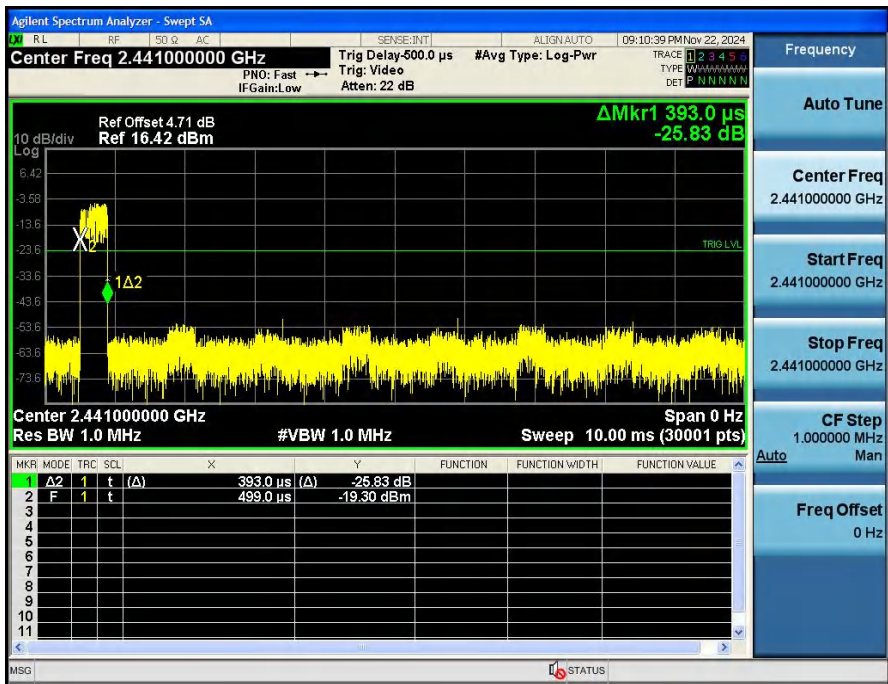


Dwell_Time_(Hopping)_NVNT_ANT1_2-DH1_2441_00_Accumulated



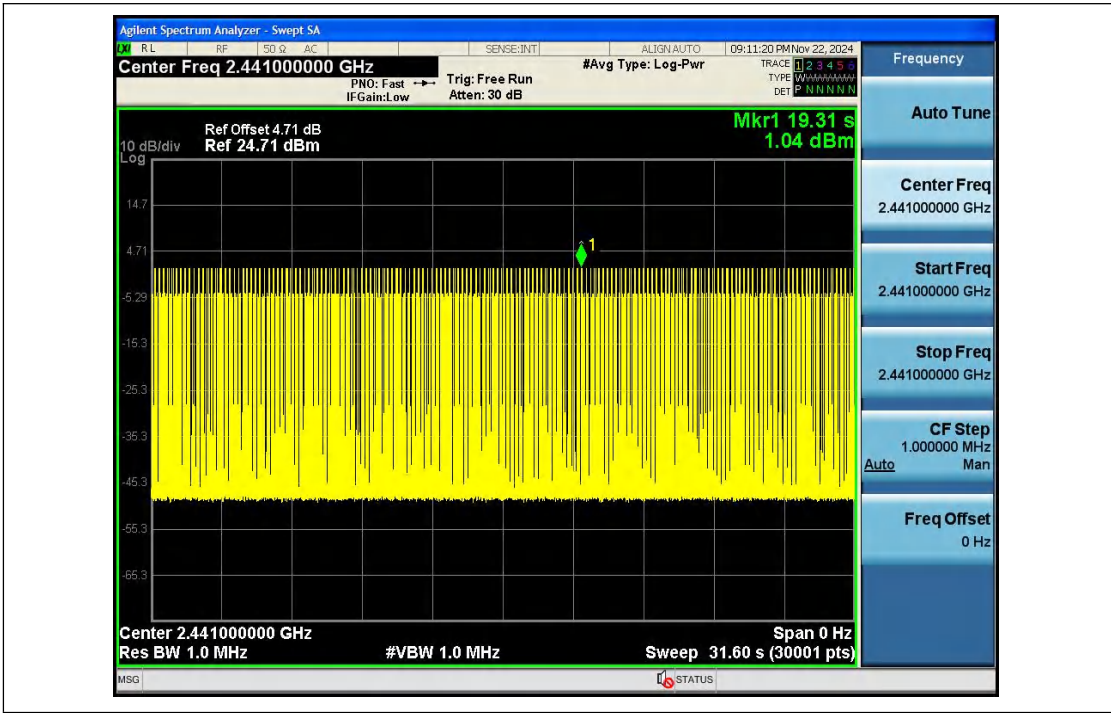


Dwell_Time_(Hopping)_NVNT_ANT1_2-DH3_2441_00_One_Burst_Time

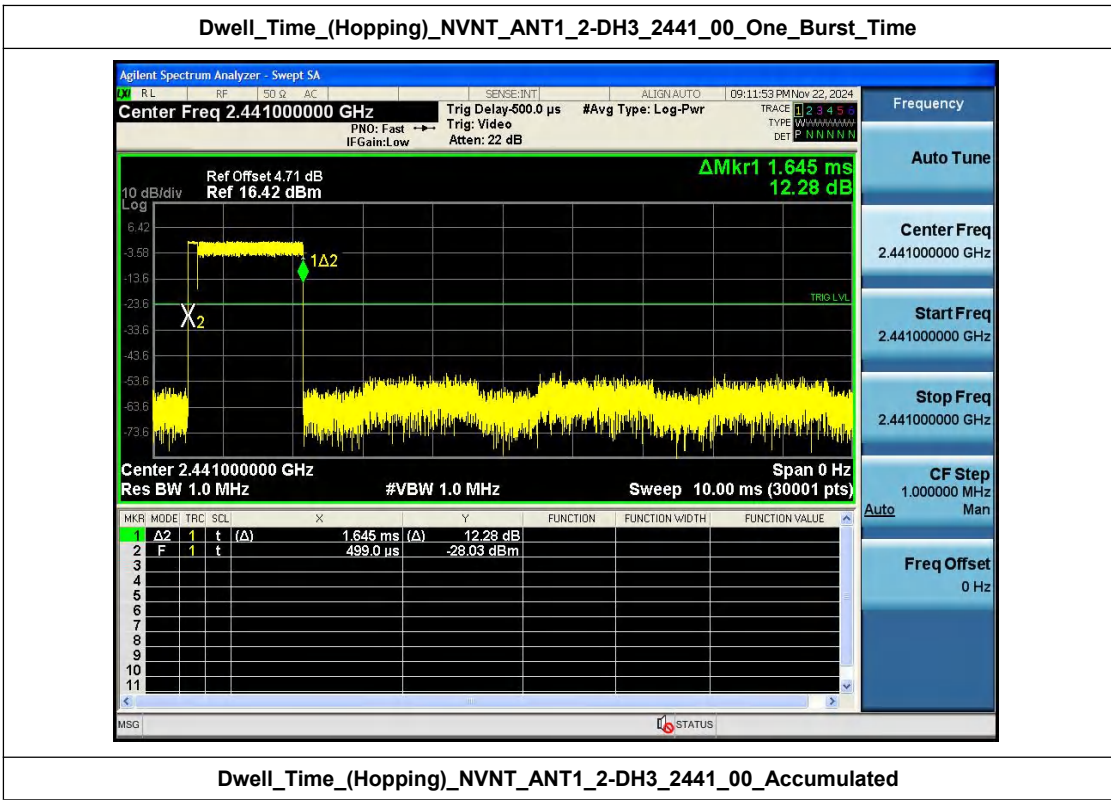


Dwell_Time_(Hopping)_NVNT_ANT1_2-DH3_2441_00_Accumulated




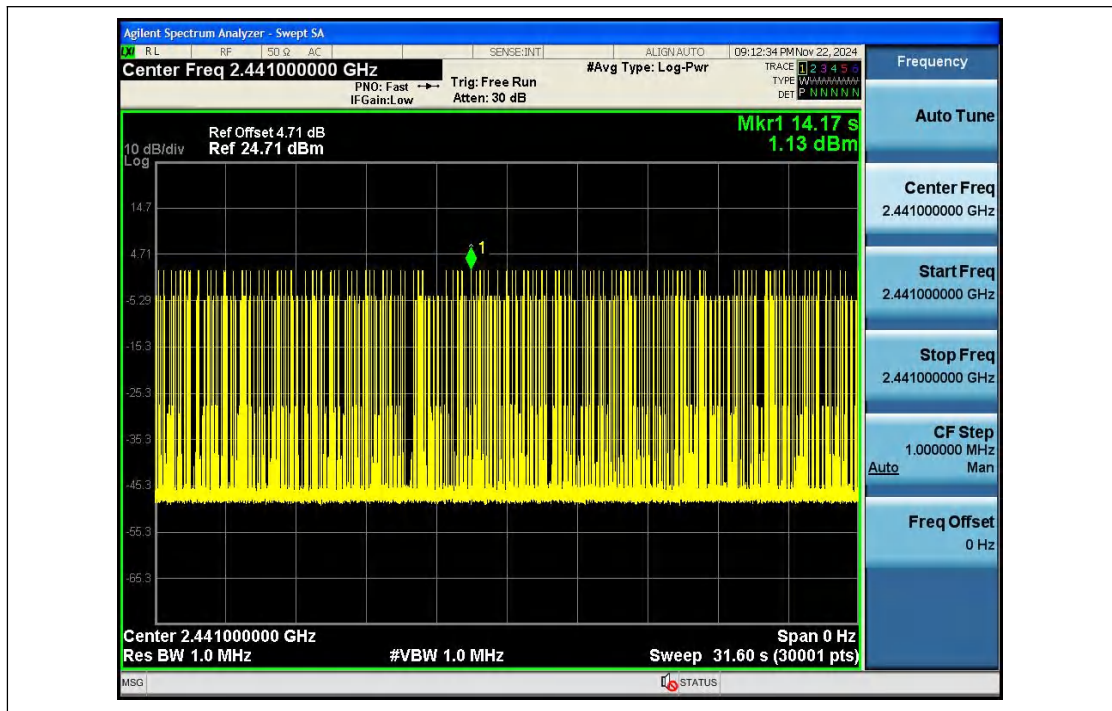



Dwell_Time_(Hopping)_NVNT_ANT1_3-DH1_2441_00_One_Burst_Time

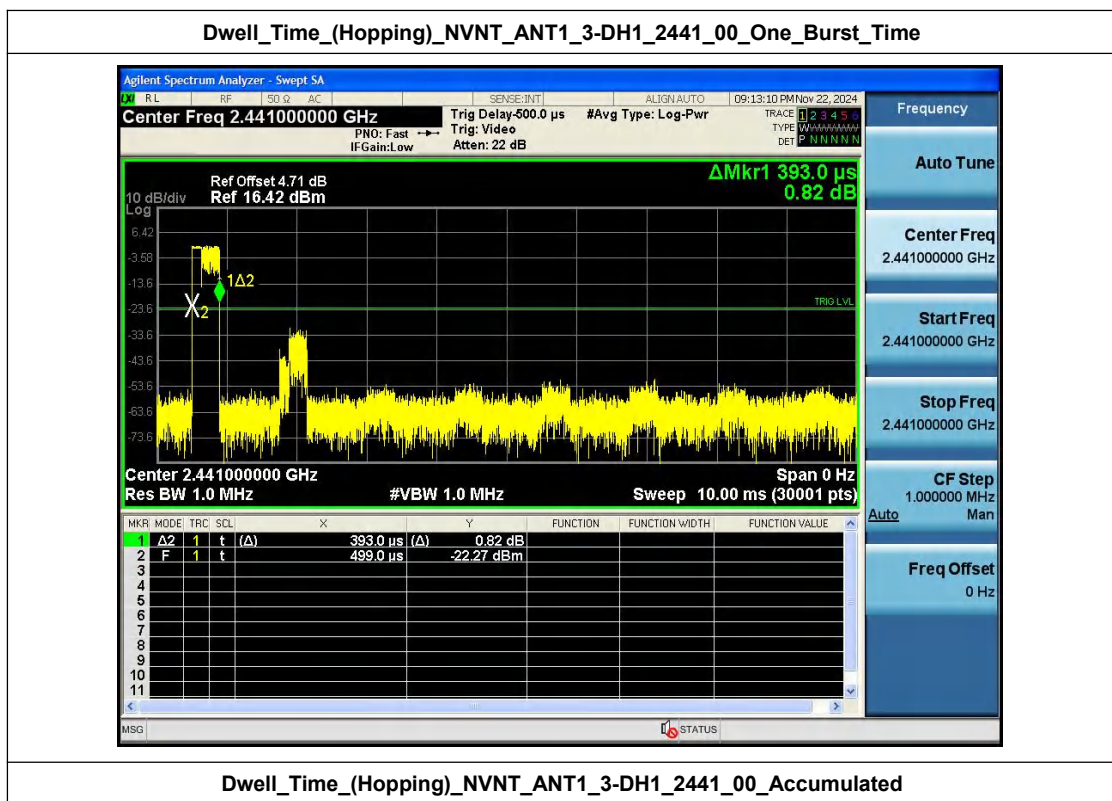

Dwell_Time_(Hopping)_NVNT_ANT1_3-DH1_2441_00_Accumulated



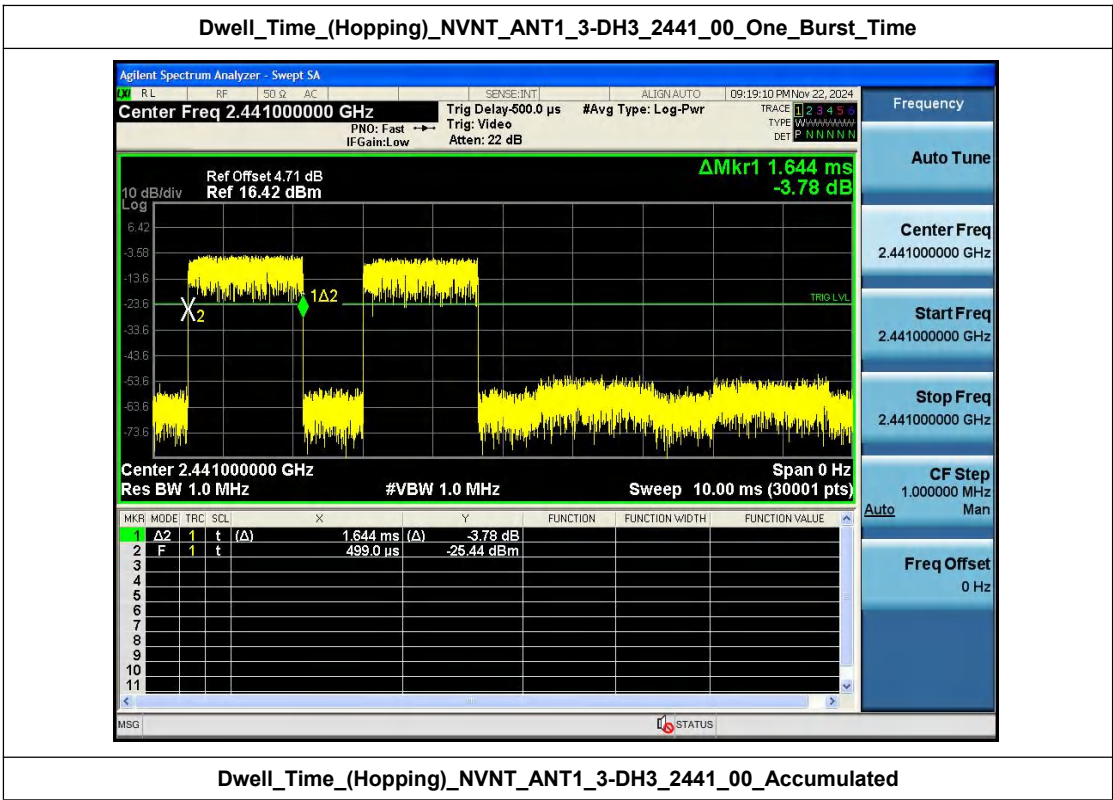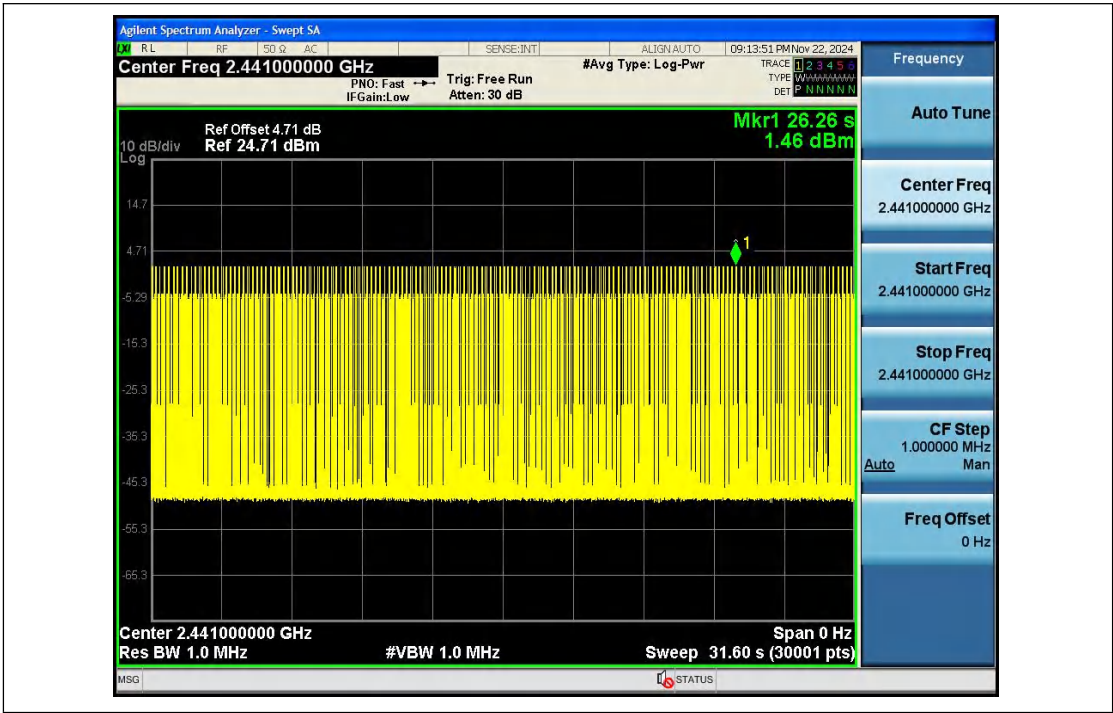

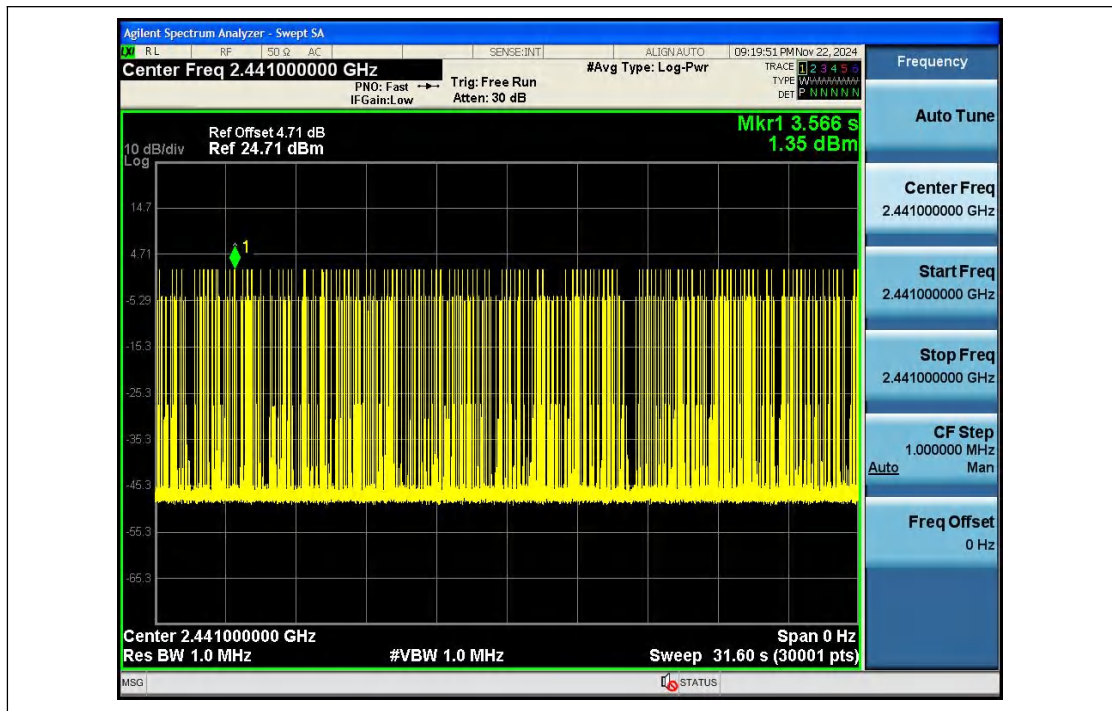

---END---

Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park,
Sanwei Community, Hangcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China
Tel: (86) 0755-26066440 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com

