

FCC ID: FSUGM2FM

EUT: MOUSE


KYE SYSTEMS CORP.

USER'S MANUAL

What's New About NewScroll

With NewScroll's unique ergonomic design, you can surf the Internet or scroll through Windows documents easily. The convenient "Magic-Surfer" only needs one finger to control it so think of it as the ultimate input controller. It can also eliminate 30% of your mouse movements.

Factory Settings

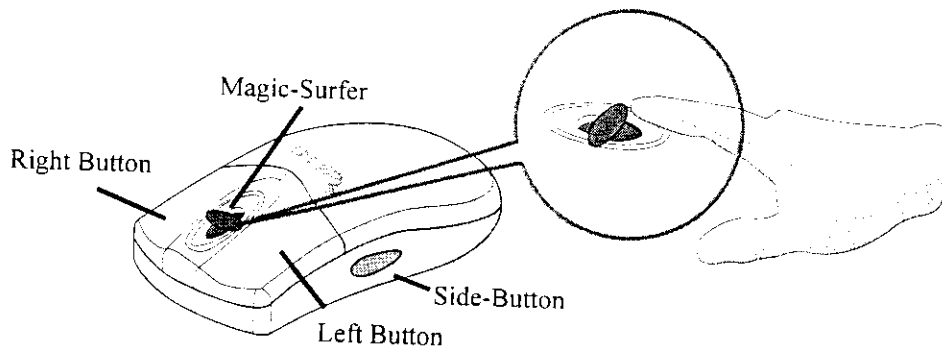

Magic-Surfer: Press the "Magic-Surfer" to surf the Internet and Windows documents

Left Button: Provides traditional mouse functions such as click, double click and drag.

Right Button: You can assign this button frequently used keyboard and mouse functions in addition to features like EasyJump, Auto-Panning, Zoom, etc.

Side Button: You can assign this button frequently used keyboard and mouse functions in addition to features like EasyJump, Auto-Panning, Zoom, etc.


- Orientation** This function lets you set the angle when you move the mouse upward. It gives you a more comfortable angle when holding the mouse. This function works best with a portable trackball.

Button Assignments

The NewScroll buttons can be assigned to perform the most frequently used mouse and keyboard functions, document, windows or special functions like EasyJump, Auto-panning, Zoom, etc. Click on the button if you want to assign a function and a list of functions appears. Click on the function you want to assign and you can also set EasyJump to be a button assignment function.

EasyJump for Windows

EasyJump lets you open eight special functions quickly.

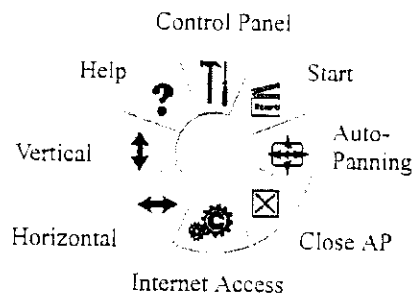

- Control Panel** Opens the NewScroll control panel
- Start** Activates the Windows Start menu
- Auto-panning** Move the mouse, and the document will move in the direction you move the mouse.
- Close AP** Close the application you are using
- Internet Access** This function opens Browser to access the Internet or opens your email access..
- Horizontal** Moves the cursor to the horizontal scroll bar.
- Vertical** Moves the cursor to the vertical scroll bar.
- Help** This opens the Help menu.

Switch Applications

When the Side-Button is set to "Switch AP" in the Button Assignments menu, you can quickly switch from one open application to another without moving the mouse. To switch to a specific application, hold the side-button and press the "Magic-Surfer". The Application Selector appears so you can select the application.

Zoom function for Office 97 Applications

Press the "Ctrl" key and move the "Magic-Surfer" forward (or backward) to set the Zoom In/Out function. You can also use just one hand to Zoom In/Out: set the side button to be the Ctrl function, hold the side button and move the "Magic-Surfer" forward (or backward) to enlarge (or decrease) the document window.

Auto-Panning

You can set this function in the Button Assignment menu. Move the mouse, and the document moves in the direction you just moved.

Uninstall NewScroll

Follow these instructions to remove the NewScroll software from your hard disk. In Windows 95/98/NT, click on the Start button, select Programs and move to NewScroll. Then click on Uninstall NewScroll.

Customize NewScroll

This section shows you how to customize NewScroll. To open the NewScroll control panel, you can double-click on the icon in the task bar or select the "Genius NewScroll" icon from the NewScroll program group.

Close the NewScroll Software

Click the right button on the taskbar, and select "Close NewScroll" to close the software.

MouseMate98-NewScroll Software Features



Browsing Speed You can adjust the browsing speed when you surf the Internet or Windows documents. The faster the speed is, the quicker the documents scroll under Windows.



Browsing Direction

Move the "Magic-Surfer" forward and the screen will browse to the top of the document. Move it in reverse and the document will go in the opposite direction.



Auto-Browsing

This function lets you enjoy "hands-off" browsing. Just hold the "Magic-Surfer" for 3-5 seconds (then release it), and the document will scroll automatically in the direction you chose.



Button Find

Automatically positions the cursor on the default button, usually the OK button, when the dialog box appears on your screen.



Trails

This option makes it easier to find the cursor when using an LCD monitor. This option cannot be used if your monitor does not support it.



Loop

When you move the cursor to the top (or bottom) of the screen, it will automatically move the cursor to the bottom (or top) of the screen.



Mouse Speed

This function lets you adjust the speed at which the pointer moves across the screen.



Double Click Speed

Use this function to set the double click speed of the mouse.



Swap Left/Right

Select this option if you want to have NewScroll operate with the right mouse button as the primary button.

Pointers Folders This let you change the shape of the cursor.

Office 97 Mode Only supports Microsoft Office 97 along with some new applications. Features include zoom, scrolling and Auto-scrolling features. It's similar to Microsoft's IntelliMouse.

Genius Mode Supports all applications that use scrollbars, including Office97, with zoom, Auto-panning, and scrolling functions.



About Click here to open the Genius Homepage "www.genius-net.com.tw"

Hardware Installation

Connecting NewScroll to Your Computer

Note: Always turn off your computer before you connect or disconnect your mouse.

1. You can connect the mouse to either the PS/2 or serial port.
2. For the PS/2 mouse port, connect your mouse to the 6-pin PS/2 port on your computer (fig. 1).

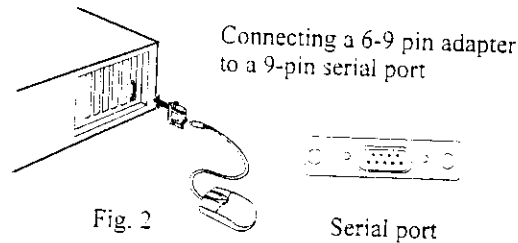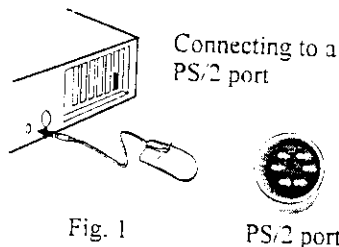

3. For the serial (9-pin) port, connect a 6-9 pin adapter to a 9-pin serial port (fig. 2).
4. Turn on your computer.

Note: If you use NewScroll on a NoteBook PC PS/2 port, you must disable the touchpad or J-key function in the BIOS and enable the external PS/2 port. Otherwise NewScroll will operate like a normal 2-button mouse.

Software Installation

Installing the MouseMate98-NewScroll software

For Windows 95/98/NT

1. Insert the MouseMate98-NewScroll software diskette into drive A or B.
2. Open the "Start" menu (Ctrl & Esc), and select "Run".
3. Type A:SETUP (or B:SETUP) in the command line box and select "OK".
4. Follow the instructions on the screen, and when the installation is complete, restart your computer.

For Windows 3.x

To use NewScroll with Windows 3.x, you need to download the driver from the Genius Homepage "www.geniusnet.com.tw".

FEDERAL COMMUNICATIONS COMMISSION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded interface cables must be used in order to comply with emission limits.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.