





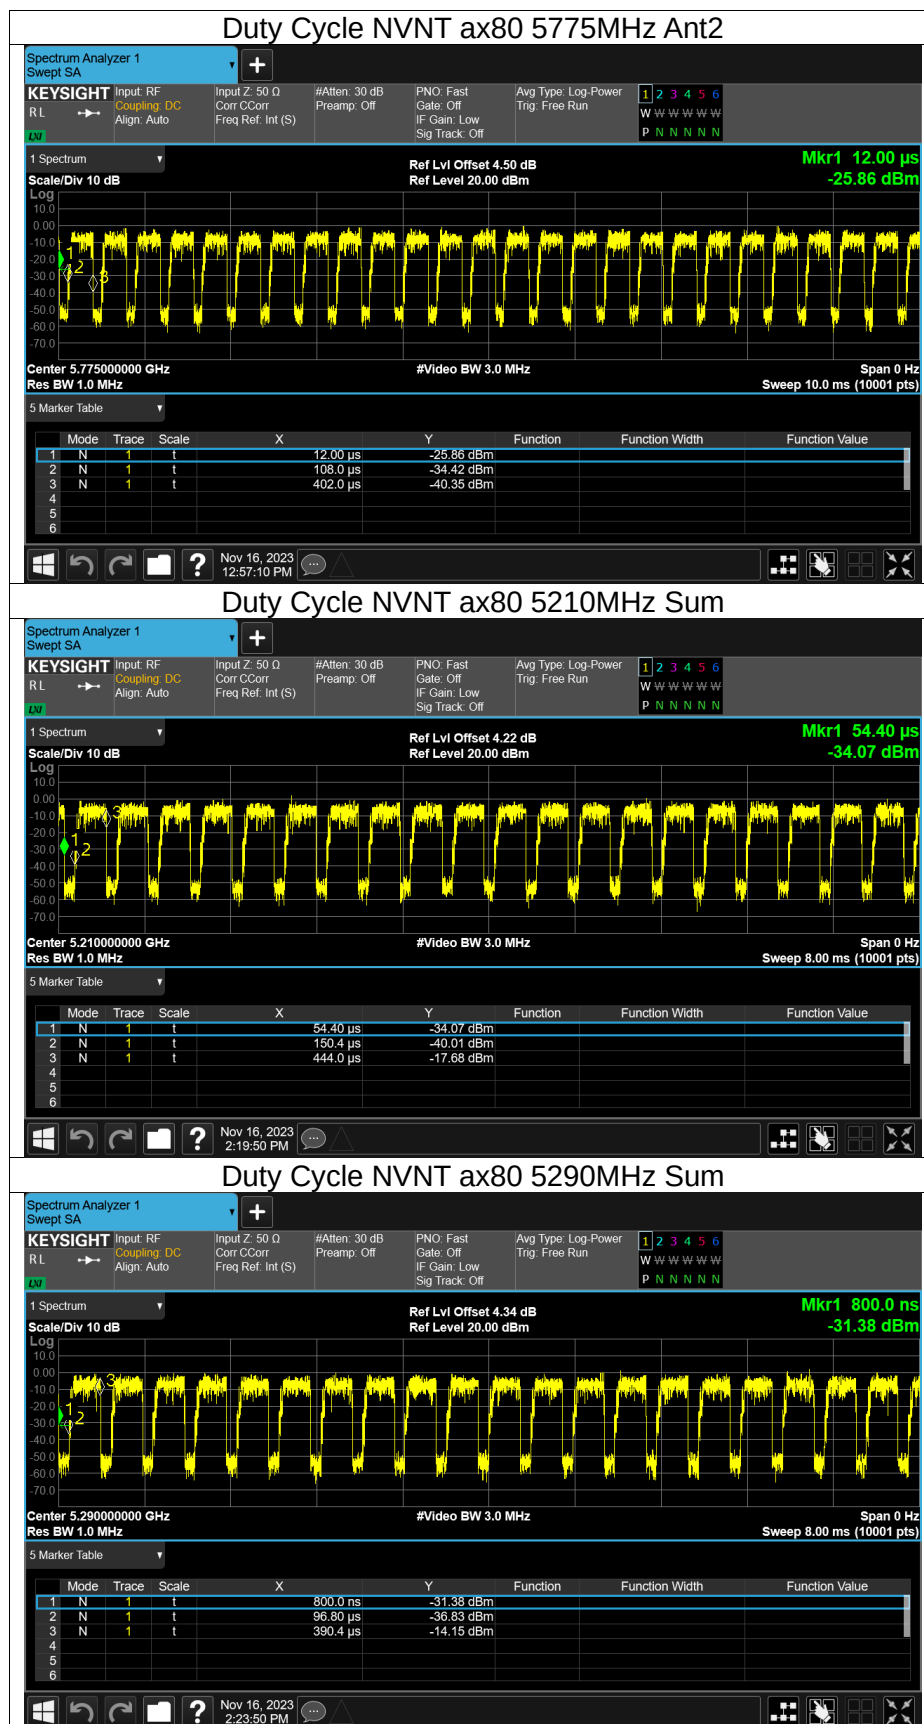

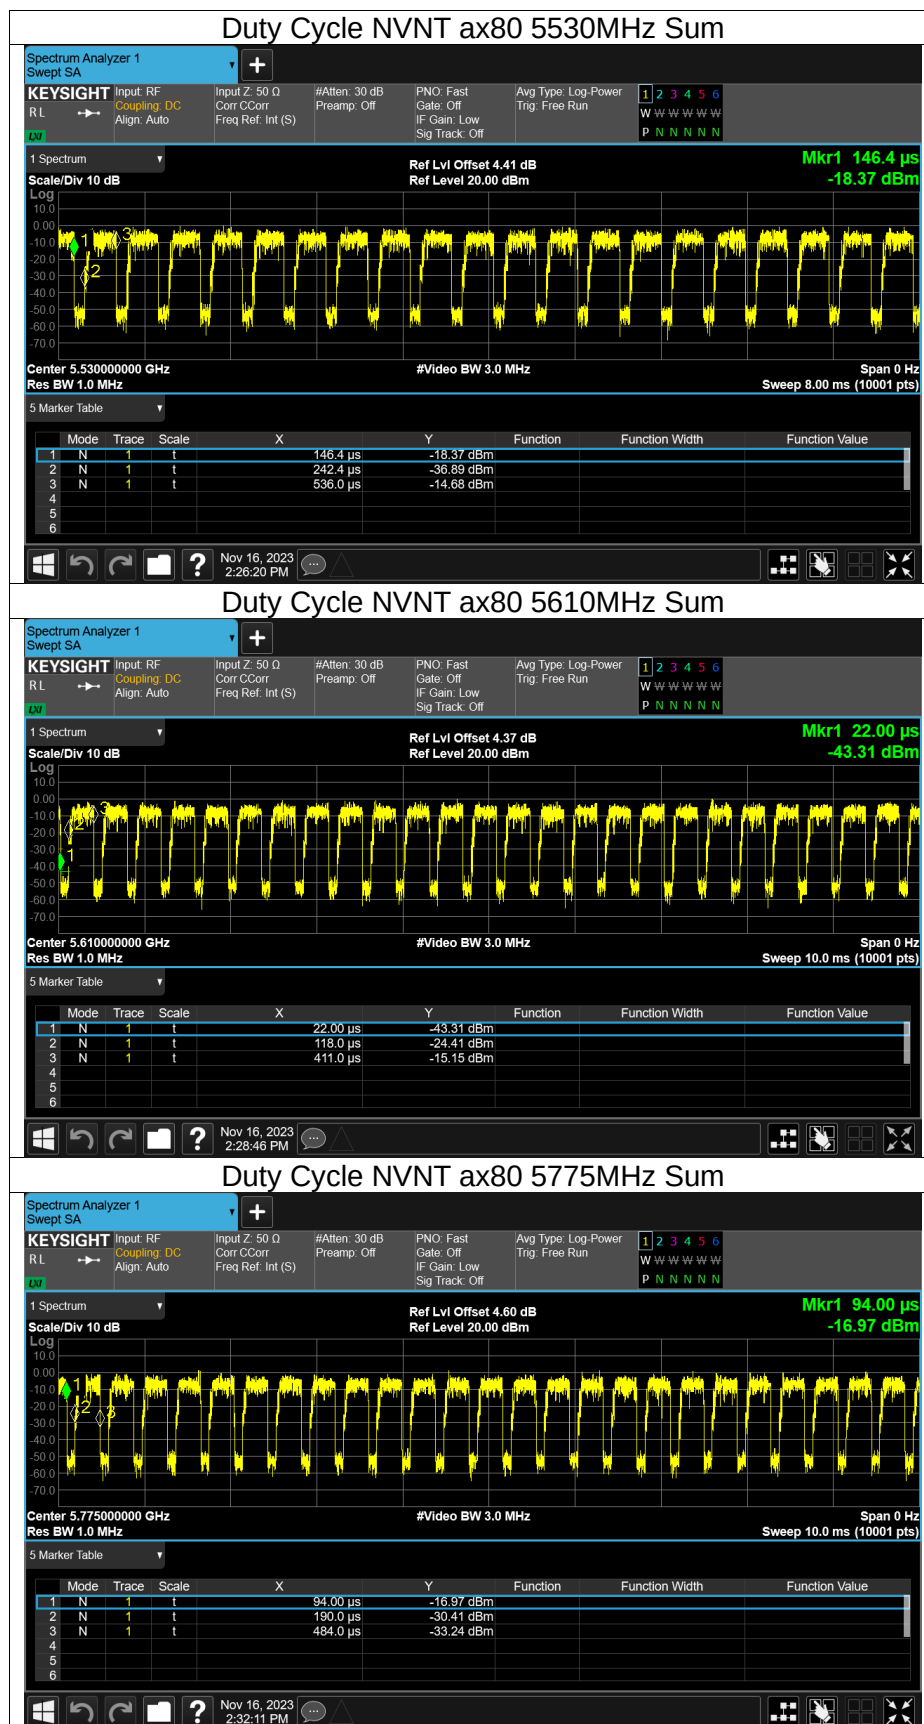

Maximum Conducted Output Power

Condition	Mode	Frequency (MHz)	Antenna	Conducted Power (dBm)	Duty Factor (dB)	Total Power (dBm)	Limit (dBm)	Verdict
NVNT	a	5180	Ant1	10.79	0.29	11.08	24	Pass
NVNT	a	5200	Ant1	10.76	0.29	11.05	24	Pass
NVNT	a	5240	Ant1	10.27	0.29	10.56	24	Pass
NVNT	a	5260	Ant1	10.9	0.29	11.19	24	Pass
NVNT	a	5300	Ant1	10.66	0.29	10.95	24	Pass
NVNT	a	5320	Ant1	10.39	0.29	10.68	24	Pass
NVNT	a	5500	Ant1	9.99	0.29	10.28	24	Pass
NVNT	a	5580	Ant1	9.46	0.29	9.75	24	Pass
NVNT	a	5700	Ant1	9.36	0.29	9.65	24	Pass
NVNT	a	5745	Ant1	10.74	0.29	11.03	30	Pass
NVNT	a	5785	Ant1	10.93	0.29	11.22	30	Pass
NVNT	a	5825	Ant1	10.31	0.29	10.6	30	Pass
NVNT	a	5180	Ant2	10.27	0.29	10.56	24	Pass
NVNT	a	5200	Ant2	10.02	0.29	10.31	24	Pass
NVNT	a	5240	Ant2	9.94	0.29	10.23	24	Pass
NVNT	a	5260	Ant2	10.34	0.29	10.63	24	Pass
NVNT	a	5300	Ant2	10.51	0.29	10.8	24	Pass
NVNT	a	5320	Ant2	10.19	0.29	10.48	24	Pass
NVNT	a	5500	Ant2	9.37	0.29	9.66	24	Pass
NVNT	a	5580	Ant2	8.37	0.29	8.66	24	Pass
NVNT	a	5700	Ant2	8.04	0.29	8.33	24	Pass
NVNT	a	5745	Ant2	8.96	0.29	9.25	30	Pass
NVNT	a	5785	Ant2	9.34	0.29	9.63	30	Pass
NVNT	a	5825	Ant2	8.91	0.29	9.2	30	Pass
NVNT	n20	5180	Ant1	10.7	0.31	11.01	24	Pass
NVNT	n20	5200	Ant1	10.62	0.31	10.93	24	Pass
NVNT	n20	5240	Ant1	10.37	0.31	10.68	24	Pass
NVNT	n20	5260	Ant1	10.82	0.31	11.13	24	Pass
NVNT	n20	5300	Ant1	10.69	0.31	11	24	Pass
NVNT	n20	5320	Ant1	10.36	0.31	10.67	24	Pass
NVNT	n20	5500	Ant1	10.05	0.31	10.36	24	Pass
NVNT	n20	5580	Ant1	9.36	0.31	9.67	24	Pass
NVNT	n20	5700	Ant1	9.41	0.31	9.72	24	Pass
NVNT	n20	5745	Ant1	10.7	0.31	11.01	30	Pass
NVNT	n20	5785	Ant1	10.89	0.31	11.2	30	Pass
NVNT	n20	5825	Ant1	10.4	0.31	10.71	30	Pass
NVNT	n20	5180	Ant2	10.08	0.31	10.39	24	Pass
NVNT	n20	5200	Ant2	10.06	0.31	10.37	24	Pass
NVNT	n20	5240	Ant2	10.11	0.31	10.42	24	Pass
NVNT	n20	5260	Ant2	10.52	0.31	10.83	24	Pass
NVNT	n20	5300	Ant2	10.29	0.31	10.6	24	Pass
NVNT	n20	5320	Ant2	10.16	0.31	10.47	24	Pass
NVNT	n20	5500	Ant2	9.25	0.31	9.56	24	Pass
NVNT	n20	5580	Ant2	8.64	0.31	8.95	24	Pass
NVNT	n20	5700	Ant2	8.39	0.31	8.7	24	Pass
NVNT	n20	5745	Ant2	8.98	0.31	9.29	30	Pass
NVNT	n20	5785	Ant2	9.11	0.31	9.42	30	Pass
NVNT	n20	5825	Ant2	8.61	0.31	8.92	30	Pass
NVNT	n20	5180	Ant1	10.47	0.31	10.78	24	Pass
NVNT	n20	5180	Ant2	10.08	0.31	10.39	24	Pass
NVNT	n20	5180	Sum	13.29	0.31	13.6	24	Pass



NVNT	n20	5200	Ant1	10.31	0.31	10.62	24	Pass
NVNT	n20	5200	Ant2	10.06	0.31	10.37	24	Pass
NVNT	n20	5200	Sum	13.2	0.31	13.51	24	Pass
NVNT	n20	5240	Ant1	10.01	0.31	10.32	24	Pass
NVNT	n20	5240	Ant2	10.05	0.31	10.36	24	Pass
NVNT	n20	5240	Sum	13.04	0.31	13.35	24	Pass
NVNT	n20	5260	Ant1	10.49	0.31	10.8	24	Pass
NVNT	n20	5260	Ant2	10.58	0.31	10.89	24	Pass
NVNT	n20	5260	Sum	13.55	0.31	13.86	24	Pass
NVNT	n20	5300	Ant1	10.35	0.31	10.66	24	Pass
NVNT	n20	5300	Ant2	10.36	0.31	10.67	24	Pass
NVNT	n20	5300	Sum	13.37	0.31	13.68	24	Pass
NVNT	n20	5320	Ant1	9.83	0.31	10.14	24	Pass
NVNT	n20	5320	Ant2	10.08	0.31	10.39	24	Pass
NVNT	n20	5320	Sum	12.97	0.31	13.28	24	Pass
NVNT	n20	5500	Ant1	9.52	0.31	9.83	24	Pass
NVNT	n20	5500	Ant2	9.52	0.31	9.83	24	Pass
NVNT	n20	5500	Sum	12.53	0.31	12.84	24	Pass
NVNT	n20	5580	Ant1	8.94	0.31	9.25	24	Pass
NVNT	n20	5580	Ant2	8.51	0.31	8.82	24	Pass
NVNT	n20	5580	Sum	11.74	0.31	12.05	24	Pass
NVNT	n20	5700	Ant1	8.93	0.31	9.24	24	Pass
NVNT	n20	5700	Ant2	8.31	0.31	8.62	24	Pass
NVNT	n20	5700	Sum	11.64	0.31	11.95	24	Pass
NVNT	n20	5745	Ant1	10.33	0.31	10.64	30	Pass
NVNT	n20	5745	Ant2	9.13	0.31	9.44	30	Pass
NVNT	n20	5745	Sum	12.78	0.31	13.09	30	Pass
NVNT	n20	5785	Ant1	10.55	0.31	10.86	30	Pass
NVNT	n20	5785	Ant2	9.31	0.31	9.62	30	Pass
NVNT	n20	5785	Sum	12.98	0.31	13.29	30	Pass
NVNT	n20	5825	Ant1	9.94	0.31	10.25	30	Pass
NVNT	n20	5825	Ant2	8.9	0.31	9.21	30	Pass
NVNT	n20	5825	Sum	12.46	0.31	12.77	30	Pass
NVNT	n40	5190	Ant1	10.96	0.6	11.56	24	Pass
NVNT	n40	5230	Ant1	10.92	0.6	11.52	24	Pass
NVNT	n40	5270	Ant1	11.03	0.6	11.63	24	Pass
NVNT	n40	5310	Ant1	10.66	0.6	11.26	24	Pass
NVNT	n40	5510	Ant1	9.83	0.6	10.43	24	Pass
NVNT	n40	5550	Ant1	9.79	0.6	10.39	24	Pass
NVNT	n40	5670	Ant1	9.91	0.6	10.51	24	Pass
NVNT	n40	5755	Ant1	11.6	0.6	12.2	30	Pass
NVNT	n40	5795	Ant1	11.27	0.6	11.87	30	Pass
NVNT	n40	5190	Ant2	10.39	0.6	10.99	24	Pass
NVNT	n40	5230	Ant2	10.49	0.6	11.09	24	Pass
NVNT	n40	5270	Ant2	10.8	0.6	11.4	24	Pass
NVNT	n40	5310	Ant2	10.41	0.6	11.01	24	Pass
NVNT	n40	5510	Ant2	9.23	0.6	9.83	24	Pass
NVNT	n40	5550	Ant2	9.02	0.6	9.62	24	Pass
NVNT	n40	5670	Ant2	8.89	0.6	9.49	24	Pass
NVNT	n40	5755	Ant2	9.72	0.6	10.32	30	Pass
NVNT	n40	5795	Ant2	9.68	0.6	10.28	30	Pass
NVNT	n40	5190	Ant1	10.74	0.6	11.34	24	Pass
NVNT	n40	5190	Ant2	10.49	0.6	11.09	24	Pass
NVNT	n40	5190	Sum	13.63	0.6	14.23	24	Pass
NVNT	n40	5230	Ant1	10.55	0.6	11.15	24	Pass
NVNT	n40	5230	Ant2	10.31	0.6	10.91	24	Pass



NVNT	n40	5230	Sum	13.44	0.6	14.04	24	Pass
NVNT	n40	5270	Ant1	10.89	0.6	11.49	24	Pass
NVNT	n40	5270	Ant2	10.72	0.6	11.32	24	Pass
NVNT	n40	5270	Sum	13.82	0.6	14.42	24	Pass
NVNT	n40	5310	Ant1	10.33	0.6	10.93	24	Pass
NVNT	n40	5310	Ant2	10.4	0.6	11	24	Pass
NVNT	n40	5310	Sum	13.38	0.6	13.98	24	Pass
NVNT	n40	5510	Ant1	9.5	0.6	10.1	24	Pass
NVNT	n40	5510	Ant2	9.43	0.6	10.03	24	Pass
NVNT	n40	5510	Sum	12.48	0.6	13.08	24	Pass
NVNT	n40	5550	Ant1	9.18	0.6	9.78	24	Pass
NVNT	n40	5550	Ant2	9.02	0.6	9.62	24	Pass
NVNT	n40	5550	Sum	12.11	0.6	12.71	24	Pass
NVNT	n40	5670	Ant1	9.44	0.6	10.04	24	Pass
NVNT	n40	5670	Ant2	8.82	0.6	9.42	24	Pass
NVNT	n40	5670	Sum	12.15	0.6	12.75	24	Pass
NVNT	n40	5755	Ant1	10.93	0.6	11.53	30	Pass
NVNT	n40	5755	Ant2	9.56	0.6	10.16	30	Pass
NVNT	n40	5755	Sum	13.31	0.6	13.91	30	Pass
NVNT	n40	5795	Ant1	10.85	0.6	11.45	30	Pass
NVNT	n40	5795	Ant2	9.69	0.6	10.29	30	Pass
NVNT	n40	5795	Sum	13.32	0.6	13.92	30	Pass
NVNT	ac80	5210	Ant1	9.92	1.12	11.04	24	Pass
NVNT	ac80	5290	Ant1	9.93	1.12	11.05	24	Pass
NVNT	ac80	5530	Ant1	8.91	1.12	10.03	24	Pass
NVNT	ac80	5610	Ant1	8.97	1.12	10.09	24	Pass
NVNT	ac80	5775	Ant1	10.42	1.12	11.54	30	Pass
NVNT	ac80	5210	Ant2	9.49	1.12	10.61	24	Pass
NVNT	ac80	5290	Ant2	9.63	1.12	10.75	24	Pass
NVNT	ac80	5530	Ant2	8.3	1.12	9.42	24	Pass
NVNT	ac80	5610	Ant2	7.89	1.12	9.01	24	Pass
NVNT	ac80	5775	Ant2	8.71	1.12	9.83	30	Pass
NVNT	ac80	5210	Ant1	9.6	1.12	10.72	24	Pass
NVNT	ac80	5210	Ant2	9.59	1.12	10.71	24	Pass
NVNT	ac80	5210	Sum	12.61	1.12	13.73	24	Pass
NVNT	ac80	5290	Ant1	9.68	1.12	10.8	24	Pass
NVNT	ac80	5290	Ant2	9.68	1.12	10.8	24	Pass
NVNT	ac80	5290	Sum	12.69	1.12	13.81	24	Pass
NVNT	ac80	5530	Ant1	8.47	1.12	9.59	24	Pass
NVNT	ac80	5530	Ant2	8.28	1.12	9.4	24	Pass
NVNT	ac80	5530	Sum	11.39	1.12	12.51	24	Pass
NVNT	ac80	5610	Ant1	8.58	1.12	9.7	24	Pass
NVNT	ac80	5610	Ant2	7.99	1.12	9.11	24	Pass
NVNT	ac80	5610	Sum	11.31	1.12	12.43	24	Pass
NVNT	ac80	5775	Ant1	10.05	1.12	11.17	30	Pass
NVNT	ac80	5775	Ant2	8.71	1.12	9.83	30	Pass
NVNT	ac80	5775	Sum	12.44	1.12	13.56	30	Pass
NVNT	ax80	5210	Ant1	10.33	1.23	11.56	24	Pass
NVNT	ax80	5290	Ant1	10.26	1.23	11.49	24	Pass
NVNT	ax80	5530	Ant1	9.11	1.23	10.34	24	Pass
NVNT	ax80	5610	Ant1	9.1	1.23	10.33	24	Pass
NVNT	ax80	5775	Ant1	10.59	1.23	11.82	30	Pass
NVNT	ax80	5210	Ant2	9.76	1.23	10.99	24	Pass
NVNT	ax80	5290	Ant2	9.88	1.23	11.11	24	Pass
NVNT	ax80	5530	Ant2	8.51	1.23	9.74	24	Pass
NVNT	ax80	5610	Ant2	8.09	1.23	9.32	24	Pass



NVNT	ax80	5775	Ant2	8.86	1.23	10.09	30	Pass
NVNT	ax80	5210	Ant1	9.85	1.23	11.08	24	Pass
NVNT	ax80	5210	Ant2	9.84	1.23	11.07	24	Pass
NVNT	ax80	5210	Sum	12.86	1.23	14.09	24	Pass
NVNT	ax80	5290	Ant1	9.85	1.23	11.08	24	Pass
NVNT	ax80	5290	Ant2	10	1.23	11.23	24	Pass
NVNT	ax80	5290	Sum	12.94	1.23	14.17	24	Pass
NVNT	ax80	5530	Ant1	8.99	1.23	10.22	24	Pass
NVNT	ax80	5530	Ant2	8.79	1.23	10.02	24	Pass
NVNT	ax80	5530	Sum	11.9	1.23	13.13	24	Pass
NVNT	ax80	5610	Ant1	8.76	1.23	9.99	24	Pass
NVNT	ax80	5610	Ant2	8.23	1.23	9.46	24	Pass
NVNT	ax80	5610	Sum	11.51	1.23	12.74	24	Pass
NVNT	ax80	5775	Ant1	10.16	1.23	11.39	30	Pass
NVNT	ax80	5775	Ant2	8.96	1.23	10.19	30	Pass
NVNT	ax80	5775	Sum	12.61	1.23	13.84	30	Pass



-26dB Bandwidth

Condition	Mode	Frequency (MHz)	Antenna	-26 dB Bandwidth (MHz)	Verdict
NVNT	a	5180	Ant1	21.195	Pass
NVNT	a	5200	Ant1	21.389	Pass
NVNT	a	5240	Ant1	21.535	Pass
NVNT	a	5260	Ant1	21.465	Pass
NVNT	a	5300	Ant1	21.306	Pass
NVNT	a	5320	Ant1	20.965	Pass
NVNT	a	5500	Ant1	21.046	Pass
NVNT	a	5580	Ant1	21.494	Pass
NVNT	a	5700	Ant1	21.187	Pass
NVNT	a	5180	Ant2	21.089	Pass
NVNT	a	5200	Ant2	21.613	Pass
NVNT	a	5240	Ant2	21.458	Pass
NVNT	a	5260	Ant2	21.312	Pass
NVNT	a	5300	Ant2	21.539	Pass
NVNT	a	5320	Ant2	21.28	Pass
NVNT	a	5500	Ant2	21.037	Pass
NVNT	a	5580	Ant2	21.343	Pass
NVNT	a	5700	Ant2	21.552	Pass
NVNT	n20	5180	Ant1	21.532	Pass
NVNT	n20	5200	Ant1	21.823	Pass
NVNT	n20	5240	Ant1	21.631	Pass
NVNT	n20	5260	Ant1	21.741	Pass
NVNT	n20	5300	Ant1	21.772	Pass
NVNT	n20	5320	Ant1	21.489	Pass
NVNT	n20	5500	Ant1	21.445	Pass
NVNT	n20	5580	Ant1	21.809	Pass
NVNT	n20	5700	Ant1	21.418	Pass
NVNT	n20	5180	Ant2	21.424	Pass
NVNT	n20	5200	Ant2	21.839	Pass
NVNT	n20	5240	Ant2	21.616	Pass
NVNT	n20	5260	Ant2	21.885	Pass
NVNT	n20	5300	Ant2	21.813	Pass
NVNT	n20	5320	Ant2	21.474	Pass
NVNT	n20	5500	Ant2	21.619	Pass
NVNT	n20	5580	Ant2	21.586	Pass
NVNT	n20	5700	Ant2	21.743	Pass
NVNT	n40	5190	Ant1	38.914	Pass
NVNT	n40	5230	Ant1	39.59	Pass
NVNT	n40	5270	Ant1	39.409	Pass
NVNT	n40	5310	Ant1	39.123	Pass
NVNT	n40	5510	Ant1	39.259	Pass
NVNT	n40	5550	Ant1	39.587	Pass
NVNT	n40	5670	Ant1	39.421	Pass
NVNT	n40	5190	Ant2	39.153	Pass
NVNT	n40	5230	Ant2	39.357	Pass
NVNT	n40	5270	Ant2	39.406	Pass
NVNT	n40	5310	Ant2	39.015	Pass
NVNT	n40	5510	Ant2	39.189	Pass
NVNT	n40	5550	Ant2	39.387	Pass
NVNT	n40	5670	Ant2	39.372	Pass
NVNT	ac80	5210	Ant1	79.44	Pass
NVNT	ac80	5290	Ant1	79.426	Pass
NVNT	ac80	5530	Ant1	79.887	Pass



NVNT	ac80	5610	Ant1	79.888	Pass
NVNT	ac80	5210	Ant2	79.407	Pass
NVNT	ac80	5290	Ant2	79.714	Pass
NVNT	ac80	5530	Ant2	79.396	Pass
NVNT	ac80	5610	Ant2	80.308	Pass
NVNT	ax80	5210	Ant1	80.564	Pass
NVNT	ax80	5290	Ant1	79.381	Pass
NVNT	ax80	5530	Ant1	79.351	Pass
NVNT	ax80	5610	Ant1	79.718	Pass
NVNT	ax80	5210	Ant2	79.851	Pass
NVNT	ax80	5290	Ant2	79.526	Pass
NVNT	ax80	5530	Ant2	79.75	Pass
NVNT	ax80	5610	Ant2	79.596	Pass



