

Baby10Q

QUICK GUIDE



In the Box

Please consult this checklist for all parts.



Camera #1



Bracket #1



Power cable #1



Power adapter #1



Screw package #1




Mounting plate #1



Mounting plate #1



Description

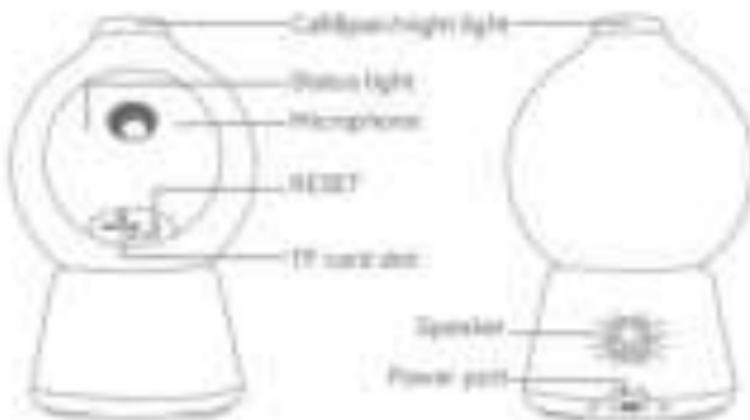

Name	Description
Power adapter	DC 5V/2A
Night light	Turn on night light for easier nighttime viewing.
Call/Port	Press to make a call. Very great to pair camera with phones.
Status light	<ul style="list-style-type: none">● Solid red: Network malfunction● Blinking red slowly: Waiting for network connection● Blinking red fast: Connecting the network● Solid blue: Functioning properly
TF card slot	TF card storage has to 256GB
RESET	Press and hold for 5 seconds to reset the device (all settings will be restored to factory defaults)

Get the App

1. Download App

- If you are new to CloudEdge

CloudEdge is available for both iOS and Android. Search for "CloudEdge" in App Store or Google Play, or scan the QR Code to download the App.

You can select the App according to needs.



CloudEdge

- If you already have an account

skip this section.


Have Support?



2 Set up router

The device supports 2.4GHz & 5GHz Wi-Fi.

Ensure you have the SSID and password.

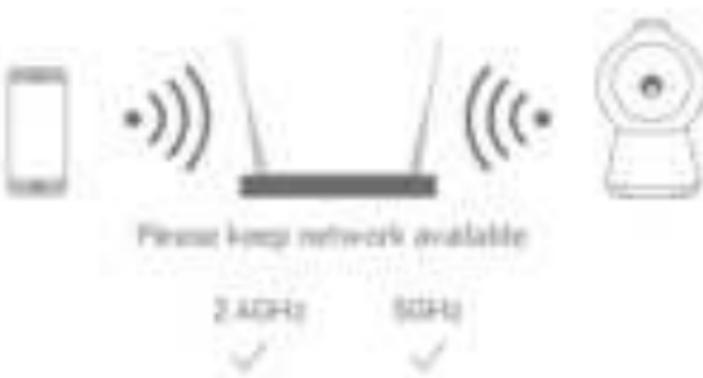

Note: The length of the Wi-Fi SSID and password should not exceed 24 characters.

If your device has trouble connecting to the Wi-Fi network or if you need to switch networks, press and hold the **RESET** button for 6 seconds to reset the device.



Registration

Note: The app interface may vary due to version updates. Please check the App Store for the latest version.

1 Sign up

Open the App, and tap **Sign up** to register.

If you already have an account, tap **Log In** to access it.



2 Complete registration

Enter a valid email address, agree to the privacy agreement, then set your nickname and password.



Note: Before creating a new account, please read the Privacy Policy and Terms of Use carefully.



Add Device

1 Power on device

Connect the device to an outlet (DC 5V/2A) using the power cable.



Note: If the device is not lit red after 30 seconds of turning on, press and hold the mount button for 8 seconds to reset, and then restart to pair the camera with the App.




2 Pair device to the App

Pairing method 1

- In the App, tap + > Scan Code => Scan code to add. To scan the QR code located on the device casing.



b. Reset the device and ensure a stable Wi-Fi connection.

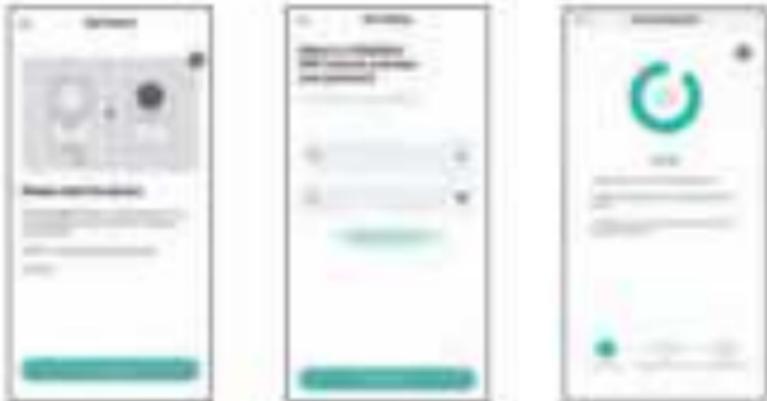

c. Complete the network configuration.

Pairing method 2

- i. Enable Bluetooth on your phone.
- ii. In the App, tap Add Device or + > Add Device. The device will be searched for via Bluetooth and appear on the screen. Follow the on-screen instructions to complete pairing.




- iii. Complete the network configuration.

Pairing method 3


- a. In the App, tap Add Device or + Add Device. Select the model according to actual carriers.



- b. Reset the device and ensure a stable Wi-Fi connection.

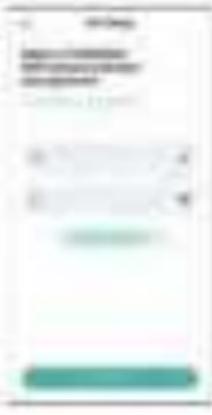

- C. Use the device to scan the QR code displayed in the App on your phone. Place your router, phone, and device close together for best connectivity.

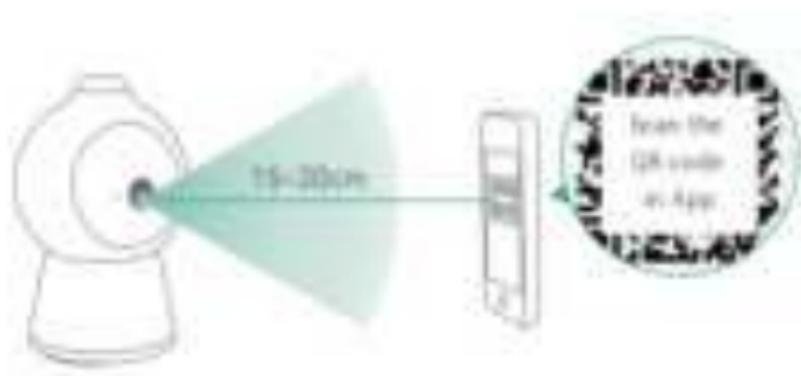

- d. Complete the network configuration

Installation

1 TF card installation (optional)

- Push the camera upwards to reveal the TF card slot.



- Insert the TF card (not included separately) into the TF card slot.



3 Installation

- Method 1

Simply place the device on a horizontal surface where Wi-Fi signal is strong.



- Method 2

Install the device to ceiling.

- a. Find a clean and flat surface.

Note: Make sure the wall is strong enough to withstand 3 times the weight of the device.

Do not apply the adhesive tape on the uncoated spot.

6. Fix the included mounting bracket to the glass surface.



7. Insert the camera to the bracket.



Live View

Note: The app interface may vary due to version updates. Please check the App Store for the latest updates.

1. Live view & general settings

In the live viewing interface, common functions of the device are shown below. Or you can tap  to enter the setting interface and set up accordingly.



2. Smart care

Tap  > Settings > Smart Care to set up various functions which helps you take better care of your baby.



3 Night light.

Enable night light function helps to view more clear during nighttime. Different night modes are available to meet customized demands.

Tap Light Switch in the live viewing interface Or you can tap  to set up night light.



Monitor Using Tips

1 Pairing of camera and monitor

Power on the camera and the monitor, and they will automatically connect. If the connection fails, please follow the steps below to pair. The pairing is distance-limited, so please make sure that the distance between the cameras and the monitor is no more than 200m.

• Bind the monitor and camera

1. Press the **Home** button on the monitor, and select  > Camera.
2. Select Camera 1 or Camera 2/3/4 which you need to pair.
3. Long press the camera pairing button until you hear the prompt tone.
4. Press the **OK** button on the monitor to start pairing.
5. If you need pair 2 cameras, please repeat step 2~step 4.

• Unbind the monitor and camera

1. Press the **Home** button on the monitor, and select  > Camera.
2. Select Camera 1 or Camera 2/3/4 which you need to unbind.
3. Long press the **OK** button to release the binding.



3 Camera switching method

If you have added 2 or more than 2 cameras, the monitor will display 2 live views at the same time. If you want to set parameters or enable functions of one of the cameras, you need to select and switch to the camera first (the number shown in the represents the selected camera).

• Camera switching method 1: manual switching

(On the home page, press button and use the Direction button to switch the camera between Cam 1, 2, 3 or 4 if you have added multiple cameras. Select one camera you need and press the OK button on the monitor to enter full-screen viewing mode. And then you can press again to zoom in and zoom out. Zooming function does not work when the screen is not in full screen.)

Note: When you add 4 (or 8) cameras, press to enter the selection mode. Cameras 1,2 are selected by default, press again to switch to camera 3,4 or 5,6.



• Camera switching method 2: timed cycle switching

We also offer the option of switching each camera to a timed cycle, making it easy for you to set up monitoring much as needed.

- 1 Press Menu on the monitor and select =
- 2 Press UP direction button to the mode of timed cycle selection.
- 3 Press LEFT and RIGHT direction buttons to select option of different timed cycles.



3 Rotate the camera

You can adjust the monitoring angle for better vision.

The direction buttons on the monitor screen are available when the camera is powered on. Press the direction buttons to rotate the camera horizontally and vertically for better views.

For more monitor functions, please refer to the kit manual.

FAQs

Q: The device cannot be previewed properly?

A: Check if the Wi-Fi network signal is strong.

If not, it is recommended to place the device closer to the router or reset the device and add it to the App again.

Q: How to change the Wi-Fi or update the Wi-Fi password for the device?

A: Please delete the camera on App, tap Add and follow the steps to use the new Wi-Fi network to add the camera again.

Q: Why I can't get the notification with App?

A: Please confirm that the App has been running on the phone, and the relevant reminder function has been enabled. Also, please confirm the message notification and authority confirmation of the phone system have been enabled.

Q: Can't find the pairing button?

A: The pairing button is the call button of the camera. Long press the button for 3 seconds, and follow the step instructions of the reminder.



Q: Failed to access the live video, prompt offline?

- A:**
- Please ensure the camera is in the power-on status; the camera network indicator should be on.
 - Check the Wi-Fi network is in good condition or restart the router.
 - Try to move the camera closer to the router.
 - Delete the camera from Aegis App and add it again. Confirm the App and camera firmware are the latest versions.

Tech Specs

Product	Baby IQQ
Resolution	2560H x 1440V
Lens(MP)(W/D)	F2.0, 90°(W)/110°(D)
IR Distance	Up to 4m (13' 2")
Working Temp	0°C to 40°C
Local storage	TF card (up to 2TB) (W)
Input power	DC 48V / 2A
Consumption	Up to 6.5W
Supported phone OS	Android 8.0 or later
2.4GHz WiFi	5GHz-2412MHz (Plus power<20dBm) (For CE) 5GHz-2412MHz (Plus power<20dBm) (For FCC)
5GHz WiFi	5170-5725MHz (Plus power<20dBm) (For CE) 5725-6370MHz (Plus power<14dBm) 5170-6370MHz (Plus power<20dBm) (For FCC)
Wi-Fi Bands	2.4GHz Plus power<20dBm (For CE) 902-923MHz (Plus power<20dBm) (For FCC)

Certifications



Don't throw batteries or old electronic products with the household waste (garbage). The dangerous substances that they contain may harm health or the environment. Make your retailer take back these products or use the selective collect of garbage proposed by your city.



Hereby, we declare that the radio equipment type Baby 100 are in compliance with the Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: <http://www.meari.com>.

Specific precautions for EMC

This is a Class B product, in a domestic environment, the product may cause radio interference, in which case the user may be required to take adequate measures.

RF EXPOSURE INFORMATION

The device meets the EU requirements (2014/53/EU) on the limitation of exposure of the general public to electromagnetic fields by way of health-protection.

Restrictions declaration in the E U band

The device for operation in the band 2400-2483 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

Power Adapter Safety

1. This power plug is intended to serve as a document device. Do not drop or handle it near to live power sources.
2. If the power adapter damages the energy, the cord is immediately cut off the wall socket, after using it at once. Furthermore, the power adapter should never be used again.
3. Do not touch the metal or dissipate adapter with cold hands. Doing so may cause skin burns, redness, and/or blisters.

Child's Safety

1. Comply with all instructions with regard to child's safety. Keeping children away from the device will reduce the risk of damage.
2. The device parts by themselves are not intended for use by children. Children should only use the device with adult supervision.

Operational Requirements

1. Use the device under direct sunlight and temperature conditions.
2. Do not use the device at strong light sources such as bright, and sunlight when having to avoid reducing the lifespan of the LED screen, and causing overheating and breaking.
3. Cleaning facilities and requirements, and respect the privacy and legal rights of others.

Wiley Books from the Author's Desk

This document contains neither recommendations nor conclusions of EPA. Mention of trade names or commercial products does not constitute endorsement, and reference to such products does not imply recommendation for use.

- (1) This does not mean that they cannot interfere, but rather that interference from many causes makes prediction of the outcome difficult.

(2) The patterns observed are not uniform over time, as some factors have significant effects and others do not.

(3) Interactions between different factors can reduce the overall effect.

(4) Relationships between variables are not necessarily causal, but rather may be due to common underlying factors.

Please note the exercise has the total number 60-100 (110) and contains 60-100 IT numbers, which means there are 100 IT numbers and exercises.

La République dominicaine nous offre un exemple intéressante dans le secteur (cf. la loi 1737) qui facilite l'obtention à l'équivalent de 1000-1012 d'utilisations par an pour les formations universitaires et de recherche.

This transmission model and its validation are currently in comparison with any other universal or universalistic. This qualitative simulation is intended and compared with a numerical solution of the corresponding equations from the reference and our results.

Quelques personnes peuvent être sensibles à l'acrylamide et développer des symptômes de toxicité. Cependant, il n'existe pas de preuve solide d'effets néfastes sur la santé humaine.

• 100 •

My adaptation had been tested and found to comply with the Minister's Class B digital device pursuant to part 710 of the RCM (2004). These terms and conditions do not constitute a guarantee or warranty issued by or on behalf of a registered manufacturer. They do not affect your rights under the Canadian Radio-television and Telecommunications Act, nor do they affect your rights under the applicable laws relating to consumer protection. However, there is no guarantee that the interference will not occur in a particular installation. If this happens, it shall cause harm to other services or cause an interference reception, which can be eliminated by changing the equipment off and on. The user is encouraged to try to resolve the interference by one or more of the following measures:

- Identify all relevant PPE (protective measures).
 - Increase the protection between the equipment and operator.
 - Decrease the equipment size or automation to reduce force that is used for handling.
 - Avoid PPE damage by avoiding unnecessary movements by tools.

www.wiley.com

(CC) Assessment: Expressive language. The person interacts with FTD; evaluate expressive language skills for an "understandable" environment, and it often compares with their 10 of the FTD, MCI stages. This measurement must be correlated with quantified in assessing speech provided instructions and the information used for this measurement must be modified to provide a response in duration of 45 days, 30 per item, all patients will have non-interactive or responding to instructions, early and other behavioral symptoms. Non-verbal and moderate must be provide with certain instructions, instructions must consider removing the non-sufficient responses.

This sentence is incomplete, with either 'No' or 'Yes' as the PCC2 response. Incomplete is assigned to the following two configurations: (1) this subject never had a history of hypertension, and (2) this subject never had a history of stroke.

1 / 10 pages

Any changes or modifications not previously agreed will be deemed to constitute a new contract subject to the terms and conditions set out in the new contract.

© 2005, All rights reserved. No part of this work may be reproduced, stored in a retrieval system, or transmitted, in whole or in part, by means of a wire, electronic, photocopying, recording or otherwise, without prior written permission of the author.