


Product Details

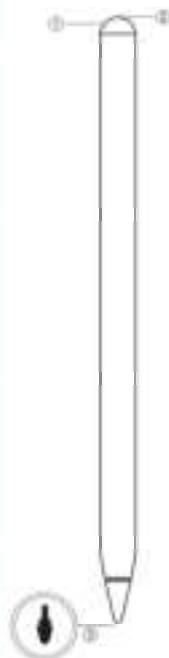

- (1) Touch sensor
- (2) LED indicator
- (3) Magnetic connector
- (4) Lightning port

Quick charger

Magnetic suction on the iPad can be charged to the pencil.
 The Charging time: 85-100 Minutes
 Continuous use time: 8 hours

Compatibility

Model Name	Model Number
iPad Pro 12.9" (3rd)	A2480/A2477 A2764/A2769
iPad Pro 12.9" (2nd)	A2378/A2379 A2441/A2442
iPad Pro 12.9" (1st)	A2094/A2203 A2133/A2209
iPad Pro 12.9" (1st)	A1978/A1988 A1983/A2214
iPad Pro 11" (3rd)	A2423/A2758 A2751/A2752
iPad Pro 11" (2nd)	A2314/A2377 A2485/A2488
iPad Pro 11" (1st)	A2096/A2208 A2209/A2211
iPad Pro 11"	A1934/A1978 A1980/A2013
iPad Air 5	A2388/A2588 A2591
iPad Air 4	A2072/A2316 A2334/A2335
iPad mini 6	A2587/A2588 A2589

Please confirm the model number on the back of the IPAD



NOTE

Not compatible with models released before 2015:
 iPad Pro 12.9" 1st/2nd, iPad Pro 12.9"
 iPad Pro 9.7", iPad 1 to 5 Gen, iPad Mini 1 to 4 Gen, iPad Air 1st/2nd.

How to Connect

1. Please follow these steps to make sure the native Status is allowed to work in your iPad or iPad Pro:
 Go to Settings>Apple Pencil>Turn off>Apple Pencil Settings>Home>Turn off>Only Draw with Apple Pencil.
2. Please turn off the Bluetooth connection before using our stylus pen if you have connected the" apple pencil". No need to reset Bluetooth.
- 3.6.1. If an iOS system must be updated to 15.12.2 or above.
4. Touch the top touch switch to turn on the pen.
5. Please ensure it has enough power before use and confirm that there is NO green exclamation mark next to the same Bluetooth.



Technische Details

size 5.4" x 3.25inch x 0.15inch
Weight 5.5kg x 101g
Charging Time 30-130 minutes
Continuous Use Time about 8 hours

Power On/Off

"A. If the iPad has been connected to the Apple Pencil before, hold down the Bluetooth + Pair

Apple Pencil and Tap "B" in a blue screen Tap Forget This Device."


"L. Single press the Power Button. Once the indicator light turns on, the stylus is on."

"L. When the stylus is on, press the Power Button: the light goes off, the stylus is off. The stylus will automatically turn off if it is not used within 5 minutes."



Replace the Stylus Tip

Unscrew the old tip counter-clockwise to replace.

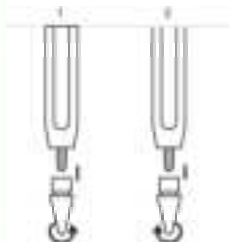

Indicator Light

1. Blue light on:
80%-100% power
(Available for 9 Hours)
2. Green light on:
50%-80% power
(Available for 4 Hours)
3. Red light on:
less than 20% power
(Available for 0.5 Hours)



Magnetic Function

The stylus can be magnetically attached to the side of iPad Pro and iPad Air for easy carry.



* This function is only available for iPads with magnetic function on the side.

Packing List

1. Stylus Pen*1
2. Replaceable Tip*2
3. User Manual*1

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful

interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

(*) Consult the dealer or an experienced radio/TV technician for help. (Caution: Any changes or modifications to this device not expressly approved by manufacturer void any authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. For more

information, please refer to the user manual. The device has been evaluated to meet part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. For more

information, please refer to the user manual. The device has been evaluated to meet part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. For more

information, please refer to the user manual. The device has been evaluated to meet part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. For more

information, please refer to the user manual. The device has been evaluated to meet part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. For more