



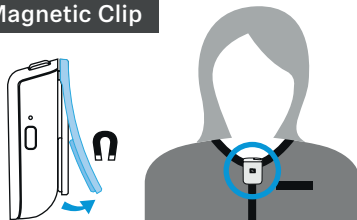

Memory Mic



Quick Guide | Kurzanleitung | Guide rapide | Guida rapida | Guía de inicio rápido | Guia rápido | Beknopte handleiding | Krótka instrukcja obsługi | Snabbguide | Kort vejledning | Πίκαοήje | Γρήγορος οδηγός | Kısa Kılavuz | Краткая инструкция | 快速指南 | 快速使用指南 | クイックガイド | 요약 설명서 |

In the box  Memory Mic  USB cable Safety Guide Quick Guide Licenses	 Memory Mic APP Wireless audio recording solution for your smartphone Get more information on www.sennheiser.com/memorymic Or download the free Sennheiser app through App Store or Google Play Download on the App Store GET IT ON Google Play	System Requirements Android: Version 5.1 or later iOS: Version 10.2 or later Bluetooth® 4.1 with LE or later WLAN: IEEE 802.11g/n Magnetic Clip 
---	--	---

Getting ready


- 1 Activate Bluetooth**

- 2 Start the app**

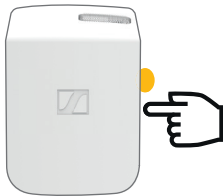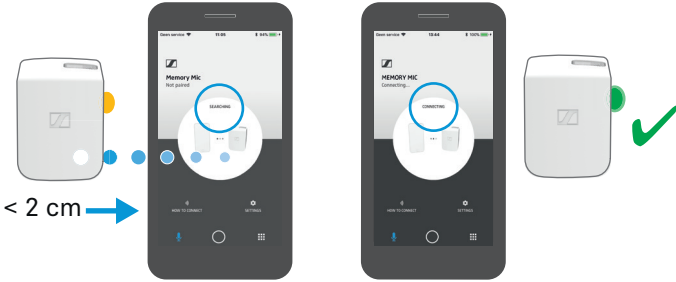- 3 Start Memory Mic (LED = ●)**

- 4 Connecting > 2 sec (LED = ●)**

- 5 Initializing**

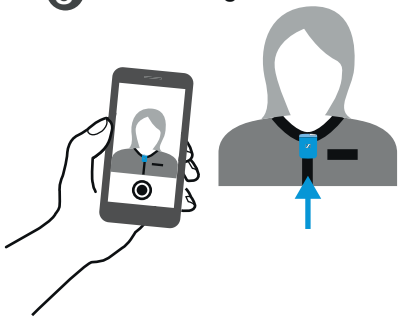- 6 Battery status**

- 7 Open recording screen**

- 8 Positioning**


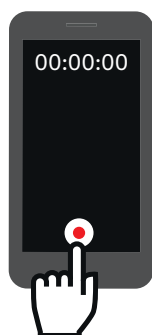
Sennheiser electronic GmbH & Co. KG

SENNHEISER

Am Labor 1, 30900 Wedemark, Germany, www.sennheiser.com
 Publ. 04/18, 578661/A02

Recording


9 Start / Stop recording(s)




10 Finish session



11 Synchronize audio(s)/video(s)

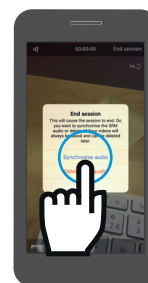


12 Re-connecting

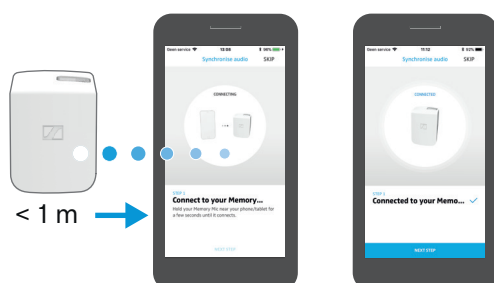

13 Activate




14 Download audio

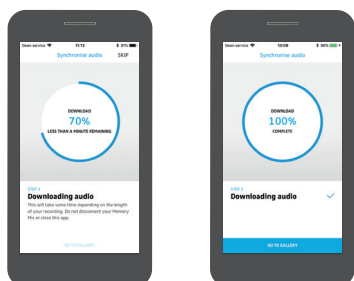


15 Choose video



16 Mix audio

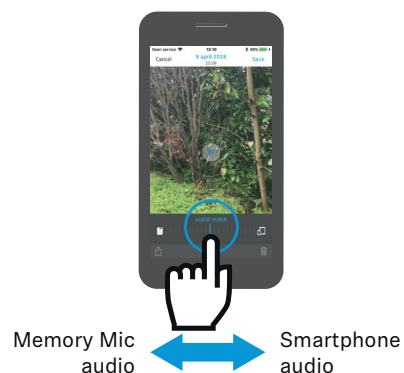

17 Save in App

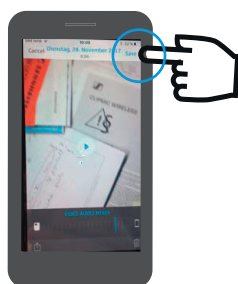

18 Save video in photos/gallery

