

QuickStart for USB Lucy Windows 98 (Macintosh QuickStart on other side)

Installing the Lucy Tablet



During installation, you may be prompted to install some Windows system files. Please have your Windows system disc available.

1. Turn your computer on. After Windows has started, insert the Lucy CD-ROM into your CD-ROM Drive.
2. Plug the Lucy USB connector into an active USB port (see **A**). The Lucy LED will light. If the LED did not light, your computer may not be USB Ready.
3. When the **ADD NEW HARDWARE WIZARD** appears, click **NEXT**.
4. Select the option **SEARCH FOR THE BEST DRIVER FOR YOUR DEVICE (RECOMMENDED)**, and click **NEXT**.
5. Check the **CD-ROM DRIVE** option and click **NEXT**. If the message **TABINS 16.DLL or TABINST.DLL CANNOT BE FOUND** appears, reenter the location for the CD-ROM drive (for example, D:\).
6. Follow the prompts to continue installing your tablet. When the installer prompts you for the **HIDCLASS.SYS** file, insert the Windows 98 CD-ROM into the CD-ROM drive and enter the location for the Windows CAB files (e.g., D:\WIN98). Click **NEXT**, and then **FINISH**.

Important : If prompted by Windows to restart your computer, do not restart now. Finish the next step before restarting.

7. You will be asked to insert the Lucy CD-ROM. Follow the prompts to complete installation of the Lucy driver. You should now be able to use your UltraPen on the tablet to move the screen cursor. If the cursor does not move, you should run the Lucy **SETUP** program from the Lucy CD-ROM.

A **WACOM TABLET** group was created in the **START** menu under **PROGRAMS** (see **B**). It contains the Lucy Control Panel, User's Manual, and a Readme file.

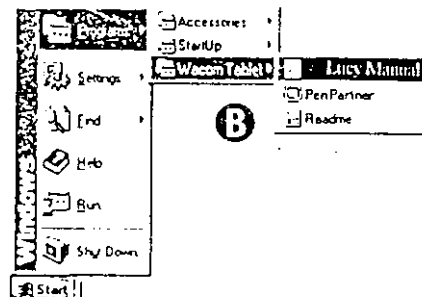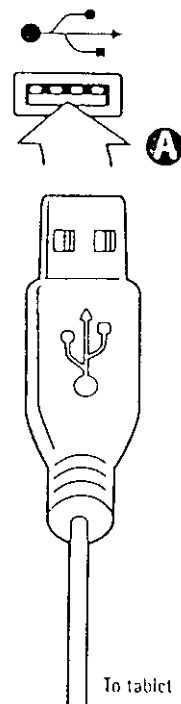

Bundled Software Installation

Installing PenTools

- On the Lucy CD-ROM open the **PENTTOOLS** folder and your language folder.0
- Double-click on the **PTMANUAL.WRI** icon to open the PenTools User's Manual. It contains information on installing PenTools.

Installing Painter Classic

- On the Lucy CD-ROM, open the **PAINTERC** folder.
- Double-click on the **SETUP.EXE** icon and follow the prompts.
- To run Painter Classic or view the Readme file, click on the Windows **START** button. Then select **PROGRAMS** and the **METACREATIONS** folder.

Installing PenOffice

- On the Lucy CD-ROM. Open the **PENOFFCE** folder.
- Double-click on the **SETUP.EXE** icon and follow the prompts.
- To run PenOffice or view the Readme file, click on the Windows **Start** button. Then select **PROGRAMS** and the **PARAGRAPH** folder.

Technical Support

If you have trouble installing the bundled software...

Refer to the appropriate **README** file or manual provided with that software for troubleshooting or technical support information.

If you have trouble installing Lucy....

See the **README** file located in your language folder on the CD-ROM. Or refer to Troubleshooting in the online User's Manual. You can also visit our Web site at <http://www.wacom.com/productsupport>

Technical Support can be reached during normal business hours (Pacific Time) at ++1-360-896-9833

QuickStart for USB Lucy Macintosh (Window QuickStart on other side)

Installing the Lucy Tablet



- Plug the Lucy USB connector into an active USB port on your computer or an active USB hub (see **A**).
- If your computer is off, turn it on now. The tablet LED will light to indicate Lucy has registered as a USB device.
Lucy is working in mouse emulation mode. You should now be able to use your UltraPen on the tablet to move the screen cursor.
Important : For pressure-sensitivity, you must install the tablet software from the Lucy CD-ROM. Disable any virus protection programs and close all open applications before installing the software.
- Insert the CD-ROM into your computer and double-click the **INSTALL LUCY** icon (see **B**).
Using your mouse, choose your language option, click OK, and follow the prompts.

After restarting your computer, you will be able to use the pen to move the screen cursor in pen mode.

If you have an iMac...

For the iMac, Lucy requires Mac OS 8.5, Mac OS ROM 1.2.1 or greater, and iMac Update 1.1. Click the Apple icon and select **ABOUT THIS COMPUTER...** to verify your operating system and firmware versions.

- If necessary, install Mac OS 8.5 and run the **iMAC FIRMWARE UPDATE** located on the Lucy CD-ROM in the **APPLE iMAC UPDATES** folder.
- Next, run the **iMAC UPDATE 1.1**. Then install the tablet driver software.

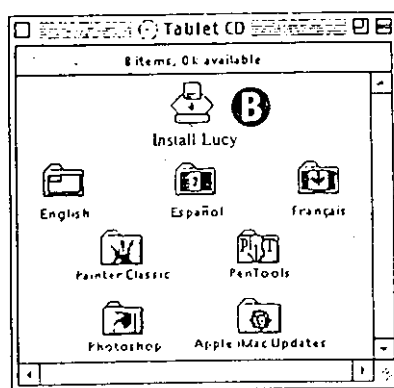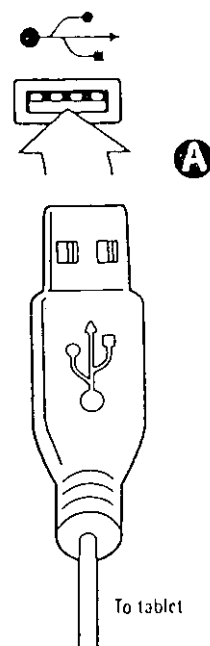

Bundled Software Installation

Installing PenTools

- On the Lucy CD-ROM, open the **PENTTOOLS** folder and your language folder.
- Double-click on the **PENTTOOLS MANUAL** icon to open the *PenTools User's Manual*. It contains information on installing PenTools.

Installing Painter Classic

- On the Lucy CD-ROM, open the **PAINTER CLASSIC** folder and double-click on the **PAINTER CLASSIC INSTALLER** icon.
- When the installer screen appears, click **CONTINUE** and follow the prompts. Be sure to view the **README** file when it appears.

Technical Support

If you have trouble installing the bundled software...

Refer to the appropriate **README** file or manual provided with that software for troubleshooting or technical support information.

If you have trouble installing Lucy....

See the **README** file located in your language folder on this CD-ROM, or refer to the online User's Manual. You can also visit our Web site at <http://www.wacom.com/productsupport>

Technical Support can be reached during normal business hours (Pacific Time) at ++1-360-896-9833

QuickStart for Serial Lucy Windows

Learning to use Lucy

To learn about Lucy before installing the hardware and software drivers, read the Lucy User's Manual. If you do not already have Adobe Reader 3.0 on your system, you will first need to install the Reader software. You can then use your computer to read the manual, or print a copy of it.

To install Adobe Acrobat Reader : Insert the Lucy CD ROM into your computer. Double-click on the CD ROM icon and open the READER folder. Open the 32bit FOLDER FOR Windows 95/98 or NT, or open the 16BIT folder for Windows 3.1. Double-click SETUP.EXE and follow the prompts.

To view the Lucy User's Manual : From the root directory of the Lucy CD ROM, double-click on the PENGUIDE.PDF icon. To copy the Lucy User's Manual to your hard drive, drag the PENGUIDE.PDF icon to your desktop or to a new folder.

System requirements


- ※Personal Computer with an available serial port
- ※Windows 3.1, Windows 95/98, or Windows NT 3.5 or later

Installing the Lucy Tablet

※Important : Always turn the computer off before you connect or disconnect the tablet. Failure to do so can cause a power surge and damage the computer.

1. Connect the power cable


- 1 Disconnect your mouse or keyboard.
- 2 Plug the PS/2 tablet connector into computer's PS/2 port.
- 3 Plug your mouse or keyboard (whichever one you removed) into the adapter.

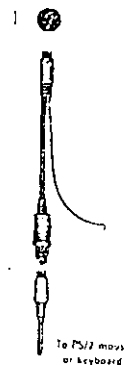

2. Connect the serial cable

Plug the 9-pin serial connector into your computer's serial port.

Note : If your computer has a 25-pin serial port, you will need to use a 9-to-25-pin adapter. This can be purchased from your computer dealer.

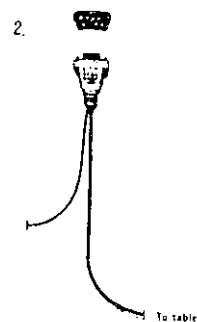

3. Install the Lucy software

- 1 Make sure the tablet is connected, then turn on your computer. The LED on your tablet should light to indicate the tablet is powered up.
- 2 After Windows has started, insert the WACOM Lucy CD ROM into your computer. For Windows 95/98, if you see the New Hardware Found dialog box, select **Driver from disk provided by hardware manufacturer** and press Enter. Type the CD ROM drive name, for example D:\, and press Enter. Follow the screen prompts.
- 3 If the Plug and Play dialog did not appear for Windows 95/98 or Windows NT 4.0, click on the Start button and then click Run *Or* for Windows NT 3.51, FROM THE Program Manager select File and Run...
- 4 In the dialog box, type D:\SETUP. If your CD ROM has a different drive letter, type that letter instead of D:. Click OK and follow the screen prompts.
- 5 When finished, close all open applications and restart your computer. After restarting Windows you will be able to use the pen to move the screen cursor.
If you have trouble installing Lucy, see the *Lucy User's Manual* for detailed information on installing your tablet.

4. Start using Lucy

If you are comfortable using a pen as a pointing device, you are ready to start working. If you are new to using a pen or you want to customize the tablet, refer to the *Lucy User's Manual*.

If you are an advanced user, you can customize Lucy using the WACOM Lucy control panel located in the Windows Control Panel folder.