

USER MANUAL

SC-4424AIO






Precautions before use

- Avoid obstruction of the air inlet and outlet.
- The power indicator on the bottom of the all-in-one will remain lit after the power is turned on.
- The system will start up when it is used for the first time. Do not force power off to avoid data loss or damage to the system.

Descriptions

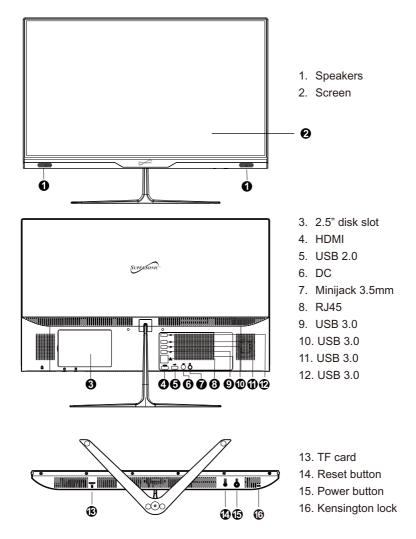


Equipment start-up

Warning: When connecting the keyboard and mouse to the all in one, make sure that the computer and other equipment are in the off state, do not switch them on.


Connect the keyboard and mouse


Connect the keyboard and mouse as shown in the picture to the specified keyboard and mouse interface of the all in one.

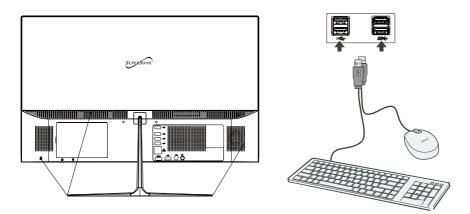

Connect the all in one to the power outlet

Plug the power cord into the equipment plug and the other end into a 100~240V AC outlet and press the power button.

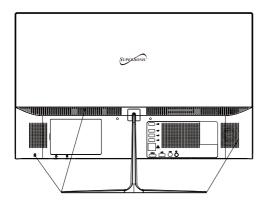



Precautions

Please follow the following safety precautions when using your device.

Do not use power cords, damaged plugs or loose plugs. Do not bend or damage the power cord. Do not touch the power cord with wet hands or pull the cord to disconnect the charger.

Do not use the device while it is charging or touch it with wet hands.

Do not hit or drop the charger and do not charge the battery with chargers that are not approved by the manufacturer.

Do not use your device during an electrical storm. Handle and discard batteries and chargers with care.

Do not handle damaged lithium ion batteries or that show leakage.

Do not use the device near a pacemaker. If possible, avoid using it at a distance inferior to 15 cm, because the device can interfere with the pacemaker.

Do not use the device in a hospital or near medical equipment that can be interfered by radio frequency.

If you use medical equipment always make sure they are protected against radio frequencies. If you use a hearing aid, let the manufacturer know to obtain further information about interference.

In potentially explosive environments, turn off the device.

Always respect the rules, instructions and warning signs

Do not use the device in or near other flammable chemicals refueling points (service stations) and / or explosives

Do not store or transport flammable liquids, gases or explosive materials in the same compartment as the device, its parts or accessories

If you want to charge the device, you must install an easily accessible power outlet.


The images in this manual are only for information purposes and may differ from the actual product.

For more information, visit http://www.supersonicinc.com/

III. Introduction to Desktop

1. Windows 11 Startup Menu: On the start screen, you can see many application programs you can select the programs you need to open.

You will need to log on to your Microsoft account for some application program to completely run.

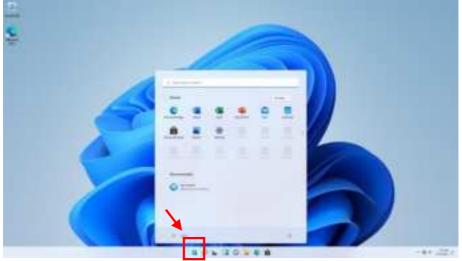

2. Introduction to app Interface

Besides the application programs already fixed on the start screen, you can also add and start other software application programs.



If you want to fix more application programs on the start interface, see the operation in the figure below, (1) Right click the properties icon (2) Select " pin to start".


100	144000
Ad apps	· But .
The Express	
Sec. 100	
Q	
0	
N Norm	
🖕 sas 🖄 🖄 annas	
o	
C	
Discourt from	
· ····································	
State and a second state of the second	
A	
A atte	0

Conversely, if you want to cancel or delete a certain application in the start screen, (1) Right click the properties icon (2) Select " Unpin from start".

	10 April 10 April 10					
4	Press.			1	1100	
	0 4					1
	Anna Anna	*	4		0	
	. 2	-		õ		- I HAR
	hormonist				2.0	to beinge
	0	-	0 :::	271		
	à				0	
		PL		â		

4. Search menu

Use the External Keyboard connected to your device and Type on the Search box for Apps, Settings, Documents, photos, Music, WEB, etc...

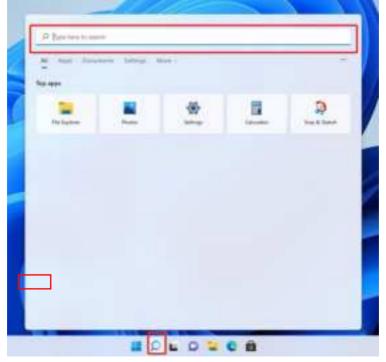


VI. Basic Operations

1. Sleep, restart and power off

	Get Bernel Soluzive to Windows	
		 Steep Shut down Restart
1	R a298	0
		8

2. Bluetooth connect



then click "Settings"; enter to the setting interface, then click

8 Bluetooth & devices

	- e - 1	÷
Analistics	Asso optimizing of	Anglane made
	- 5	±>
Angie Type:	Availy sets	Accessibility
÷		
۰		
		1.0
	-	Co marter o

to search other devices.

G		
	0	

R man	Bluetooth & devices	Aut - more	
eutiley e		Add a device	
C Restart & second	+	1 Research the spinorth area and desire, sensitive estimate	
Initial & Inprod / Inconsignation	1	Woman strategy in Anny Woman contains, TA, or PTy that was Moural, or window during	
# 141 2 1000	1 Section	+ Treatment and the Markov August 2006, and the Boose	
B Test Strapper	g here		
manifely Non-physically	Alimentationer		1
9 Minister (peter	- Andrew Contractor		-

luetooth & device	3 Add & Berris	-0
	Add a device	
+	Nake sure your device is barred on and discoverable. Select a device below to comed:	
addit device		
	Communications desice	
	ST Unknown division	
* Bustooth	PT B HLY-WARK	

3. WIFI Connect

Click the **to** open the Wi-Fi, and then choose the Wi-Fi you need to connect, enter the password.

	+ w.n
• •	S 10.50
Analasia Indonesiad Argune num	S attacks
* Er . Neprigir Nonyork Resulting	Connect automatically
	Coviet
a	9 05-m
10	And the second
	• 0 • 100 m 0

4. Display Brightness and Power management Display brightness:

There are two ways to change brightness.

A. Click icon on the taskbar and click the sun icon to switch the brightness.

	-		
	Autors -	-	Airplane mode
	*	4	# ?
			_
	a —		,
-		~	1 40 1.41 AM

B. Settings>System>Display>Brightness

* 100g		
8 ==	System + Display	
10	Regiment & other	
tert ma	· · · · · · · · · · · · · · · · · · ·	
• 1000	• 1000	- 40 -
 Server & Server Annual American 	# 22	
A has	Table & Aprel	
9 Indesuge	W -	Without a real of the
T Corres	In the second se	
 Progikansty Water state 	B this result	interest () (
	a manifest	12

Power management:


Settings>system>Power

- 101 y		
A diamana	System + Power	
And a series of	12 hourse	÷
. 1.000	West and apply in the second s	trainin -
Batterit & defael Tatterit & defael	When an agent is not represent to see a few	Wenning -
A menutation	 Rose room Internet particular in and provide states 	- Annual I Colo
& man	· terms	
3 Inchargesp	E Contraduct	
·		
W American		

5. Add an account Add a location account:

Settings>Accounts>Family&other users Click "Add account" at "Add other user" and fill in a new account following the guild.

1 204		
8 ==	Accounts + Family & other users	
Departing .	· · · · · · · · · · · · · · · · · · ·	the other is an interval and the second second
- 1em	And and a second	Spin-skiel Street Ameri
B transform		
· manufacture	the set	
a constant	historie on	Ball Ballet
R		
& tone.	Ser or y lines	
3 Instaine		
A long		
R Assession	A deba	
the second second		

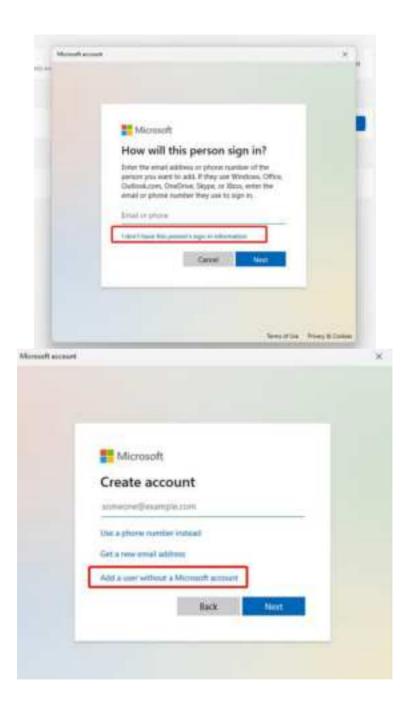

Create a user for this PC	
If this account is for a child of beenager, o Microsoft account. When younger family they'll have privacy protections focused o	members log in with a Microsoft account.
If you want to use a parsword, choose so but hard for others to guess.	mething that will be easy for you to remember
Who's going to use this PCI	
Unio name	
Make it secure.	
	1
Ether passeont	

Add a Microsoft account:

Settings>Accounts>your info

Click "sign in with a Microsoft account instead" and fill in a Microsoft account following the guild.

8 1	Accounts Vour info	
Annual States		1000.00
Interes	8	
· manufacture and	Adjust pro plant	
1 march 1	2 mm	Server.
a	2	
· family	front offer	
Transferry	initialized without and a second graphic provide the second sec	April 1 and a Discourt Amount Const.
	·	7
	 testep Exclusion 	

inneff second		
	and strategy	
	Microsoft	
	Sign in	
	Invationation of Second	
	The account County and	
	Tage in with a smarthy key (1)	
	bille as many a month set (1)	
	Next	
		-
	R. Sign to options	
_		-

Adjust the date and time 6. Date and time:

Settings>Time&Language>Date&time "Set time automatically" option is on by default. The time will be set automatically when Internet is connected via wifi.

You can change the time zone through "time zone" option.

R	Time & language Date & time	- 0 - 4
Interim A	Toront Sale and Tex	111.000 Foto: Novie 6, 200
Janes	Set free automotivally.	
· Antonio di Universiti	Anguar ha manipat yang tina ananananji	- 🚥
/ Avendations # Appr	Se beine	Although the three and the Garwane in the
3 Testamore	Service presadinterials	
· Lorey 2 Accessivy	for parallel decay soundly	
W Trees & multip	Additional settings	
· Wesseland	Spectram Indicates and the excellence of the second	lan see
	Down edilitional salesdate to the facilities	Bart must address is sender -

If you need to set the time by yourself, please turn off "Set time automatically" option and the "change" option will be active.

Date					
July	~ 10	- M	2018 ~		
lime					
10 ~	34 ~	PM			

Region:

Settings>Time&Language> Language&Region

8	Time & language > Language & region	+ 0)
 Frankrig # Spanne Remover & Second Remover & Second Remover & Second Remover & Second 	Company	
E Auro	tegen	United Tables -
 Kasaninity Process Sciences Workson Sciences 	Applied from Applied from Applied from Applied from Applied from Applied from Applied Applied	


7. Install the 2.5" disk

Before install the 2.5" disk, the device must power off. follow the steps as below to install the 2.5" disk.



a. The disk is facing up, with the R bracket at the bottom and the L Bracket at the top.

b. Fix the R bracket and L bracket to the lower part of the disk with four CM3 * 4 screws, note that the bend faces up when fixed.

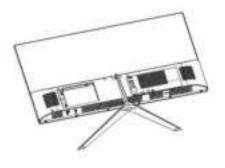




c. Insert the mounted disk into the interface.

d. Use two PA2.5 * 5 screws to secure the hard disk holder to the rear housing.

If the disk is used for the first time, you need to follow the steps as below. a. Right click the Start menu and select "Disk Management"



b. The window of Initialize Disk will appear automatically. Click OK and the disk will be initialized.

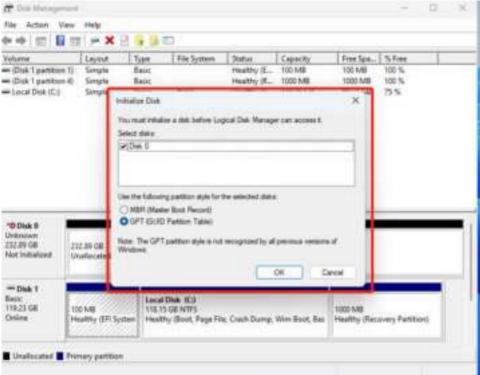

c. Right click on the new disk ,select "New Simple Volume" and follow the steps.

# Ook Malagement							-	0 X
He Action New	nep							
++) mi 🖬 m	# 111	CT						
Veture	Layout	fore	Fix System	Statul	Leputy	Pier Spin.	Stin	
- (Disk I partiture I) - (Disk I partiture 4)		- Dave Dave		Healthy (S., Healthy (S.,		100 A40 1000 A48	102.5	
H Local Dell (C)	Simple	- Pasis	14775	Playthy (B.,	118.15-68	粮,17,68	15.%	

Bass Mulich Ga Groine	232.87 GB Deatherated		New Surges Volume]
Filter 1 Resic 115.25 GB Ostine	100 Mill Haddby (271 Sydeen	Leval Disk (C) 110,13 (d) 4193 Hadity Sout, Page He, Cash Dung, W	Number of Street, the Observation, Number of Street,	
	1		Properties	
Ustime	Prenary partition		Help	

Action View Help	1 100	
the second s		In the Internet Internet
Serve Explore Volume Witten	223	Tree Spa. % Free 10074E 100%
I Have Double school of the	·	1000 MIE 100 %
	Completing the New Simple	総な師 四角
	Volume Wizard	
	Tischave accessfully completed the New Single Values	
	Ward	
	Tex selected the following settings	
	- Valurus type: Single Valures Data selected: Data 0	
	Villaria app. 233456 MB. Drive letter or path: O	
	File system: MTFS	
	Relixation unit star: Default Volume table: New Yolume	
	(Det fand, Te	
	To dose two woard, dick Festiti,	
	- Beck Frieft Cancel	
1. Disatto III	Noten Heathy Scott, Fage File, Crash During, West Boot, Bas	1000 MB
The Character and	shares i sarent with safe care pract more used on	Heathy (Recovery Patition)
The Management		- 0
e Action View Help		- 0
in Action View Help		- a
ie Action Vew Help ⇔) (() () () () () () () () () () () () (Type FileSystem Tatus Capacity	Free Spa., % Free
ie Action Vew Help ⇔) ((()) (()) (()) (()) (()) (()) (())	Rype Hile System Status Capacity	Free Spa., 15 Free
in Action View Help + 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Rype Hile System Status Capacity	Free Spa., % Free
Action View Help + I III III III III III Action Action View Help Action Action View Help Action Action View Help Action View Help	Rype Hile System Status Capacity	Free Spa., 1% Free 100 MB 100 % 1000 MB 100 %
In Action View Help ====================================	Type HitcSystem Status Capacity a X	Free Spa., 1% Free 100 MB 100 % 1000 MB 100 %
in Action View Help + 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Type HitcSystem Status Capacity a X	Free Spa., 1% Free 100 MB 100 % 1000 MB 100 %
in Action Vew Help I Control Control Pro- Control Control Pro- New Simple Volume Waters Formal Partition To done data on the pro- Channe shafter you we	Type FileSystem Datas Capacity a X attan, psurout format tited. art to format the volume, and if as, what settings you want to use	Free Spa., 1% Free 100 MB 100 % 1000 MB 100 %
Action Vew Help Action Vew Help Action Completion Freedom Volume Water Freedom Partition To done date on the pr Opcom shafter you w Opcom shafter you w	Type FileSystem Status Capacity a X artium, you must formal it feel art to format these shaft act what settings you want to use is makings	Free Spa., 1% Free 100 MB 100 % 1000 MB 100 %
Action: View Help Action: View Help Action: Diama Partition To more data on this p Oncore shafter you w	Type His System Hatue Capacity a X attur, you much handit that. X attur, you much handit that. X attur, you much handit that. X atture, you much handit that. X	Free Spa., 1% Free 100 MB 100 % 1000 MB 100 %
in Action View Help Action View Help Contain	Type FileSystem Status Capacity a X artium, you must formal it feel art to format these shaft act what settings you want to use is makings	Free Spa., 1% Free 100 MB 100 % 1000 MB 100 %
Action: View Help Action: View Help Action: I larger Larger Anim Single Volume Water Famual Partition To more date on the p Oncore shafter you w	Name Hite System Nature Capacity d X attain, promout format tited. X attain, promout format tited. X attain promout format tited. X	Free Spa., 1% Free 100 MB 100 % 1000 MB 100 %
in Action View Help 	Type His-System Data Capacity d X attan, poursuit here it helt. X attan, poursuit here it here. X attan, poursuit here. X <	Free Spa., 1% Free 100 MB 100 % 1000 MB 100 %
in Action View Help 	Type File System Nature Capacity d X X X artitum, you must format it test. X X artitum, you must format itestest. X X	Free Spa., 1% Free 100 MB 100 % 1000 MB 100 %
Action: View Help	Type File System Nature Capacity d X X X artitum, you must format it test. X X artitum, you must format itestest. X X	Free Spa., 1% Free 100 MB 100 % 1000 MB 100 %
in Action View Help Action View Help Correct New Simple Volume Water Formal Partition Denne shafter yours Choose shafter yours	Type File System Statue Capacity d X X artitum, you must format it that. X	Free Spa., 1% Free 100 MB 100 % 1000 MB 100 %
in Action View Help Action View Help Correct New Simple Volume Water Formal Partition Denne shafter yours Choose shafter yours	Type File System Statue Capacity d X X artitum, you must format it that. X	Free Spa., 1% Free 100 MB 100 % 1000 MB 100 %
in Action View Help In Action View Help Content New Simple Volume Water Formal Partition Droses shafter your Oroses shafter your Oroses shafter your Oroses shafter your Oroses shafter your New Simple Volume Help Oroses shafter your New Simple Volume Help Oroses shafter your New Simple Volume Help Oroses shafter your New Simple Volume Help Simple Volume Help District Help	Type File System Statue Capacity d X X artitum, you must format it that. X	Free Spa., 1% Free 100 MB 100 % 1000 MB 100 %
in Action View Help 	Type File System Nature Capacity atter particular benuit then. X atter particular benuit particular benuit benuit X atter particular benuit X	Free Spa % Free 100 448 100 % 1000 448 100 % 85.72 GB 75 % 1000 448 100 %
Action: View Help	Type His-System Nature Capacity atter yearboard X	Free Spa. % Free 100.448 100 % 1000.448 100 % 1000.448 100 % 86.72.08 75 %

🕂 Disk Managemank							C1	ж.
File Action View Help								
** 10 10 10 10	A m							
Voluene Lapoo	Welcor Volume Tra start Arepir of	File System ne to the No Wizard Mice yes small at the set only be an the file Not.	ew Simple	Capacity X	Free Spn 100 MB 1000 MB 86.72 GB	15 Free 100 15 100 15 73 15	Ľ	
Ba Ba Till Colore Haudity (7)	To System ([Piece	- Section of Page 1	New P	Canual Wire Biost, Bas	1000 MB Healthy Rec	overy Partition		
Unaffocated Primary part Took Management Efer Action View Edge	men					1		×
** = = = =	<u>a</u> m							
Volume Layout = (Dok 1 partition 1) Simple = (Dok 1 partition 2) Simple = Local Dok (C) Simple = New Volume (D) Simple	Basic Basic Basic	File System	Statut Healthy (E., Healthy (E., Healthy (E., Healthy (E.,	118,15-68	Free Spa 100 MB 1000 MB 88.72 GB 232.77 GB	105 % 105 % 100 % 75 % 100 %		



8. Connecting another monitor as 2nd Screen.


Connect another monitor to the device through the HDMI interface.

Open settings-system-Display and select "Extend these displays" and then the other monitor will show as 2nd Screen.

Annual Street	System Display	
Same Same	112	Interfy Education free during
9 Too k longsage 10 Coning 11 Association	a Management of the later	Dated Specification
P Print Branch	Reference & sales	
D Window Salaha	D Representation of the same o	
	W. Napellage: Internet case in the classification of the	* C)
	8 11 and 10	
	Lab Ligner	
	Di New Constantino das estados has	10% (Augureated -)

9. Connecting Speakers

a. If the speaker has a 3.5 mm plug, insert it to the headphone hole.

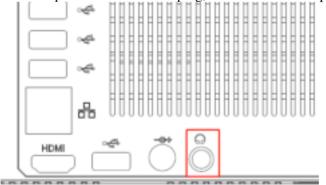

b. If the speaker has Bluetooth, connect it to the device through Bluetooth following the steps as above "Bluetooth connect".

10. Reset the PC

Settings>system>Recovery

Click "Reset PC" and select one option you want. Then follow the guilding steps to reset this PC.

8 ==	System / Recovery	
frequency in the		
-	P Transaction of the Contraction of T	18
States & States		
· manufacture instant	Second Second	-
2 million	A man to be a service provide the service and	Mapping Th
# m.		
A Anne	14 Manual Male	Antoriore
A features	Cardina Contractory (Contractory Contractory Contracto	
•	P Inches	
I have	· · · · · · · · · · · · · · · · · · ·	

Reset this PC

Choose an option Keep my files

Removes apps and settings, but keeps your personal files.

Remove everything

Removes all of your personal files, apps, and settings.

Help me choose

11. Troubleshoot

You can find almost troubleshoot tips in Settings>system>Troubleshoot

1. Sec.		
8 ==	System	
	E man and a second second second	
The same	· · · · · · · · · · · · · · · · · · ·	10
Autorite Control Autorite Control	O Mathatine mentionentepter	1
1	D	1
· ·	C)	ě.
· interest	a hope	Ť
E designing of designing	E Marty Antiq Increasing Sectors	
• •	Ø Martin Andrews	ě.
	9	10
	A 100000	÷
	A Text Description	t.
	al mentalentel	÷.

V. Specifications

Item	SC-4424AIO
Display	1920x1080 VA
OS	Windows 11
Input method	USB or bluetooth Keyboard and mouse
DDR RAM	4GB
Capacity	128GB
External	TF-CARD, up to 128GB
Capacity	
Audio	AAC,FLAC,MP3,OGG,WAV,etc(some need
	third party software support)
Video	3GP,MOV,MP4,MPG,AVI,etc(some need third
	party software support)
E-book	Support
Wireless network	Support WIFI
Language	English (other languages need to be downloaded
	from Internet)
OTG	Support
Temperature	-20°C to 60°C

Warranty

Basic Warranty Statement

Supersonic Inc. ("Supersonic") warrants this product to the original purchaser ONLY, to be free from defects in materials and workmanship under normal use, for ninety (90) DAYS from the date of original purchase. Proof of purchase (receipt) required.

Please visit <u>http://www.supersonicinc.com/warranty</u> for additional information.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION

Changes or Modifications not expressly approved by the party responsible could void the user's authority to operate this device.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.