

## FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference, and
  - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## RF warning statement:

The device has been evaluated to meet general RF exposure requirement.  
The device can be used in portable exposure condition without restriction.



## BIGEYES A1

## Wireless Head-mounted Personal Cinema

## Quick Guide

Have question?  
Please check our website or facebook



Website: [www.visionhmd.com](http://www.visionhmd.com)



[www.facebook.com/visionhmd/](https://www.facebook.com/visionhmd/)

VISION ELECTRONICS CO., LTD.

TEL: +886-3-422-4131

Address: 11F-6, No. 400 Huanbei Rd., Jhongli Dist.,  
Taoyuan City 320, Taiwan, R.O.C.

# BIGEYES A1 Wireless Head-mounted Personal Cinema

BIGEYES A1 is a wireless head-mounted personal cinema; each eye equipped a single HD 720p LCD, give you the 120 inches virtual screen viewed at 4 meters. Not require a computer, or a cellphone, just connected to Wi-Fi, then you can start enjoy HD streaming video.

## Safety Guide

1. DO NOT allow children under the age of thirteen to use the product.
2. Over use may negatively impact your eye vision, resting for 10 minutes after every 30 minutes of using is advised.
3. To prevent hearing loss, DO NOT use the earphones at the highest volume for prolonged periods of time.
4. Stop using if you experience any discomfort or fatigue.
5. Please contact us if the product malfunctions, DO NOT attempt to disassemble this product or its accessories.
6. Keep the product away from excessive moisture and extreme temperatures. DO NOT leave the product in places such as on a car dashboard, window sill, or behind a glass that is exposed to direct sunlight or strong ultraviolet light for extended periods of time. It may cause damage to the product.
7. Keep the product lenses away from sharp objects, including cable tips. This will prevent the lenses from being scratched.
8. Please use provided power adapter and cable to charge the product.

## Specification

Operating voltage	DC 5V
Storage temperature	-10°C ~ 60°C
Operating temperature	0°C ~ 40°C


## Each part that

Micro USB	Two functions: 1. Connect to power adapter for charging, 2. Connect to computer to transmit video/ music files
Power	Turn on: press and hold for 3 seconds Turn off: press and hold for 4 seconds
Back	Short press to back to previous page, press and hold 3 seconds to back to home menu
RESET	Force the A1 to reboot
3D switch	Switch to 3D playback mode, press again to back to normalmode
Left	Move to left item
Up	Move to up item
Right	Move to right item
Down	Move to down item
OK	Enter or execute your selection
USB	Connect to a keyboard or a mouse, or a USB thumb drive
Micro SD (TF)	To put in micro SD memory card
Pupil adjustment	Close your left eye, make the screen in the middle for your right eye; then close your right eye, make the screen in the middle for your left eye, so you can get the clear screen.

## How to Wear


You can wear your eyeglasses with BIGEYES A1.

Put the A1 in front of your eyes, wear on the headband, make the headband just fit on your head, then you can start use the A1.

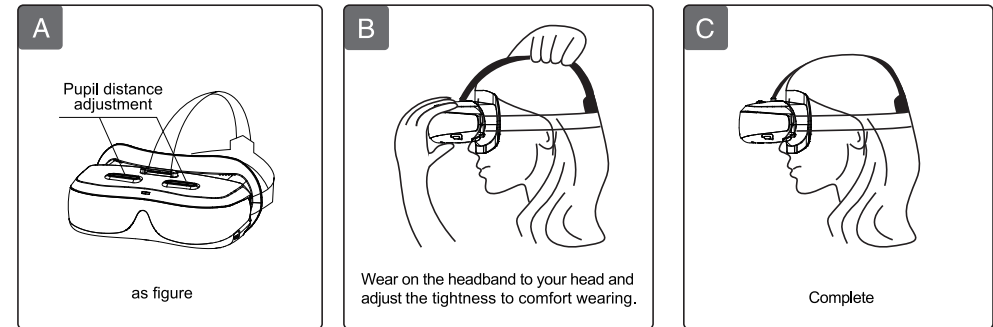


## Using

1. Charging: For the very first time of using, please use provided power adapter and cable to charge the BIGEYES A1.
2. Turn on: press and hold **power** button for 3 seconds; turn off: press and hold on the **power** button for 4 seconds.
3. Connect to Wi-Fi: find SETUP in the home menu -> press **OK** -> the screen goes into SETUP page -> press **up/down** button to high light Wi-Fi -> press **OK** -> turn on the Wi-Fi -> choose the network you want -> enter a password to connect.
4. Press **Back** to back to home menu, then you can start to enjoy BIGEYES A1.

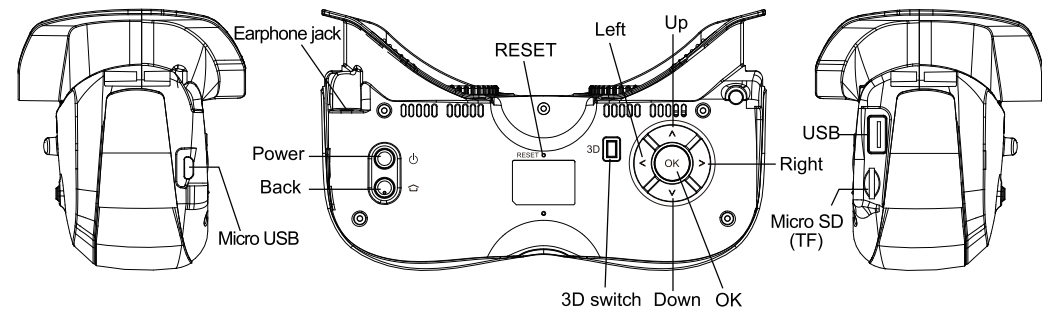

Support myopic up to 500 degrees,  
**NOT** support astigmatic eyesight  
Circle the ring counterclockwise for  
your right eye and left eye respectively.  
If you cannot find clear image, you can  
still wear your eyeglasses to use the  
BIGEYES A1.

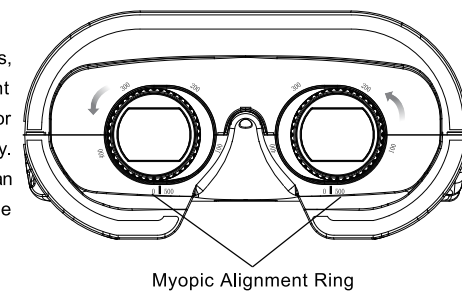

Myopic Alignment Ring