


TAOTRONICS LED DESK LAMP

User Guide

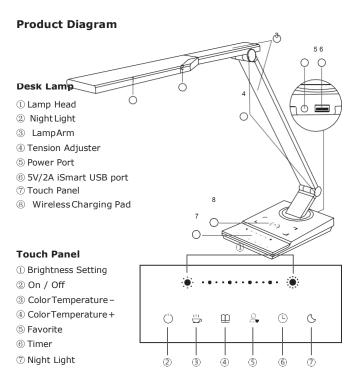

Package Contents

- 1 x TaoTronics LED Desk Lamp (Model: TT-DL050)
- 1 x Power Adapter
- 1 x Cleaning Cloth
- 1 x User Guide

Specifications

Model	TT-DL050
Input	12V / 3A
USB Output	DC 5V / 2A
LED Power	12W Max
Wireless Charging	7.5W for iphone Max / 10W for
Output	Samsung Max
Color Temperature	2700-3000K, 3000-3500K, 4000-4500K,
	5000-5500K,6000-6500K
CRI	>80

How to Use

1. On / Off

The On / Off LED indicator will light up when the lamp is connected with power. Tap the button to turn on the lamp and the touch panel. Tap again to turn off. The TT-DL050 Desk Lamp includes a brightness and color temperature memory function; it will directly activate the previous settings each time it's turned on.

2. Brightness Adjustment

To adjust the brightness, tap or slide across the Brightness Setting icons from the left (least bright) to the right (most bright).

3. Color Temperature Adjustment

Press the or button to go through the 5 levels of color temperature. The indicator will flash 3 times when it reaches the highest or the lowest setting.

4. Timer Function

When the lamp is on, tap the button and the indicator will slowly flashes 3 times to start timing. The lamp will automatically turn off in 60 minutes. Tap again in timer mode to cancel the timer setting. The LED indicator will flash once.

5. Favorite Function

When the lamp is on, tap and hold the button for 2 seconds. The indicator will flash 3 times and the current color temperature and brightness will be set as your favorite. Each time the lamp is turned on, tap on the button once to activate your favorite setting. Tap and hold again for 2 seconds to erase and set a new favorite.

6. Night Light Function

When the lamp is on, tap the button until the indicator slowly flashes 3 times to light up the night light. Tap either the button or the button to turn off the night light. In Night Light mode, tap the button to set or cancel the 60 minute timer.


Note: The night light and main lamp will not light up at the same time.

7. Wireless Charing

Place your phone with wireless charging functionality onto the charging pad, charging will startautomatically.

Note:

If charging does not occur, adjust the phone so its receiver can be detected. Please note that different model phones have their receivers in different positions.

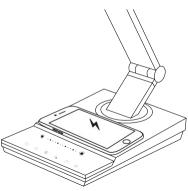

TT-DL050

TaoTronics www.taotronics.com

NORTH AMERICA

E-mail: support@taotronics.com(US) support.ca@taotronics.com(CA)

Tel: 1-888-456-8468 (Monday-Friday: 9:00 - 17:00 PST) Address: 46724 Lakeview Blvd, Fremont, CA 94538

EUROPE

E-mail:

support.uk@taotronics.com(UK)

support.de@taotronics.com(DE) support.fr@taotronics.com(FR)

support.es@taotronics.com(ES)

support.it@taotronics.com(IT)

EU Importer: ZBT International Trading GmbH, Halstenbeker Weg 98C,

25462 Rellingen, Deutschland

ASIA PACIFIC

E-mail: support.ip@taotronics.com(JP) JP Importer: 株式会社SUNVALLEY JAPAN Tel: 03-5542-0238(10~18時/土日祝除く)

東京都中央区八丁堀3丁目18-6 PMO京橋東9F

MANUFACTURER

Shenzhen NearbyExpress Technology Development Co., Ltd. Address: 333 Bulong Road, Shenzhen, China, 518129



Structural Parts





The lamp head is 90 degrees rotatable to the left / right.

The lower lamp arm is 90 degrees rotatable to the left / right on the base.

The lower lamp arm is 90 degrees forward and 54 degrees backward rotatable.

The upper lamp arm is 90 degrees forward rotatable.

Caution

- Use only the supplied AC power adapter.
- Please do not dismantle the product by yourself, always ask professional electricians or authorized technicians for repair.
- If you smell bad odor or anything unusual, please turn off the unit immediately.
- Please do not remove the power plug with wet hands as it may cause electrical shock.
- · Keep away from children.
- Do not put this unit near extreme heat sources, moisture, or corrosive substances.
- Regularly clean thelamp.
- Please store in a dry and cool place if not using for a long period of time.

Troubleshooting Guide

The lamp is not turned on Refer to the How to Use section Hands are wet Touch the panel with dry hands Voltage fluctuation causing panel failure Disconnect power to restart the lamp ED failure LED component failed Please contact the TaoTronics Support Team Power adapter failed Please contact the	Problem	Possible Cause	Solution
The lamp is not turned on Refer to the How to Use section Hands are wet Touch the panel with dry hands Voltage fluctuation causing panel failure Disconnect power to restart the lamp ED failure LED component failed Please contact the TaoTronics Support Team Power adapter failed Please contact the	he lamp does ot light up	No power supply	, , ,
he touch anel is not esponsive Voltage fluctuation causing panel failure Disconnect power to restart the lamp LED component failed Power adapter failed Please contact the TaoTronics Support Team Please contact the		The lamp is not turned on	
Voltage fluctuation causing panel failure ED failure LED component failed Power adapter failed Disconnect power to restart the lamp Please contact the TaoTronics Support Team Please contact the	the touch eanel is not esponsive	Hands are wet	· ·
ED failure LED component failed TaoTronics Support Team Power adapter failed Please contact the			· ·
Power adapter failed	ED failure	LED component failed	
	Bad smell —	Power adapter failed	Please contact the TaoTronics Support Team
Short circuit Please contact the TaoTronics Support Team		Short circuit	

Warrantv

TaoTronics products are covered by a 12 month limited warranty from the date of its original purchase. If any problems occur, please contact our support team.

We can only provide after sales service for products that are sold by TaoTronicsorTaoTronics authorized retailers and distributors. If you have purchased your unit from a different place, please contact your seller for return and warrantvissues.

FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This

equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the

equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that

to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.