Go to www.vtechphones.com to register your product for enhanced warranty support and latest VTech product news.

vtech

Quick start guide

VC2105

5" Smart Nursery Over-the-Crib Mount Monitor



For more support information



Congratulations

on purchasing your new VTech product. Before using this baby monitor, please read the Important safety instructions For support, shopping, and everything new at VTech, visit our website at www.vtechphones.com. In Canada, visit www.vtechcanada.com.

hat does HD Video Monitor do?

© 2023 VTech Communications, Inc. M © 2023 VTech Communications, Inc.

are subject to change without notice.

ŻŻ

VTech 5" Smart Nursery Over-the-Crib Mount Monitor allows you to stay close to you baby when you are on the move or away. This monitor is Wi-Fi enabled, using your home wireless network to stream live video and audio through the 1080p baby unit and 5-inch color screen parent unit. It allows you to maintain a constant connection to your baby.

You can also monitor from your smartphone or mobile tablet.

VTech 5" Smart Wi-Fi 1080p Video Monitor uses MyVTech Baby Plus app to let you instantly see and hear what's happening with your baby from anywhere in the world. The app can be downloaded from the App Store or the Google Play™ Store.

IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license

App Store is a trademark of Apple Inc., registered in the U.S. and other countries.

Android TM and Google Play TM are trademarks of Google Inc.

Phone: 1 (800) 595-9511 in the U.S. or 1 (800) 267-737 in Canada

Company: VTech Communications, Inc.

bddress: 9020 SW Washington Square Road - 5te 555 Tigard, ОR 97223, United States

(IPS 1280x720 pixels)

Parent unit: 2412 - 2462 MHz

ZHM 2042 - 2142 :tinu yde8

5" Color LCD

TECHNICAL SPECIFICATIONS

from the use of this user's manual. VTech Communications, Inc. and its suppliers assume no responsibility

Parent unit battery: 3.7V 5000mAh, 18.5Mh Lithium-ion battery

vary according to environmental conditions at the time of use.

Maximum power allowed by FCC and IC. Actual operating range may

Parent unit power adapter: Output: 5V DC, 2A Baby unit power adapter: Output: 5V DC, 1.5A

VTech Communications, Inc. and its suppliers assume no responsibility for any damage or loss resulting

ΔΙΣΟΓΑΙΜΕΚ ΑΝD ΓΙΜΙΤΑΤΙΟΝ ΟΓ ΓΙΑΒΙΓΙΤΥ

for any loss or claims by third parties that may arise through the use of this product.

CONFORMS TO CONFORMS TO CERTIFIED TO CSA STD. CSA STD. CONFORMS TO

3177099 Intertek

su (1) o

Power requirement

Iransmit trequency

LCD

Slannels

Nominal ettective range

IMPORTANT SAFETY INSTRUCTIONS

The applied nameplate is located at the bottom of the baby unit's base. When using your equipment, basic safety precautions should When using your equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and njury, including the following:

- Follow all warnings and instructions marked on the product.
- Adult setup is required **CAUTION:** Do not install the baby unit at a height above 6.5
- eet (2 meters). 4. This product is intended as an aid. It is not a substitute for responsible and proper adult supervision and should not be
- used as such. . This product is not intended for use as a medical monitor
- 6. Do not use this product near water, for example, near to a bath, sink, swimming pool or shower. 7. CAUTION: Use only the battery provided. There may be a risk
- of explosion if a wrong type of battery is used for the parent unit. The battery cannot be subjected to high or low extreme temperature and low air pressure at high altitude during use, storage or transportation. Disposal of battery in fire or a hot oven, mechanically crushing or cutting the battery can result in an explosion. Leaving the battery in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid of gas. Battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas. Dispose of used battery according to the information in **The RBRC seal**.
- . Use only the power adapters included with this product. Incorrect power adapter polarity or voltage can seriously damage the product

Power adapter information: Baby Unit Output: 5V DC 1.5A VTech Telecommunications Ltd Model: VT07EUS05150 Parent Unit Output: 5V DC 2A

VTech Telecommunications Ltd Model: VT07EUS05200


Rechargeable battery information 3.7V 5000mAh, 18.5Wh Lithium-ion battery

- to hold the plug in place if it is plugged into a ceiling, under the-table or cabinet outlet.
- accessible.
- Do not use liquid or aerosol cleaners. Use a damp cloth for
- Do not modify the power adapters or replace with other adapters, as this causes a hazardous situation.
- Do not allow anything to rest on the power cords. Do not install this product where the cords may be walked on or
- 14. This product should be operated only from the type of power electricity supply provider.
- 15. Do not overload wall outlets or use an extension cord.
- other unstable surfaces.
- or rug. This product should never be placed near or over a radiator or heat source.
- because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.

MOUNT THE BABY UNIT

Cautions:

Install the wall mount



- measurement • Wall mount should install on the long side of the bed.

Insert the First extension (A) onto the Second

extension (B), aligning the slot in between. Make



2. Insert the Second extension (B) onto the Mounting cover (D).

Disassembling or removing parts of the product other than ia the battery door may expose you to dangerous vo

when the product is subsequently used.

he units or move one of the components

intending to use it for some time.

with the product.

bright sunshine or fire.

telephone

Pacemaker patients

Electromagnetic fields (EMF)

pacemaker

21. Periodically examine all components for damage.

22. There is a very low risk of privacy loss when using certain

electronic devices, such as baby monitors, cordless

or other risks. Incorrect reassembling can cause electric shock

(ou should test the sound reception every time you turn on

nones, etc. To protect your privacy, make sure the

ildren should be supervised to ensure that they do not play

product has never been used before purchase, reset the bab

monitor periodically by powering off and then powering on the units, and power off the baby monitor if you are not

24. The small parts of this monitor can be swallowed by babies or

been given supervision or instruction concerning use of the

SAVE THESE INSTRUCTIONS

Use and store the product at a temperature between 32°F $(0^\circ C)$ and 104°F (40°C).

Batteries should not be exposed to excessive heat such as

Do not expose the product to extreme cold, heat or direct

sunlight. Do not put the product close to a heating source.

Mishandling batteries can cause burn, fire or explosion

Warning–Strangulation Hazard–Children

have STRANGLED in cords. Keep this cord out of the reach of children (more than 3 ft (0.9m) away).

Do not remove warning label on the adapter cord.

nything such as a towel or a blanket.

Never place the camera unit(s) inside the baby's crib or

playpen. Never cover the camera unit(s) or parent unit with

Other electronic products may cause interference with you

camera unit. Try installing your camera unit as far away from

these electronic devices as possible: wireless routers, radios,

cellular telephones, intercoms, room monitors, televisions

personal computers, kitchen appliances and cordless

Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers (applies only to digital cordless device

Wireless Technology Research, LLC (WTR), an independent

interference between portable wireless devices and implanted

cardiac pacemakers. Supported by the U.S. Food and Drug

Should keep wireless devices at least six inches from the

pacemaker, such as in a breast pocket, when it is turned ON

electromagnetic fields (EMF). If handled properly and according

Should NOT place wireless devices directly over the

WTR's evaluation did not identify any risk to bystanders with

pacemakers from other persons using wireless devices.

This VTech product complies with all standards regarding

used based on scientific evidence available today.


research entity, led a multidisciplinary evaluation of the

Administration, WTR recommends to physicians that:


small children. Keep these parts out of reach of children


25. The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have


pliance by a person responsible for their safety

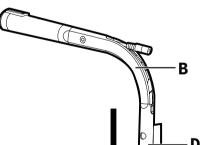





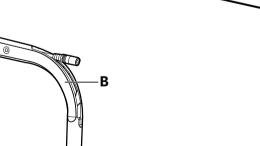


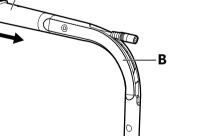


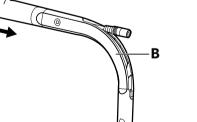













3. Let the cable jack of the Extension cable pass through from the back of

the Mounting cover (D), to the opening of the Second extension (B).







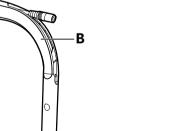
















drill bit).








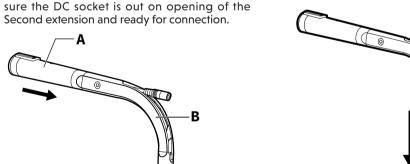
















- 10. For pluggable equipment, the socket-outlet (power adapter) should be installed near the equipment and should be easily 1. Unplug this product from the wall outlet before cleanin


- source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your dealer or
- 16. Do not place this product on an unstable table, shelf, stand or
- This product should not be placed in any area where proper ventilation is not provided. Slots and openings in the back or bottom of this product are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa to the instructions in this user's manual, the product is safe to be
- 18. Never push objects of any kind into this product through the slots



WHAT'S IN THE BOX

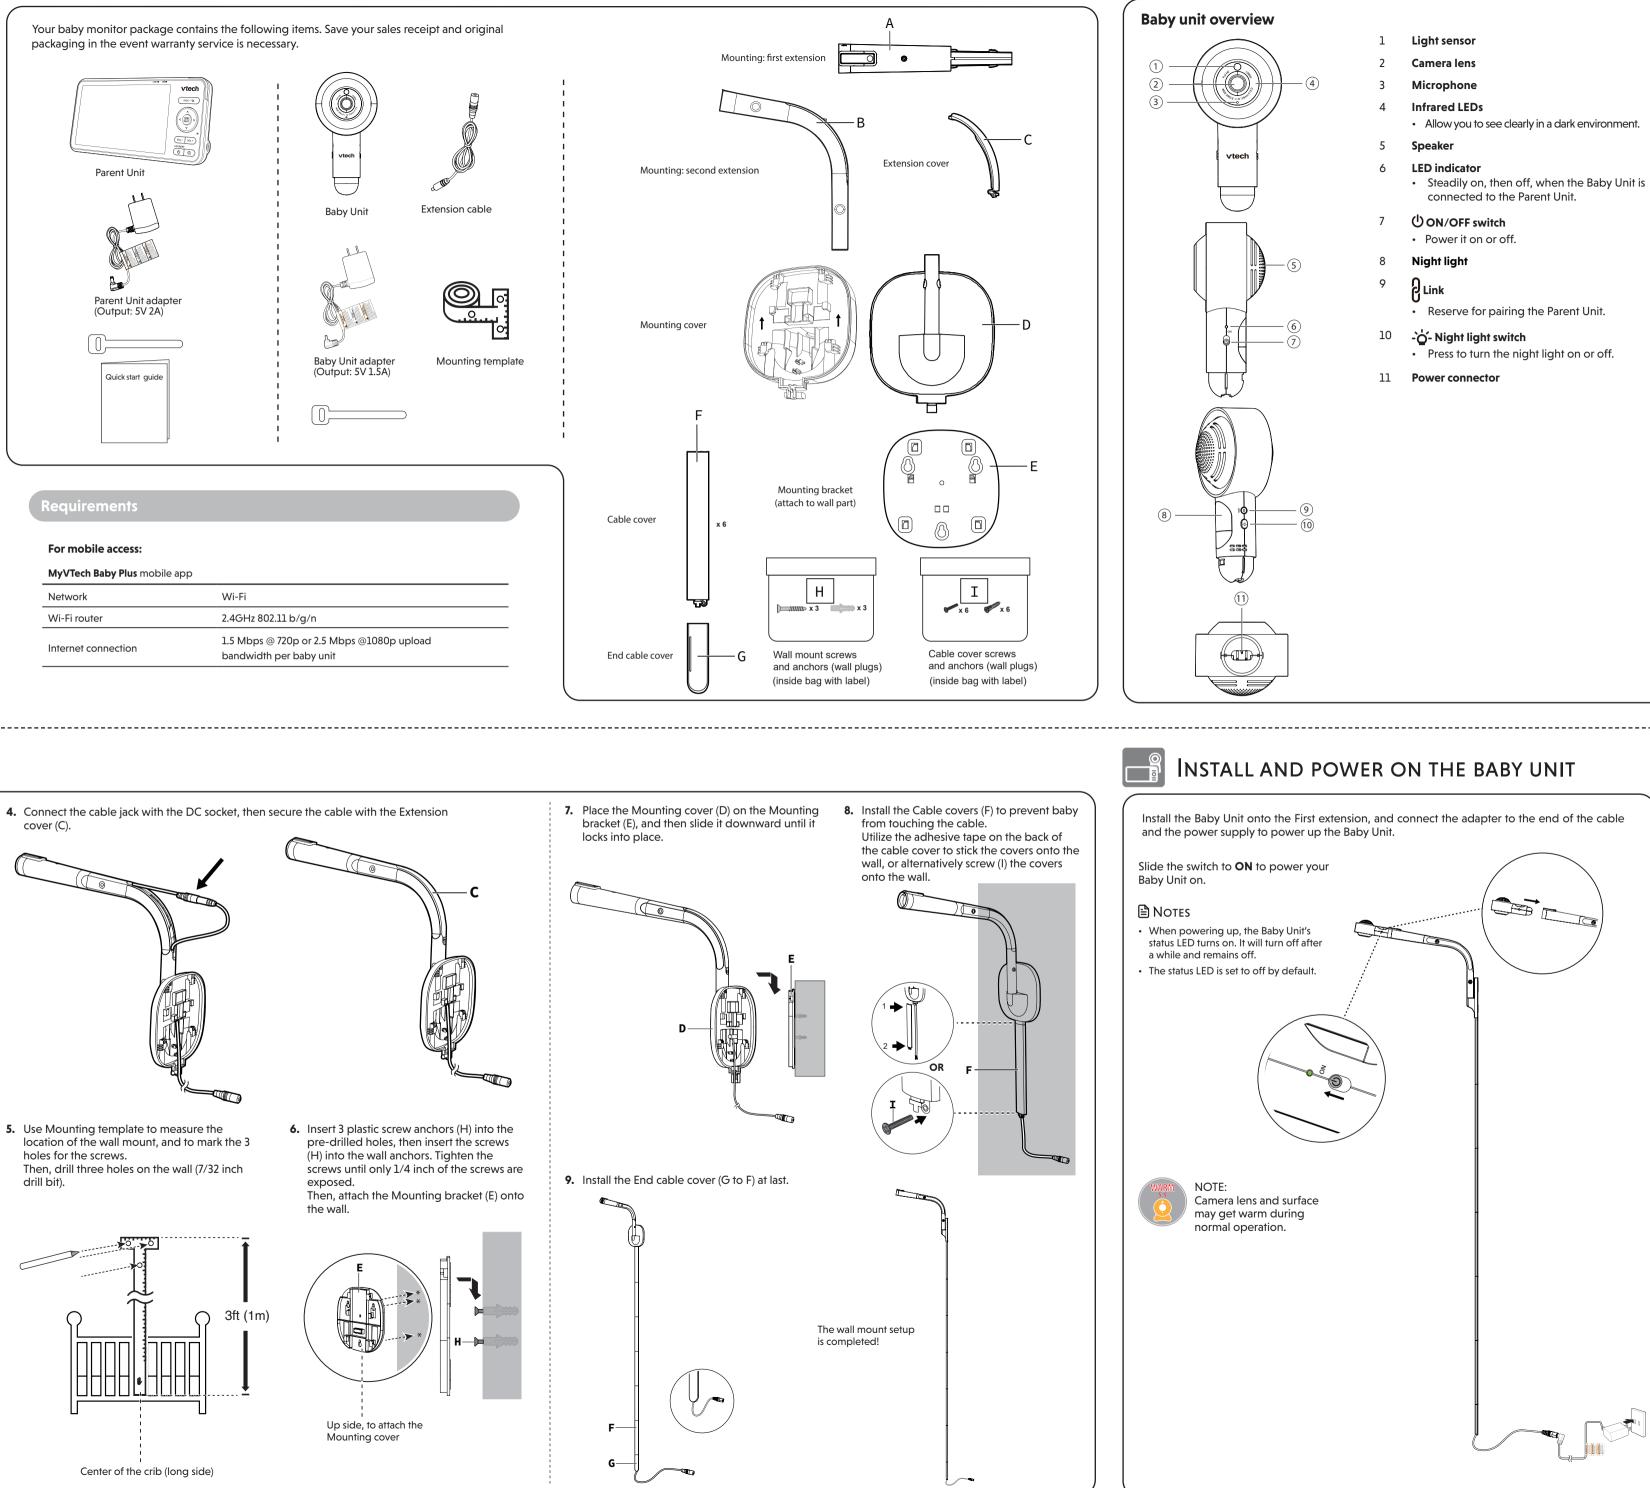

Parent unit overview

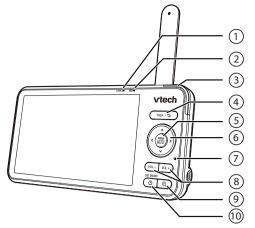

LINK LED light


- On when the parent unit is linked to the baby unit.
- Flashes when the link to the baby unit has lost

💷 LED light

- On when the parent unit is connected to AC power, and the battery is charging
- Flashes when the parent unit battery is low and needs to be charged.

3 3- level sound indicator light

- Green: low sound level is detected by the baby unit.
- Green and amber: moderate sound level is detected by the baby unit.
- Green, amber and red: high sound level
- is detected by the baby unit.
- 4 TALK / 🕁
- <u>Press and hold</u> to talk to the baby unit.
- While in a sub-menu, press to return to the previous menu.
- MENU | SELECT
- Press to enter the main menu.
- While in a menu, press to choose an
- item, or save a setting.

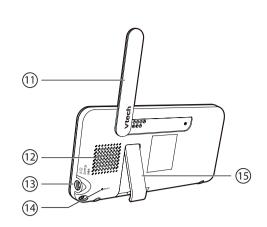

$6 \quad \mathbf{Arrow keys}$

- Press to navigate left, right, up and down within the main and sub-menus. While viewing a zoomed image, press
- to move the viewed image left, right, up and down.

Microphone

volume.

VOL - | VOL + 8 Increase or decrease parent unit

9 🕀 Zoom

• Press to zoom in/out. • While in a sub-menu, press to view the help menu.

10 U Power | LCD ON/OFF

- 11 Antenna
- 12 Speaker
- 13 Power jack
- 14 RESET
- Force reboot the parent unit.
- 15 Stand

DOWNLOAD APP FOR MOBILE ACCESS

Download the free **MyVTech Baby Plus** mobile app and install it to a mobile device, then use your mobile device and the mobile app to monitor your baby remotely.

1. Press **MENU/SELECT** when the parent unit is idle.

- 2. Go to Connect Mobile Phone.
- 3. Scan the QR code in the parent unit to download the app into your mobile device if you have not installed the app yet.
- 4. Follow the instructions in the mobile app to set up and pair your baby unit to the mobile app.

Alternatively, you can download the mobile app from the App Store or Google Play store.

Install MyVTech Baby Plus mobile app

- 1. Browse the App Store 🙆 or the Google Play store 🖳
- 2. Search for the mobile app with the keyword "myvtech baby plus".
- 3. Download and install the MyVTech Baby Plus mobile app to your mobile device.

Scan the QR codes on the right to get the app.

🖹 Note

• Make sure your mobile device meets the minimum requirement for the mobile app.

Minimum requirement

- The mobile app is compatible with:
- Android[™] 6.0 or later; and
- iOS 12 or later.

After installing the mobile app, follow the instructions in the mobile app and parent unit to set up and pair your baby unit.

In your mobile device:

- Tap 🧕 to run the mobile app in your mobile device, and then create a user account. 2. We recommend that you use common webmail services, such as Google Gmail for
- registration of your user account. Check your email (and Spam folder), and activate your new camera account via the email link, then sign in to your account.
- 3. Follow the instructions in the mobile app to pair the camera. Tap 🚍, then Add Camera in the mobile app to get started.

