
# Nokia Power Earbuds Lite (BH-405) Quick Start Guide

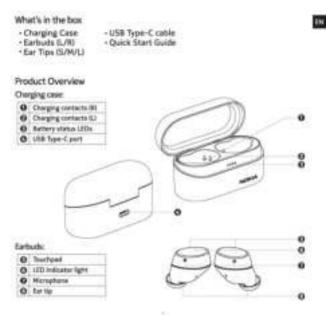



# Get started

I.Before using Nokia Power Earbuds Lite, take off the film on the earbudk and place the marbuds back in the charging case. Then connect the USB Syse-C cable to a power source to begin charging. Pully charge the earbuds and the charging case before the first use.

CORO


The battery status LEOs show the current battery status.



| Fully charges? | ٠ | ٠ | ٠ | ٠ |
|----------------|---|---|---|---|
| 8 - 75%        | ٠ | ٠ | ٠ | • |
| G = 10%        | ٠ | ٠ | 4 |   |
| Q < 25%        | ٠ | 0 |   |   |
| 0+3%           | * | ۵ | œ |   |

I. Earbuds LED indicator lights turn red when charging, and turn off when fully charged. If the earbud is low in battery power, the LED indicator light will keep flashing red.

 For optimal fit and audio performance, replace the ner tips with the size that best suits you.



# Pair and connect with Bluetooth

1.Pairing with the device .


a. Turning ori and Pairing

When you take the earbuds out from the changing case, the earbuds will turn on and pair with each other extornatically. When they have successfully peired, the LED indicator light of the right earbud will flash blue and red alternately and the earbuds are ready to connect with your Bluetouth<sup>#</sup> device.

b, Connecting with your Bluetooth device:

Turn on Bluetooth in your device and choose "Nokia Power Earbuds Lite" from the Bluetooth menu to connect.

During the connection process, the LED indicator light on the right method will flash blue and red alternately.

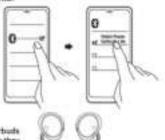

The LED indicator lights of the earbude will flash blue every 5 seconds when they are successfully connected via Biuetooth.

3K175 MMCS

- #After the initial pairing, the earbuds will autometically connect with your Nuetooth device whenever taken out of the charging case.
- The earbuds will automatically power off if there is no Bluetooth connection within 5 minutes.

# Using your earbuds 1. Souch control



### ±Additional controls:

a. Manually power on and off:

Touch the touchpad of two earbuds for 3 seconds to manually power on, touch the touchpad of one earbud for 5 seconds to manually power off.

b. Use single earbuch

You can single use the right earbud. If the eerbude here been paired with your Bluetooth device before, the right earbud will automatically connect. with your device when taken out of the charging case.

c. Reset to the original settings."

Put the earbuds back in the charging case (the LEDs will turn red) > Touch the touchpad of two earbuds for 3 seconds until the LEDs flash blue and red alternately for 3 times indicating that the reset is successful.

# Product and safety information

Rentate control functions may very depending on the model of your device and application. Sound track instructions do not respond to KS devices. Since devices with Illustooth wireless technology communicate using radio serves, they do not need to be in direct line-of-sight. Busicoth devices must, however, be within 10 meters (33 feet) of each other, although the connection may be subject to interfacence from obstructions such as wells or from other electronic devices.

- Frequency Band: 2400 Hets - 2483 Mile

- Maximum Radio Frequency Power: -6-+148#

# For your safety



A Important: Read these simple guidelines. Not following them may be dangerous or against local taws and regulations. For Further Info, read the complete user guide.



# A Switch off in restricted areas

Satisfy the stavice off when a Bluetouth headsat use is not allowed an effect. I may sayse interference or danger, for example, in alrenali, in heapitals or near medical equipment, Aut, chemicals, or blasting stress. Obey all instituctions in reported areas.



#### A interference

All advances devices may be susceptible to interference, which could affect performance.



#### Batteries, chargers, and other accessories .


Use only batteries, chargers, and other accessories approved by 1963 Goldal Os far and with this device. Do not correct incorregulitie products.



#### A Protect your hearing

To prevent possible hearing clamage, do not light when at high welcome levels for long particult

Houring



#### Secol children

Your device and its accessories are not toos. They new contain small parts, Keep them out of the mach of small children.

# Take care of your device

Handle year device with core. The following suggestions help you keep your device operational

- Reep the device dry. Presignation, harridity, and all types of liquids or moniture can contain minerals that connote electronic circuits.
- Do not use or atom the device in dusty or dirty areas.
- Do not starts the device in high temperatures. High temperatures may itemage the device to battery.
- Do not store the device in cold temperatures. When the device warns to its normal temperature, risketure can form inside the device and damage it.
- Its not open the device other than as instructed in the user golds.
- Do not drop, knock, or shake the device or the battery. Rough hending can break it.
- Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can prevent proper operation.
- < The norticula are featured with water protection level IPX7. Water protection level is not a permanent condition and can decrease over time.

- The charging case is not water resistant.





# Recycle

Means return your used electronic products, batteries, and packaging materials to while and collection points. This way you help present, uncontrolled meter disposal and promote the recording of materials. Concinual and electronic products contact and reducts the recording metals back as support, alterimitant, steed, and magnetiant) and precises metals load as gold, then, and paladianti, All materials of the device can be recovered as instantials, including energy.

## Crossed-out wheelie bin symbol

- The crossed-out wheeled bin symbol on your product, battery, Revolues, or packaging
- reminds you that all electrical and electricic products and batteries must be taken to separate collection at the end of their working life.

Do not abspace of these products as uncertaid manicipal wants: take them for respecting, for only on your nearest respecting point, sheck with your local wants sufficiently.

### Battery info

Thus deviug has an informal, non-removable, including adults battery. The net attempt to remove the instery, as you may demage the device. The bettery ran bettery indicated discharged huminols of times, but it will exertually user out. Charging time can be y depending in the los apaboly.

### **Battery** safety

If left smooted, a fully charged battery will leave its charge over time. Always long: the battery between 197C, and 257C (597Y and 77YF) for optimal parformance. Extrans temperatures optics: the capacity and lifetime of the battery. A device may temperarily stop working if its battery is too here and.

Do not dispose of betteries in a five as they may explode. Obey local regulations. Respice when double, Do not dispose as household sents, Use the battery for its intended purpose only improper oue of a runs of an approved or incompatible, batteries may present a rule of five, explosion, or other hazant, and may invalidate any approved or wanaerly. If our believe the battery is damaged, bate it to a service control out four double batteries control to the as it. Hence use a damaged battery. Do not charge year device during a lightning stores.

### Implanted medical devices

To avoid potential interference, manufacturers of implanted medical devices recommend a minimum separation of 15.3 centimetres (6 inches) between a wireless device and the implanted medical device. Persons who have such devices should:

- Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device
- Not carry the wireless device in a breast pocket.
- Switch the wireless device off if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.

If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

### Copyrights and other not ces

The availability of produces, first new appearance takes requiring by legitial for the oriented constant gate. Solar retrainers takes now and this could sharp another modules, with the any encodeness of pipes in any or laws solarith section. From the use and structure institution counting takes as a collision.

The contrast of the scheduler are presided for all factors are equival synamic values by a source of a scheduler of a strength of a scheduler of the scheduler

Fits eduction, renefation delli suttion of source a los fits connectivity discussion in los ry form, with a mither priority interpretation of 1800 cost is unability of 1800 substances in equipy of continues a development. Fits allow the cost on the right to real or barges are interpreted as a youther products does that an experience the right to real or barges are interpreted as a youther products does that an experience the right of a set of the real or barges are interpreted as a set of the real or the real of the set of the real or barges are in the real or barges are in the real or barges and the real of the real of the real of the real of the real or barges are in the real or barges and the real of the real of the real of the real of the real or barges are in the real of the

For these inclusions are becaused in the Global Ca, for and it on a value of 20000 backs. For and, the Global Case of the second second second second second second process of the second of the second.

In the unit of you want that the spine start is the try placement must be sense which easy is a massed that it want proved of the crose start as a characterizer of the subscription and subscription from the associated as simplified with report.

Weiten Withfielden die Antonisissen Withfielden flytente enderste einer sonder im State beerd for phone in subject packate is a sejecter in ode op konfte die Corporation. The support were need and lags take care of regits is assert field, for packate year of each many line. (a) with Solar is a steel press.

### Deteration of Conformity

(E

Hersing, HMA benefitig, to be easily the spin of the anticipy for the Marine and A segments of the State of the sector as the sector of the sector State State (Association and the sector as the sect FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarante that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different

from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction