

70\*82mm

中文

触屏蓝牙耳机  
Touch screen Bluetooth headset

1. 产品结构



2. 蓝牙配对



3. 使用方法




4. 多达13种功能



注意事项：  
请遵守以下注意事项，以免导致财产损失。长时间使用高音量可能会刺激耳部，可能会导致听力减弱等不良影响。为了更好的保护耳部听力，请注意防止音量过高的情况。根据连接本机蓝牙耳机设备的不同，通话时可能会出现漏听现象。请随时注意保持适当的音量。提高音量时请逐渐进行，突然加高音量可能会损伤耳部。  
如在使用本机时出现皮肤过敏等状况，请尽快停止使用并咨询医生，或联系系统中心或购买时的销售店进行询问。  
1. 请不要将耳机本体置于口袋内以免在下列产生折压，出现皮肤其他损伤。  
2. 请不要在飞机内使用本机，无线电波等影响可能引发设备操作可能故障。  
3. 请不要在医疗设施附近使用本机，无线电波等影响可能引发心脏起搏器或其他医疗电子设备出现故障。  
4. 请不要在拥挤的场所内等场合的场所或医疗机构的室内使用本机，请不要在自动门、火灾报警器等自动控制设备附近使用，无线电波等影响可能引发设备操作造成事故。

5. 操作按钮的位置和操做方法

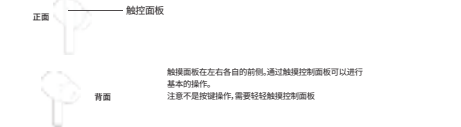

6. 操作列表


配对	耳机开机后自行左右配对，左右配对完成后，可在安卓/IOS手机蓝牙界面搜索系统YW06
电源ON/OFF	充电仓开盖耳机自动开机，耳机进仓会自动关机(Power ON/Power OFF)
音乐/播放/停止/退出音乐/暂停	单击任意一边耳机触摸面板
上一首曲子	双击左耳触摸面板
下一首曲子	双击右耳触摸面板
音量增加	三击左耳触摸面板
音量减少	三击右耳触摸面板
召唤语音助手	长按任意耳机触摸面板2s触发 Siri
降噪模式切换	双击任意耳机触摸面板

警告：  
请遵守以下注意事项，以免导致火灾、触电、发热、起火等引发的死亡或重大伤害。  
请不要用手直接接触充电仓电池或液体。如液体不慎进入眼睛，为避免可能引发失明等情况，请不要继续佩戴，并马上用清水充分冲洗并及时就医。如液体不慎接触到身体或衣物，为避免可能引发火灾或其他伤害，请马上用清水进行清洗。如液体不慎接触到其他物品或其他设备，请及时清洗。  
请使本机远离易燃物品，以免引发火灾。如液体不慎接触到易燃物品，请及时清洗。  
切勿自行拆解本机，以免引发故障或触电等危险。如需要进行充电仓更换，或内部故障，维修等，请及时联系售后服务中心或购买时的专门店。请不要将本机暴露在高温或潮湿设备周围，如太阳附近、直射阳光下、或处于高温下的汽车内部等高温场所使用、保管及放置。

英文

Touch screen Bluetooth headset  
Sound Earcuffs

1. Product structure

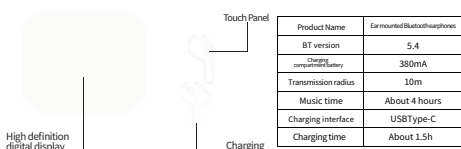



2. Bluetooth pairing



3. Usage




4. Up to 13 functions

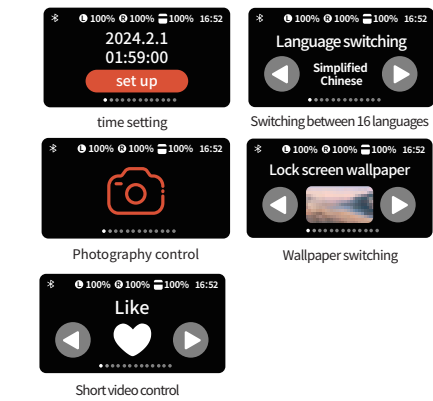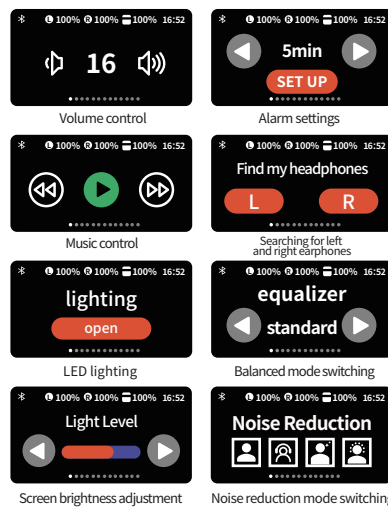

Notes:  
Please follow the following precautions to avoid injury and property damage. Long term use of high volume can stimulate the ears and may lead to cognitive effects such as reduced hearing.  
To better protect both eyes and hearing, please pay attention to preventing situations where the volume is too high. According to the different Bluetooth devices connected to this device, there may be a phenomenon of speaking during calls. Please keep an appropriate volume at all times. Please gradually increase the volume as sudden increases may damage the ears. If you experience skin allergies or other symptoms while using this device, please stop using it as soon as possible and consult a doctor or contact a repair center or the seller at the time of purchase for further consultation.  
1. Please do not place the earphone body in the back pocket to avoid compression, deformation, or other malfunctions when sitting down.  
2. Please do not use this device near medical devices, as radio waves and other influences may cause malfunctions in pacemakers or other medical electronic devices.  
3. Please do not use this device near medical facilities, as radio waves and other influences may cause malfunctions in pacemakers or other medical electronic devices.  
4. Please do not use this device in crowded vehicles or other miscellaneous places, or in the interior of medical institutions. Please do not operate near automatic doors, fire alarms, or other automatic control equipment.  
The use of radio waves and other factors may cause accidental operations and accidents.

5. Position and operation method of operation buttons

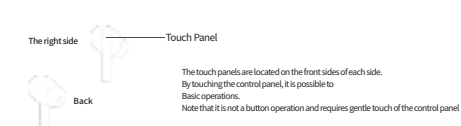

6. Operation List

pair	When the headphones are turned on, they will pair left and right on their own. After the pairing is completed, YW06 can be found on the Bluetooth list of the Android/iOS phone
Power ON/OFF	The earphones automatically turn on when the charging compartment is opened, and the earphones automatically turn off when the compartment is closed (Power ON/Power OFF)
Music Play/Stop Call answering/hanging up	Click on a left and right touch panel
Previous song	Double click on the left ear touch panel
Next piece of music	Double click on the right ear touch panel
Volume increase	Three click left ear touch panel
Volume reduction	Three click right ear touch panel
Summoning/Voice Assistant	Long press the right ear touch panel for 2S
Noise reduction mode switching	Four Click Any Earphone Touch Panel

Warning:  
Please pay attention to the following precautions to avoid death or serious injury caused by fire, electric shock, heat, fire, etc. Do not directly touch the charging battery with your hands to prevent liquid leakage. If the leaked liquid accidentally enters the eyes, to avoid the possibility of blindness, please do not rub your eyes immediately, rinse thoroughly with clean water and seek medical treatment promptly. If the leaked liquid accidentally touches the body or clothing, to avoid possible burns or other injuries, please use immediately wash with water or other ingredients. If there is inflammation or other damage to the skin, please seek medical treatment promptly. Please use the attached USB Type-C accessory for charging. Damage, battery leakage, overheating, and other situations may cause fire and other injuries, resulting in surrounding pollution and damage injury. Do not disassemble this machine on your own to avoid malfunctions or electric shock. If you need to replace the rechargeable battery, inspect or repair it, please contact the seller in a timely manner Post service center or specialized store at the time of purchase. Please do not expose this device to high temperatures or heating equipment, such as near flames, direct sunlight, or high temperatures. Use, store, and place in high-temperature areas such as the interior of the car.

## **FCC Warning**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.