EZCast Pocket 4K RX & TX User Manual

Rev 1.1






Product information is subject to change without prior notice.

About EZCast Pocket

Transmitter (C-1 or H-1)

Easily mirror whatever shows on your laptop or mobile screen, ideal for video-watching and idea sharing. * The Type-C connector model is the C-1, while the HDMI connector model is the H-1.

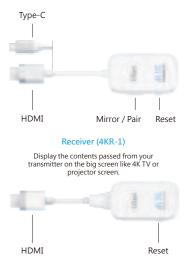

How to mirror

1 Install the receiver

Use the Type C connector to connect EZCast Receiver to the HDMI port on TV, and power on by an independent power 5V/1A adapter.

2 Plug and play

Plug EZCast Transmitter to Type C or HDMI port on laptop or mobile. Wait a few seconds until the flashing light on transmitter stops, and it will start mirroring automatically.

When using the Transmitter H-1 (HDMI connector), using the Type C connector connect to an independent power 5V/1A adapter.



3 Stop and restart mirroring

Press the mirror / pair button on the transmitter to stop mirroring or restart mirroring.



Note : EZCast Transmitter support mirroring for all laptops including Windows and MacOS, and Android mobiles with DP Alt output. To reset to default, press the reset button for 5s.

How to pair Transmitter with receiver

1 Turn on pairing mode for the receiver

- (1) Power up the receiver by an external adapter (5V/1A).
- (2) Plug the receiver to the HDMI port on the monitor.

(3) Press the reset button on receiver for 2 seconds. Release when the screen shows "Release the button to pair with Transmitter"



2 Press the Mirror / Pair button on Transmitter

Plug the transmitter on laptop or mobile, when using the Transmitter H-1, please make sure using the Type C connector to provide power. Press the mirror / pair button on the transmitter for 5 seconds to complete pairing while the screen shows "Ready to pair". After paired, it will start casting automatically.



Note : There are 2 mode for reset button on Receiver, depending on pressing duration.

(1) Press for 2 seconds: Turn on pairing mode for the Transmitter.

(2) Press for 10 seconds: Reset the Receiver to default.

OTA Upgrade

1 Download EZCast App

(1) Plug the receiver to the monitor, and using the Type C connector to provide power.

(2) Scan the QRCode with a computer or mobile phone, or go to www.ez-cast.com/app to download the EZCast app.

2 Enabling receiver SSID and PSK and connect to it

(1) Check the monitor for the displayed SSID and PSK of the receiver. If it is not displayed, press the reset button on the receiver for 2 seconds to turn on the pairing mode for display.

(2) Connect the mobile's or computer's Wi-Fi to the receiver.

(3) Launch EZCast, into 2 and select the SSID of the receiver and connect it. (4) Into to the settings page 3, select Internet, and connect the receiver to the Internet.

(5) Check the icon $\textcircled{B} \cdots \textcircled{b}$ on the monitor, verify the receiver is connected to the network.



3 Using the EZCast App to Upgrade

(1) Ensure mobile or computer is connect to same Wi-Fi as the Receiver.

(2) Launch EZCast, choose 🔎 , and confirm it's link to the receiver.

(3) Automatically checks the current version status. If the most recent version is available, agree to update to complete the system upgrade.



Product informations

Transmitter

- Anttena: 1T1R (on board)
 Wi-Ei: 5Gbz
- Wi-Fi: 5Ghz
- Chipset: 8360D
- Interface: HDMI or Type-C

Reciever - Anttena: 1T1R (on board) - Wi-Fi: 5Ghz - Chipset: 8271 - Interface: HDMI

MIC 警語

Note: 5G band (W52) indoor use only.

NCC 警語

取得審議證即之б幼本將橫器林,非經核違。公司。商號或使用者均不得僅自變更極率。加大功本或變更度設計? 特征及功能。б幼年將橫器材之便用得著實調於安全入于優古法國。4月發現有于優毀務時,應立即停用,並改 當至兩千獨時方得編鑽使用,前給合法通信。相俟電管管定法度定作素之無線電過信。低功率射頻器材須忍受合法 通信或工業。1492 及醫體再覽或感動性實驗認得之干優。

FCC statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio trequency energy and, if not installed and used in the interference will not court in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this product not authorized by Apple could void the electromagnetic compatibility (EMC) and wireless compliance and negate your authority to operate the product.

This product has demonstrated EMC compliance under conditions that included the use of compliant peripheral devices and shelded cables between system components. It is important that you use compliant peripheral devices and between system components to reduce the possibility of causing interference to radios, television sets, and other electronic devices.

RF Exposure Statement(Receiver):

To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

SAR statement (Transmitter):

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The SAR limit set by the FCO is 1.8W/Kg. For body-worn operation, this device has been tested and meets the FCO.FF exposure guidelms for use with an accessory that contains no metal and positions the device a minimum of Dmm from the body. If exposure compliance with any body-worn accessory that contains metal was not tested and certified. And use of the ISU body-work operation is a model. Accessory validable in market and mark to use to beep use dilatione bran IDE ISU body-modernitoria.



Website: https://www.EZCast.com YouTube: https://www.YouTube.com/EZCast