

Scanmarker Pro

User Manual



WhatsApp support


WhatsApp ID:8618820461144

Consumer Service: support@vomor.cn



Introduction Description:

VORMOR Scanner is an AI product that integrates image stitching, OCR, text translation, voice and other technologies. Effectively solve language barriers in scenarios such as overseas travel, foreign language learning, and business **communication.**

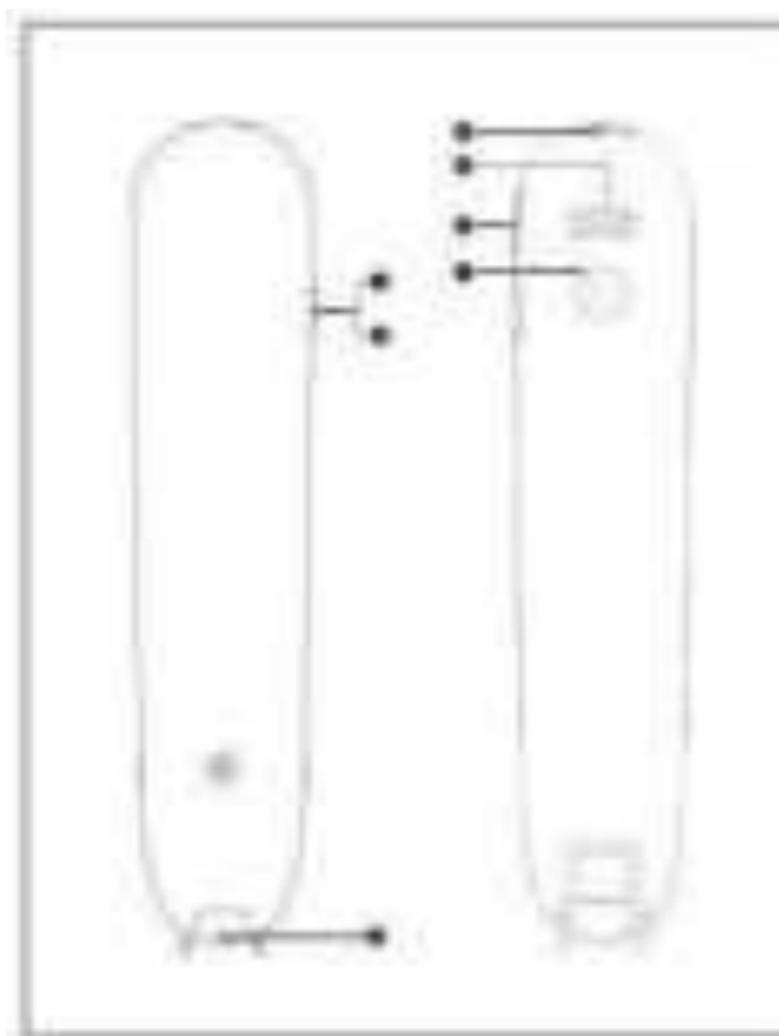

①: Power on/off

②: Return key

③: Scan head

④: Type-c

⑤: Big horr

⑥: TF carc

⑦: Camera

④: Type-c

Power button:

1. Power on/off: Press and hold the power button for more than 3 seconds, and you can choose to power on/off or restart.

2. Standby: Short press the power button to wake up or standby.

Return button: Short press the device "Round button" or tap the return icon "<" to return.

Touch screen: Touch screen to select the function. In the function interface, press and hold the left side of the screen and slide right to make selection; press and hold the right side of the screen and slide left to return. Voice blue/red key; This is the voice input key for the voice translation feature

and it corresponds to the screen's blue/red-language. Long-press the key to begin speaking, then release it to see the translation result and broadcast.

Quick Start Instructions:

First of all, thanks for using vormor products!

Preparation before use:

1. Device Charging: Before using this device, please ensure that it has enough power. If the device cannot be turned on or the power is insufficient, please use the special charging cable provided to charge the device first, preferably for one hour or until the power is **sufficient before turning it on.**

When charging the device when it is off, the screen will display the charging logo and battery percentage in about 8-10 seconds. When the device is turned on, the battery is marked with "lightning" in the upper right corner of the screen.

2. Network connection: After turning on the device, go to the Settings--WIFI interface to connect to the network.

This product works better in the networked state, it can be connected to WIFI or mobile phone hotspot.

3. Interface language: Settings-Interface Language, select the language you need for the operation interface.


4. Scan operation

(1) A kind reminder, during the scanning operation, the equipment should be inclined 45-80 degrees with the plane, and the front sight should be aligned with the centerline of the text

(2) Press the pen tip and when the light starts to turn on, drag the pen tip to the right to scan at a constant speed. During the scanning process, keep the pen tip light always on;

(3) Aim the crosshair at the blank space in front of the first letter and start scanning. After the crosshair has passed the last letter, raise the nib;

(4) View the results and click the screen to perform corresponding operations;

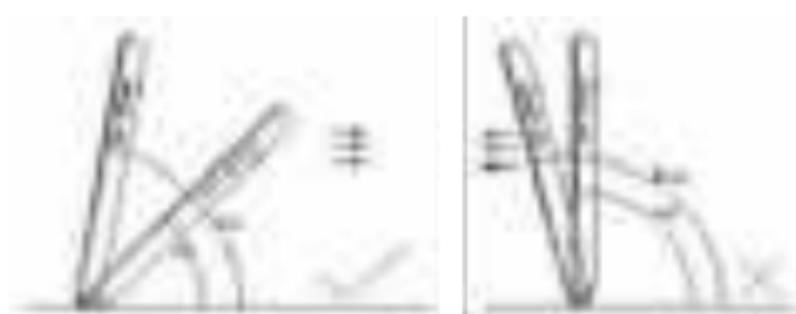

5. Offline use: This product supports offline use, and the electronic dictionary, offline scanning, and translation functions can be used normally without connecting to the Internet; however, it is recommended that you connect to the Internet first, as the **effect will be better.**

6.The top of the device screen displays some status information about the device, such as WIFI,power, and charging status.

Main function introduction: (In the main interface, if you directly press the pen to scan, the electronic dictionary function will be automatically used by default)

7.Main functions

7.1-Scan Translation

Support 56 kinds of languages multi-language scan translation.

(1) Before scanning, you can select the language that needs to be scanned and translated



(2)After scanning, the screen will automatically display the results.

〈桃之天天，灼灼其华。之子于归，宜其室家。〉

The peach sky burns is splendor. The son of the home, the appropriate home.

oriyin

transsian


7.2-Phonetic Translation

Support online scanning and reading up to 112 languages (with software upgrades, the supported languages will increase).

(1)After setting the language, long press the voice blue/red button on the device's side, then release it after speaking the corresponding language; the screen will automatically display and broadcast the result.

Dialogue translation

Press long press the corresponding voice button to speak, then release it to translate.

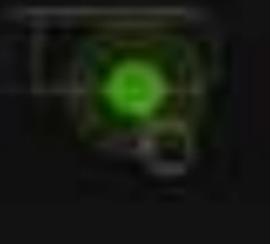

English(us) Chinese(Mandari)

早上好。

Good morning.

7.3-Photo Translation

(1) Before taking a photo, you can choose the text language of the picture, at the same time, choose the language you need to translate.



(2) After the photo translation is completed, the translation result will be displayed on the screen.

wniranssappscnep

take some of the stress out of travel by providing on-the-spot translations of things like signs

Translation language-Trad Chinese(Mandarin)

無是出行

到一個新的國家旅行時，尤其是如果你獨自旅行，嘗試一

7.4-Text Excerpt


Support multi-language text excerpts, import them to the computer through the USB cable and view and edit them on the computer.

(1) First select the language you need. Click the "plus" sign, then start to scan.



< By downloading a translation app before you travel, you can be confident that you'll be able to navigate your way around and communicate effectively. It's ir

(2) After saving, you can choose to upload to your PC. Click here "upload sign", and connect the translator with your computer through USB cable, you can find the saving text on "Excerpt File"

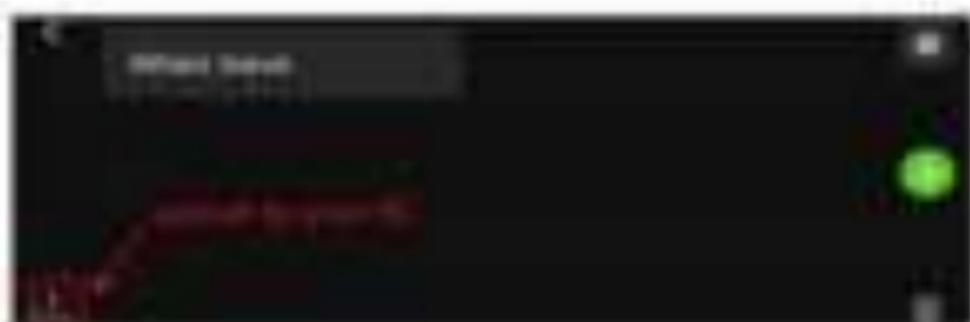



VORM Spre s Imamal thared tengs



7.5-Recording

Click "red" button start to record, and click here to save.

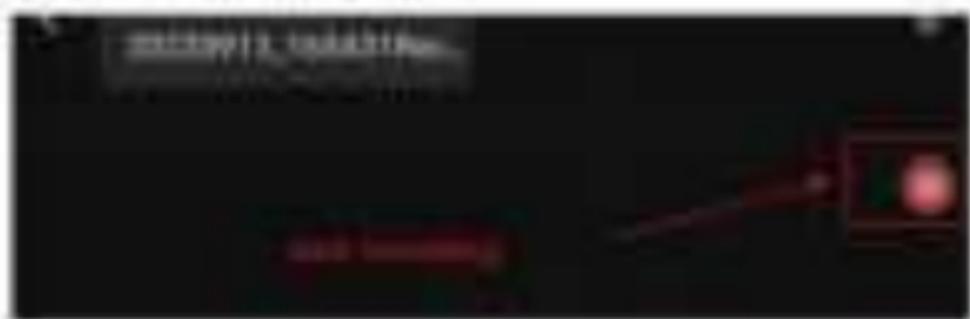

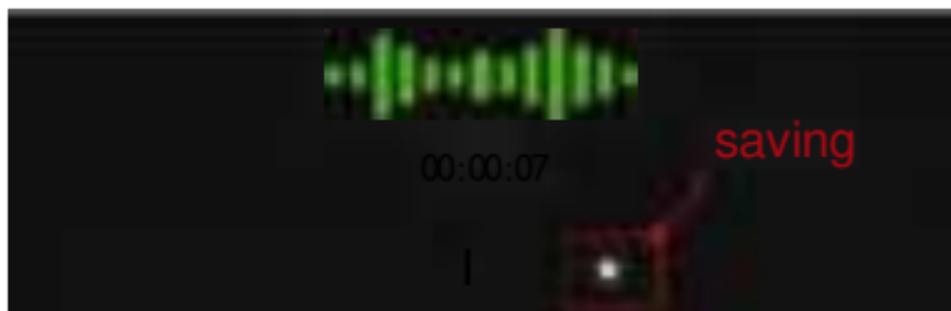

7.6-Scan Translation


Currently only supports Chinese-English and English-Chinese dictionaries, chinese, idioms, and Tang poetry

(1)Setting the language first, then vertically scan the text you need to translate, and you can saving your favorite words.



7.7-Favorites

View favorite words.

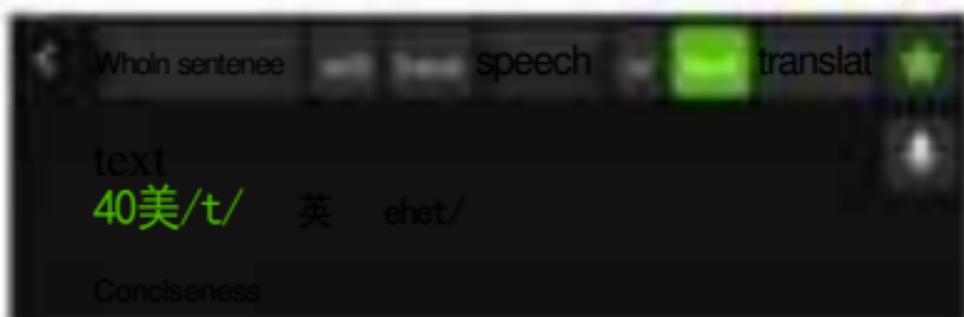

7.8-MP3

Audio files in MP3 format are supported, downloaded from the computer to the "Music" folder in the device memory, and played on the device.

Setting

- 1.WIFI: Please connect to wifi first, and the effect will be better.
- 2.Volume: adjust the volume.
3. Brightness: adjust the screen brightness.
4. Bluetooth: Connect audio devices such as Bluetooth headsets and Bluetooth speakers. Bluetooth headsets and Bluetooth speakers.

5. Language: The operation interface supports simplified Chinese, traditional Chinese, English, Japanese, etc., which will increase with the software upgrade.
6. Holding pen direction: suitable for left-hand or right-hand pen holding habit.
7. **Upgrade**: check whether there is a newer **software version** and update it.
8. About: check the current device model, SN number, software version and other information.

Precautions

1. When upgrading, do not perform any operations during the program download and automatic program installation and restart.
2. Please connect to network first, the effect is better; the quality of the network will affect the use of the equipment, try to keep the network unblocked.
3. When scanning, keep the device inclined at 75-90 degrees, aim the front sight at the center of the text, and drag at a constant speed; if the recognition is inaccurate, you can try again.
4. Point the front sight to the blank space before the first letter and start scanning. After the front sight has passed the last letter, lift the pen.
5. During voice translation, the best effect is when the distance between the mouth and the MIC of the device is within 30cm.
6. Please speak coherently at a normal speed, and do not pause multiple times during the speech. The above situations may easily cause inaccurate translation.
7. Please make your pronunciation as standard as possible, and don't use mantras or slang.
8. The recognition result can be verified by displaying text on the screen, and if there is an error, it can be manually input and edited.
9. If the words you say are recognized correctly, but the translation is not accurate, please change the way of expression.

Exception handling

1. Forced shutdown: When the device cannot be shut down normally or crashes, long press the power button for more than 10 seconds to force shutdown and restart automatically.

2. Restore factory settings: Through "Setting-Reset", all usage records and local cache data can be cleared.

Name	VORMOR Scanner	N. W	90g
Size	160*38*14mm	Capacity	1200mAh
DC	5V/1A	Stand-by	7days
Charge interface	Type-C	Screen size	4.0"
Network	WIFI	Material	ABS

Caveat

1. Do not use this equipment in gas stations, fuel depots and other places where the use of electronic equipment is prohibited, otherwise it may cause an explosion or fire.

2. Please do not use unapproved or incompatible power supplies, chargers, which may cause fire, explosion or other hazards.

3. When charging is complete or not charging, disconnect the charger from the device and unplug the charger from the power socket.

4. It is strictly forbidden to place the device in an environment with excessively high or low temperature to avoid fire, explosion or product failure; it is strictly forbidden to put the device near heat sources such as ovens, electric heaters, etc., and do not put into fire; lithium batteries shall not be exposed to such as sunlight, Fire roasting or similar overheated environment.

5. It is strictly forbidden to allow children or pets to swallow the device or its accessories to avoid injury.

Disclaimer

1. Please read the product manual carefully before use, and operate with the manual.
2. This product is not responsible for the translation results.

Warranty regulations

1. The free warranty period of this product is 12 months.
2. During the warranty period, the faults caused by normal use in accordance with the manual (determined by our after-sales personnel or our authorized service personnel) will be repaired free.
3. During the warranty period, the following conditions are not covered by the free warranty:
 - (1) Cannot provide warranty certificate and valid purchase certificate.
 - (2) Unauthorized maintenance, misuse, collision, negligence, abuse, accident, incorrect use of this product, etc.
 - (3) Because of prolonged exposure to strong light, fire or similar overheating environment.
 - (4) Machine damage or performance failure caused by human factors such as water ingress.
 - (5) Loss caused by the use of unqualified power supplies and adapters above 5V/2A.
4. The company is not responsible for any special, accidental or indirect loss and damage.

Warranty certificate

Seller's name

Where to buy:

Customer Name:

Phone number:

Address:

Product SN

Date	Failure phenomenon	Maintenance records	Dealer

FCC Compliance Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction