

RENPHO

SMART HEALTHY LIVING

1007

Renpho © 2019

RENPHO

SMART HEALTHY LIVING



Model: R-G5003
EyeSnooze Aroma

User Manual

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS CAREFULLY BEFORE USE.

1. This device is intended for household use only and not for use in a commercial environment.
2. Children over 3 and persons with reduced physical, sensory or cognitive capabilities should only use this device under direct supervision and after receiving instructions on safe use.
3. Do not use the device if you have any skin irritation or abrasions. If any irritation or discomfort occurs during use, discontinue immediately and consult a healthcare professional.
4. Avoid placing excessive pressure on the device or pulling it forcefully, as this may damage the device.
5. Do not use the device with wet hands.
6. Do not submerge the device in water or any other liquid. Clean it only as instructed in the user manual.
7. Do not use if any part of the device is damaged.
8. Children should not play with the device. Cleaning and water maintenance should not be done by children.
9. Keep the aromatherapy tablets out of reach of children to prevent accidental ingestion.
10. Any heated surface carefully as they may cause surface burns. Do not use any liquid or gel packs or any surface with your circulation. Liquid or solidified gel packs should not get near your circulation.
11. Temperature sufficiently high to cause burns may occur regardless of the control setting. Do not use the device on limbs, head, or sleeping or unconscious persons. Please keep the device out of reach of children and do not use the device for the sake of sleeping.

SAVE THESE INSTRUCTIONS


2019-01

WHAT'S INCLUDED

- EyeSnooze device x 1
- Charging Cable x 1
- Aromatherapy Tablets x 2

- Storage Bag x 1
- User Manual x 1
- Quick Start x 1

PRODUCT OVERVIEW

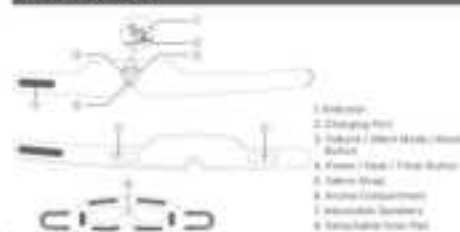

Indicator

Status	Indicator
Device turned on / Bluetooth disconnected	Red light on
Bluetooth connected	Green light on
Low battery / Charging	Battery icon
Full charge	Green light on
Charging with high temperature	Red light on

CHARGING YOUR EYESNOOZE AROMA

Fully charge the device before first use.



2019-01

Note:

1. When the device is in use, the indicator light will turn green, accompanied by a voice prompt "The product is now charging".
2. It takes about 2-3 hours to fully charge the device. Once charging is complete, the indicator will be red.

INSERTING THE AROMATHERAPY TABLET

To:

As the provided aromatherapy tablet is fragrance-free, before inserting, add a few drops of essential oil to perfume in the tablet and wipe off any excess liquid from the tablet with a cloth. Do not use different fragrances on the tablet tablet.



2019-01

FCC REGULATORY COMPLIANCE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into a different outlet or circuit.
- Consult the dealer or an experienced radio/TV technician for help.

For European Countries

This equipment complies with EMC Directive 2014/53/EU and LVD 2006/95/EC and is CE marked. This equipment must be designed for operation in accordance with any other national or international.

EMC Regulatory compliance

This device complies with EMC Directive 2014/53/EU and LVD 2006/95/EC and is CE marked. This equipment must be designed for operation in accordance with any other national or international.

Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

For certain approved countries see CE Marking Directive applicable and applicable rules, pursuant to EMC Directive 2014/53/EU and LVD 2006/95/EC.

If this equipment does cause harmful interference, or if this equipment is found to be unable to accept interference that it may receive, the user is encouraged to try to correct the interference by one or more of the following measures:

This equipment complies with CE Marking Directive 2014/53/EU and LVD 2006/95/EC and is CE marked.

CE Marking Directive 2014/53/EU and LVD 2006/95/EC and is CE marked.

EM-02

EM-01

Warning: This equipment may cause harmful interference to radio communications if not installed and used in accordance with the instructions. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

EM-02

Warning: This equipment may cause harmful interference to radio communications if not installed and used in accordance with the instructions. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

EM-03

Warning: This equipment may cause harmful interference to radio communications if not installed and used in accordance with the instructions. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

EM-04

Warning: This equipment may cause harmful interference to radio communications if not installed and used in accordance with the instructions. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

EM-05

Warning: This equipment may cause harmful interference to radio communications if not installed and used in accordance with the instructions. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

EM-06

EM-07

EM-08

EM-09

EM-10

EM-11

EM-12

EM-13

EM-14

EM-15

EM-16

EM-17

EM-18

EM-19

EM-20

EM-21

EM-22

EM-23

EM-24

EM-25

EM-26

EM-27

EM-28

EM-29

EM-30

EM-31

EM-32

EM-33

EM-34

EM-35

EM-36

EM-37

EM-38

EM-39

EM-40

EM-41

EM-42

EM-43

EM-44

EM-45

EM-46

EM-47

EM-48

EM-49

EM-50

EM-51

EM-52

EM-53

EM-54

EM-55

EM-56

EM-57

EM-58

EM-59

EM-60

EM-61

EM-62

EM-63

EM-64

EM-65

EM-66

EM-67