

For certification check

The Dash^{PRO}

Quick Start Guide

v1.3, 2017-03, V3 QSG English



BT: 2.4 GHz ISM Band 2.402-2.480 GHz **Output Power:** +4dBm

Model No: B1002-01 **NFM:** 10.5 MHz

FCC ID: 2AFST-B1002L **FCC ID:** 2AFST-B1002R

IC: 20811-2AFSTB1002L **IC:** 20811-2AFSTB1002R



Bragi GmbH, Sendlinger Str. 7 / Angerblock, 80331 Munich, Germany, Earth

Copyright ©2015 Bragi GmbH. All rights reserved. BRAGI, The Dash, and the B logo are trademarks of Bragi GmbH in the U.S. or one or more other countries. The absence of a product or service name or logo from this list does not constitute a waiver of Bragi GmbH trademark or other intellectual property rights concerning that name or logo. Patents pending.

Thank you.





BRAGI



Charge & Activate




Charge your Dash
before first use.

Download now!

Bragi App

Download the free Bragi App to set up and
remote-control your Dash.

Unlock all of its advanced features now!

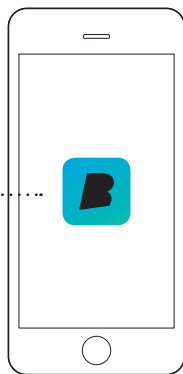


Use the Bragi App to set up:

Activities
Auto-Tracking
Controls
Head Gestures
Routines
Sound Settings
... and more



Charge

Before using The Dash, charge it for at least 1 hour. This will also activate your Dash.

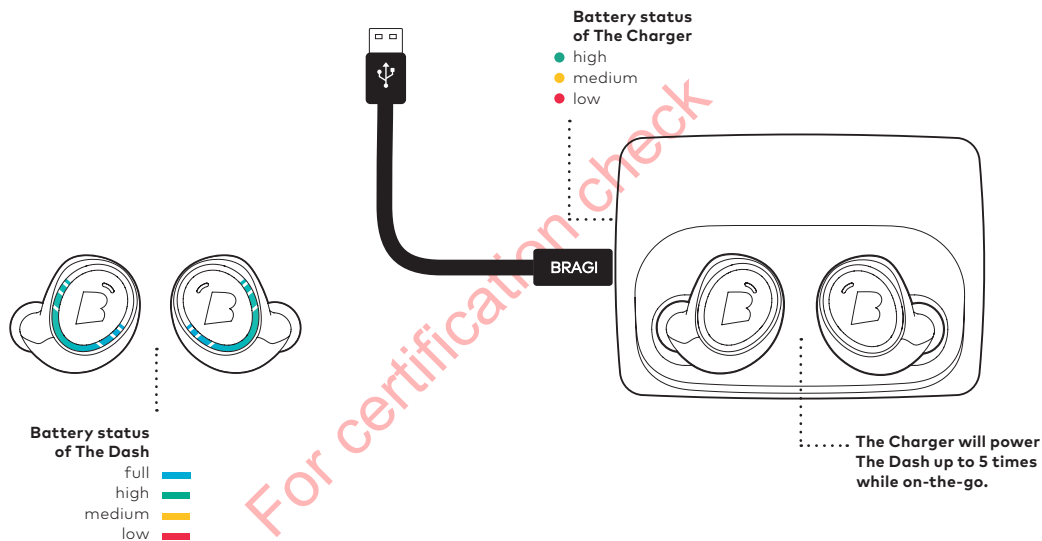



Shake.

See the current battery status by shaking your Dash.

With The Dash in The Charger, connect to your computer or a power supply via USB.

Update

Your Dash learns new skills when updated to the newest **Bragi OS**.
Download from **update.bragi.com**

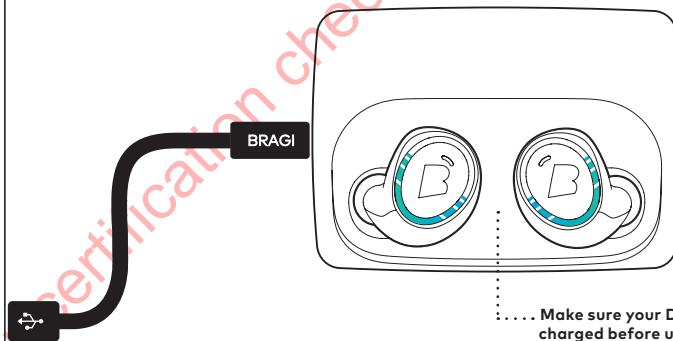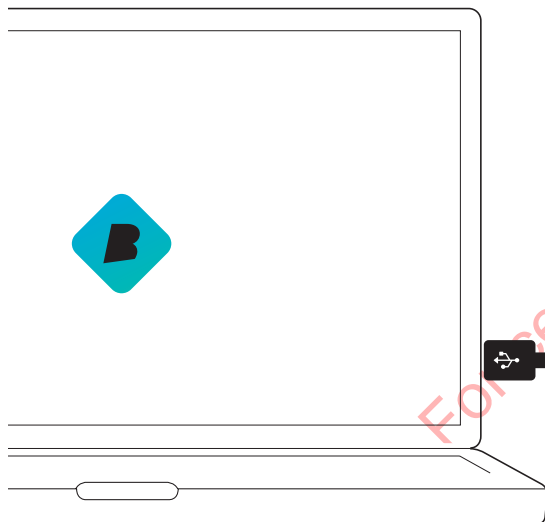



..... Make sure your Dash is
charged before updating.

▶ Video tutorials on **bragi.com/support**


update.bragi.com

Insert

1. Tilt The Dash slightly forward.
2. Insert the tip firmly in your ear canal.
3. Adjust The Dash by rotating it backwards.

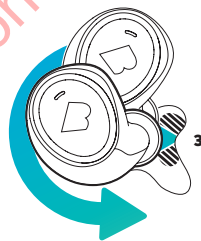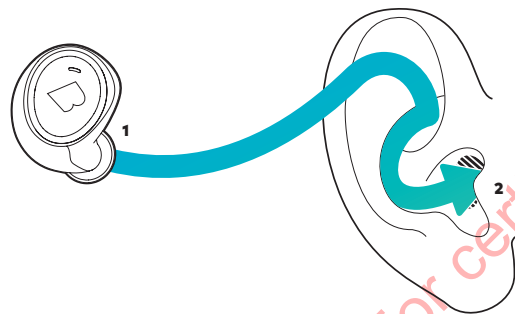

The PerfectFit

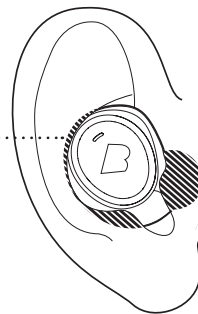


bragi.com/support



Your Dash will automatically turn on
once both **The Left & Right Dash** are inserted

PerfectFit


Try all FitSleeve & FitTip sizes to get the PerfectFit. The sensors must be in contact with your skin to get best tracking results.

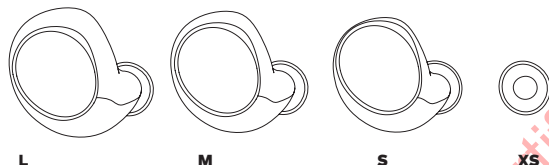


FitSleeves best for Activities




FitTips Pro best for Audio

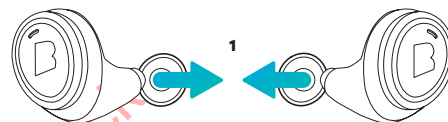


Remove FitTips

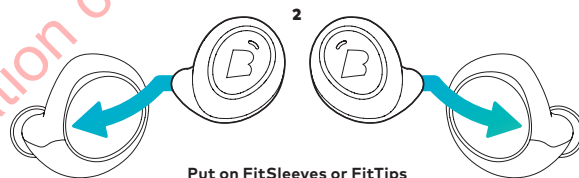

Put on FitSleeves or FitTips

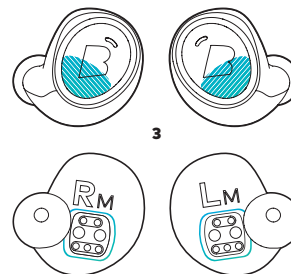

And now ...

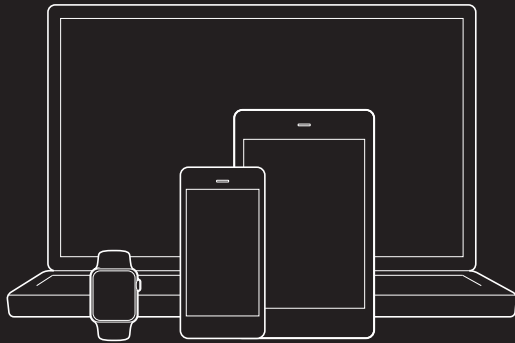

Connect.





Control.

First connect Audio

Insert The Dash into your ear and search for **The Dash** in the Bluetooth® menu of your device.

! If your Dash does not show up in the list, do a Long Hold (5 sec) on the Right Dash.

You can find video tutorials on bragi.com/support

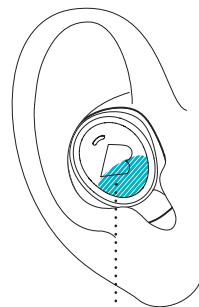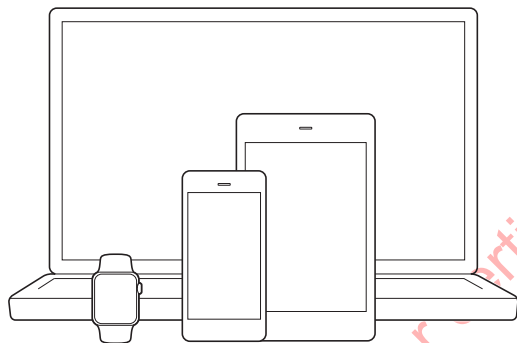


Long Hold (5 sec) on the Right Dash to make Bluetooth® visible

Then connect Sensors


To connect The Dash sensors to your device, open the Bragi App and select your Dash in the device list.

! **Make sure to connect The Dash audio system first before connecting the sensors.**

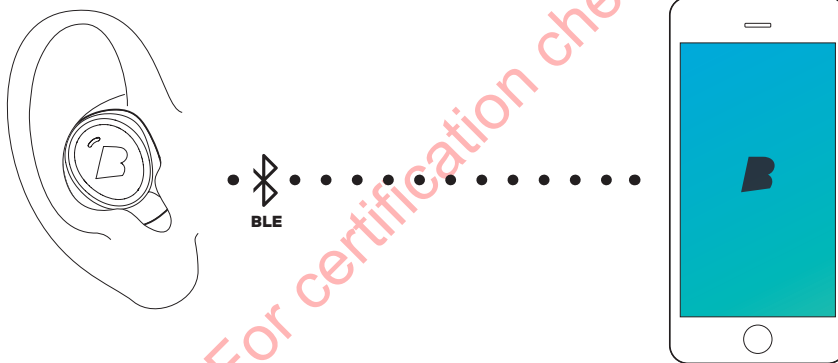

EarTouch


Control your Dash with tap, hold and swipe gestures using the EarTouch Interface.

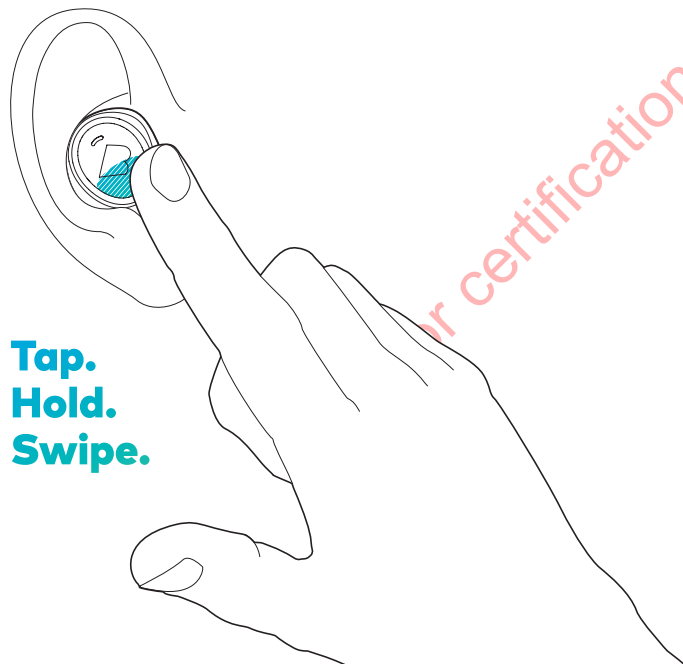

Tap.
Hold.
Swipe.

our certification check

The EarTouch Interface is located on the lower half of each Dash.

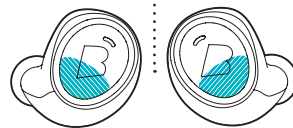

Hold on both Dash simultaneously to turn **TouchLock** on



Basic Controls



Right Dash

Tap	Play/Pause	•
2xTap	Next song	••
3xTap	Previous song	•••
Swipe	Volume Up/Down	↔
Hold 1sec	Right Menu	▬
Long Hold 5sec	Connect Bluetooth®	▬



Left Dash


Swipe	Audio Transparency	↔
Hold 1sec	Left Menu	▬

Listen & Communicate

Control Applications

Menu navigation

Tap	Select	•
Swipe	Next / Previous menu item	↔
Hold 1sec	Close menu	▬

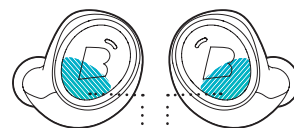

Hold 1sec to open Left Menu


Hold 1sec to open Right Menu



Activate more features
in the **Bragi App**

Languages

Use the Bragi Updater to change the language of your Dash. **Download from update.bragi.com**

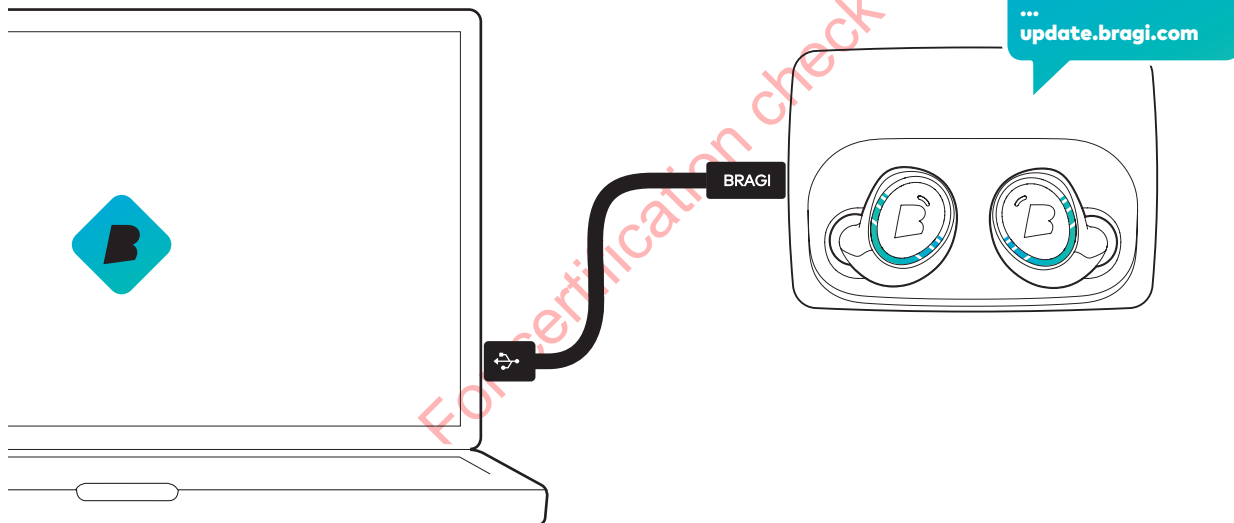

Questions?

We are here to help.

support.bragi.com