

GT-5智能手表-说明书-FCC版-英文-中性

成品:68*92mm 展开尺寸:340*92mm 印色:4C+4C

正面

Model GT-5 Smart sports Watch 2 in 1

Built-in TWS Headset




User manual

01 /Introduction

Thank you for choosing our product, please read the user manual carefully before use. Multifunctional smart watch can bring you more possibilities and enrich your life. If you have any questions, please contact us through the purchase platform information, our excellent customer service team will solve your problems quickly.

02 /Package Contents

The whole machine x1 Spare strap x1 Charging cable x Bluetooth headset x 1 Spare headset head x 2 User manualx 1 Charging cable x1

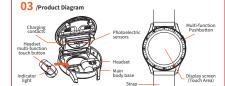

04 /Product Specification

	Main Body Weight	57g	Weight of one side headset	2.6g
	Main Control Chip	RTL8762D	Battery Type	Polymer lithium batteries
	Charging voltage	5V	Watch battery capacity	240mAh
	Charging current	150mA	Headset battery capacity	25mAh
	Working temperature	-5~45 °C	Watch Bluetooth V.	Bluetooth 4.0
	Waterproof level	IP67 rated	Headset Bluetooth V.	Bluetooth 5.0

Equipment requirements:

Android 4.4 and above system phone, and support Bluetooth 4.0 and above Android phone IOS8.0 and above system, iphone 4S and above Apple phone.

05 /Initial use

the corresponding menu.

1. Introduction of device function interface. After turning on the device, enter the main interface and swipe up, down, left and right to enter



2. Click the multi-function touch button in the main interface state to enter the sub-menu, and then double-click to switch the menu style, there are 3



Android phones can scan the QR code or search for "FitCloudPro" in various application markets to download and install. Apple phones can scan the QR code or search

IPro" in the APP Store to download and install.



4. Bluetooth connection between watch and cell phone

1) Watch Bluetooth open mode: the watch will automatically open by default, and ensure that the phone Bluetooth is open.

2) Open the cell phone APP "FitCloudPro". "Add Device" under the interface

of "Device", and search for the device model "BASIX-GT5" and click to connect. After successful connection, the device model "BASIX-GT5" (connected)" will be displayed under "Devices" in the APP (refer to FR 1, 2, 3).

5. Headset and cell phone Bluetooth connection (refer to FR 4)

1) First take the headset out of the watch, the Bluetooth of the headset will be automatically turned on.

2) Next, open the phone, settings option, open Bluetooth, the phone

Bluetooth will automatically search for nearby Bluetooth devices, and then find the Bluetooth name of the watch "GT5_Audio" in the available devices below, click to pair, complete the connection between the headset and the



Figure Reference 1-Open the app and add the device



Figure Reference 3-Connecting the watch successfully



Figure Reference 4-

GT5-Audio Bluetooth Name

Equipment Binding

10:18

Bluetooth

Mobile Phone

6. Watch, headset connection and pairing notes 1) Ensure that the cell phone Bluetooth is on

2)Make sure the device is fully charged, please turn it on or charge it before

3)Make sure the device is within 50cm from the phone when pairing and

connecting.
4) If the device is not searched in the APP, please check if "FitCloudPro" is

allowed to use Bluetooth in the phone permission settings.

5) Make sure the headset is removed from the watch base when pairing. 6) If you have paired your watch or phone with another Bluetooth device,

you need to reconnect.

you have more than one BASIX-GT5 watch, when you connect the watch Bluetooth in APP, please pay attention to whether the watch Bluetooth ID address in APP is the same as the watch.

06 /Headset UI operating instructions

1. Tap the touch button 4 times before pairing: English and Chinese tones switch:

2, Long press 2 seconds to turn on the phone, long 1.5 seconds to reject the call, long press 3 seconds to turn

3. Tan the touch button 2 times to answer/hang up the

phone; 4. Tap the touch button 4 times to wake up SIRI:

5. Tap the touch button 2 times:play/pause.

6, Tap the touch button 3 times: the previous song; three touches of the right headset touch button; the next song.

7. Headset restore factory settlings: phone disconnected from the headset, headset out of the watch, tap the touch button 2 times and long press the headset for 5 seconds. (If both headsets can not be paired, you can restore the factory settings for re-pairing)

Headset function use instructions and precautions:

a. Answer incoming calls and hang up:

If there is an incoming call while the headset is in the watch base, take the

headset out of the base and double tap the headset touch button to answer



92mm

h Reject incoming calls

When there is an incoming call, the device will vibrate and have a display reminder, long press the touch area for 3 seconds to reject the call directly. or long press the headset touch button for 3 seconds to reject the call. Voice assistant and make calls

The voice assistant of the phone can be activated by tapping the touch button 4 times, which can be operated by the voice assistant to dial out the phone, etc. *The success rate of command execution after activating the voice

assistant is related to the degree of intelligence of the phone's voice assistant itself.

*When activating the voice assistant, you must ensure that the headset leaves the watch base and is effectively connected to the phone's Bluetooth.

07 /Watch UI operation instructions

*Note: To make sure the data is valid, please enter your real gender, age, height and weight in the profile of APP.

A. Power on/off When the device is off, press and hold the multi-function button for 3 seconds to turn on the device. When the device is on, press and hold 3 seconds to enter the shutdown option.

B. Exercise monitoring

2mm

Enter the sports monitoring interface, displaying the current step count, distance and calories consumed

C. Sleep monitoring

Enter the sleep monitoring interface, displaying the total sleep time last night.

D. Heart rate/blood pressure/oxygen test Switch to the heart rate/blood pressure/oxygen test interface, the LED light

on the back of the watch will light up and the heart rate/blood pressure/oxy-gen test will start, 1-2 minutes later the current heart rate/blood pressure/oxygen value will be displayed, click the touch area to exit the current test. You can also use the cell phone APP to test the heart rate/blood pressure/oxygen single item or all items at the same time, synchronize the test data, set the whole point of heart rate measurement, and turn on the heart rate alarm switch

Blood pressure test method: Please keep your hody relaxed and still during the test, make sure the watch is at the same height as your heart (as shown on the right), and do not talk during the test.

*The data measured by this product is for reference only and cannot be used as medical diagnostic data. It is not the same concept as the blood pressure trend and heart rate used for medical diagnosis, so please do not use it for diagnosis or treatment. F. Find the watch

Simply click the smart watch finder function in the mobile app, you can easily and quickly identify the location by the vibration emitted by the F Alarm Clock

You can set an alarm in the alarm setting interface of APP, and the device will remind you accordingly.

G. Message alert/push When there is a new message, the device will vibrate to remind and display the message content; the corresponding message displays the corresponding icon.

Note: Please turn on the APP reminder switch first; if you want to display the

notification content, you also need to set the corresponding instant tool to display the message content.

H. Remote control photo-taking
Enter the "Shake to take pictures" interface through APP, press the middle touch button or shake the watch quickly to take pictures remotely.

Notes on the use of the watch:

1. It is forbidden to use an adapter with charging voltage >5V and charging current >2A for the watch.

2. It is forbidden to charge the watch with water damage.
3. This product is an electronic monitoring product, not as a medical reference, the data is for reference only.

4. Wearing the headset during strenuous exercise may cause damage or loss of the product when it falls off during exercise.

5. photoelectric sensor is a highly sensitive components, be careful of hard objects bruising. Wearing a period of time may have sweat, dust attached to the surface available soft cloth to clean regularly.

6. To ensure driving safety, please do not make phone calls while driving. If you need to use the headset to answer incoming calls, please make sure to take out the headset from the watch base and out it on before driving, do not do this operation during driving.

7. Please ignore the connection with the car Bluetooth in the Bluetooth setting of the cell phone first.

08 /FAQ

O:Why is the heart rate (sleen) test not accurate?

A.First of all, the watch device is to monitor human activities through electronic sensors, which is a consumer grade product, it is normal to have some error, please treat the data objectively.

A:Android phone - Settings - Permission Management - Find "FitCloudPro" app - Trust this software.

1. If your phone has installed security management or cleaning and acceleration applications, please set "FitCloudPro" as a whitelist (trust list). 2. In the permission management program of your phone system, please set "FitCloudPro" as a trusted application, as the caller ID and other functions need to get permission to achieve the function.

Q:There is a reminder on the device for incoming calls, but I can't hear the

A:There will be a delay on the Bluetooth headset when the call comes in, you can answer it after a few rings. If the call is connected through the phone, please check on the phone whether the voice channel is the phone or the headset, if the phone is switched to the headset, the default follows the principle of answering from which device is connected on which device

Q:I am wearing a headset, but I can't hear the ringtone when I call? A:Please make sure the headset and the phone are within the effective

Bluetooth connection distance, if the phone is connected to many Bluetooth devices, please clear the invalid connection in the Bluetooth settings of the

If your phone is connected to many Bluetooth devices, please clear the invalid connection in the Bluetooth settings of your phone.

*More Q&A is available in the APP "FitCloudPro", Me-FAQ menu.

09 / FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Regrient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

 Connect the equipment into an outlet on a circuit different from that to
- which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the ECC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation. The device has been evaluated to meet general RF exposure requirement.