Go to www.vtechphones.com to register your product for enhanced warranty support and the latest VTech product news.

vtech

Quick start guide



VM919HD VM919-2HD

Transmit frequency

requency control

Full Color Pan and Tilt HD Video Monitor

properly for any given period of time. Further, this is no a medical device and should not be used as such. This product is intended to acciet unui in consolition. Do not use this product near water. For example, do not use it next to a bath tub, wash bowl, kitchen sink, builded this or pulmental pool of the work barrowset.

ctric shock and injury, including the following:
Follow all warnings and instructions marked on the

CAUTION: Use only the b of battery into fire or a hot over, or mechanically crushing or cutting or the battery can result in an explosion. Leaving the battery in an extremely high temperature surrounding one improved transport environment can result in an explosion or me seawage flammable liquid of gas. Battery subjected to extreme low air pressure may result in an explosion or the leake able liquid or gas. Dispose of

to the information in The BBRC cast.

Use only the adapter included with this product. Incorrect adapter polarity or voltage can seriously Baby with and parent unit power adapters. Chuptur SY DC 1000mA or SY DC 10000MA or SY DC 10000 Δ

IMPORTANT SAFETY INSTRUCTIONS

plate is located at the bottom of the

as longer sustained or tree.

Warning-stranguistion Hazard

Warning-stranguistion Hazard

Fleep this cord out of the reach of

children invoice has 1 fl. (30%) avery, Do

Neiver place the bibly unit(s) inside the baby's cito or

Neiver place the bibly unit(s) inside the baby's cito or

with your busy mortion, and the control of the reach of

with your busy mortion. It is reached as a flowled or bible

mortion at the law prior miferes electric devices

telephone, intercone, room monitors, televisions,

fordings in the substitution of the control of the law prior the control of the law prior miferes electric devices

telephone, intercone, room monitors, televisions,

controls in the substitution of the controls in the prior the control the control the control the controls in the prior the control th For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily Unplug this product from the wall outlet before cleaning Do not use liquid or aerosol cleaners. Use a damp cloth

Precautions for users of implanted cardiac pacemakers
Cardiac pacemakers (applies only to digital cordiess
Wireless Technology Resparsh 17 —
respect to the control of the cardiac pacemakers
wireless Technology Resparsh 1 for cleaning.

Do not cut off the power adapters to replace them with other plugs, as this causes a hazardous situation.

Do not allow anything to rest on the power cords. Do not allow anything to rest on the power cords. Do not one crimped on or crimped.

Technology Research, LLC (WTR), an independent entity, led a multidisciplinary evaluation of the n or crimped, his product should be operated only from the type of power source indicated on the marking label. If you re not sure of the type of power supply in your home, oncult your dealer or local power company. for not overlead well outsits or use an extension cord. to not place this product on an unstable stable, shelf, and or other unstable surfaces. taker patients uld keep wireless devices at least six inches from the emaker.

when the product is subsequently used.

You should test the sound reception every time you turn on the units or move one of the components.

Children should be supervised to ensure that they do not play with the product.

knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

SAVE THESE INSTRUCTIONS

aution.

Use a discrete he product at a temperature between the product at a temperature between and 105°.


Do not expose the product to extreme cold, heat or direct sunlight. Do not put the product close to a heating source.

Bathesis should not be exposed to excessive heat such as bright sunthine or fine.

Should NOT place wireless devices directly over the pacemaker, such as in a breast pocket, when it is turned ON. .
evaluation did not identify any risk to bystanders with
sakers from other persons using wireless devices.

This VTech product complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user's manual, the

WHAT'S IN THE BOX

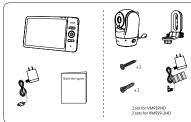

CONNECT THE BABY MONITOR

■NOTES

Use only the power adapters supplied with this product.

Make sure the parent unit and the baby unit are not connected to
the switch controlled electric outlets.

me switch controlled electric outlets.

Connect the power adapters in a vertical or floor mount position only. The adapter's prongs are not designed to hold the weight of the parent unit and the baby unit, so do not connect them to any ceiling, under the-table, or cabine outlets. Otherwise, the adapter may not properly connect to the outlets.

may not properly connect to the outlets.

Make sure the parent unit, the baby unit and the power adapter cords are out of reach of children.








Notes


The battery icon indicates the battery status (see the following table).

	The screen displays The light flashes.	The battery has very little charge and may be used for	Charge without interruption (ab 30 minutes).
	The battery icon becomes solid	only a short time. The battery is fully charged.	To keep the battery charged, con it to AC power when not in use.
4	-	00 055 7115 04	

POWER ON OR OFF THE BABY MONITOR



POSITIONING THE BABY MONITOR

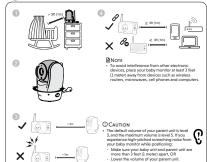



Once you power on both you baby unit and parent unit, you parent unit displays image the baby unit, and the LINK LED light turns on.

The green LED light of the baby unit turns on.



Crystal controlled PLL synthesizer

The Bodyandra Mose search file was created by Calonifer Card and su sear during the Creative Commonst Bearing The Stream Aloise sound file was created by Casofine Ford, and is used under the Creative Commonst Bearing. The Calcade Al MgHz sound file, was created by Mide Schoniga its used under the Creative Commons Bearing.

Parent unit: 3.7V Lithium-ion battery Baby unit and parent unit power adapters:

Maximum power allowed by P-LC and R. Actual operating range may vary according to environmental conditions at the time of use.

(IPS 1200x800 pixels)

8aby unit: 2.406-2.475GHz

IECHNICAL SPECIFICATIONS

Press & to zoom in or out

Adjust speaker volume

BASIC OPERATION - PARENT UNIT

Press -VOL / VOL+ to adjust your parent unit



Talk to your baby via the baby unit

1. Press and hold the TALK key. 2. When the icon displays on screen speak to your parent unit. Your voice is transmitted to the baby unit.

the TALK key and hear your baby again



Turn on/off the parent unit screen

You can turn on or off the parent unit screen without powering off the parent unit. You can still hear sound from the baby unit.

· Press POWER on the parent unit to turn off the screen.

Press any keys on the parent unit to



Use the menu

Press MENU to enter the menu, choose a menu item, or save a setting. You can use the parent unit for advanced settings or operations, such as to play or stop the baby unit fullably, or to adjust the baby unit sound sensitivity.

openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This produc should never be placed near or over a radiator or heat

While in the menu:

LED light

3- level sound light

Press ∧, ∨, <or> to scroll among the

Press SELECT to select an item, or to save a setting.

Press TALK to return to the live video.

Press to go to the Help & info page.



OVERVIEW - PARENT UNIT



MENU/SELECT

12 DESET


13 Antenna - VOL/ VOL+

Microphone

10 POWER ke

Power jack

Overview - Baby unit



Camera lens

Light sensor LED indicator Infrared LEDs

Position the sensor horizontally for its optimal usage. 10 Power jack

() ON/OFF switch

11 Threaded socket for wall mounting 12 Pair button

0

W W

7 Antenna NEED HELP?

For operations and guides to help you using your video monitor, and for latest information and supports, go and check the online help topics and online FAQs.

Use your smartphone or mobile device to access our online help Go to https://help.vtechphones.com/vm919hd or

https://help.vtechphones.com/vm919-2hd: OR Scan the QR code on the right. Launch the camera app or QR code scanner app on your smartphone or tablet. Hold the device's camera up to the QR code and frame it. Tap the notification to trigger the redirection of the online help.

If the QR code is not clearly displayed, adjust your camera's focus by your device closer or further away until it is clear.

fou can also call our Customer Support at 1 (800) 595-9511 [in US] or L (800) 267-7377 [in Canada] for help.



Alerts - Sound, motion and temperature

Turn on/off Sound Detection Alert.

section)

■ PARENT UNIT ICONS Main menu icons

Main menu node (For VM919-2HD only

Baby unit 1 in Single mode

Patrol mode

Split mode

12

Melodies and soothing sounds



Melodies and Soothing Sounds Select play all melodies, or play one of the five melodies and four soothing sounds.

Timer





Sound Select sound Sensitivity level.

 Turn on/off Auto Wake Up function. (See Sound Detection and Auto Wake Up

Turn on/off Motion Alert. Select motion Sensitivity level (See Motion Detection section)

Turn on/off Temperature Alert.
Set the parent unit to beep whenever the room temperature detected by the baby unit falls outside of the set temperature.

Select Minimum temperature for aler

range.

range. Select temperature Format.
 Set temperature display in Fahrenheit (*F) or Celsius (*C).

Parent unit settings

 Adjust parent unit screen Brightnes Turn on/off Dim Mode.

Baby unit settings

 Turn on/off baby unit's Status LED. Select Field of View.
Choose Wide angle or Standard

Adjust baby unit's speaker Volume.



 Turn on/off Low Battery Alert Tor Turn on/off Low Battery Alert Tone.
 Set the parent unit to beep when the battery is low.
 Turn on/off No Link Alert Tone.

Set the parent unit to beep when the link between the parent unit and the baby unit is lost.

Status icons

201

ш

1000 Current view status · The baby unit number that is being viewed

- Single CAM mode.

Patrol mode (* For VM919-2HD only).

Split mode (* For VM919-2HD only). Split mode (* For VM919-2HD only)

9

概 Motion alert is turned on. 94

Sound detection alert is turned on. .0 Melodies or soothing sound are turned on

G)III Parent unit speaker is muted. Temperature alert is turned on.

Alert icons

1.

Displays when parent unit's battery is low and needs charging.











Sound Detection and Auto Wake UP

Adjust sound detection sensitivity

You can turn on **Sound Detection Alert** and adjust the **Sound Sensitivity** to detect sounds and turn on the parent unit while its screen is switched off or dimmed

When the baby unit detects sounds that exceed certain levels, the parent unit screen will

Level 3 (Highest)	Level 2 (Medium)	Level 1 (Lowest)
9	9	3
The parent unit screen and speaker turn on for very small sounds, including background noises from your baby's room.	The parent unit screen and speaker turns on for loud babbling and louder sounds from your baby. The parent unit remains quiet when your baby makes soft sounds.	The parent unit screen and speaker turn on for loud crying or screeching sounds from your baby. The parent unit remains quiet when your baby makes soft sounds.

Sound activated screen and audio - Auto Wake Up

When Auto Wake Up is turned on the parent unit screen stays off t save power when the baby unit detects no sound.

cetects no sound.

Once the baby unit detects sounds that are louder than the chosen sound sensitivity level, the parent unit screen and speaker turn on automatically. The parent unit will then turn off again after 50 seconds of seconds of the county detection.

of no sound detection. Notes

♠ NOTES
If you have muted the parent unit screen speaker, only the parent unit screen will turn on when a sound is detected. If you have turned on Auto Wake Up but turned off Sound Detection Alert, the parent unit will wake up when the baby unit detects sounds that are louder than the chosen sound sensitivity level.







MOTION DETECTION

Adjust motion detection sensitivity

You can turn on Motion Alert and adjust the Motion Sensitivity to detect motions and turn on the parent unit while its screen is switched off or dimmed

When the baby unit's camera detects motions that exceed certain levels, the parent unit screen will turn on and the baby unit starts transmitting the sounds to the parent unit, and you can see and hear your baby.

If you have turned on Motion Alert, the parent unit beeps when the baby unit detects

	Level 3 (Highest)	Level 2 (Medium)	Level 1 (Lowest)
	* * *	* - *	*
Description	The parent unit screen and speaker turn on for small motions, such as yawning or stretching.	The parent unit screen and speaker turns on for normal daily motions, such as people walking around the house.	The parent unit screen ar speaker turn on for large motions, such as children are chasing or jumping around.

NIGHT VISION

THE RBRC SEAL



The baby unit has infrared LEDs that allow you to see your baby clearly at night or in a dark room. When the baby unit being viewed detects low light levels, the infrared images from the baby unit are in black and white, and appears on the screen.

■ Notes

It is normal if you see a short white glare on your parent unit screen as the baby unit is adapting to the dark environment. When the infrared LEDs are on, the images are in black and white. This is normal.

numerations commence is comply with the equipments for a Cast 8 digital device under Part 3 of the increes in a registral including the complete generates, uses and on radion acids foreigness complete to a complete device of the complete generates, uses and on radion acids foreigness complete to the complete generate acids of the complete generates uses and on radion acids foreigness to a country to the complete generate generates and the complete generates to a country to the complete generates and the complete generates god to try to correct the interference by one or mose of the following measures:

This device compiles with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause

to ensure another of users, the ECC has established or fitter to the amount of radio frequency energy that can be adely as user or bytamine excording to the intended usage of the product. This product has been desired and found to know he ECC criteria. The baby unit shall be installed and used such that parts of all person's body are maintained at a distance procreasingly 8 (in CO or or) errors. The transmitter and entenne of the parent cut shall be held a least 1 in (2.5 cm) from y

e. rm "IC" before the certification/registration number only signifies that the Industry Canada technical specifications were

product meets the applicable Innovation, Science and Economic Development Canada technical specifications.

Depending on the surroundings and other interfering factors, like lightings, objects, color and backgrounds, the video quality may vary. Adjust the baby unit's angle or place the baby unit at a higher level to prevent glare and blurry display.

DIM MODE



For VM919-2HD ONLY



Select Patrol mode as your monitoring mode to alternately view the image from baby units 11 and 21 every 10 seconds.



Select Split mode as your monitoring mode to view the images from both baby units at once.

> Note:

While in Split mode, you can press <or>
> to highlight the view of the baby unit 1 11 [1] [[] or baby unit 2 2 []], and hear the sounds transmitted from the baby unit.

MOUNT THE BABY UNIT ON DRY WALL (OPTIONAL)

- Check for reception strength and baby unit's angle before drilling the holes The types of screws and anchors you need depend on the composition of
- a pencil to mark the top and the bottom holes as shown. Remove the wall mount bracket and drill two holes in the wall (7/32 inch drill bit).



- 2. If you drill the holes into a stud, go to step 3.
- If you drill the holes into an object other than a stud, insert the wall
 anchors into the holes. Tap gently on the ends with a hammer until the
 wall anchors are flush with the wall.

3. Align the wall mount bracket and screws with the holes in the wall as shown. Tighten the screw in the middle hole first, so that the wall mount bracket position is fixed. You can tighten the other screw in the top hole.

Tighten the screw into the threaded socket at the

bottom to secure the baby unit.



3. Insert the screws into the holes and tighten the screws until only 1/4 inch



Tighten the screw into the threaded socket at the bottom to secure the baby unit. Align the holes on the wall mount bracket with the screws on the wall, and slide the wall mount bracket down until it locks into place.





 You can maximize your baby unit's viewing angles by tilting the wall mount bracket.
 Hold the baby unit, and then rotate the knob in anticlockwise direction. This will loosen the joint of the wall mount bracket. Tilt your baby unit up or down to adjust to your preferred angle. Then, rotate the knob in clockwise direction to tighten the joint and





Q_s Frequently asked questions

Below are the questions most frequently asked about the baby monitor.

1. Disconnect the power to the baby units and the parent unit

- 3. Turn on the baby units and the parent unit.

Perhaps the baby unit is not connected to the power. Insert the appliance plug into the baby unit and put the adapter in a wall socket. Then, slide the **U ON/OFF** to switch on the baby unit and to establish connection with the parent unit.

connected to AL power?

Why is my screen in black

The screen is in black and white during night-time or in a dark room when the night
and white?

vision feature is activated. This is normal.

surry display on my like lightings, objects, colors and backgrounds may affect the image quality on your creen when viewing my parent unit screen. Adjust the baby unit's angle or place the baby unit at a higher level to

The baby units may be out of range. Move the parent unit closer to the baby units (but not less than 3 feet).

The temperature of your baby's room may be too high or too low. Why don't I hear a sound/ The parent unit speaker volume may be too low. Press VOL+ to increase the volume, or

Why can't hear my baby use the parent unit speaker volume may be too low. Press **VOL+** to increase the vo Why can't hear my baby use the parent unit menu to change sound sensitivity level to the highest level. cry?

If you power on only one baby unit, your parent unit may display Make sure baby unit X is on or move closer to baby unit X, and the LINK LED light flashes. Switch to the baby unit

CALIFORNIA ENERGY COMMISSION BATTERY

The RBRC Seal and 1 (800) 8 BATTERY® are registered trademarks of Cali 2 recycle, Inc.

FCC AND IC REGULATIONS

CHARGING TESTING MODE

registion exposure statement in registion exposure limits set forth for an uncontrolled environment. The leably unit compiles with FCCR Fradiation exposure limits set forth for an uncontrolled environment. The intensited and opposited with a minimum distinct of 8 in (20 cm) between the baby unit and all persons? Intensited and opposited with a minimum distinct of 8 in (20 cm) between the baby unit and all persons Consideration with any other antenna or transmitter. This equipment complies also with Industry Canada R Canadas's Health Code for Exposure of Humans to 8F Fields.

FOR CFTL COMPLIANCE ONLY

Mesures de sécurité importantes
La plaque signalétique appliquée est située au bas du socle de 18. l'unité du bébé.

The RBRC real on the lithium-ion battery indicates that VTech Communications, Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, which make not of service within the United States and Canda.

The program provides a convenient afternative to placing used lithium-ion batteries into the trash or municipal wants, which may be illegall in your area.

suivent:
Observez toutes les instructions et mises en garde inscrites sur
19.
Tappareil. VTech's participation makes it easy for you to drop off the spont battery at local retailers participating in the program or at authorized VTech product service context. Please call 1600/9 8 ARTERY in information on Li-hon battery recycling and disposal banniverstictions in your rate. VTech's involvement in this program is part of its commitment to protecting our disposal banniverstictions in your rate. VTech's involvement in this program is part of its commitment to protecting our

informations du Soau RBRC.
Nutflisce que los adaptateurs inclus avec ce produit.
L'utilisation d'un adaptateur dont la polarité ou la tensi
inadéquate risque d'endommager sériousement le pr
mettre votre sicurité en péril.
Adaptateur de Truinle du bébé :
Adaptateur de Truinle du bébé :
Adaptateur de Truinle du bébé :
Sorfie: SV CC LOODina / SV CC LSOOmA

Débranchez les cordons d'alim le hinc-niles

Manufacture.

No faites functionner cost appareil curiavec le type chairmentation indique sur l'efiquette. Si vous ne consiste pas le type d'aliementation que vous posséder à votre doministe, consulter uotre marchand ou votre compagni locale d'álectricité.

Ne surchargou par les prises de courant murales ni les discourant murales ni les discourant participations.

Ne placez pas cet appareil sur un chariot, meuble, trépied, support de montage ni table chancelants.

assurer qu'il y ait une bonne directation d'air. Viendrous puissail d'obligh à liverer les euventures de des plants de trenfoir dangereur ou causer des courti-ces plants de trenfoir dangereur ou causer des courti-ces de la courti-cie de la courti-puissail de la courti-puissail de la courti-cie de la courti-le de

(10s

19. Affin die r\u00e9durie leis riispase d'\u00e4lectroccution, no démontrez pas cot largeauel, mais lapportien de dans un centre de service-que comfent cell appareil, al l'enception de l'acception de la que comfent cell appareil, al l'enception de l'acception de la recette autorité à certaillaire porties du overvitten, r\u00edigue de vautre d'anagier. Un resolution promotre pur pui la suite présidente d'es risques d'anagier. Un resolution promotre pur pui la suite présidente d'es risques d'un president promotre pur pui par la suite présidente d'es risques d'un president par la risques d'un president promotre put pui par la suite présidente d'es risques d'un president par la risques d'un president par la risques d'un president president par la risques d'un president par la risque d'un president par la risques d'un president par la risque d'un president par la risques d'un president par la risque d'un president partier de la risque d'un president par la risque d'un president partir par la risque d'un president par la risque d'un president

20. You changed many to include the change from gas worse million.

12. Example to composeme after the weither coldnic class and the change of the change of

Mises en garde 1. Utilisez et entreposez le produit à une température entre 0 ° C (32° F) et 40 ° C (104° F).

2. N'exposez pas cel apparell à des froids ou des chaleurs extrémes, ainsi qu'à la lumière directe du soleit. Ne l'installez pas priet d'une source de chauffage.

3. Le bloc-piles ne doit pas être exposé à la chaleur excessive telle que la lumière du soleit qua feu.

Les vertissement - Risque de strangulation - Les vertissement - Risque de strangulation - Les vertisses en ETRANGLES dans des cordents de cordent de corde

numériques sans f8): L'organismo Whiteless Technology Research, LLC (WTR), une firmit de recharche indépendants, a mend une évaluation paudiciplination des recharches entépendants, a mend une évaluation paudiciplination des interférences entre les téléphones sans f8 pointaits et les stimulations carriers problemés dans forquision Appuyée par l'Administration des laiments et créquise (FDR) des Etés-Unix, la firme WTR recommande aux médecins:

qui unseent dispositifs sans 11 à proximité de ceu.
Champs détectemagnétique (EMF).
Ca produit de Viten est conferme à touse les naportant aux champs des dromagnétiques (EMF) le maniputez correctment en suivant sei instruction utilisation sera socuritative pendant de instruction utilisation sera socuritative pendant de instruction utilisation sera socuritative pendant de napourable soin ils medilieures évidences scientifiques dont aujourathui.

LIMITED WARRANTY

How long is the limited warranty period?

How long is the limited warranty period?

The limited warranty point of the Product extends for ONE (1) YEAR from the date of purchase. If VFGch repairs or explained as Marinty October Product of the Serrar One of the Servar o

with non-VTech accessories; or 5. Product whose warranty/quality stickers, product serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or

Product returned without a valid proof of purchase (see item 2 below); or

To obtain warranty service in the USA, please visit our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to www.vtechcanada.com or call 1 (800) 267-7377.

Other limitations

Please retain your original sales receipt as proof of purchase.