



MC3000 Series Quick Start Guide


<http://www.symbol.com/mc3000>
See User Guide for more information
This guide is applicable to all MC30XX series products

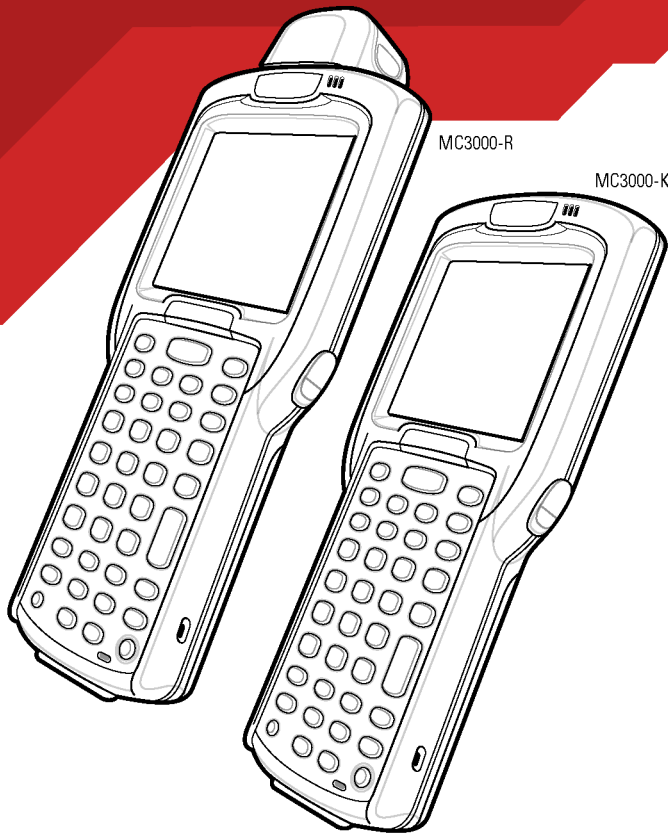


MC3000-K

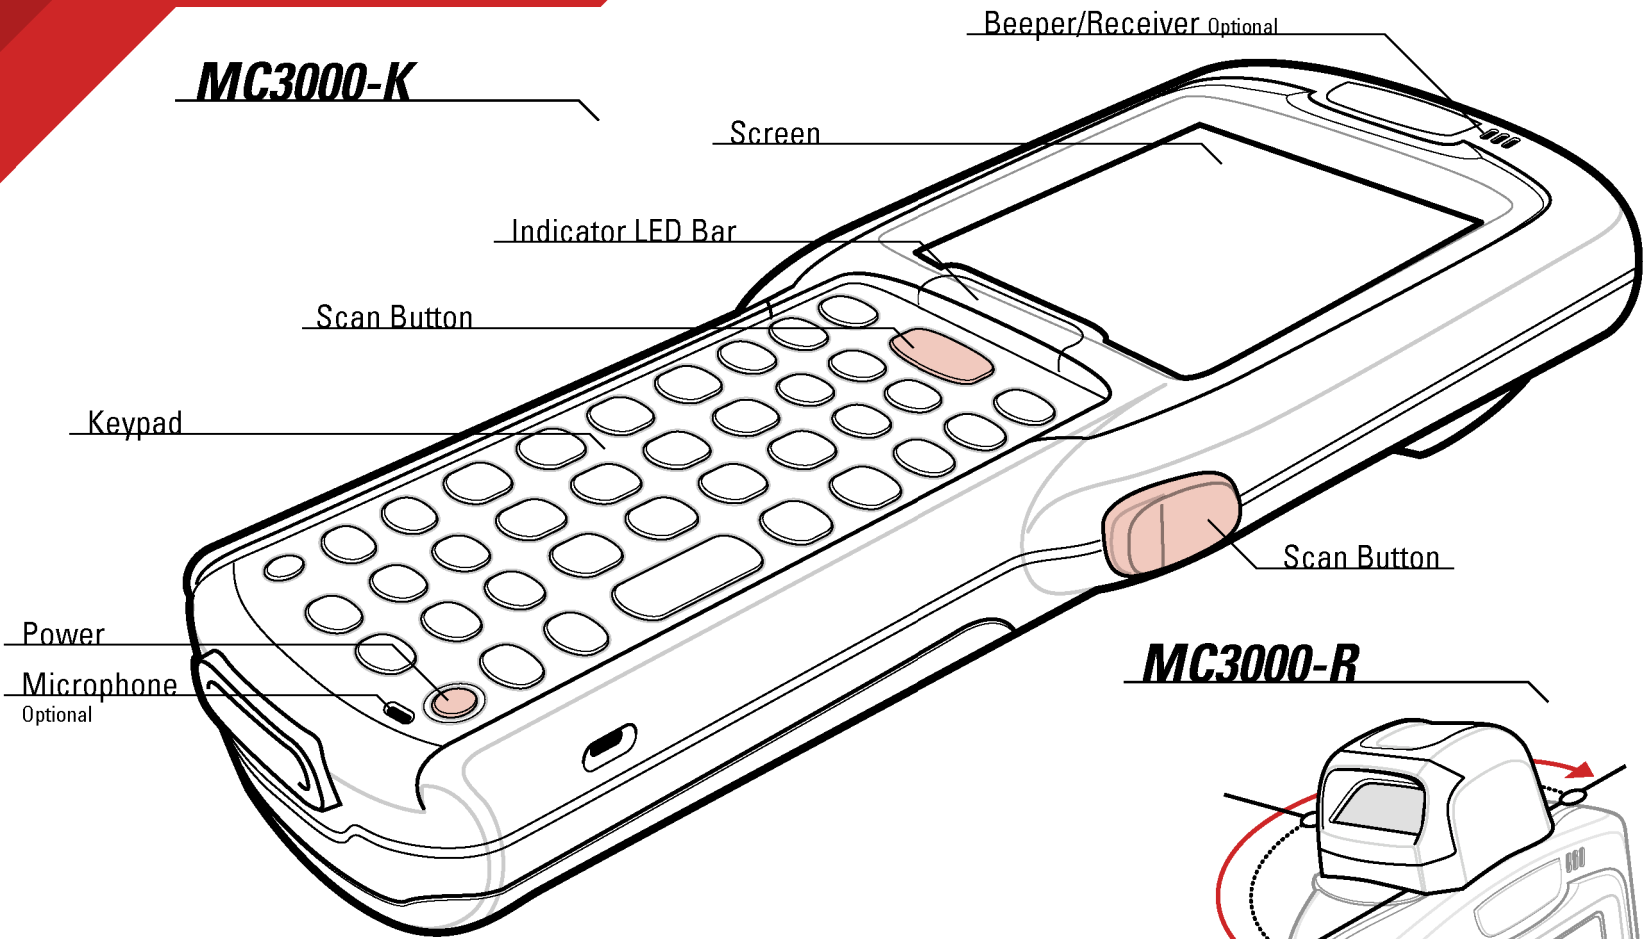


MC3000-R

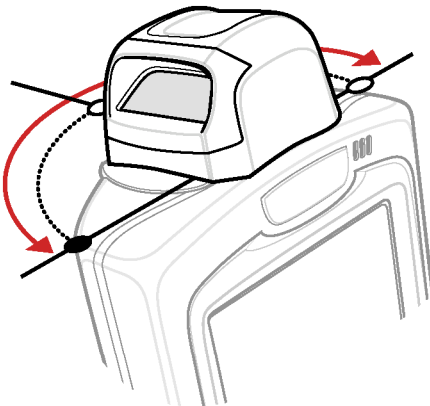


Battery Installation

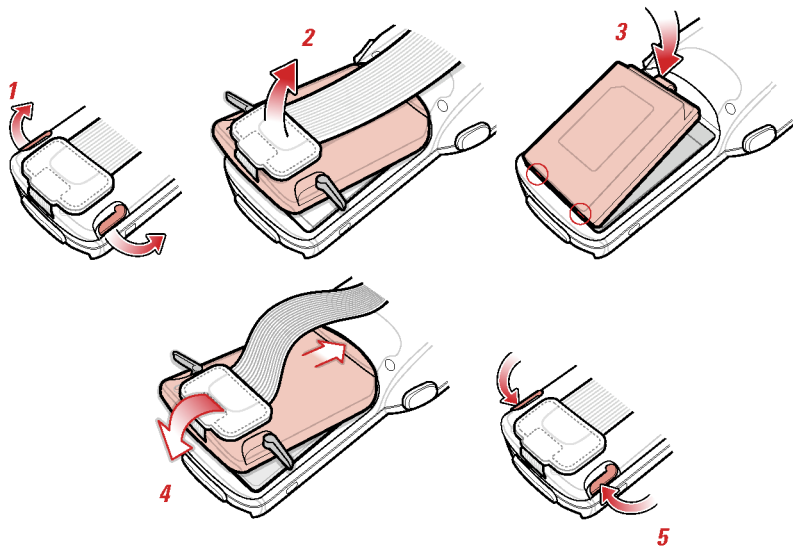



MC3000-K Back View

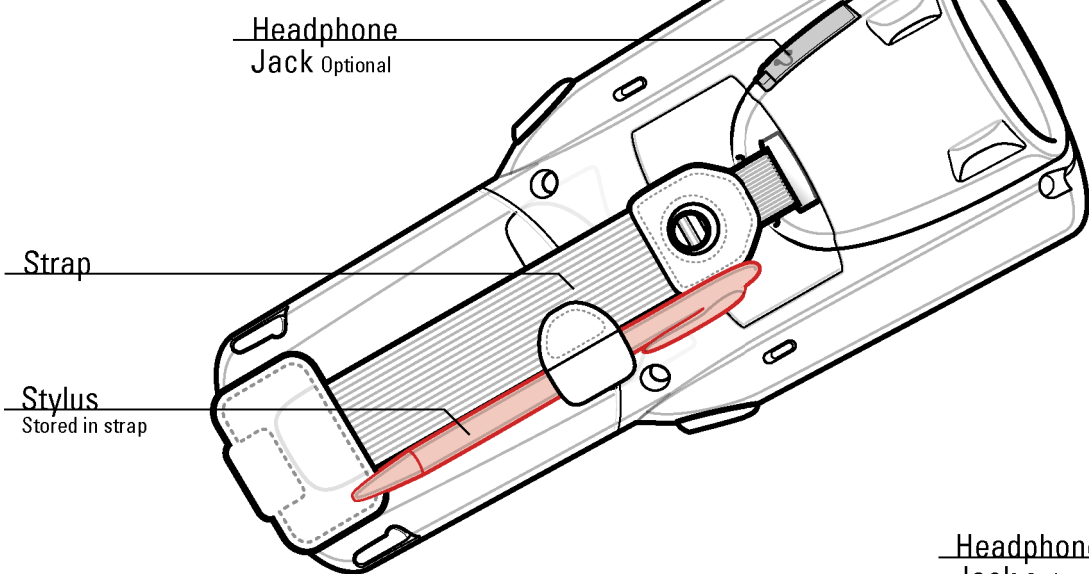


MC3000-R Back View

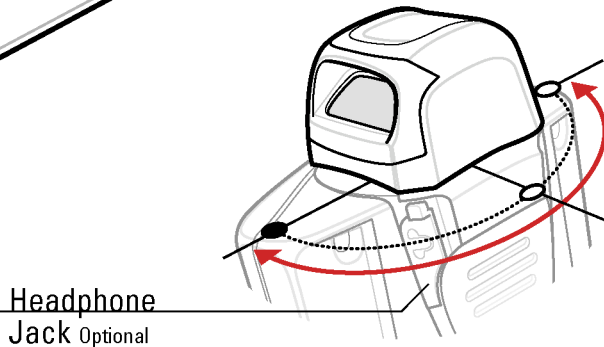

Accessory Installation

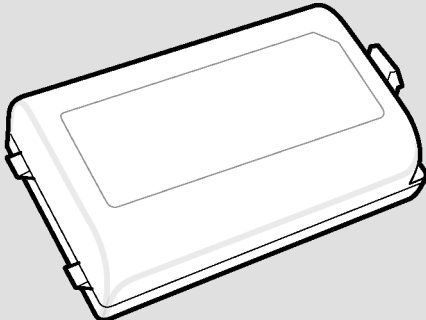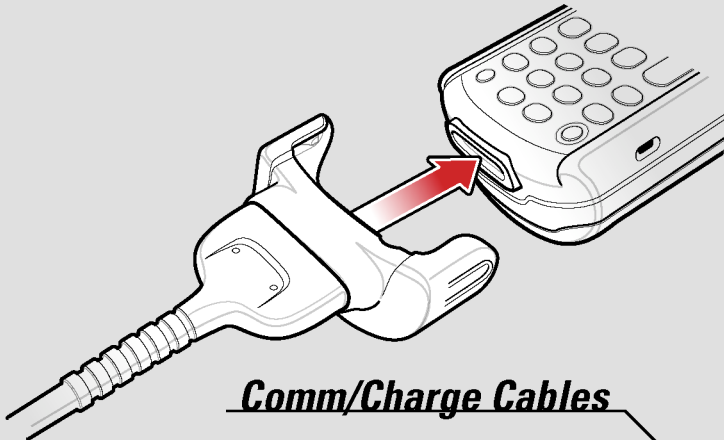


Extended Life Battery

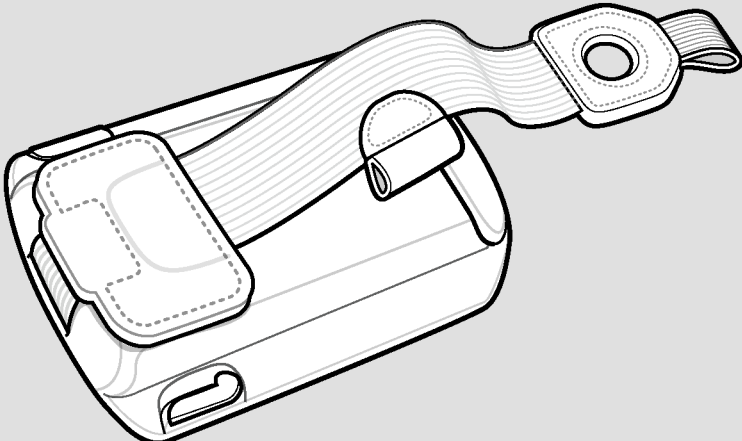


Extended Life Battery Strap/Door Assembly

Charging Instructions


● = LED Indicator Location
Slow Flash = Normal Charge | Solid Amber = Full Charge | Fast Flash = Charging Error

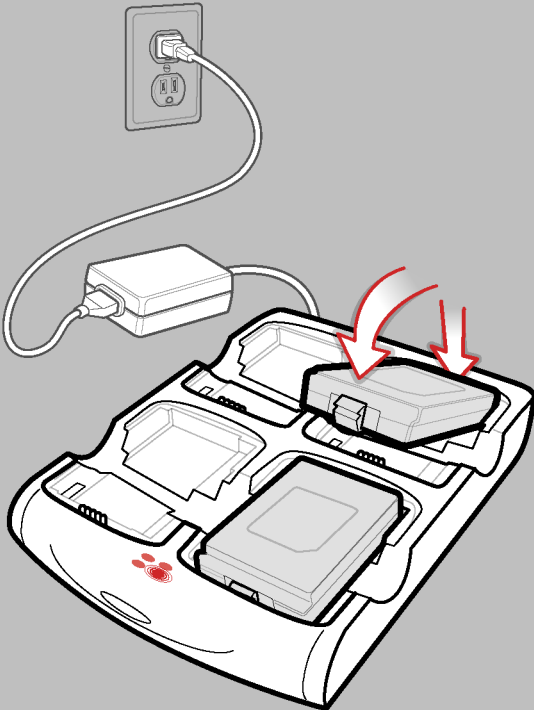

Four Slot Spare Battery Charger

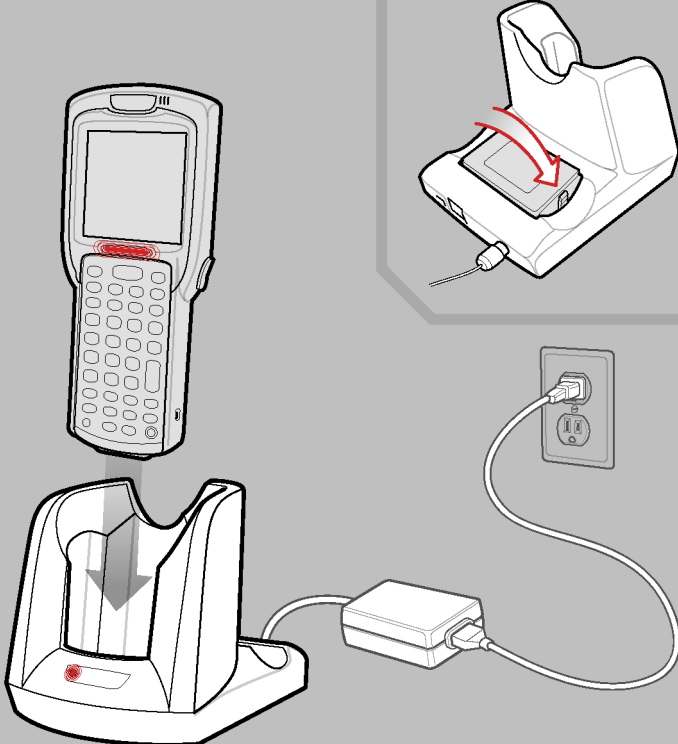



Single Slot Serial/USB Cradle

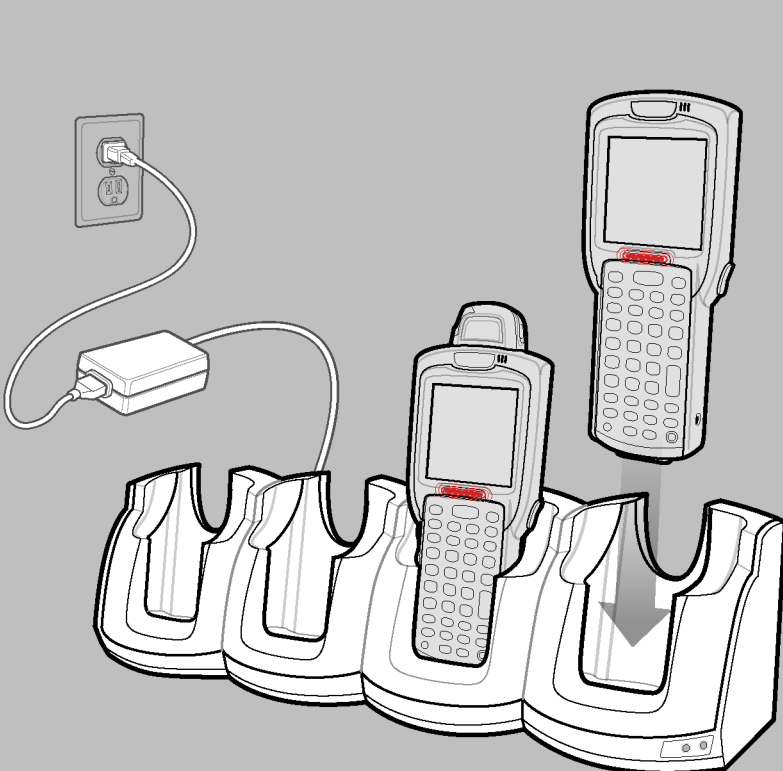


Four Slot Cradles

Charge-Only Cradle and Ethernet Cradle

Optimum Imaging and Scanning Positions

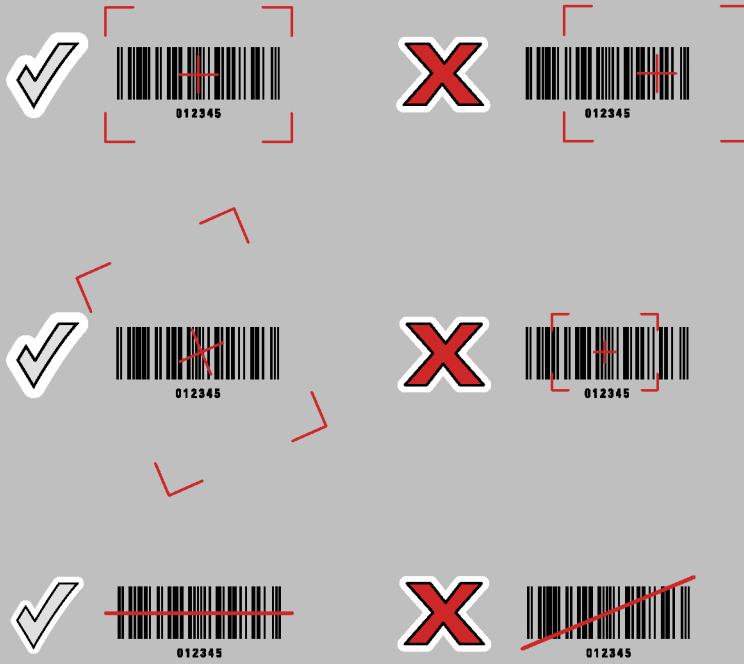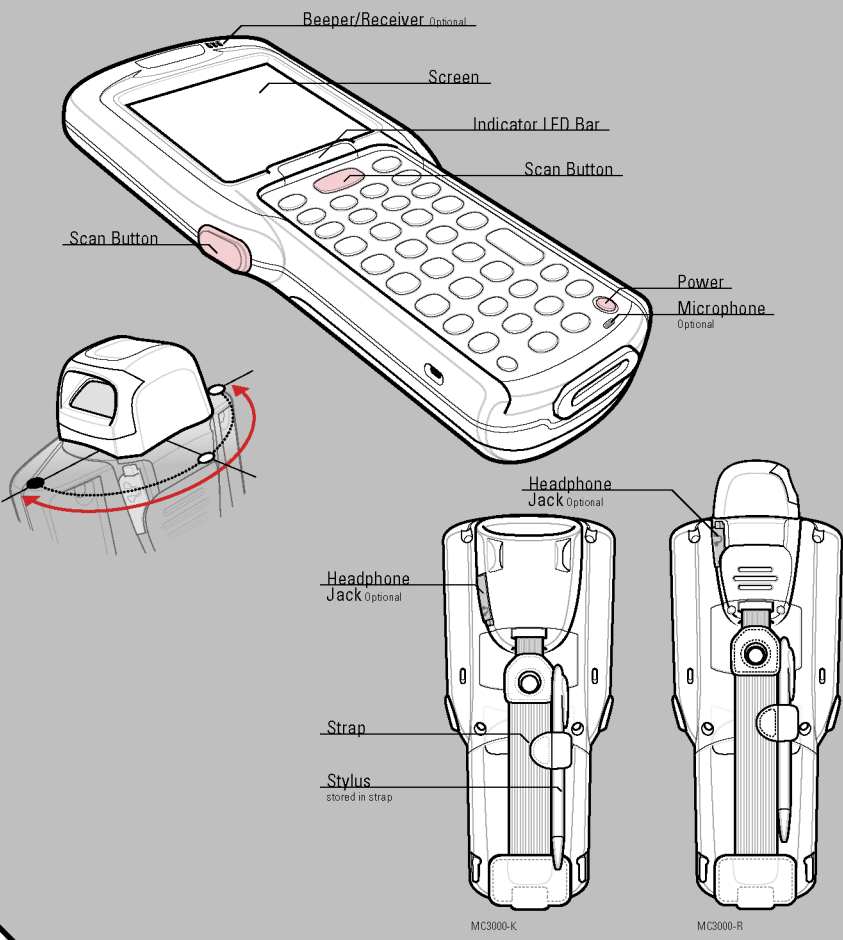

MC3000-K Scanning

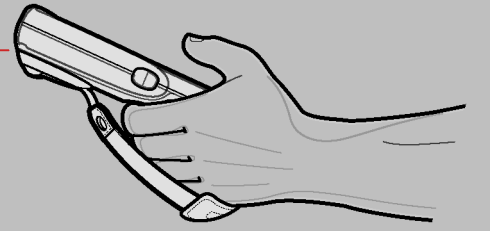

MC3000-R Scanning



Optimum Upright Body Postures



MC3000-K





MC3000-R




MC3000-R

Avoid Extreme Wrist Angles

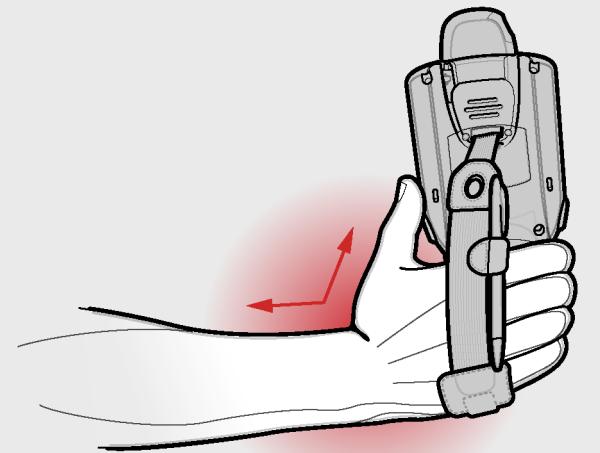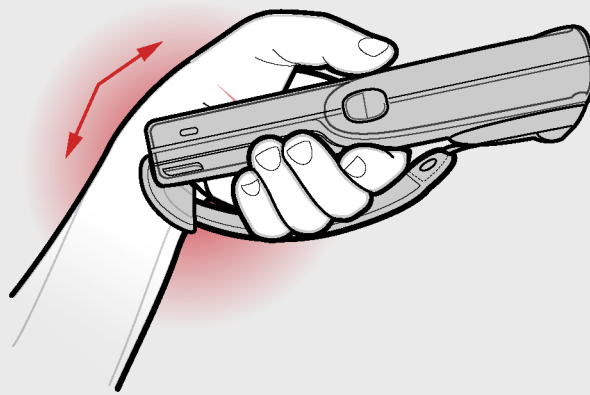

Optimum Body Posture for Low Scanning

ALTERNATE LEFT AND RIGHT KNEES

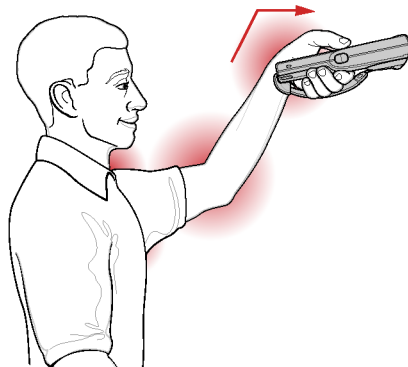

Optimum Body Posture for High Scanning

USE A LADDER



ALTERNATE LEFT AND RIGHT HANDS

TAKING BREAKS AND TASK ROTATION RECOMMENDED



MC3000 Series

72-68902-01 Rev A October 2004

Recommended Usage Guide

<http://www.symbol.com/mc3000>

SYMBOL TECHNOLOGIES, INC. One Symbol Plaza Holtsville, New York 11742-1300

Local Contact: