



ActivBand

TRACK EVERYDAY ACTIVITY & SLEEP

Product Manual



1

Getting Started

WHAT'S INCLUDED

Your FITRAX ActivBand
Activity + Sleep Tracker includes:

- FITRAX tracker
- USB charging cradle
- Wrist
- User manual



To save the battery, the Activity Tracker is set into hibernation mode when out the factory. Before first use, please long press screen for 10 seconds to activate the device. The progress bar will change from empty to full to indicate full activation as below:





Install the FITRAX ActiveLife APP
on your smartphone/tablet/PC



4

The bluetooth is always on without mark





Run APP to search the device then connect





Set personal information





Operation

1. Touch the screen once within 8 seconds to show the screens as below

08:52 AM Apr 30 

95236 

41789 

0.67 

0:45 

50% 

Mode Change



2. Long press the screen for 2 seconds till the sleep mark shows, then short touch the screen to enter the sleep mode, if not touched within 2 seconds, the tracker will stay at activity mode.




3. Long press the screen for 2 seconds till the people mark shows, then short touch the screen to enter the activity mode, if not touched within 2 seconds, the tracker will stay at sleep mode.



How to Wear the Activity Tracker

- Use the ActivBand to wear on your wrist
- It's water resistant
- Wear it in the shower!

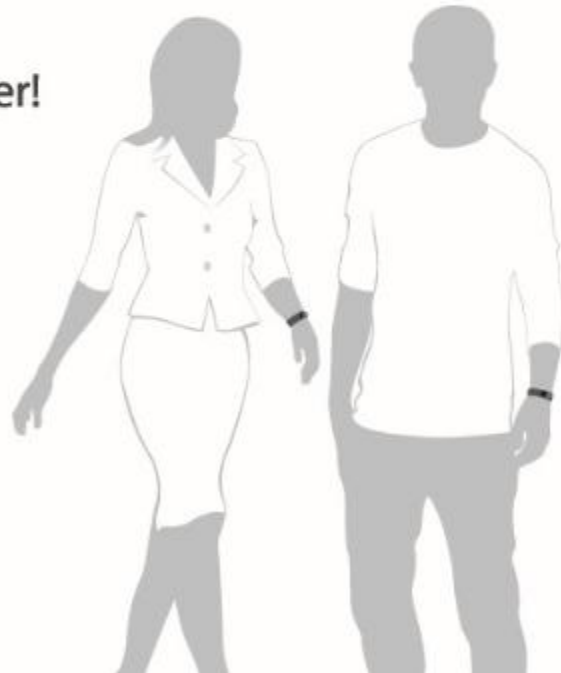



Battery Charge

- The empty battery mark will display when the battery is low or runs out.
- The whole charging process will normally take 1 or 2 hours.
- A fully charged tracker should last for approximately 5-7 days.

Note: Please charge the battery at least once a month to prolong battery life even when not using the activity tracker for a long time.



Specifications

Activity + Sleep Tracker

Size: Main body:38*15.5*11mm

Wristband:235*19mm

Weight: 108 g

Battery: rechargeable lithium polymer battery

Display: 0.91" OLED

Data Memory: 30 days

Walking distance: Max 999.99miles

Calories burned: Max 9999.9kcal

Activity time: 99h59min.

FCC ID: 2ADGEFTABJSBLE-1304



FCC Statements

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

MODIFICATION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.