


65*95MM

GS Wear

Smart AI mobile assistant


PRODUCT USAGE GUIDE

1.Appearance diagram

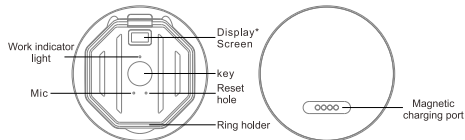

*The Pro version is equipped with a display screen.

Packing list: Host*1, Charging cable*1, Magnetic lead*1, User manual*1.

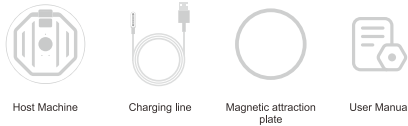

2.Product parameters

Product Name: Smart AI Mobile Assistant
Product size: 56 * 6mm
Body material: Zinc alloy
Work indicator lights: 2 pieces
Bluetooth: 5.3
Battery capacity: 160mAh/3.7V lithium-ion battery
Charging interface: 4pin magnetic charging
Charging time: 1.5-2 hours
Theoretical standby time: 60 days
System support: Android 8.0/iOS 10.0 and above versions

3.Quick start

Magnetic attraction plate

Some Apple phone users can directly attach the device to the back of the phone. If the magnetic attraction is insufficient after wearing the phone case You can stick the magnetic strip onto the phone case and then attach the device.
Android phone users are advised to stick the magnetic strip onto their phone or phone case before attaching the device.

Power on

For first-time use, please press and hold the button for more than 3 seconds. The device indicator light will turn on, indicating that the device has been turned on and entered standby mode.

Connect

Please scan the code to download and install the GS Fit app, or go to major app stores and search for "GS Fit" to find and download and install it.
For first-time use, please register a personal account and grant the necessary permissions to the app program to ensure normal device operation.



Turn on Bluetooth on your phone, open the "GS Fit" app to enter the device page, click on the "+" sign in the upper right corner, click on "Add Device" to enter Bluetooth search, find the Bluetooth device named "X6 or X6 Pro", click on "Connect", the app will initiate a pairing request, click "Pair" to complete the connection.
Note: If the connection is not successful, please check if the Bluetooth on your phone is turned on normally and if the device is turned on normally. Is the device in standby connection mode and not connected by any other phone.

Standby

The device does not need to be shut down. If there is no operation for 10 seconds, the screen will turn off. If there is no operation for 30 minutes, the device will automatically shut down.

Forced Shutdown

In case of device crash or no response, please use a long needle and press and hold the reset button for 1 second to force shutdown.

One click translation

Open the "GS Fit" app, click on the "One click Translation" card on the homepage, and enter the function page where you can set functions such as changing the speech recognition language and target language, displaying only the translation, and opening a floating window.
After maintaining the correct connection between the device and the APP, there is no need to enter the APP. Just make sure that the "GS Fit" APP is running in the background, and you can enter voice and one click translation at any time by long pressing the device button.

Simultaneous interpretation

Open the "GS Fit" app, click on the "Simultaneous Interpretation" card on the homepage, and enter the function page where you can set up functions such as changing the speech recognition language and target language, starting/pausing translation, etc.

Conference artifact

A technological tool that significantly improves the efficiency and effectiveness of meetings, integrating advanced speech recognition, transcription, recording, and organization functions to reduce the time and errors of meeting minutes.

Photo translation

Open the "GS Fit" app, click on the "Photo Translation" card on the homepage, enter the function page, select the target language, click to turn on the camera to enter the photo page, short press the shooting button to complete the photo shooting, the system will automatically recognize the text in the photo and translate it into the target language text, click the copy button in the lower right corner of the corresponding text box to copy the corresponding text content.

Face to face translation

Open the "GS Fit" app, click on the "Face to Face Translation" card on the homepage, and enter the function page. The application scenario of this function is a one person one sentence dialogue translation form. After selecting the corresponding language, user A speaks and long presses the corresponding recording button. After recording is completed, it is automatically translated into B's target language. When user B speaks and long presses the corresponding recording button, it is automatically translated into A's target language after recording is completed. Click the broadcast button to broadcast the translation result.

Mobile translation playback

After maintaining the correct connection between the device and the APP, open the floating window function, switch the APP to the background operation, open third-party software such as Tiktok, NetEase Cloud and other playback software, press and hold the device button to receive the voice sent by the mobile phone, translate and broadcast it, and the translation results will be displayed in the floating window.

Local recording

After the device is turned on, double-click the device button and the screen will start timing to start recording. Click to end recording.

PC mode

Align the charging cable with the magnetic charging port of the device, then connect it to the computer via USB. Press the device button three times to enter PC mode, and the computer will prompt to detect the USB drive. At this time, SD card data can be exported, and the indicator light will remain on.

4.Precautions

- When upgrading the device, do not perform any operation until the OTA upgrade is displayed as completed to avoid causing the device to become unusable.
 - The intelligent translation function requires connection to a mobile app. During use, please ensure that the device is properly connected to the phone and that the phone is in a normal network state.
 - When using the one click voice translation function, please press the button for 0.5 seconds before speaking, and then release it after speaking. Press the button to ensure complete voice capture.
 - When using voice translation, please speak coherently at a normal pace and avoid prolonged pauses, repetition, or continuous sentences during the speech to avoid inaccurate translation results.
 - When removing the device from the phone, please move it sideways and horizontally to remove it. Do not forcefully remove it vertically to avoid damaging the device.
- There may be conflicts between the built-in input methods of different Android phones and the functions of this product, which may result in the inability to see the input method keyboard in the input box and edit the content in the input box. To restore it, enable the use of on-screen keyboard in the settings. Reply.
OPPO phone as an example: Open Settings - Other Settings - Keyboard and Input Method - Physical Keyboard - Enable Keyboard Use
Huawei phone: When the input box cannot adjust the keyboard, click on the keyboard floating window on the screen to start the keyboard
Apple phone: When the input box cannot adjust the keyboard, please download WeChat keyboard and switch to using WeChat keyboard
Apple phone disable paste prompt tutorial
When using cross app one click translation on an iPhone, a pop-up window may appear asking if copying and pasting are allowed. The tutorial for closing pop ups is as follows:
Step 1: Open Settings
Step 2: Swipe to the bottom in the settings and find the app you need. Here we take WeChat as an example
Step 3: Enter WeChat settings details, slide to the bottom and find "Paste from other apps" to enter
Step 4: Change the inquiry to allow status, and the prompt pop-up will no longer appear.
Note: If other applications also have this situation, the same operation method can be used to solve it.

5.Common faults

1. Translation response speed is too slow or there is no response at all
· Check if the mobile app is connected correctly
· Check if the phone is in a normal network connection state
2. Inaccurate speech recognition
· Please press the button for 0.5 seconds before speaking, and release the button after speaking
· Please speak as close to the mic microphone as possible
· Check if the correct selection of speech recognition is made
· If the environment is too noisy, please get as close as possible and increase the volume
· Please maintain a coherent and natural speaking process, avoiding pauses or conjunctions during the conversation
3. Unable to search and connect devices
Please check if the Bluetooth on your phone is turned on properly and if the device is turned on properly
Please check the device connection status and whether it has been connected by other devices
4. The device is unresponsive or crashing
· Disconnect the Bluetooth of the phone, delete the device bound to the app, restart and connect
· Press and hold the device reset button for 1 second using the card pin to force a restart


6.frequently asked questions

GS Wear

智能AI手机助手

产品使用手册

1.外观示意图

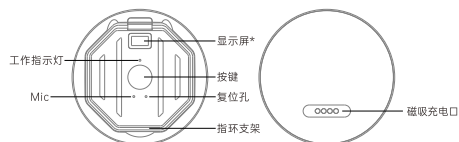

*Pro版本配备显示屏。

包装清单：主机*1、充电线*1、引磁片*1、使用手册*1。



2.产品参数

产品名称：智能AI手机助手
产品尺寸：56*6mm
机身材质：锌合金
工作指示灯：2颗
蓝牙：5.3
电池容量：160mAh/ 3.7V锂离子电池
充电接口：4pin 磁吸充电
充电时长：1.5-2小时
理论待机时间：60天
系统支持：安卓8.0/iOS10.0及以上版本

3.快速入门

引磁片

部分苹果手机用户可直接将设备贴在手机背部，如佩戴手机壳后磁吸不足，则可将引磁片粘贴在手机壳上，再贴上设备。
安卓手机用户请将引磁片粘贴在手机或手机壳上，再贴上设备。

开机

初次使用，请长按按键3秒以上，设备指示灯亮，代表设备已开机，进入待机状态。

连接

请扫码下载GS Fit应用并安装，或前往各大应用商城，搜索"GS Fit"找到并下载安装。

初次使用请注册个人账号，并授予APP程序运行必要的权限，以确保设备正常使用。

开启手机蓝牙，打开"GS Fit"APP进入设备页，点击右上角"+"号，点击添加设备进入蓝牙搜索，找到蓝牙名为"X6或X6 Pro"的设备，点击连接，APP上会发起配对请求，点击"配对"，完成连接。
注：如未连接成功，请检查手机蓝牙是否已正常开启，设备是否正常开机并处于待机连接状态，设备是否未被任何其他手机连接。

待机

设备无需关机，10秒无操作，屏幕熄灭，30分钟无操作，设备自动关机。

强制关机

如遇设备死机或无反应，请使用长针，长按复位键1秒进行强制关机。

一键翻译

打开"GS Fit"APP,点击主页“一键翻译”卡片，进入功能页面，可在此进行功能设置，如更改语音识别语言和目标语言、只显示译文、开启悬浮窗等。
保持设备与APP正确连接后，无需进入APP，只需确保"GS Fit"APP处于后台运行状态，即可通过长按设备按键，随时进入语音一键翻译。

同声传译

打开"GS Fit" APP,点击主页“同声传译”卡片，进入功能页面，可在此进行功能设置，如更改语音识别语言和目标语言、开始/暂停翻译等。

会议神器

显著提升会议效率和效果的技术工具，集合了先进的语音识别、转写、记录和整理功能，减少会议记录的时间和错误。

拍照翻译

打开"GS Fit" APP,点击主页“拍照翻译”卡片，进入功能页面，选择目标语言，点击开启摄像头进入拍照页面，短按拍摄按钮完成照片拍摄，系统将自动识别照片中文字，并翻译成目标语言文字，点击对应文本框右下角复制按钮即可复制对应文字内容。

面对面翻译

打开"GS Fit" APP,点击主页“面对面翻译”卡片，进入功能页面，该功能应用场景为一人一句对译翻译形式，选择好对应语言，用户A说话，长按对应录制按钮，录制完成后自动翻译成B的目标语言，用户B说话，长按对应录制按钮，录制完成后自动翻译成A的目标语言，点击播报按钮可播报翻译结果。

手机播放翻译

保持设备与APP正确连接后，开启悬浮窗功能，将APP切至后台运行，打开第三方软件如抖音、网易云等播放软件，长按设备按键接收手机发出的声音一键翻译并播报，翻译结果将展示在悬浮窗中。

本地录音

设备开机后，双击设备按键，屏幕开始计时就会开始录音，单击结束录音。

PC模式

充电线对准设备磁吸充电口，然后USB连接电脑，三击设备按键进入PC模式，电脑提示检测U盘，此时能导出SD卡数据，指示灯常亮。

4.注意事项

- 设备升级时，当OTA升级未显示完成之前，请勿进行任何操作，以免造成设备无法使用。
 - 智能翻译功能需要连接手机APP，使用过程中请确保设备与手机保持正确连接，并确保手机处于正常联网状态。
 - 使用一键语音翻译功能时，请在按下按键0.5秒后再说话，说话完毕再松开按键，以确保采集到完整的语音。
 - 使用语音翻译时，请用正常语速连贯说话，请勿在说话过程中出现长时间停顿、重复说、连续不断句等情况，以免造成翻译结果不准确。
 - 将设备从手机移除时，请侧推平移取下设备，禁止垂直强行卸下，以免损坏设备。
- 不同安卓手机内置输入法与本产品功能有冲突，可能会导致输入框里面看不到输入法键盘，无法编辑输入框里面的内容，在设置中开启使用屏幕键盘即可恢复。
OPPO手机为例：打开设置—其他设置—键盘与输入法—实体键盘—开启使用键盘
华为手机：当输入框无法调起键盘时，点击屏幕上键盘悬浮窗启动键盘
苹果手机：当输入框无法调起键盘时，请下截微信键盘，切换使用微信键盘
苹果手机关闭粘贴提示教程
苹果手机使用跨应用一键翻译时，可能弹出询问是否允许复制粘贴的弹窗。
关闭弹窗教程如下：
步骤一：打开设置
步骤二：在设置中滑动到底部，找到自己需要得APP。在这里我们以微信为例
步骤三：进入微信设置详情，滑动至下方找到【从其他APP粘贴】进入
步骤四：把询问改成允许状态，提示弹窗就不会再出现。
注：如果其他应用也有此情况，可按照同样操作方式去解决。

6.常见问题

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.