

DOWNLOAD

Download and install the Android apps available for the tooz DevKit 20. For more information on how to navigate in the tooz Control App, visit our website.

tooztech.cn/download



TOOZ CONTROL APP


Set up and manage the glasses, apps and smart functionality.



TOOZ EMULATOR

Test screen designs and app prototypes, even without your tooz smart glasses.


BLUETOOTH PAIRING

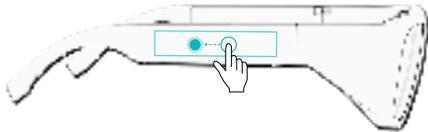

To connect to the tooz Control App, swipe backwards on the touchpad towards the ear and hold.

SAFETY INFORMATION

tooz DevKit 20 is a beta product and therefore still in development. As such, it is likely to contain errors and is provided "AS IS" and "AS AVAILABLE". tooz also makes no representations and gives no warranties that tooz DevKit 20 has particular functionalities.



tooztech.cn

© tooz technologies GmbH 2021
This quick start guide is subject to change.




tooz

QUICK START GUIDE

OVERVIEW

TOOZ DEVKIT 20

The tooz smart glasses discreetly deliver content into the wearer's field of view, enhancing the essential function of everyday glasses.

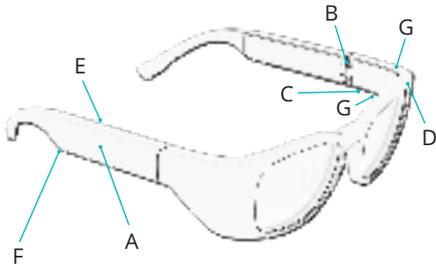


- A Touchpad
- B Power On/Off Hinge
- C Pogo Pin Charger
- D Ambient Light Sensor
- E Proximity Sensor
- F Speaker
- G Microphone

GETTING STARTED

POWER ON/OFF

To get started with your tooz smart glasses, unfold the temples to turn them on. Fold the temples to turn the glasses off again.

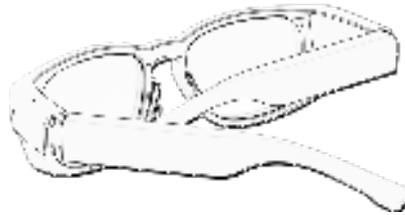

CHARGING YOUR GLASSES


To charge the glasses, attach the provided charging cable to the pogo pins under the left temple. The glasses are fully-charged when the LED light on the USB stops blinking and turns solid.



USING THE GLASSES

ANDROID TOUCH GESTURES

Control your tooz smart glasses using the Android-specific touch gestures when connected via Bluetooth using the tooz Control App.

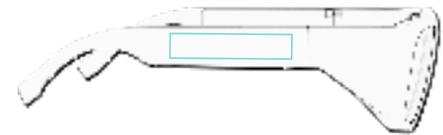

SHORT TAP
Open and control apps



FORWARD SWIPE
Show homescreen



BACKWARD SWIPE
Switch between apps



FACTORY RESET

Forward swipe, backward swipe and hold

