


ATTACHMENT E. - USER'S MANUAL (1)

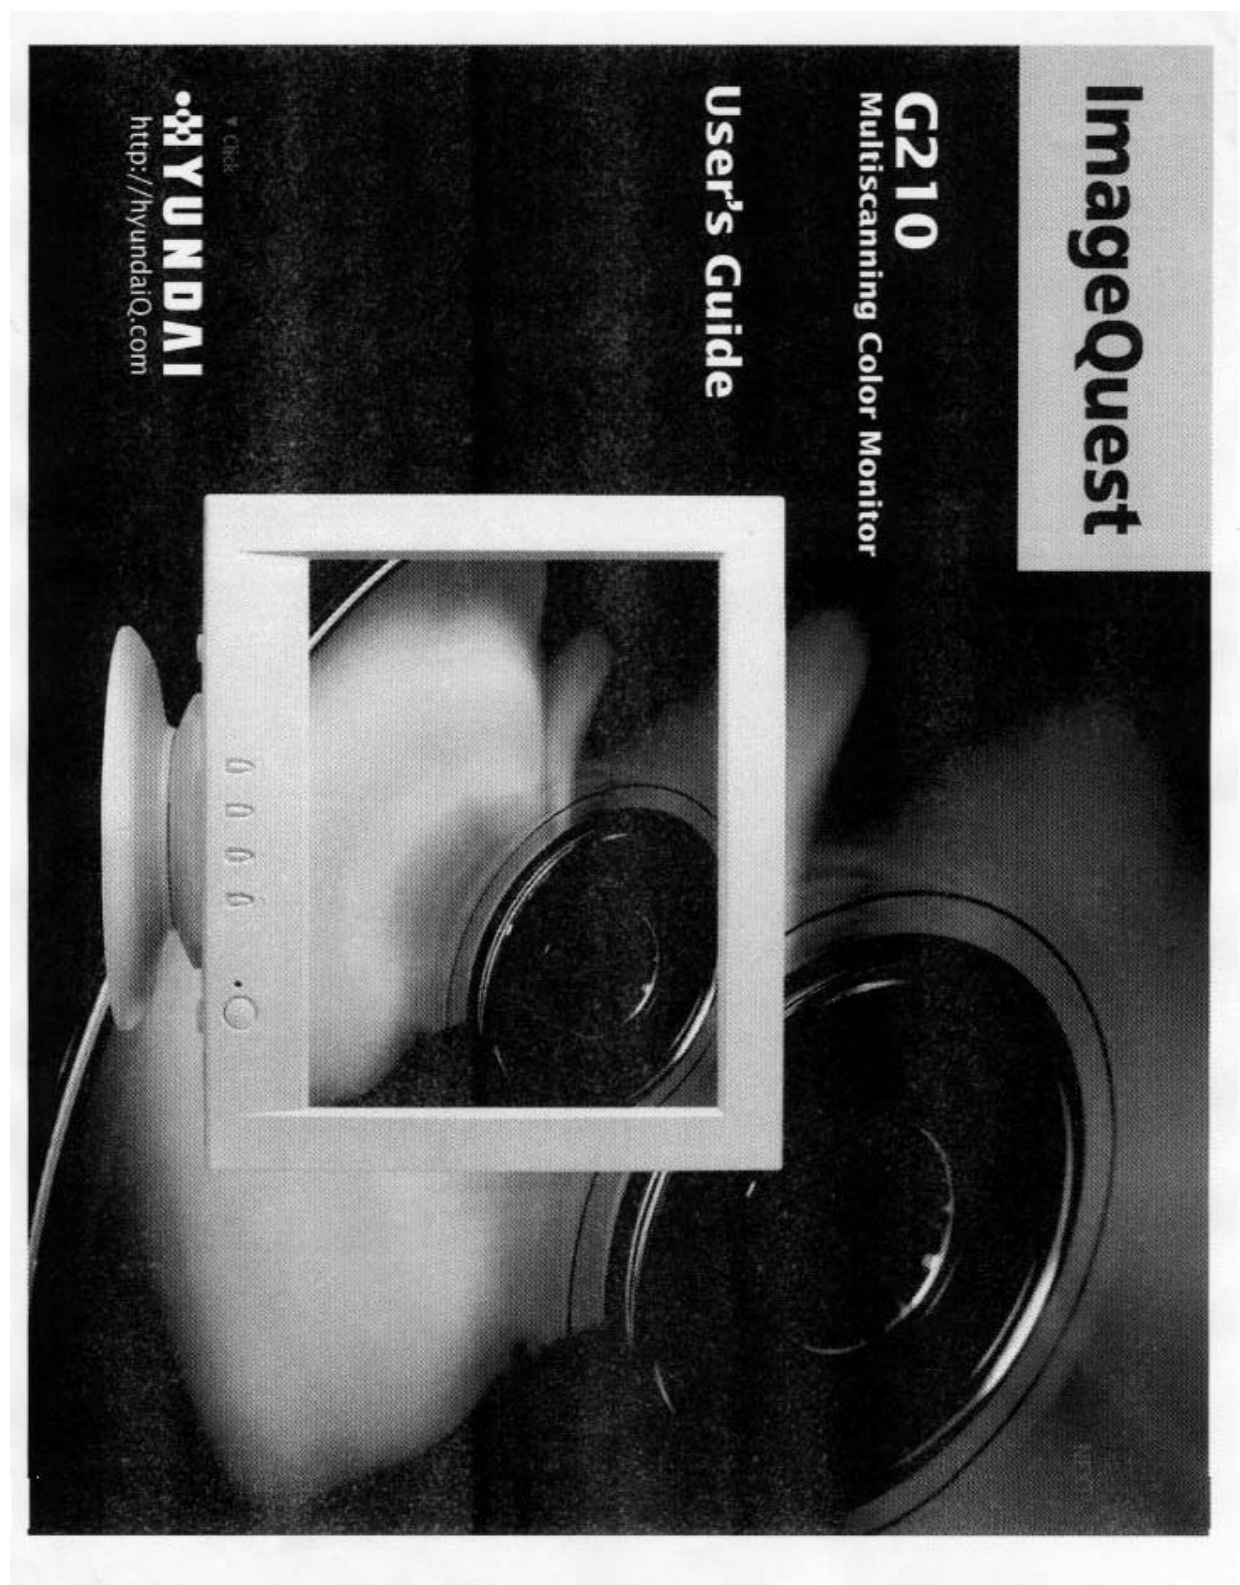

U.S.A.

U.S. FEDERAL COMMUNICATIONS COMMISSION RADIO FREQUENCY INTERFERENCE STATEMENT INFORMATION TO THE USER

NOTE : This equipment has been tested and found to comply with the limits for a

Class B digital device pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet of a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

Changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Connecting of peripherals requires the use of grounded shielded signal cables.

DECLARATION OF CONFORMITY

WE

HYUNDAI ELECTRONICS INDUSTRIES CO., LTD.
Ami-ri Bubal-Eup Ichon-Si Kyungki-Do
467-860 KOREA

declare under our sole responsibility that the product:

Kind of equipment : COLOR MONITOR

Type-Designation : C21R05110

to which this declaration relates is in conformity with the
following standard(s) or other normative document(s)

Safety : EN60950:1992 + A1, A2, A3, A4
EMC : EN 55 022/1994, EN 30 082-1/1992
IEC 801-2/1991, IEC 801-3/1984, IEC 801-4/1988

following the provisions of the Low Voltage Directive 73/23/EEC,
93/68/EEC and the EMC Directive 89/336/EEC.

Accredited testlaboratory:
TÜV Rheinland
Am Grauen Stein
51105 Köln

KOREA / JAN. 08, 2000
(Place and date of issue)

HONG KI, KIM *Hong Ki Kim*
(Name and signature of
authorized person)

BACK

NEXT

ImageQuest

G210 Multiscanning Color Monitor

[BACK](#)
[NEXT](#)


Contents



1. Introduction	1/20
2. Safety Information	1/20
3. Installing the monitor	3/20
3-1. Packing List	3/20
3-2. Fastening the swivel and tilt base	4/20
3-3. Selecting a suitable location	4/20
3-4. Connecting the monitor	5/20
3-5. Setting the refresh rate.....	8/20
Preset Timing Table.....	8/20



4. Adjusting the picture.....	10/20
4-1. Using the On Screen Display.....	11/20
4-2. Direct access buttons.....	11/20
4-3. OSD Adjustments.....	11/20
5. Display power management... ..	16/20
Reducing power consumption.....	16/20
6. Troubleshooting.....	17/20
7. Specifications.....	20/20

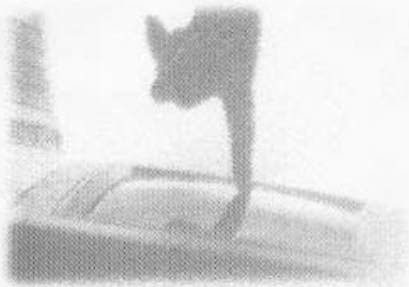

ImageQuest

G210 Multiscanning Color Monitor

[BACK](#)[NEXT](#)

1. Introduction

This manual contains instructions for installing and operating Hyundai ImageQuest G210.

Hyundai ImageQuest G210 is a highly ergonomic color display unit;

- 21" diagonal (19" viewable) 0.26mm dot pitch CDT
- Supporting high screen refresh rates and full scan flicker-free picture quality
- With On Screen Display menus for user control
- 100-240V AC input voltage
- VESA DPMMS (Display Power Management Signaling)
- VESA DDC1/2B compatibility

2. Safety Information

When you set up and use your display unit, follow the safety instructions below.

- Do not use the display unit in humid environments like bathrooms, damp cellars, swimming pools, etc.
- This equipment must be connected to an earthed outlet which is close to the display unit and accessible in case you need to disconnect the display.
- Do not connect an extension cord.
- Never insert objects into the openings on the outside of the device as you can come into contact with live electrical components. This can cause fire or give strong electrical shocks.
- Slots in the cabinet are provided for ventilation. Do not block the ventilation slots in the display unit cabinet.
- Do not under any circumstances open the display unit cabinet.

ImageQuest

G210 Multiscanning Color Monitor

[BACK](#)[NEXT](#)

Cleaning and Maintenance

- To avoid risk of electric shock, do not disassemble the display unit cabinet. The unit is not user-serviceable. Remember to unplug the display unit from the power outlet before cleaning.
- Do not use alcohol (methyl, ethyl or isopropyl) or any strong dissolvent. Do not use thinner or benzene, abrasive cleaners or compressed air.
- Do not wipe the screen with a cloth or sponge that could scratch the surface.
- To clean your antistatic screen, use water and a special microfiber screen cleaning tissue used in optical lens cleaning, or lightly dampen a soft, clean cloth with water or a mild detergent.
- To clean display unit cabinet, use a cloth lightly dampened with a mild detergent.
- During the transportation of the monitor, the swivel base has to be removed in every case.

ImageQuest


G210 Multiscanning Color Monitor

BACK

NEXT

3. Installing the monitor 3-1. Packing List

The following items should be found in the packaging.

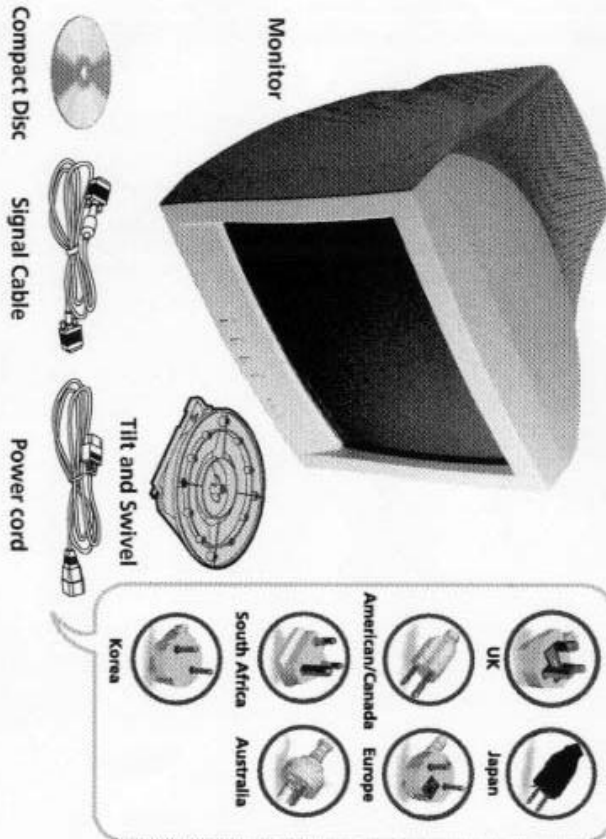


i Above power cord can be changed upon different voltage areas. Please contact your dealer if anything is missing or damaged.

ImageQuest

G210 Multiscanning Color Monitor

[BACK](#)[NEXT](#)

3-2. Fastening the swivel and tilt base

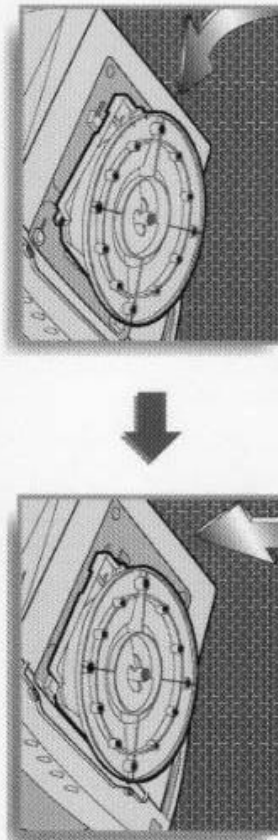

- Place the base against the bottom of the monitor so that the base fasteners are aligned with appropriate slots.
- Push the base towards the front of the monitor until the latch locks into position.

3-3. Selecting a suitable location

- Place the monitor at least 30cm from other electrical or heat-emitting equipment and allow at least 10cm on each side for ventilation.
- Place the monitor in a position where no light shines directly onto or is reflected on the screen.
- To reduce eye strain, avoid installing the display unit against a bright background such as a window.
- Position the monitor so that the top of the screen is no higher than eye level.
- Position the monitor directly in front of you at a comfortable reading distance (around 45 to 90cm)

ImageQuest

G210 Multiscanning Color Monitor


BACK

NEXT

3-4. Connecting the monitor

i Before you start cabling your monitor, check that the power is off on all units. To avoid any possibility of electric shock, always connect your equipment to properly earthed outlets.

► P/C

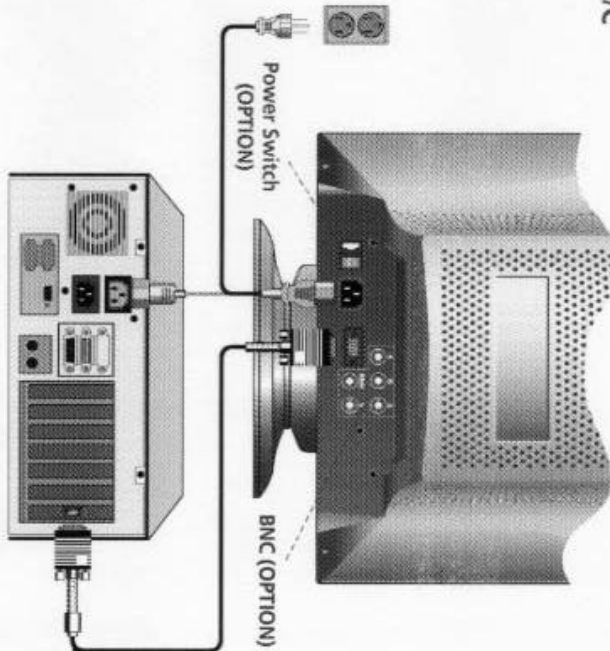

ImageQuest

G210 Multiscanning Color Monitor

BACK

NEXT

► WORK STATION

