
AP-2000R INSTRUCTION MANUAL

JENSEN°

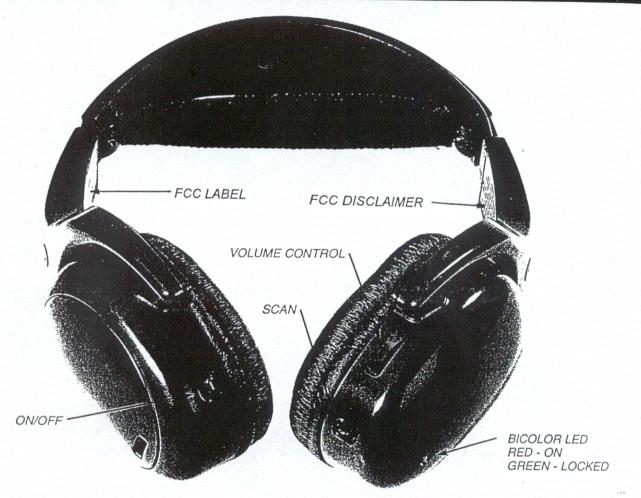

To operate:

- 1. Remove battery door, and insert 3 "AAA" batteries, using the battery polarity indicators in the battery compartment as a guide. Replace battery cover.
- 2. Press the on-off switch, thereby applying power to the unit.
- 3. The indicator lamp will glow red, indicating that the unit is searching for a transmitted signal.
- 4. When it locks on a signal, the red lamp will change to green. This should take about 5 seconds.
- 5. If the headphones can not find a signal, it will power down automatically, the lamp will go out, conserving battery power. This should take about 120 seconds. If the transmitter is shut down, the receiver will shut down automatically, which will take about 120 seconds.
- 6. By pressing the "Search" button, the unit will enter again into the search mode, as in step 3 above.
- 7. When not in use, press the "on-off" button. The button should be out, indicating power off. This will achieve maximum battery life.

JENSEN" • a Recoto

ECOTON CORPORATION
JOB #: 165AU1

MODEL: AP-2000R

PAGE: 10

3 · ©2001 Recoton Corp