

4. Touch "Forget" to remove network records. Then, reconnect to the network using the previous WiFi connection methods.




Operations for Android system client

◆ Installation APP software

To install software for your smart mobile device that runs an Android system:

1. Turn on interlligent mobile device and enter Google Play store.
- Search for the software "Ulife tools", and download.
2. Touch Install. The software can be installed on your device.
3. After the installation is complete, the icon of the software is displayed on the home screen, as shown in the following figure.

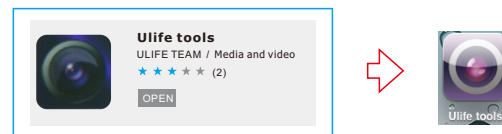


◆ WiFi Connection

Touch "Settings" on the home screen of your device.

Touch "WLAN" and select your camera (The initial SSID is "WIFICAMERA")


and connect the WiFi with default password (88888888).

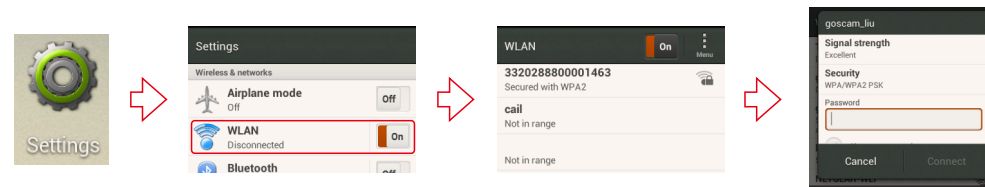

Note: When the WIFI connection problem, the user can turn on / off the power switch of handle to select WIFI channels. then reconnect the WIFI.

◆ Device Operation


Open the  the wifi connection is successful,
the video could be seen in the APP as shown below.

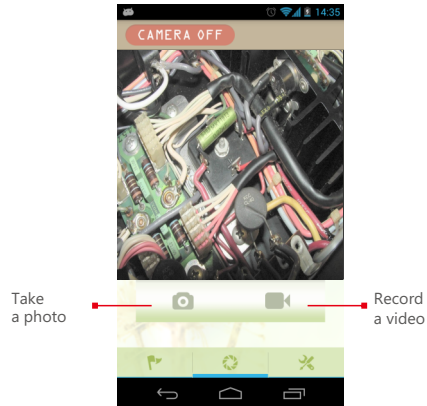



Note: If the WiFi interruption occurs when you view an image, or the picture viewing stops. In this case, exit the application and check whether the WiFi connection is proper.

◆ Settings


- Touch this  display the settings menu.
- You can set a new SSID or password for your WiFi network.

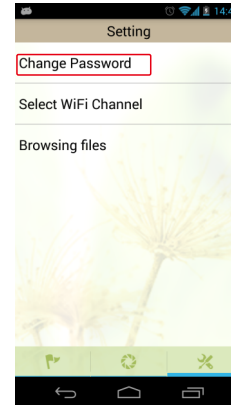

- Change the WiFi channel.

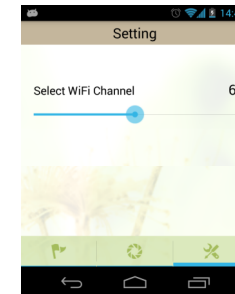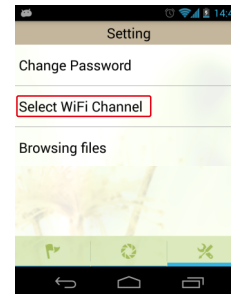



- ❖ Touch the "Browsing files" in the settings and can view the picture or video. Enter the pictures can choose to send the file.

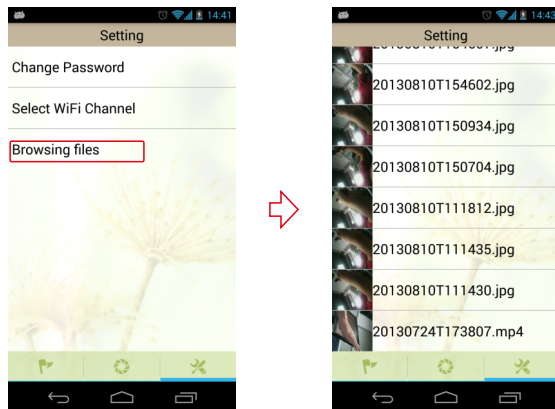


◆ Important Notes:

After you change the SSID or password, touch Settings on the home screen to forget this network and reconnect your device to the network. Otherwise, a message indicating a login error is always displayed. To forget this network:

1. Touch "Settings" on the home screen of your device.
2. Touch  **WLAN** for the WiFi name.
3. Then touch the modified WiFi camera.

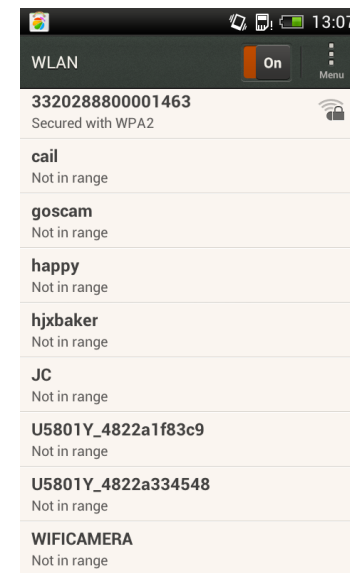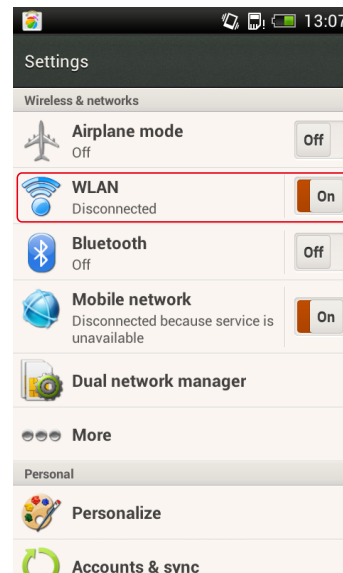

4. Touch "Forget" to remove network records. Then, reconnect to the network using the previous WiFi connection methods.

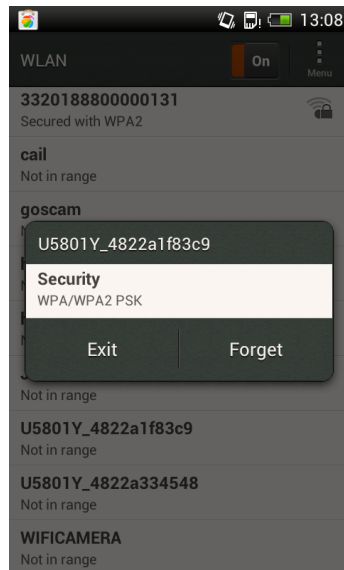

Note: Normally the yellow light is on. When the red light is on, the battery voltage is low and the batteries must be replaced.
If you forget the SSID and password of the smart mobile device, you can press Reset on the product for 5 seconds to enable factory defaults.

Specifications

Model No.		GD8723				
camera	Imaging Sensor	CMOS				
	Effective Pixels	PAL	640 x 480			
		NTSC	640 x 480			
	Horizontal Viewing Angle	45°				
	Tube Diameter	9mm				
	Minimum Illumination	0 Lux (LED ON)				
	Transmission Frequency	2400~2483.5MHz				
	Transmit Power	<14dBm				
	Receiver Sensitivity	11b:-90,11g/n:-72 dBm				
	Modulation / Demodulation Mode	802.11b : DSSS (CCK, DQPSK, DBPSK)				
		802.11g/n : OFDM (BPSK, QPSK, 16QAM, 64QAM)				
	Transmission Rate	1~150M bps				
	Frequency Stability	± 20 Ppm				
	Unobstructed Effective Range	≥ 10 m				
		Working Voltage	DC 4V~6.5V			
		Consumption Current (Max)	< 400mA			
		Working Time	> 1 hours			
		Power Supply	AA x 4 batteries (1.5V x 4)			
		Picture/Video Pixels	640 x 480			
		Frame Rate	20 frame/second			
		Waterproof Capacity	IP67 (for lens/tube only)			
		Dimensions (W x D x H)	260 x 50 x 40 (mm) (Excluding Flexible Tube)			
		Handle Weight	174g			
		Operating Temperature	-20°C~55°C/14°F~122°F			
		Operating Humidity (Max)	20~85%RH			

- * Actual transmission range of wireless monitoring may vary according to the weather, location, interference or building construction.
- * All specifications are subject to minor change without prior notice.

FCC information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference;
- (2) This device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.