


EVERSOLO

PRODUCT MANUAL

产品说明手册

DMP-A6 Gen 2 高保真音乐播放器
High Fidelity Music Streamer

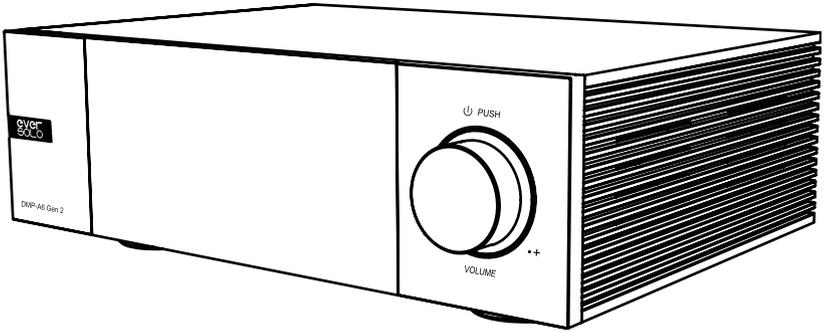

Eversolo Audio Technology Co., Ltd
深圳市艾索洛声学科技有限公司

Content/ 目录

01	Introduction	P1
02	Specification	P2
03	Hardware	P3
04	Basic Operation	P8
05	System Setting	P16
06	Connection and Setting	P23
07	Downloads	P28

01	产品简介	P29
02	性能参数	P30
03	硬件端口介绍	P31
04	基本操作	P36
05	系统设置	P44
06	信号的链接与设置	P51
07	资源下载	P56

Introduction

We appreciate your purchase of Eversolo DMP-A6 Gen 2 all-in-one streamer.

As a hi-res DAC streamer with great performance and craftsmanship, DMP-A6 Gen 2 can not only play and manage various high-resolution local music well but also embeds various third-party high-resolution music streaming services, such as Tidal, Qobuz, Highresaudio, Amazon Music, WebDAV, and UPnP, etc. DMP-A6 Gen 2 can accommodate audiophiles' needs by supporting rich output ways like digital, optical, coaxial, HDMI DSD multi-channel, and USB audio output.

The DMP-A6 Gen 2 decoding portion uses a pair of ES9038 Q2M DAC chips in addition to an XMOS 316 audio processor. It decodes up to DSD512, PCM 768Khz@32Bit, and MQA. So that D/A conversion is completed with exceptionally low noise and distortion.

Two-channel independent decoding design effectively avoids interference between channels, two ES9038 Q2M DAC chips correspond to left and right channels separately for independent D/A conversion output. High-precision resistance and a fully balanced circuit guarantee the lossless XLR and RCA output signal amplification. Audio indicators like crosstalk, dynamic range, SNR are greatly improved.

Versatile input ports are supported by the DMP-A6 Gen 2 for high specification digital audio decoding. USB-C audio input can be used to connect with PC, streamer, mobile phones and tablets ext. Optical and Coaxial inputs are to connect with streamer and CD player; DMP-A6 Gen 2 can be served as a high definition Bluetooth decoder when connecting with mobile devices via Bluetooth 5.0, with the support of APTXHD, LDAC protocols.

The DMP-A6 Gen 2 will provide you with a fantastic and original hifi music experience by its excellent decoding performance and sound quality.

It is advised to read this manual to make sure the product's features are applied correctly.

Specifications

Body Material	Aluminium alloy
Display	6.0" LCD touchscreen
DAC	ES9038Q2M*2
Audio Processor	XMOS XU316
Storage	4G DDR4 +32G eMMC
SSD Protocol	M.2 (NVME PCIe3.0)2280 protocol, up to 4TB
USB Ports	USB3.0*2
Ethernet	RJ-45(10/100/1000Mbps)
WiFi	2.4G+5G
DAC Decoding	Support DSD512 stereo, PCM 768KHz 32Bit, MQA
Music file formats	DSD(DSF,DFF,SACD ISO Support DST up to DSD512), MP3,APE,WAV,FLAC,AIF,AIFF,AAC,NRG,CUE
Music Services	Tidal, Qobuz, Highresaudio, Amazon Music etc
Music Streaming	Roon Ready, Tidal Connect, WebDav, UPnP, DLNA etc
Bluetooth Input	Bluetooth BT5.0, SBC/AAC/aptX/aptX LL/aptX HD/LDAC
USB-C Audio Input	USB compatibility: Windows (7,10,11), Mac, Android, IOS Support up to stereo DSD512, PCM 768KHz 32Bit, MQA
Optical/Coaxial Input	Support up to stereo PCM 192KHz 24Bit, DSD64 Dop, MQA
Optical/Coaxial Output	Support up to stereo PCM 192KHz 24Bit, DSD64 Dop, MQA
HDMI Audio Output	DSD64 Native multichannel/PCM 192KHz multichannel raw output, up to 5.1
USB Audio Output	Support up to stereo DSD512 Native, PCM 768KHz 32Bit, MQA (Support DAC audio devices with UAC standard only)
Analogue Audio Output	XLR (balanced) + RCA (pre-output)
Control Methods	On-screen touch control, Android/iPhone/iPad APP control
Analogue Audio Characteristics	Output level: XLR 5V; RCA 2.5V Frequency response: 20Hz~20KHz XLR/RCA (± 0. 15dB) Dynamic range:XLR > 128dB/RCA > 124dB SNR: XLR >128dB/RCA >124dB THD+N: XLR: <0.000092%(-120dB) /RCA :<0.00011%(-119dB) @A-Wt Crosstalk: XLR>125dB/RCA>124dB
Power Supply	AC 110~240V 50/60Hz ,13W


Hardware

SSD Installation


SSD isn't included in the device, a SSD can be installed manually after you receive the parcel if required. M.2 (NVMe PCIe3.0) 2280 protocol SSDs up to 4TB is supported.

How to install SSD:

1. Place the device upside down on a flat surface, unscrew the screws on the cover of the SSD slot, then remove the cover.

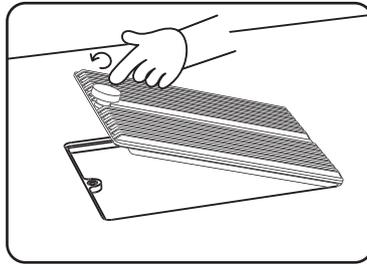


2. Pull open the fastening clip to install the SSD, secure the SSD by pressing the clip, then restore the screws and cover.

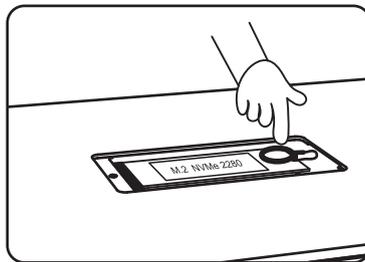


Notes:


1. The SSD must be installed and conform to the requested specification.
2. It is strictly forbidden to replace the SSD while powered on because doing so will harm the SSD.
3. SSD file systems NTFS, EXFAT, and FAT32 are supported.
4. If the recently purchased SSD is unable to be recognized, formatting the hard disk via “Home Screen > Files > Find the storage device > Tap the icon on left-top corner > Format” .

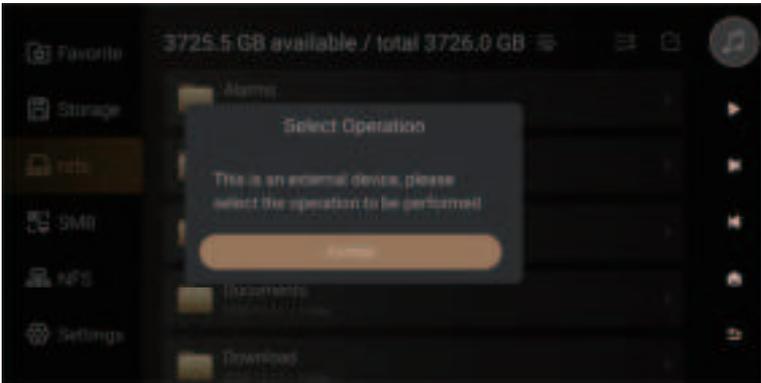

5. To better support song transferring, it is advised to choose an external storage device as the music directory. Go to "Settings > Transfer", and click " " to select the inserted external storage device. The system will automatically create the "EversoloMusic" folder, where the music files will be stored.

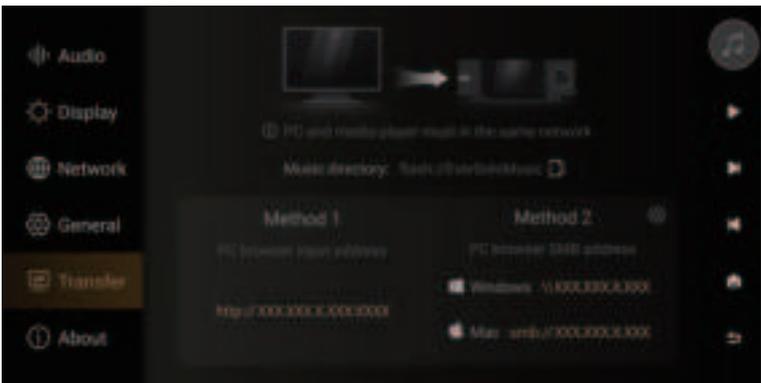

Rear Panel

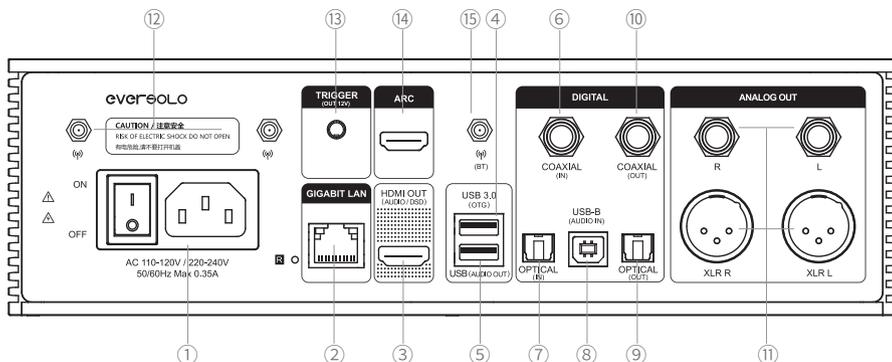

Descriptions:


- ① Power on/off
- ② Gigabit Ethernet network socket
- ③ HDMI audio only output: support DSD output
- ④ USB 3.0 OTG: Connect external storage devices/ optical disc drives / PC (Settings - General - USB OTG)
- ⑤ USB (Audio out): USB audio output for connecting audio devices (DAC)
- ⑥ Coaxial input: connect CD player, set-top box, or digital turntable
- ⑦ Optical input: connect CD player, set-top box, or digital turntable
- ⑧ USB-C input: USB Audio input, Connect mobile phone (should use OTG cable), computer, DAP and other audio sources that support USB audio output
- ⑨ Optical output: connect decoder or preamp
- ⑩ Coaxial output: connect decoder or preamp
- ⑪ XLR/RCA analogue output: Connect pure preamp, active speaker or power amplifier
- ⑫ WiFi antenna: connect to the wireless network
- ⑬ Trigger output: Connects a power amplifier to enable power-on/off synchronization. The output is 12V when powered on and 0V when powered off
- ⑭ ARC: Connects to TVs, projectors, or other display devices with HDMI eARC/ARC functionality
- ⑮ Bluetooth antenna: receive Bluetooth signals




Antennas diagram

- * USB maximum supply current: 1.2A. If connecting external optical disc drivers, please use an additional power adapter or USB splitter cable (USB OTG and USB AUDIO OUT).
- * Please use the analog XLR/RCA outputs for Coaxial, Optical, Bluetooth, or USB input.
- * Pointing antennas upward before using.

Front Panel

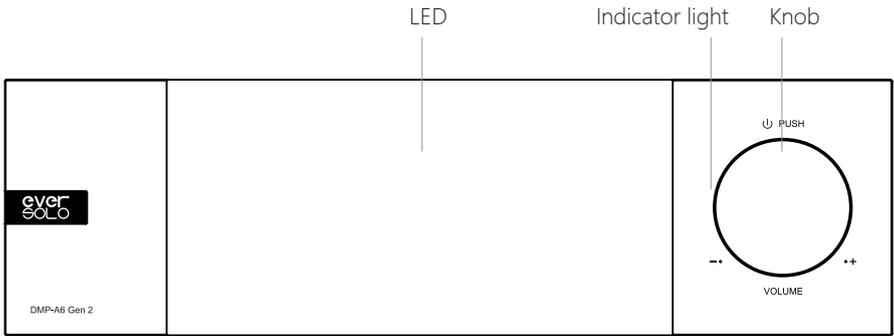

Controls

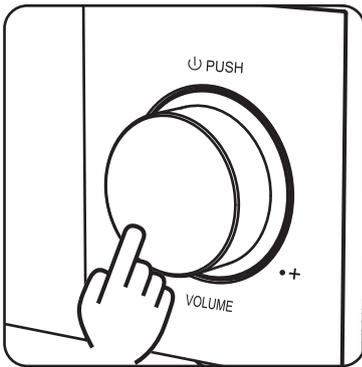

-  Rotate : Adjust volume
-  Short press :
Power on/Power off/Reboot/
Timed shutdown / Screen off
-  Long press: Power off

Volume Control: The knob can be turned clockwise to turn up the volume and counterclockwise to turn down the volume when the device is playing music.

*The audio setting allow you to adjust the volume step (0.5db-3db).

Power on / off



Power on: press the knob once to turn it on when the device is powered off.


Power off/reboot: short press the knob to see a pop-up menu and select power off or reboot; long press for 3 seconds to power off.

Timed shutdown: several timer are available for choosing, or you can customize one.

Screen-off: the device continues to work after screen off, tap the screen again to light it up.

Basic Operation


Home Screen

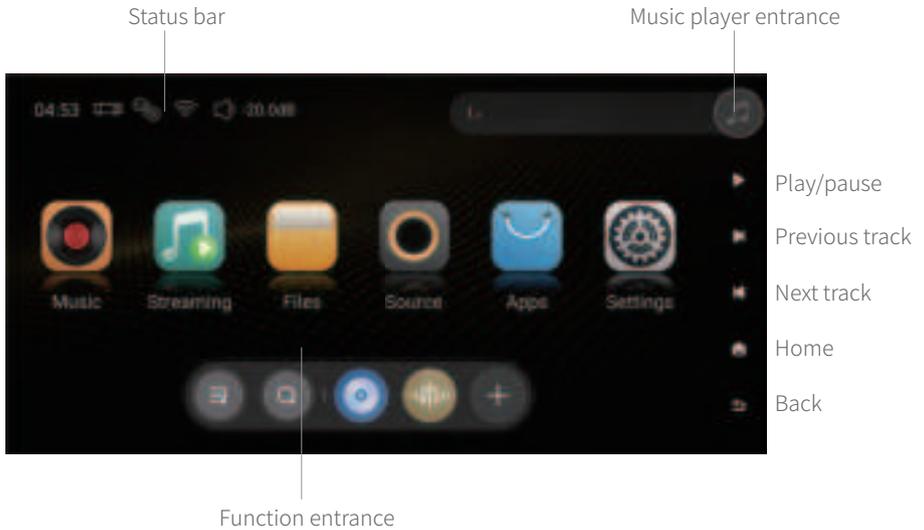

Status Bar: input/output connection, network status, storage device, volume, and currently playing song. Click input/output/network/storage device icons to access quick settings, click the song info bar to enter into Music Player.

Music Player

DMP-A6 Gen 2 Music Player allows to play lossless music from SSD, hard drive, NAS and streaming services app. Click "Music player entrance" to enter into Music Player interface and see currently playing tracks, progress and control icons.

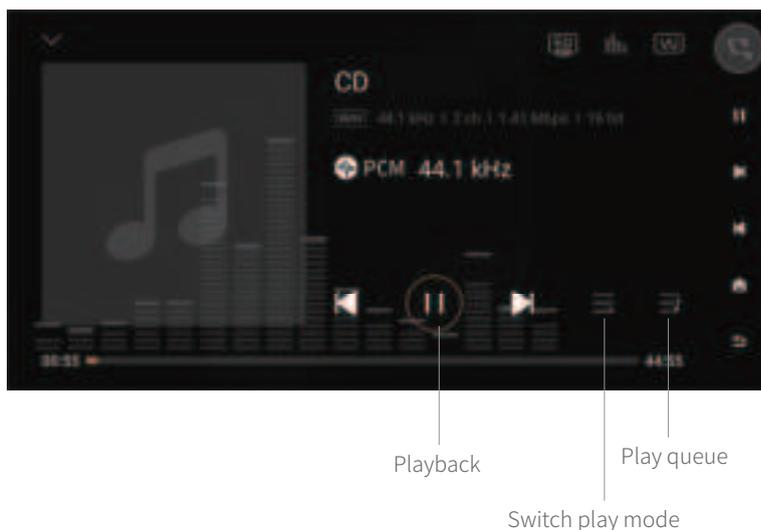

Descriptions

Favorites: add the currently playing track to my favorites.


Playback: previous/next track, pause/playback control.

Switch play mode: switch play modes between list loop, single loop, shuffle play and order play.

Play queue: a list of all tracks currently selected to be played, such as all tracks by a certain artist or in a certain album.


Network Connection

Make sure to connect the network for DMP-A6 Gen 2, both Ethernet and WiFi are supported. Access into “Settings > Network > WiFi” .

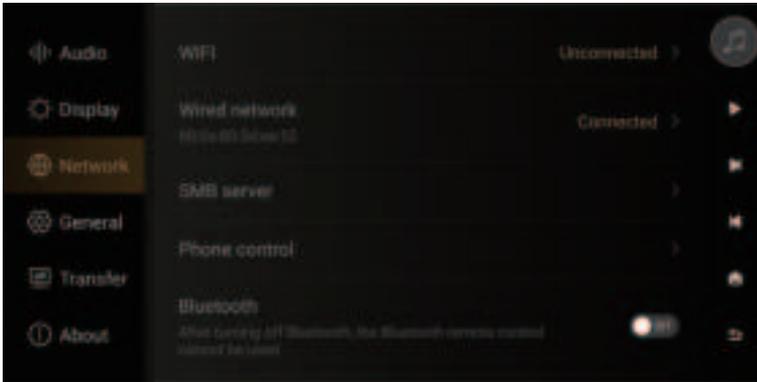


Music Library


The music library allows you to manage and categorize local music. Click “Add Library” to add music from local SSD, external storage devices, SMB, and NFS. Or click on the hover window of hidden menu on the left and select "Library".

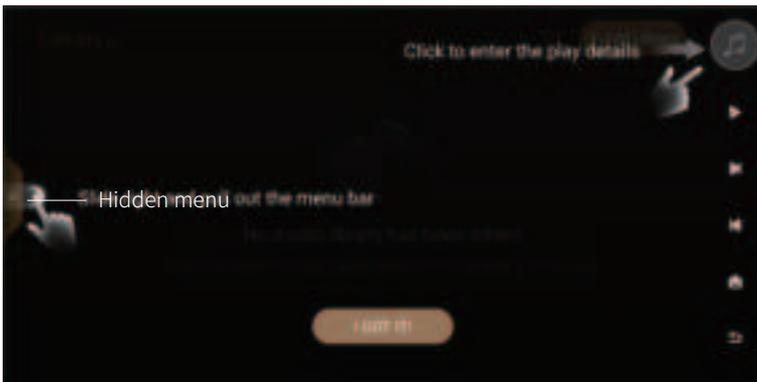

DMP-A6 Gen 2 will categorize the added music files by track, artist, album etc.

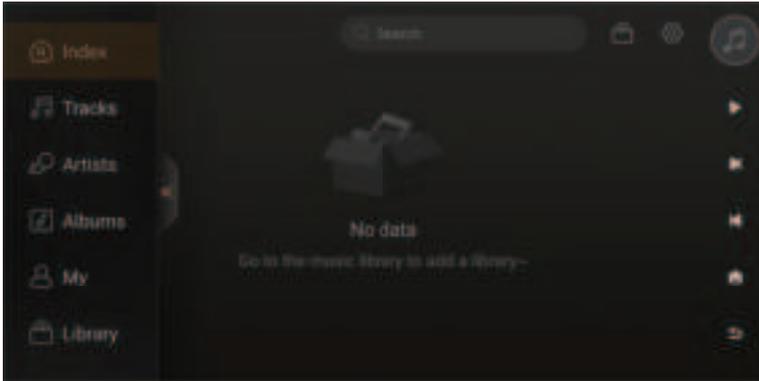


“My” will show recently playing records, playlists added according to personal preferences, and quick access to favorite tracks, artists, and albums.

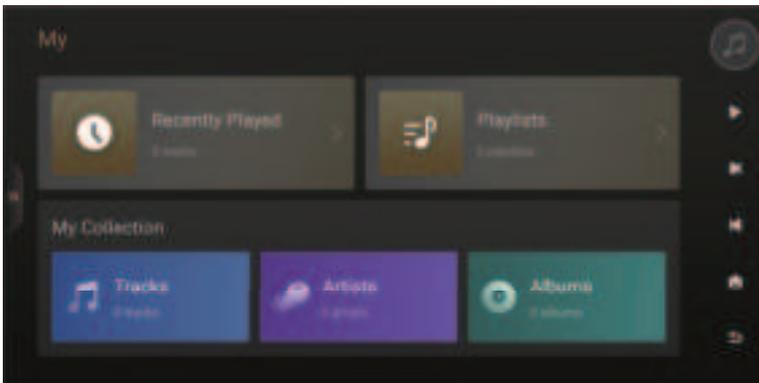

Music Service

It includes streaming services, music apps, music cloud drivers and music connect. Log in your account to play music from third-party apps.

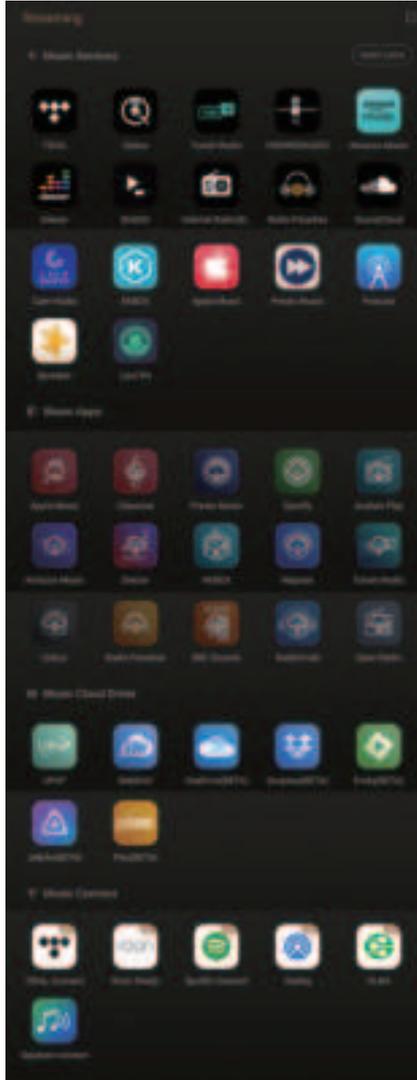


Note:

*More music apps will be available for download, please check the official website for firmware updates.

File Manager

File Manager is used to managing files in local storage, SSD, removable storage devices, NFS, and SMB in the same network. Click "📄" to copy, paste, and delete etc.

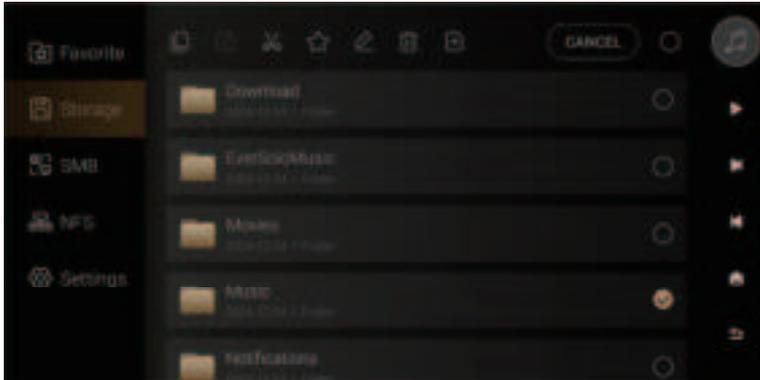


The device enables to copy files from external storage device to SSD conveniently. Go to Files Manager and select the music file in the storage device and click "📄" to copy the music file to SSD.

Inputs/Outputs

Choose inputs and outputs based on how the actual device is connected.

Note:

* all digital input connections only support output audio by analogue output, not digital output.

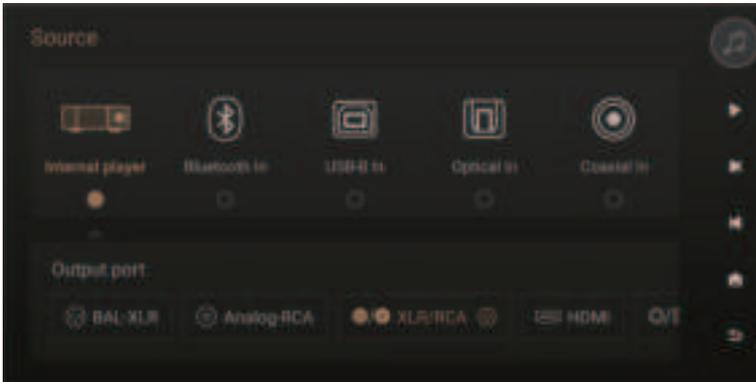


Apps

You can view, install and uninstall third-party apps. To install third-party apps, firstly download the APK file and copy it to a removable hard drive, insert the hard drive into this device and find APK file in File Manager, then install it by one click.


Note:

* It is recommended to install tablets apps.

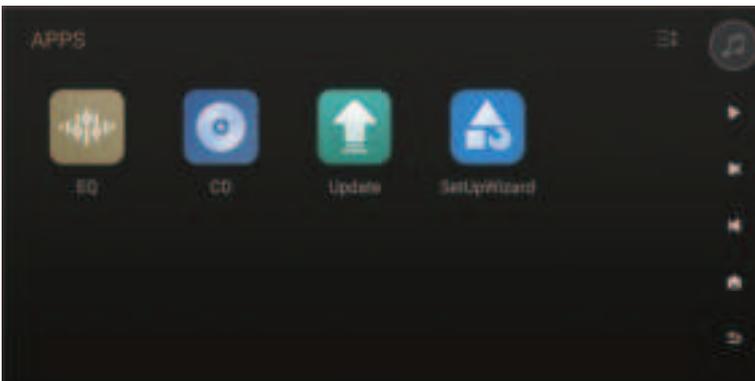

CD Playback and Ripping

By connecting with a USB CD-ROM, the device can both play music from CD and rip music files from CD. CD ripping instructions: Apps > CD > Click  to start CD ripping.

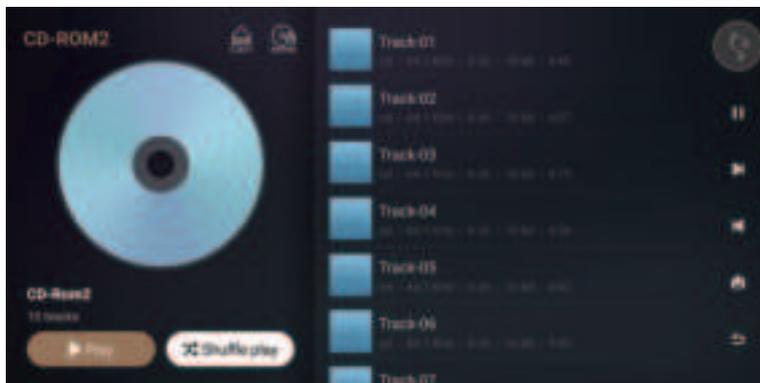


Click  to change the path for saving music files to local storage, internal SSD, removable storage or NFS, SMB devices in LAN.



System Settings


System settings include audio settings, display settings, network settings, general settings, song transfer and system upgrade. The settings allow you to change the filtering characteristics of the RCA/XLR outputs, the audio format output from the HDMI/Optical/Coaxial/DAC, and the formats supported by MQA.

* Set the volume to the maximum when outputting MQA via digital outputs (e.g.: USB or SPDIF outputs). But there is no need to set the volume to the maximum when MQA is output from internal DAC through analogue output.


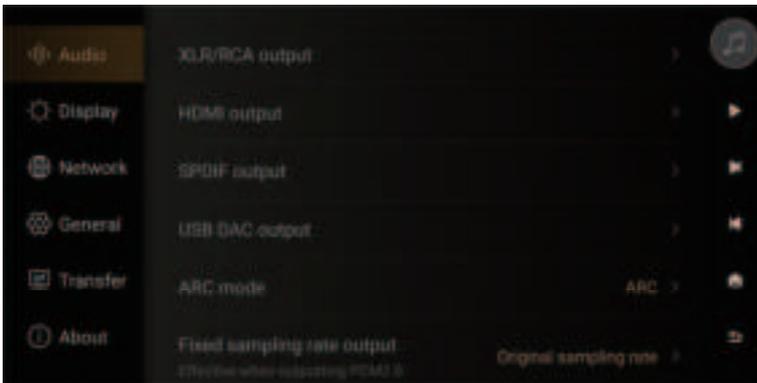


DAC Filter Characteristics

Choose different filter characteristics according to personal preference by Settings > "Audio > XLR/RC Output > DAC filter characteristics".

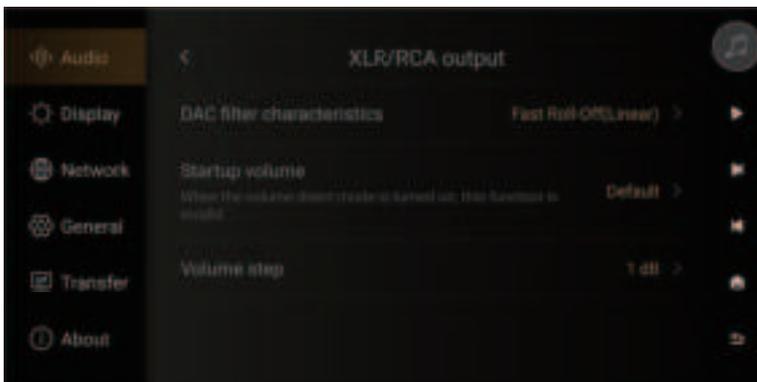


CHARACTERISTICS

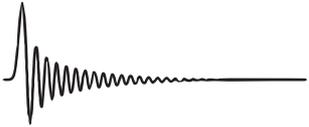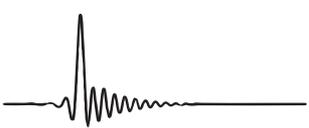FILTER	IMPULSE RESPONSE	CHARACTERISTIC	Distance	Edge
Fast Roll-Off, Linear Phase Filter		Low order reverb, natural	Far	Neutral
Slow Roll-Off, Linear Phase Filter		Low order reverb, accurate	Mid far	Sharp
Fast Roll-Off, Minimum Phase Filter		High order reverb, mellow	Mid close	Neutral
Slow Roll-Off, Minimum Phase Filter		Intermediate reverb, warm	Middle	Neutral
Apodizing, Fast Roll-Off, Linear Phase Filter		Intermediate reverb, natural	Mid far	Sharp
Hybrid, Fast Roll-Off, Minimum Phase Filter		High order reverb, mellow	Close	Sharp
Brickwall Filter		High order reverb, mellow	Middle	Sharp

Display Settings

In "Display" menu, there are some sub-menus for screen brightness adjustment, screensaver setting and screensaver modes.

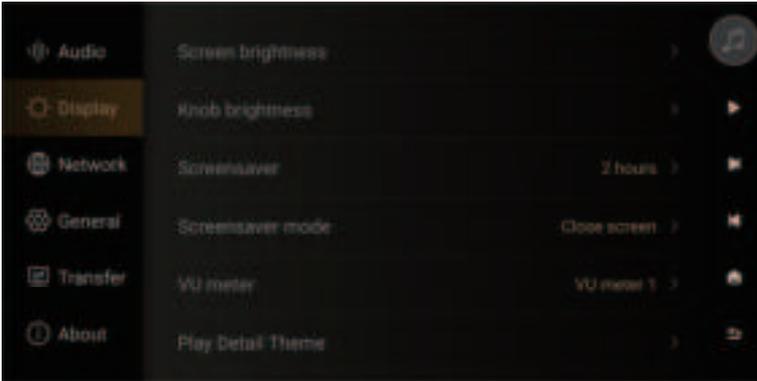

Screen brightness: adjust brightness level of the screen display.

Knob brightness: adjust the brightness for the light surrounding the knob.

Screensaver: screensaver will be displayed without operation for a certain time. After operation is detected again, the system will exit screensaver state. Press "Power" button can also exit screensaver.


Screensaver mode: four screensaver modes are available for choosing.

VU meter: select different VU meters according to personal preference.





Network Settings

Access "Settings > Network > Phone Control", and scan QR code to download "Eversolo Control" APP. Or download and install the APP on the official website and manual.

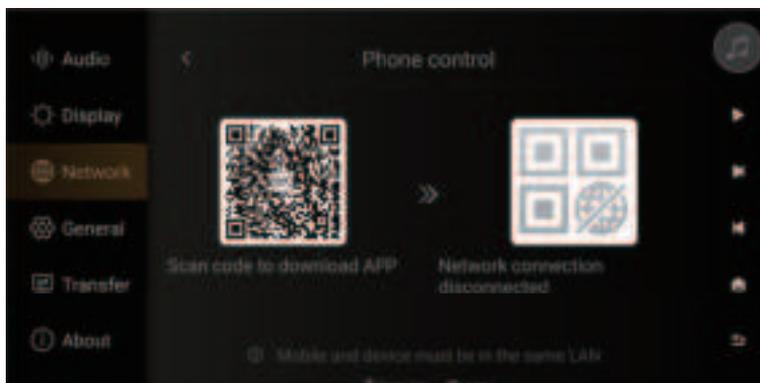

Mobile Phone Controlling APP

Please make sure the mobile phone is on the same network with the device, then open the APP, select "DMP-A6 Gen 2" and go to the next step. You will see the home screen after connecting successfully.

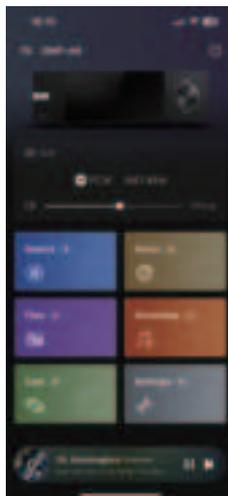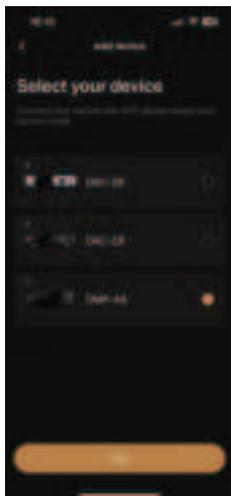


Notes:

*Android (for mobile phones only) and IOS(both iphones and iPad) apps both can be downloaded on Quick Start Guide.

*IOS apps can be also downloaded by searching "Eversolo Control" in the "App Store".


Language

Access into "Setting > General > language" to choose menu language.

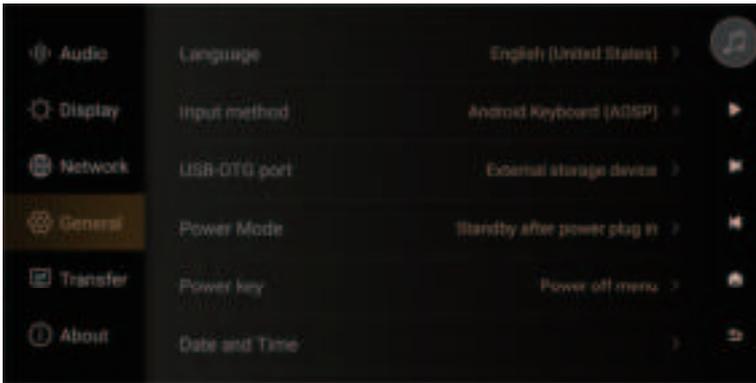



USB-OTG Port

The USB-OTG port can be used to connect with computer by a USB data cable, so that it is convenient to copy and manage local files.

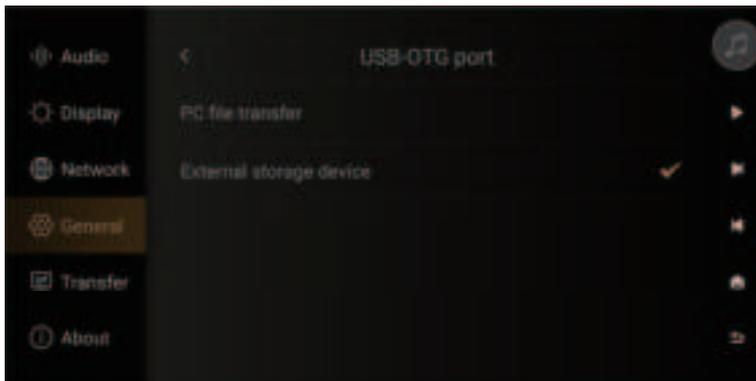

Transfer

Access “Settings > Transfer” to transfer songs from computer to this device according to the description. Make sure computer and the device are on the same network, choose a path to save songs in Music Directory.

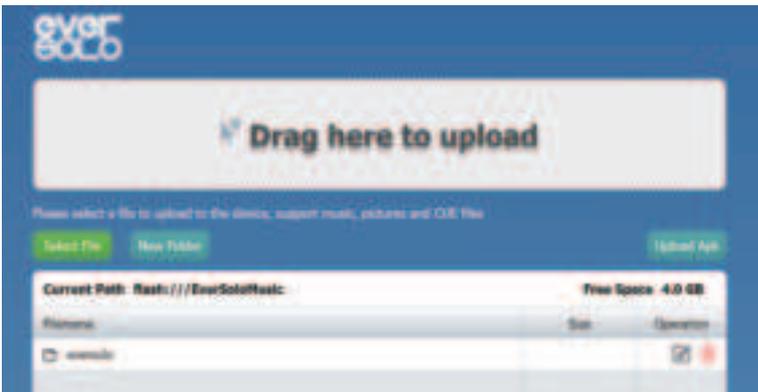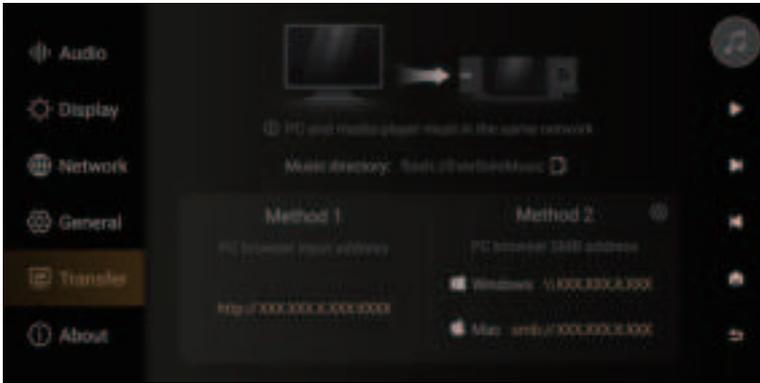

System Upgrade

Access "Settings > About > Version", online update and USB update are supported.



Online Update

After connecting with network, access "Settings > About > Version", click "Online Update" to get the newest firmware, finishing firmware update by following popup tips and wait the device to reboot automatically.

USB Update

Download Eversolo DMP-A6 Gen 2 firmware to a USB stick, insert USB stick into the USB-A type port on the device, access "Settings > About > Version", click "USB Update" to update firmware and wait for the device to reboot automatically.

Notes:

- * Don't remove the USB stick or power off during the upgrade process.
- * It is recommended to use a FAT32 format USB stick.
- * There is no need to unzip the downloaded file package.

Connection and Setting

The DMP-A6 Gen 2 has USB audio, HDMI audio, Coaxial and Optical digital audio outputs, as well as RCA single-ended and XLR balanced analogue outputs.

USB Output

Use a USB audio cable to connect the device's USB audio output to the external DAC's USB input. Then go to "Home screen > Source > Internal Player > USB DAC".




Note:

* USB audio output supports up to stereo DSD512 Native, PCM 768KHz 32Bit and MQA.

HDMI Output

Use an HDMI cable to connect the device's HDMI DSD output to the AV receiver input, then go to "Home screen > Source > Internal Player > HDMI".

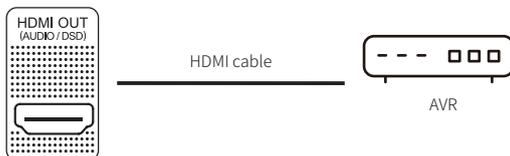


Notes:

*HDMI output supports audio output only, no video output.

*HDMI audio output supports DSD64 Native multichannel/PCM 192KHz multichannel raw output.

SPDIF (Coaxial/Optical) Output

Use a Coaxial/Optical cable to connect the device's Coaxial/Optical output to the AV receiver input, then go to "Home screen > Source > Internal Player > SPDIF".

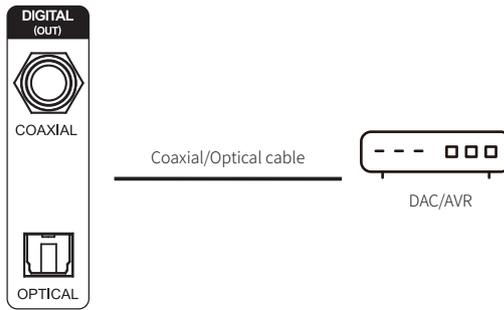


Note:

*Optical and coaxial outputs support up to stereo PCM 192KHz 24Bit, DSD64 Dop, MQA format.

XLR/RCA Output


Use a pair of RCA/XLR audio cables to connect the device's RCA/XLR output to the input of active speakers or HiFi power amps, then go to "Home screen > Source > Internal Player > RCA or XLR".

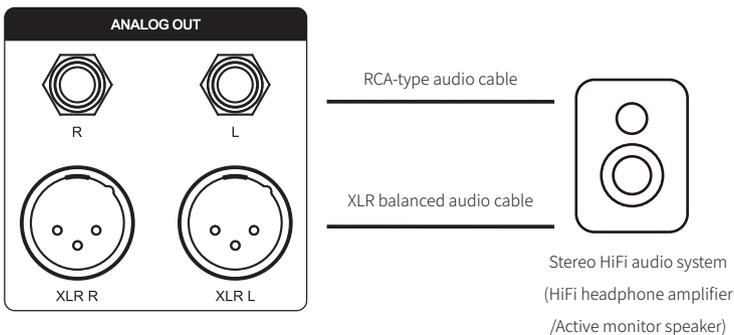

Notes:

*Two sets of RCA and XLR connectors can output separately or simultaneously. It is recommended to choose XLR in priority for noise suppression and signal completeness.



*XLR and RCA separate outputs are available to be selected to minimize the possibility of signal interference caused by simultaneous RCA and XLR outputs. The separate output mode supports better audio indicators and sound quality.

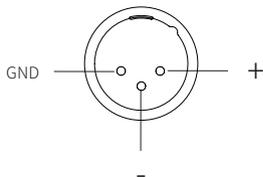

Polarity Diagram

USB Type C Input

Use a USB-A to Type-C cable to connect this device with PC, playback devices and mobile phones with a USB audio output. Go to "Settings > Source > USB-C In".

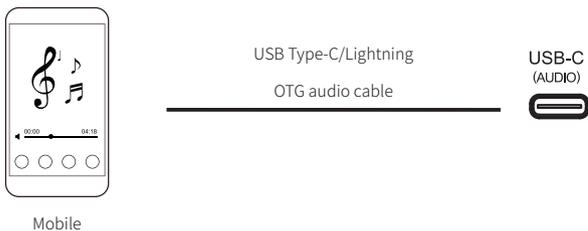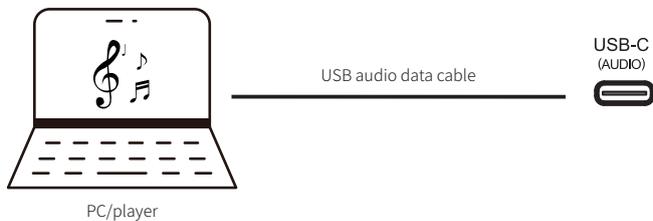

Notes:

*It is needed to install drives for Windows, please refer to Downloads section in this manual below.


*Enable "EVER SOLO DMP-A6 Gen 2 " as your computers' sound output device as follows:
Windows: After downloading and installing the driver, follow the setting on computer "Control Panel > Hardware and Sound > Sound > Playback" and select "XMOS USB Audio".

Mac: no need to install a driver, please select "System Preferences > Sound > Output > EVER SOLO DMP-A6 Gen 2 ".

*USB input supports up to Stereo DSD512, PCM 768KHz 32Bit, MQA, actual specifications are subject to external playback hardware and software.

Optical/Coaxial Input

Use an Optical or Coaxial audio cable to connect front-end equipment (like media player and CD player) S/PDIF output with the device' s Optical or Coaxial input. Go to "Settings > Source > Internal Player > Optical/Coaxial In".

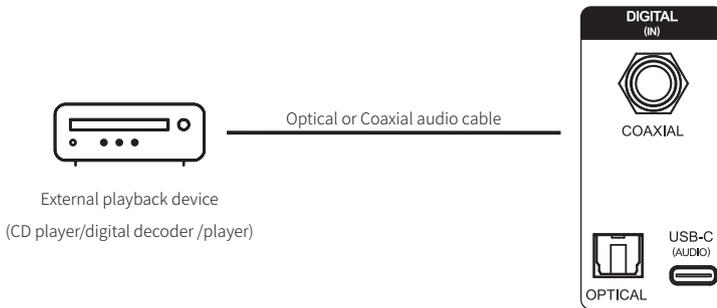

Notes:


*Please use 75 Ohm Coaxial audio cable for Coaxial connection.

*Please use standard optical audio cable for Optical connection.

*Optical/coaxial input supports up to PCM 192KHz 24Bit, MQA and DOP64.

ARC Input

Use an HDMI cable to connect to a TV, projector, or other display device with HDMI eARC/ARC functionality to enable HDMI audio return channel (ARC). Please go "Source" to select the "ARC Input".

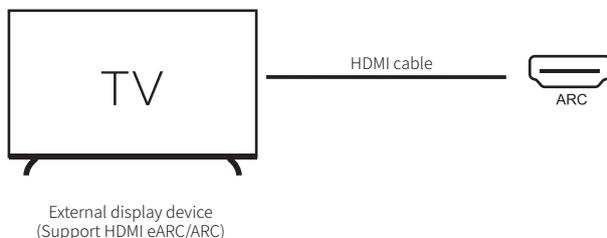

Note:

- *Please connect to the HDMI input port on the TV labeled as ARC or eARC.
- *HDMI ARC input supports up to PCM 192KHz 24Bit.
- *Please use a physical HDMI cable for the connection, not an optical HDMI cable.

Bluetooth Input

This device has built in Qualcomm flagship QCC5125 Bluetooth audio receiver module, which supports lossless audio protocols SBC/AAC/aptX/aptX LL/aptX HD/LDAC. It can be used as a high quality Bluetooth decoder to pair with different mobile devices.

Go to "Settings > Source > Bluetooth In", enable Bluetooth on mobile devices and search "DMP-A6 Gen 2" for Bluetooth pairing.

*Bluetooth reception format depends on transmitting device. Normally Android phones can switch Bluetooth output formats in system developer options, it is advised to choose aptX HD and LDAC lossless formats.

Downloads

For product firmware upgrade, USB driver and mobile control APP download, please visit the Downloads page on official website and scan QR code.

Please unzip the package after downloading the driver, double click the .exe file and install it by following popup hints.



Control APP



Wechat Subscription

*It is recommended to scan the QR code with a mobile phone browser.

Special Note:

In order to improve the user experience, Eversolo will update firmware from time to time. Therefore, this product manual may differ from the actual setting menus of the product. For more tutorials, please visit www.eversolo.com

Safety Warning:

1. No water splashing or dripping, do not put objects with liquid like vase on the device.
2. The power plug and the power switch are used to disconnect power supply, which cannot be blocked by other objects.
3. It is Class I device, there must be grounding measures inside the box when using.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.