

ME910C1 HW User Guide

1VV03001351 Rev. 11 - 2019-06-21



NOTICE

While reasonable efforts have been made to assure the accuracy of this document, Telit assumes no liability resulting from any inaccuracies or omissions in this document, or from use of the information obtained herein. The information in this document has been carefully checked and is believed to be reliable. However, no responsibility is assumed for inaccuracies or omissions. Telit reserves the right to make changes to any products described herein and reserves the right to revise this document and to make changes from time to time in content hereof with no obligation to notify any person of revisions or changes. Telit does not assume any liability arising out of the application or use of any product, software, or circuit described herein; neither does it convey license under its patent rights or the rights of others.

It is possible that this publication may contain references to, or information about Telit products (machines and programs), programming, or services that are not announced in your country. Such references or information must not be construed to mean that Telit intends to announce such Telit products, programming, or services in your country.

COPYRIGHTS

This instruction manual and the Telit products described in this instruction manual may be, include or describe copyrighted Telit material, such as computer programs stored in semiconductor memories or other media. Laws in the Italy and other countries preserve for Telit and its licensors certain exclusive rights for copyrighted material, including the exclusive right to copy, reproduce in any form, distribute and make derivative works of the copyrighted material. Accordingly, any copyrighted material of Telit and its licensors contained herein or in the Telit products described in this instruction manual may not be copied, reproduced, distributed, merged or modified in any manner without the express written permission of Telit. Furthermore, the purchase of Telit products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Telit, as arises by operation of law in the sale of a product.

COMPUTER SOFTWARE COPYRIGHTS

The Telit and 3rd Party supplied Software (SW) products described in this instruction manual may include copyrighted Telit and other 3rd Party supplied computer programs stored in semiconductor memories or other media. Laws in the Italy and other countries preserve for Telit and other 3rd Party supplied SW certain exclusive rights for copyrighted computer programs, including the exclusive right to copy or reproduce in any form the copyrighted computer programs contained in the Telit products described in this instruction manual may not be copied (reverse engineered) or reproduced in any manner without the express written permission of Telit or the 3rd Party SW supplier. Furthermore, the purchase of Telit products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Telit or other 3rd Party supplied SW, except for the normal non-exclusive, royalty free license to use that arises by operation of law in the sale of a product.

Telit



USAGE AND DISCLOSURE RESTRICTIONS

I. License Agreements

The software described in this document is the property of Telit and its licensors. It is furnished by express license agreement only and may be used only in accordance with the terms of such an agreement.

II. Copyrighted Materials

Software and documentation are copyrighted materials. Making unauthorized copies is prohibited by law. No part of the software or documentation may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, without prior written permission of Telit

III. High Risk Materials

Components, units, or third-party products used in the product described herein are NOT fault-tolerant and are NOT designed, manufactured, or intended for use as on-line control equipment in the following hazardous environments requiring fail-safe controls: the operation of Nuclear Facilities, Aircraft Navigation or Aircraft Communication Systems, Air Traffic Control, Life Support, or Weapons Systems (High Risk Activities"). Telit and its supplier(s) specifically disclaim any expressed or implied warranty of fitness for such High Risk Activities.

IV. Trademarks

TELIT and the Stylized T Logo are registered in Trademark Office. All other product or service names are the property of their respective owners.

V. Third Party Rights

The software may include Third Party Right software. In this case you agree to comply with all terms and conditions imposed on you in respect of such separate software. In addition to Third Party Terms, the disclaimer of warranty and limitation of liability provisions in this License shall apply to the Third Party Right software.

TELIT HEREBY DISCLAIMS ANY AND ALL WARRANTIES EXPRESS OR IMPLIED FROM ANY THIRD PARTIES REGARDING ANY SEPARATE FILES, ANY THIRD PARTY MATERIALS INCLUDED IN THE SOFTWARE, ANY THIRD PARTY MATERIALS FROM WHICH THE SOFTWARE IS DERIVED (COLLECTIVELY "OTHER CODE"), AND THE USE OF ANY OR ALL THE OTHER CODE IN CONNECTION WITH THE SOFTWARE, INCLUDING (WITHOUT LIMITATION) ANY WARRANTIES OF SATISFACTORY QUALITY OR FITNESS FOR A PARTICULAR PURPOSE.

NO THIRD PARTY LICENSORS OF OTHER CODE SHALL HAVE ANY LIABILITY FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING WITHOUT LIMITATION LOST PROFITS), HOWEVER CAUSED AND WHETHER MADE UNDER CONTRACT, TORT OR OTHER LEGAL THEORY, ARISING IN ANY WAY OUT OF THE USE OR DISTRIBUTION OF THE OTHER CODE OR THE EXERCISE OF ANY RIGHTS GRANTED UNDER EITHER OR BOTH THIS LICENSE AND THE LEGAL TERMS APPLICABLE TO ANY SEPARATE FILES, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

APPLICABILITY TABLE

PRODUCTS

- ME910C1-NA
- ME910C1-NV
- ME910C1-N1
- ME910C1-E1
- ME910C1-AU
- ME910C1-K1
- ME910C1-J1
- ME910C1-E2
- ME910C1-WW
- ME910C1-P1
- ME910C1-P2
- NE910C1-E1
- NE910C1-NA

Contents

NOTICE 2

COPYRIGI	HTS2					
COMPUTE	R SOFTWARE COPYRIGHTS					
USAGE AN	ND DISCLOSURE RESTRICTIONS					
I.	License Agreements					
II.	Copyrighted Materials					
III.	High Risk Materials					
IV.	Trademarks					
V.	Third Party Rights					
APPLICAE	BILITY TABLE					
CONTENT	S5					
1.	INTRODUCTION					
1.1.	Scope 9					
1.2.	Audience9					
1.3.	Contact Information, Support9					
1.4.	Text Conventions					
1.5.	Related Documents					
2.	OVERVIEW 11					
3.	PINS ALLOCATION					
3.1.	Pin-out					
3.2.	LGA Pads Layout					
4.	POWER SUPPLY					
4.1.	Power Supply Requirements					
4.2.	Power Consumption					
4.3.	General Design Rules					
4.3.1.	Electrical Design Guidelines of the power supply					
4.3.1.1.	+5V Source Power Supply Design Guidelines					
4.3.1.2.	+12V Source Power Supply Design Guidelines					
4.3.1.3.	Battery Source Power Supply Design Guidelines					
4.3.2.	Thermal Design Guidelines					
4.3.3.	Power Supply PCB layout Guidelines					
1\/\/0301351	Rev 11 Page 5 of 105					



4.4.	VAUX Power Output
4.5.	RTC Supply 35
5.	DIGITAL SECTION
5.1.	Logic Levels
5.2.	Power On
5.3.	Power Off 41
5.4.	Wake from deep sleep mode 43
5.5.	Unconditional Shutdown 43
5.6.	Fast power down
5.6.1.	Fast Shut Down by Hardware
5.6.2.	Fast Shut Down by Software
5.7.	Communication ports
5.7.1.	USB 2.0 HS
5.7.2.	SPI
5.7.3.	Serial Ports
5.7.3.1.	Modem serial port 1
5.7.3.2.	Modem serial port 253
5.7.3.3.	RS232 level translation
5.8.	General purpose I/O 55
5.8.1.	Using a GPIO as INPUT
5.8.2.	Using a GPIO as OUTPUT 57
5.8.3.	Indication of network service availability
5.9.	External SIM Holder
5.10.	ADC Converter
6.	RF SECTION
6.1.	Bands Variants
6.2.	TX Output power
6.3.	RX Sensitivity 61
6.4.	Antenna requirements
6.4.1.	PCB Design guidelines
6.4.2.	PCB Guidelines in case of FCC Certification75
6.4.2.1.	Transmission line design75
6.4.2.2.	Transmission Line Measurements76
6.4.2.3.	Antenna Installation Guidelines
7.	AUDIO SECTION
7.1.	Electrical Characteristics

7.2.	Codec examples	79
8.	GNSS SECTION	80
8.1.	GNSS Signals Pin-out	80
8.2.	RF Front End Design	80
8.2.1.	Guidelines of PCB line for GNSS Antenna	80
8.3.	GNSS Antenna Requirements	80
8.3.1.	GNSS Antenna specification	81
8.3.2.	GNSS Antenna – Installation Guidelines	81
8.3.3.	Powering the External LNA (active antenna)	81
8.4.	GNSS Characteristics *	82
9.	MECHANICAL DESIGN	83
9.1.	Drawing	83
10.	APPLICATION PCB DESIGN	84
10.1.	Footprint	84
10.2.	PCB pad design	85
10.3.	PCB pad dimensions	86
10.4.	Stencil	87
10.5.	Solder paste	87
10.6.	Solder Reflow	88
11.	PACKAGING	90
11.1.	Tray	90
11.2.	Reel	91
11.3.	Carrier Tape detail	92
11.4.	Reel detail	93
11.5.	Packaging detail	94
11.6.	Moisture sensitivity	94
12.	CONFORMITY ASSESSMENT ISSUES	95
12.1.	Approvals	95
12.2.	FCC certificates	95
12.3.	IC/ISED certificates	95
12.4.	FCC/ISED Regulatory notices	95
12.5.	Declaration of Conformity	99
13.	SAFETY RECOMMENDATIONS 1	01
13.1.	READ CAREFULLY 1	01
14.	ACRONYMS 1	02

15. DOCUMENT HISTORY 104



1.1. Scope

Scope of this document is to give a description of some hardware solutions useful for developing a product with the Telit ME910C1 module.

1.2. Audience

This document is intended for Telit customers, who are integrators, about to implement their applications using our ME910C1 modules.

1.3. Contact Information, Support

For general contact, technical support services, technical questions and report documentation errors contact Telit Technical Support at:

- TS-EMEA@telit.com
- TS-AMERICAS@telit.com
- TS-APAC@telit.com
- TS-SRD@telit.com

Alternatively, use:

http://www.telit.com/support

For detailed information about where you can buy the Telit modules or for recommendations on accessories and components visit:

http://www.telit.com

Our aim is to make this guide as helpful as possible. Keep us informed of your comments and suggestions for improvements.

Telit appreciates feedback from the users of our information.

Telit



1.4. Text Conventions



Danger – This information MUST be followed or catastrophic equipment failure or bodily injury may occur.



Caution or Warning – Alerts the user to important points about integrating the module, if these points are not followed, the module and end user equipment may fail or malfunction.



Tip or Information – Provides advice and suggestions that may be useful when integrating the module.

All dates are in ISO 8601 format, i.e. YYYY-MM-DD.

1.5. Related Documents

80000NT10001A - SIM INTEGRATION DESIGN GUIDES Application Note 80000NT10060A - xE910 Global Form Factor Application Note 80000NT10002A - ANTENNA DETECTION 80000NT10003A - Rework procedure for BGA modules 80000NT10028A - Event Monitor Application Note



2. OVERVIEW

The aim of this document is the description of some hardware solutions useful for developing a product with the Telit ME910C1 module. In this document all the basic functions of a m2m module will be taken into account; for each one of them a proper hardware solution will be suggested and eventually the wrong solutions and common errors to be avoided will be evidenced. Obviously this document cannot embrace the whole hardware solutions and products that may be designed. The wrong solutions to be avoided shall be considered as mandatory, while the suggested hardware configurations shall not be considered mandatory, instead the information given shall be used as a guide and a starting point for properly developing your product with the Telit ME910C1 module.



NOTE:

(EN) The integration of the ME910C1 cellular module within user application shall be done according to the design rules described in this manual.

(IT) L'integrazione del modulo cellulare ME910C1 all'interno dell'applicazione dell'utente dovrà rispettare le indicazioni progettuali descritte in questo manuale.

(DE) Die Integration des ME910C1 Mobilfunk-Moduls in ein Gerät muß gemäß der in diesem Dokument beschriebenen Kunstruktionsregeln erfolgen.

(SL) Integracija ME910C1 modula v uporabniški aplikaciji bo morala upoštevati projektna navodila, opisana v tem priročniku.

(SP) La utilización del modulo ME910C1 debe ser conforme a los usos para los cuales ha sido deseñado descritos en este manual del usuario.

(FR) L'intégration du module cellulaire ME910C1 dans l'application de l'utilisateur sera faite selon les règles de conception décrites dans ce manuel.

(HE) האינטגרציה של המודם הסלולרי האינטגרציה של המודם הסלולרי (HE) האינטגרציה של המודם הסלולרי (HE)

The information presented in this document is believed to be accurate and reliable. However, no responsibility is assumed by Telit Communications S.p.A. for its use, nor any infringement of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent rights of Telit



Communications S.p.A. other than for circuitry embodied in Telit products. This document is subject to change without notice.

3. PINS ALLOCATION

3.1. Pin-out

Pin	Signal	I/O	Function	Туре	Comment		
USB HS 2.0 COMMUNICATION PORT (FW upgrade and Data)							
B15	USB_D+	I/O	USB differential Data (+)				
C15	USB_D-	I/O	USB differential Data (-)				
A13	VUSB	I	Enable pin for the internal USB transceiver.	5 / 3V	Internal PD (100K)		
Asynch	ronous Serial Port		(FW upgrade and Data wi	th Flow Contro	ol)		
N15	C103/TXD	I	Serial data input from DTE	CMOS 1.8V			
M15	C104/RXD	0	Serial data output to DTE	CMOS 1.8V			
M14	C108/DTR	I	Input for (DTR) from DTE CMOS 1.8V				
L14	C105/RTS	Ι	Input for Request to send CMOS 1.8V signal (RTS) from DTE				
P15	C106/CTS	0	Output for Clear to Send CMOS 1.8V signal (CTS) to DTE				
N14	C109/DCD	0	Output for (DCD) to DTE CMOS 1.8V				
P14	C107/DSR	0	Output for (DSR) to DTE CMOS 1.8V				
R14	C125/RING	0	Output for Ring (RI) to DTE	CMOS 1.8V			



SIM Card Interface							
A6	SIMCLK	0	External SIM signal – Clock	1.8 / 3V			
A7	SIMRST	0	External SIM signal – Reset	1.8 / 3V			
A5	SIMIO	I/O	External SIM signal – Data I/O	1.8 / 3V			
A4	SIMIN	I	External SIM signal – Presence (active low)	CMOS 1.8	Internal PU (47K)		
A3	SIMVCC	-	External SIM signal – Power supply for the SIM	1.8 / 3V			
Digital \	Voice Interface (D	VI)					
В9	DVI_WA0	I/O	Digital Audio Interface (WA0)	1.8V			
B6	DVI_RX	I	Digital Audio Interface (RX)	1.8V			
B7	DVI_TX	I/O	Digital Audio Interface (TX)	1.8V			
B8	DVI_CLK	I/O	Digital Audio Interface (CLK)	1.8V			
SPI							
D15	SPI_MOSI	0	SPI MOSI	CMOS 1.8V			
E15	SPI_MISO	I	SPI_MISO	CMOS 1.8V			
F15	SPI_CLK	0	SPI Clock	CMOS 1.8V			
H14	SPI_CS	0	SPI Chip Select	CMOS 1.8V			



DIGITAL IO

C8	GPIO_01	I/O	GPIO_01 /STAT LED	CMOS 1.8V	STAT LED is alternate function
C9	GPIO_02	I/O	GPIO_02	CMOS 1.8V	
C10	GPIO_03	I/O	GPIO_03	CMOS 1.8V	
C11	GPIO_04	I/O	GPIO_04	CMOS 1.8V	
B14	GPIO_05	I/O	GPIO_05	CMOS 1.8V	
C12	GPIO_06	I/O	GPIO_06	CMOS 1.8V	
C13	GPIO_07	I/O	GPIO_07	CMOS 1.8V	
K15	GPIO_08	I/O	GPIO_08	CMOS 1.8V	
L15	GPIO_09	I/O	GPIO_09	CMOS 1.8V	
G15	GPIO_10	I/O	GPIO_10	CMOS 1.8V	
ADC					
B1	ADC_IN1	AI	Analog Digital Converter input		
RF SEC	TION				
K1	ANTENNA	I/O	LTE Antenna (50 ohm)	RF	



GNSS Section							
R9	ANT_GNSS	I	GNSS Antenna (50 ohm)	RF			
R7	GNSS_LNA_EN	0	External GNSS LNA Enable	CMOS 1.8V			
Misce	llaneous Functions						
R13	HW_SHUTDOWN*	Ι	HW Unconditional Shutdown	1.8V	Active low		
R12	ON_OFF*/WAKE*	I	Input command for power ON and to wake from deep sleep mode	1.8V	Active low		
R11	VAUX/PWRMON	0	Supply Output for external accessories / Power ON Monitor	1.8V			
F14	FORCED_USB_BOO T	I	Debug pin, connect to test point	CMOS 1.8V	Active high, internal PD (100K)		
Power	Supply						
M1	VBATT	-	Main power supply (Baseband)	Power			
M2	VBATT	-	Main power supply (Baseband)	Power			
N1	VBATT_PA	-	Main power supply (Radio PA)	Power			
N2	VBATT_PA	-	Main power supply (Radio PA)	Power			
P1	VBATT_PA	-	Main power supply (Radio PA)	Power			



P2	VBATT_PA	-	Main power supply (Radio PA)	Power
E1	GND	-	Ground	Power
G1	GND	-	Ground	Power
H1	GND	-	Ground	Power
J1	GND	-	Ground	Power
L1	GND	-	Ground	Power
A2	GND	-	Ground	Power
E2	GND	-	Ground	Power
F2	GND	-	Ground	Power
G2	GND	-	Ground	Power
H2	GND	-	Ground	Power
J2	GND	-	Ground	Power
К2	GND	-	Ground	Power
L2	GND	-	Ground	Power
R2	GND	-	Ground	Power
М3	GND	-	Ground	Power
N3	GND	-	Ground	Power
P3	GND	-	Ground	Power
R3	GND	-	Ground	Power
D4	GND	-	Ground	Power



M4	GND	-	Ground	Power
N4	GND	-	Ground	Power
P4	GND	-	Ground	Power
R4	GND	-	Ground	Power
N5	GND	-	Ground	Power
P5	GND	-	Ground	Power
R5	GND	-	Ground	Power
N6	GND	-	Ground	Power
P6	GND	-	Ground	Power
R6	GND	-	Ground	Power
P8	GND	-	Ground	Power
R8	GND	-	Ground	Power
Р9	GND	-	Ground	Power
P10	GND	-	Ground	Power
R10	GND	-	Ground	Power
M12	GND	-	Ground	Power
B13	GND	-	Ground	Power
P13	GND	-	Ground	Power
E14	GND	-	Ground	Power
RESERVED				



C1	RESERVED	-	RESERVED
D1	RESERVED	-	RESERVED
F1	RESERVED	-	RESERVED
B2	RESERVED	-	RESERVED
C2	RESERVED	-	RESERVED
D2	RESERVED	-	RESERVED
B3	RESERVED	-	RESERVED
C3	RESERVED	-	RESERVED
D3	RESERVED	-	RESERVED
E3	RESERVED	-	RESERVED
F3	RESERVED	-	RESERVED
G3	RESERVED	-	RESERVED
К3	RESERVED	-	RESERVED
L3	RESERVED	-	RESERVED
B4	RESERVED	-	RESERVED
C4	RESERVED	-	RESERVED
B5	RESERVED	-	RESERVED
C5	RESERVED	-	RESERVED
C6	RESERVED	-	RESERVED
C7	RESERVED	-	RESERVED



N7	RESERVED	-	RESERVED
P7	RESERVED	-	RESERVED
N8	RESERVED	-	RESERVED
N9	RESERVED	-	RESERVED
A10	RESERVED	-	RESERVED
N10	RESERVED	-	RESERVED
N11	RESERVED	-	RESERVED
P11	RESERVED	-	RESERVED
B12	RESERVED	-	RESERVED
D12	RESERVED	-	RESERVED
N12	RESERVED	-	RESERVED
P12	RESERVED	-	RESERVED
G14	RESERVED	-	RESERVED
J14	RESERVED	-	RESERVED
K14	RESERVED	-	RESERVED
N13	RESERVED	-	RESERVED
L13	RESERVED	-	RESERVED
J13	RESERVED	-	RESERVED
M13	RESERVED	-	RESERVED
K13	RESERVED	-	RESERVED



H13	RESERVED	-	RESERVED
G13	RESERVED	-	RESERVED
F13	RESERVED	-	RESERVED
B11	RESERVED	-	RESERVED
B10	RESERVED	-	RESERVED
A9	RESERVED	-	RESERVED
A8	RESERVED	-	RESERVED
E13	RESERVED	-	RESERVED
D13	RESERVED	-	RESERVED
D14	RESERVED	-	RESERVED
A14	RESERVED	-	RESERVED
A12	RESERVED	-	RESERVED
A11	RESERVED	-	RESERVED
H15	RESERVED	-	RESERVED
J15	RESERVED	-	RESERVED
C14	RESERVED	-	RESERVED
H3	RESERVED	-	RESERVED
J3	RESERVED	-	RESERVED





WARNING:

Reserved pins must not be connected. Only D13-E13 pins can be connected together in order to be compatible with HE910 module.

3.2. LGA Pads Layout

TOP VIEW

	А	В	С	D	E	F	G	Н	J	К	L	М	Ν	Ρ	R	
1		ADC_IN1	RES	RES	GND	RES	GND	GND	GND	ANT	GND	VBATT	VBATT_PA	VBATT_PA		
2	GND	RES	RES	RES	GND	GND	GND	GND	GND	GND	GND	VBATT	VBATT_PA	VBATT_PA	GND	
3	SIMVCC	RES	RES	RES	RES	RES	RES	RES	RES	RES	RES	GND	GND	GND	GND	
4	SIMIN	RES	RES	GND								GND	GND	GND	GND	
5	SIMIO	RES	RES										GND	GND	GND	
6	SIMCLK	DVI_RX	RES										GND	GND	GND	
7	SIMRST	DVI_TX	RES										RES	RES	GNSS_LNA _EN	
8	RES	DVI_CLK	GPIO_01										RES	GND	GND	
9	RES	DVI_WA0	GPIO_02										RES	GND	ANT_GNSS	
10	RES	RES	GPIO_03										RES	GND	GND	
11	RES	RES	GPIO_04										RES	RES	VAUX/PWR MON	
12	RES	RES	GPIO_06	RES								GND	RES	RES	ON_OFF*/ WAKE*	
13	VUSB	GND	GPIO_07	RES	RES	RES	RES	RES	RES	RES	RES	RES	RES	GND	HW_SHUT DOWN*	
14	RES	GPIO_05	RES	RES	GND	FORCE_U SB_BOOT	RES	SPI_CS	RES	RES	C105/RTS	C108/DTR	C109/DCD	C107/DSR	C125/RING	
15		USB_D+	USB_D-	SPI_MOSI TX_AUX	SPI_MISO RX_AUX	SPI_ <mark>CLK</mark>	GPIO_10	RES	RES	GPIO_08	GPIO_09	C104/RXD	C103/TXD	C106/CTS		



4. POWER SUPPLY

The power supply circuitry and board layout are a very important part in the full product design and they strongly reflect on the product overall performances, hence read carefully the requirements and the guidelines that will follow for a proper design.

4.1. Power Supply Requirements

The external power supply must be connected to VBATT and VBATT_PA pads and must fulfil the following requirements:

Power Supply	Value
Nominal Supply Voltage	3.8V
Operating Voltage Range	3.40 V÷ 4.20 V
Extended Voltange Range	3.20 V÷ 4.50 V



NOTE:

The Operating Voltage Range MUST never be exceeded; care must be taken when designing the application's power supply section to avoid having an excessive voltage drop.

If the voltage drop is exceeding the limits it could cause an unintentional power off of ME910C1 module.

The Power supply must be higher than 3.20 V to power on the ME910C1 module.

Overshoot voltage (regarding MAX Extended Operating Voltage) and drop in voltage (regarding MIN Extended Operating Voltage) MUST never be exceeded;

The "Extended Operating Voltage Range" can be used only with completely assumption and application of the HW User guide suggestions.





NOTE:

For PTCRB approval on the final products the power supply is required to be within the "Normal Operating Voltage Range".

4.2. Power Consumption


*Preliminary data

Mode	Average (mA)	Mode Description			
Switched off	0.008mA	Module supplied but switched off			
IDLE mode					
AT+CFUN=1	12 mA	Normal mode: full functionality of the module			
AT+CFUN=4	11 mA	Disabled TX and RX; module is not registered on the network			
AT+CFUN=5	2.3 mA	Paging cycle #64 frames (0.64 sec DRx cycle)			
	1.4 mA	Paging cycle #128 frames (1.28 sec DRx cycle)			
	1.1 mA	Paging cycle #256 frames (2.56 sec DRx cycle)			
Operative Mode					
(LTE) CAT M1	190mA	VBATT_PA+VBATT TX=23dBm			
Data call — 10MHz RB=1	112mA	VBATT_PA+VBATT TX=0dBm			
(LTE) CAT NB1	50mA	VBATT_PA+VBATT TX=23dBm			
Data call —	30mA	VBATT_PA+VBATT TX=0dBm			
GPRS Data call	240mA	VBATT_PA+VBATT TX=33dBm			
1TX+1RX slots, GSM900	112mA	VBATT_PA+VBATT TX=0dBm			
GPRS Data call	520mA	VBATT_PA+VBATT TX=28dBm			
4TX+1RX slots, GSM900	130mA	VBATT_PA+VBATT TX=0dBm			






PSM Mode						
AT+CPSMS=1	0.008mA	No current source or sink by any connected pin				
GPS						
GNSS	29 mA	GNSS Standalone 1Hz Acquisition (Non-Dpo)				
GNSS	30 mA	GNSS Standalone 1Hz Tracking (Non-DPO)				
GPS	28 mA	GPS Standalone 1Hz Acquisition (Non-Dpo)				
GPS	29 mA	GPS Standalone 1Hz Tracking (Non-DPO)				

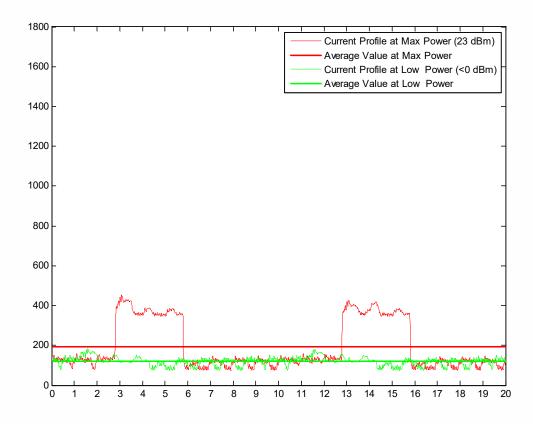

Current consumption profile of Vbatt + *Vbatt_PA in LTE CAT M1 mode with max trhoughtput configuration. LTE NB1 mode has a similar current consumption profile.*

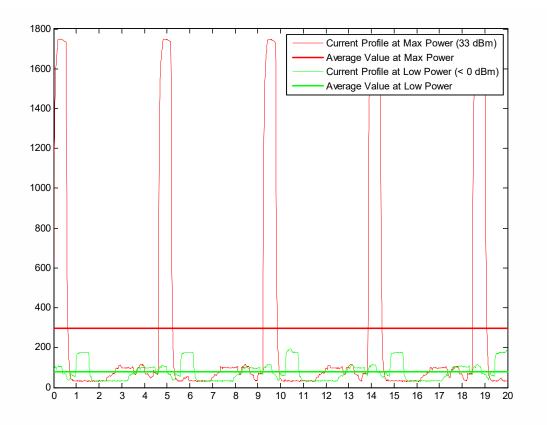

Current consumption profile of Vbatt + *Vbatt_PA in GPRS mode with 1TX+1RX configuration*



NOTE: The reported LTE CAT M1 values are an average among all the product variants and bands for each network wireless technology.

The support of specific network wireless technology depends on product variant configuration.



NOTE: The electrical design for the Power supply should be made ensuring it will be capable of a peak current output of at least:

0.6 A for LTE mode (3.80V supply).

2A for GPRS mode (3.80V supply).



4.3. General Design Rules

The principal guidelines for the Power Supply Design embrace three different design steps:

- the electrical design of the power supply
- the thermal design
- the PCB layout

4.3.1. Electrical Design Guidelines of the power supply

The electrical design of the power supply depends strongly from the power source where this power is drained. We will distinguish them into three categories:


- +5V input (typically PC internal regulator output)
- +12V input (typically automotive)
- Battery

4.3.1.1. +5V Source Power Supply Design Guidelines

- The desired output for the power supply is 3.8V, hence there's not a big difference between the input source and the desired output and a linear regulator can be used. A switching power supply will not be suited because of the low drop out requirements.
- When using a linear regulator, a proper heat sink shall be provided in order to dissipate the power generated.
- A Bypass low ESR capacitor of adequate capacity must be provided in order to cut the current absorption peaks close to the Module, a 100µF capacitor is usually suited.
- Make sure the low ESR capacitor on the power supply output rated at least 10V.





An example of linear regulator with 5V input is:

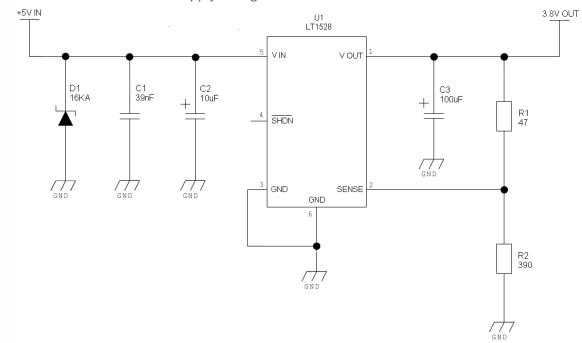

4.3.1.2. +12V Source Power Supply Design Guidelines

- The desired output for the power supply is 3.8V, hence due to the big difference between the input source and the desired output, a linear regulator is not suited and shall not be used. A switching power supply will be preferable because of its better efficiency.
- When using a switching regulator, a 500kHz or more switching frequency regulator is preferable because of its smaller inductor size and its faster transient response. This allows the regulator to respond quickly to the current peaks absorption.
- In any case the frequency and Switching design selection is related to the application to be developed due to the fact the switching frequency could also generate EMC interferences.
- For car PB battery the input voltage can rise up to 15,8V and this should be kept in mind when choosing components: all components in the power supply must withstand this voltage.
- A Bypass low ESR capacitor of adequate capacity must be provided in order to cut the current absorption peaks, a 100µF capacitor is usually suited.
- Make sure the low ESR capacitor on the power supply output is rated at least 10V.
- For Car applications a spike protection diode should be inserted close to the power input, in order to clean the supply from spikes.



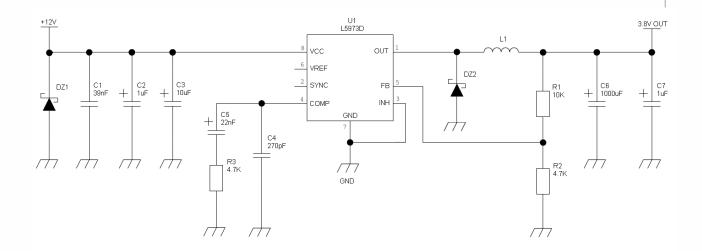

4.3.1.3. Battery Source Power Supply Design Guidelines

The desired nominal output for the power supply is 3.8V and the maximum voltage allowed is 4.2V, hence a single 3.7V Li-Ion cell battery type is suited for supplying the power to the Telit ME910C1 module.

- A Bypass low ESR capacitor of adequate capacity must be provided in order to cut the current absorption peaks, a 100µF tantalum capacitor is usually suited.
- Make sure the low ESR capacitor (usually a tantalum one) is rated at least 10V.
- A protection diode should be inserted close to the power input, in order to save the ME910C1 from power polarity inversion. Otherwise the battery connector should be done in a way to avoid polarity inversions when connecting the battery.
- The battery must be rated to supply peaks of current up to 0.6 A for LTE.

Telit



8

DON'T USE any Ni-Cd, Ni-MH, and Pb battery types directly connected with ME910C1. Their use can lead to overvoltage on the ME910C1 and damage it. USE ONLY Li-Ion battery types.

4.3.2. Thermal Design Guidelines

NOTE:

Worst case as reference values for thermal design of ME910C1 are:

- Average current consumption: 250 mA (LTE CAT M1 and NB1 modes)
- Average current consumption: 600 mA (GPRS and EDGE modes)
- Supply voltage: 4.50V



NOTE:

Make PCB design in order to have the best connection of GND pads to large surfaces of copper.



NOTE:

The ME910C1 includes a function to prevent overheating.

4.3.3. Power Supply PCB layout Guidelines


As seen on the electrical design guidelines the power supply shall have a low ESR capacitor on the output to cut the current peaks on the input to protect the supply from spikes The placement of this component is crucial for the correct working of the circuitry. A misplaced component can be useless or can even decrease the power supply performances.

• The Bypass low ESR capacitor must be placed close to the Telit ME910C1 power input pads or in the case the power supply is a switching type it can be placed close

to the inductor to cut the ripple provided the PCB trace from the capacitor to the1VV0301351 Rev.11Page 32 of 1052019-06-21

ME910C1 is wide enough to ensure a dropless connection even during an 0.6 A (LTE) or 2A (GSM) current peak.

- The protection diode must be placed close to the input connector where the power source is drained.
- The PCB traces from the input connector to the power regulator IC must be wide enough to ensure no voltage drops occur when an 2 A current peak is absorbed (valid only for product supporting GSM mode).
- The PCB traces to the ME910C1 and the Bypass capacitor must be wide enough to ensure no significant voltage drops occur. This is for the same reason as previous point. Try to keep this trace as short as possible.
- To reduce the EMI due to switching, it is important to keep very small the mesh involved; thus the input capacitor, the output diode (if not embodied in the IC) and the regulator have to form a very small loop. This is done in order to reduce the radiated field (noise) at the switching frequency (100-500 kHz usually).
- A dedicated ground for the Switching regulator separated by the common ground plane is suggested.
- The placement of the power supply on the board should be done in such a way to guarantee that the high current return paths in the ground plane are not overlapped to any noise sensitive circuitry as the microphone amplifier/buffer or earphone amplifier.
- The power supply input cables should be kept separate from noise sensitive lines such as microphone/earphone cables.
- The insertion of EMI filter on VBATT pins is suggested in those designs where antenna is placed close to battery or supply lines. A ferrite bead like Murata BLM18EG101TN1 or Taiyo Yuden P/N FBMH1608HM101 can be used for this purpose.
- The below figure shows the recommended circuit:

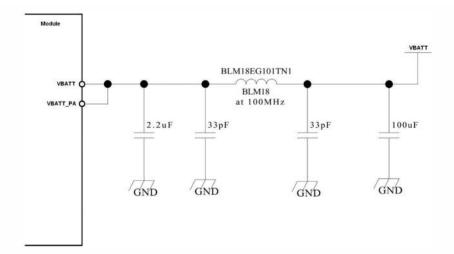



4.4. VAUX Power Output

A regulated power supply output is provided in order to supply small devices from the module, like: level translators, audio codec, sensors, and others.

Pin R11 can be used also as PWRMON (module powered ON indication) function, because is always active when the module is powered ON and cannot be set to LOW level by any AT command.

Host can only detect deep sleep mode by monitoring of VAUX/PWRMON output pin, since there is no pin dedicated to PSM status indicator,

The operating range characteristics of the supply are:

ltem	Min	Typical	Мах
Output voltage	1.78V	1.80V	1.82V
Output current			60mA
Output bypass capacitor (inside the module)		1uF	



If PSM is enabled by AT+CPSMS Command, VAUX during deep sleep mode period is OFF

4.5. RTC Supply

RTC is functional when ME910C1 is in PSM state and VBATT pin is supplied.

RTC settings are erased if VBATT supply is temporary disconnected.

5. DIGITAL SECTION

5.1. Logic Levels

Parameter	Min	Мах				
ABSOLUTE MAXIMUM RATINGS – NOT FUNCTIONAL						
Input level on any digital pin (CMOS 1.8) with respect to ground	-0.3V	2.1V				
Operating Range - Interface levels (1.8V CMOS)						
Input high level	1.5V	1.9V				
Input low level	0V	0.35V				
Output high level	1.6V	1.9V				
Output low level	0V	0.2V				

Parameter	AVG
CURRENT CHARACTERISTICS:	
Output Current	1mA
Input Current	1uA

5.2. Power On

To turn on the ME910C1 the pad ON_OFF*/WAKE* must be tied low for at least 5 second and then released.


The maximum current that can be drained from the ON_OFF*/WAKE* pad is 0,1 mA.

ON_OFF*/WAKE* pad can make an asynchronous wakeup of the system from the PSM Mode, before the scheduled event of timer T3412 expired.

To make asynchronous exit from PSM mode ON_OFF*/WAKE* pin must be set LOW for at least 5 seconds.



Figure 1 illustrates a simple circuit to power on the module using an inverted buffer output. *Figure 1: Power-on Circuit*

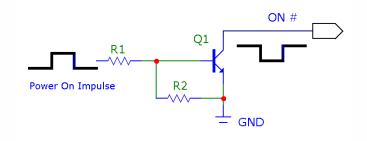



NOTE:


Don't use any pull up resistor on the ON_OFF*/WAKE* line, it is internally pulled up. Using pull up resistor may bring to latch up problems on the ME910C1 power regulator and improper power on/off of the module. The line ON_OFF*/WAKE* must be connected only in open collector or open drain configuration.

In this document all the lines that are inverted, hence have active low signals are labelled with a name that ends with"#","*" or with a bar over the name.

To check if the device has powered on, the hardware line PWRMON should be monitored.




A flow chart showing the proper turn on procedure is displayed below:

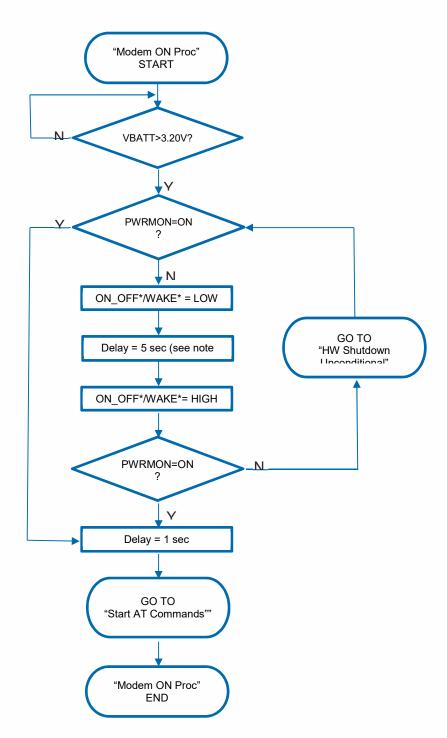



A flow chart showing the AT commands managing procedure is displayed below:

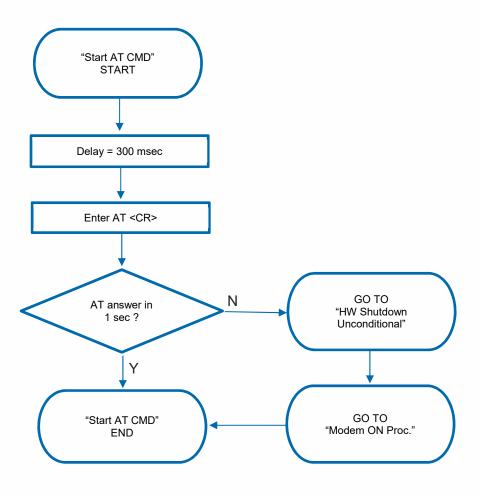




NOTE:

In order to avoid a back powering effect it is recommended to avoid having any HIGH logic level signal applied to the digital pins of the ME910C1 when the module is powered off or during an ON-OFF transition.




For example:

1- Let's assume you need to drive the ON_OFF*/WAKE* pad with a totem pole output of a +3/5 V microcontroller (uP_OUT1):

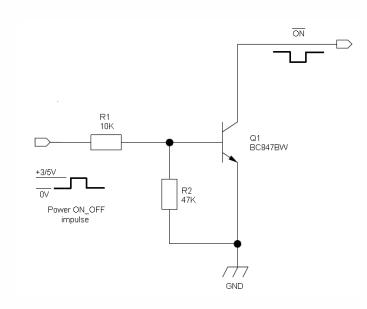

2- Let's assume you need to drive the ON_OFF*/WAKE* pad directly with an ON/OFF button:

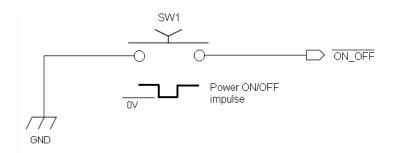



WARNING

It is recommended to set the ON_OFF*/WAKE* line LOW to power on the module only after VBATT is higher than 3.20V.

In case this condition it is not satisfied you could use the HW_SHUTDOWN* line to recover it and then restart the power on activity using the ON_OFF*/WAKE* line.

An example of this is described in the following diagram.

After HW_SHUTDOWN* is released you could again use the ON_OFF*/WAKE* line to power on the module.

5.3. Power Off

Turning off of the device can be done in two ways:

- via AT command (see ME910C1 Software User Guide, AT#SHDN)
- pin ON_OFF*/WAKE* for at least 3 seconds

Either ways, the device issues a detach request to network informing that the device will not be reachable any more.



NOTE:

To check if the device has been powered off or IN PSM mode, the hardware line PWRMON must be monitored. The device is powered off when PWRMON goes low.

In order to avoid a back powering effect it is recommended to avoid having any HIGH logic level signal applied to the digital pins of the ME910C1 when the module is powered off or during an ON-OFF transition.






WARNING:

Not following the recommended shut-down procedures might damage the device and consequently void the warranty.

The following flow chart shows the proper turn off procedure:

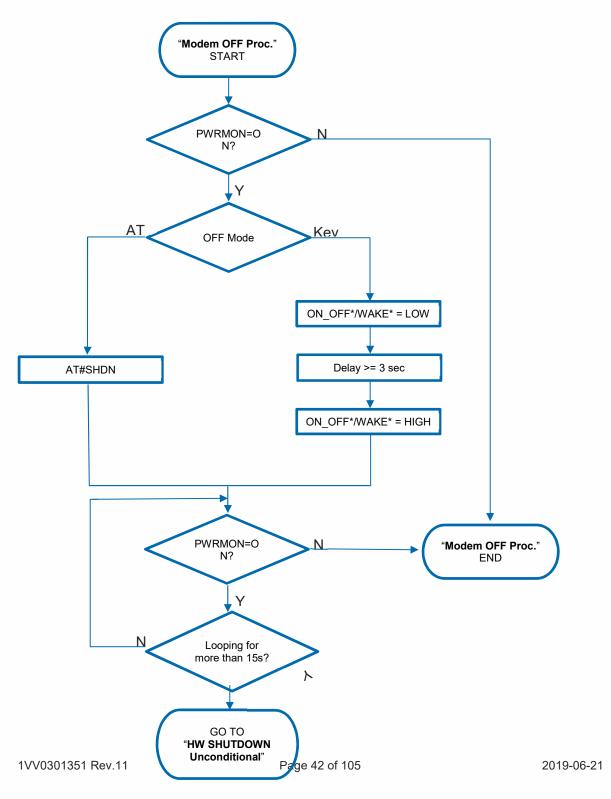



5.4. Wake from deep sleep mode

ME910C1 supports Power Saving Mode (PSM) functionality defined in 3GPP Release 12. When Periodic Update Timer expires, ME910C1 power off until the next scheduled wakeup time.

Asynchronous event controlled by host can wake up from deep sleep mode by asserting ON_OFF*/WAKE* pin LOW for at least 5 seconds.

Host can detect deep sleep mode by polling VAUX/PWRMON pin if previously configured.

5.5. Unconditional Shutdown

HW_SHUTDOWN* is used to unconditionally shutdown the ME910C1. Whenever this signal is pulled low, the ME910C1 is reset. When the device is reset it stops any operation. After the release of the line, the ME910C1 is unconditionally shut down, without doing any detach operation from the network where it is registered. This behaviour is not a proper shut down because any cellular device is requested to issue a detach request on turn off. The HW_SHUTDOWN* is internally controlled on start-up to achieve always a proper power-on reset sequence, so there's no need to control this pin on start-up. To unconditionally shutdown the ME910C1, the pad HW_SHUTDOWN* must be tied low for at least 200 milliseconds and then released.

The signal is internally pulled up so the pin can be left floating if not used.

If used, then it **must always be connected with an open collector transistor**, to permit to the internal circuitry the power on reset and under voltage lockout functions.

During PSM mode, HW_SHUTDOWN toggle has no effect. The use of HW_SHUTDOWN* pin is valid only when ME910C1 has VAUX/PWRMON output HI.

PIN DESCRIPTION

Signal	Function	I/O	PAD
HW_SHUTDOWN*	Unconditional Shutdown of the Module	I	R13

OPERATING LEVELS


Signal Status	Min	Мах
HW_SHUTDOWN* Input high	1.5V	1.9V
HW_SHUTDOWN* Input low	0V	0.35V



WARNING:


The hardware unconditional Shutdown must not be used during normal operation of the device since it does not detach the device from the network. It shall be kept as an emergency exit procedure.

A typical circuit is the following:

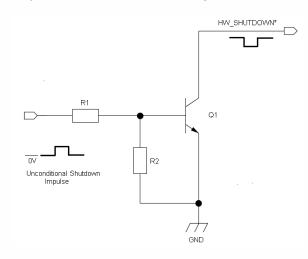



For example: Let us assume you need to drive the HW_SHUTDOWN* pad with a totem pole output of a +3/5 V microcontroller (uP_OUT2):

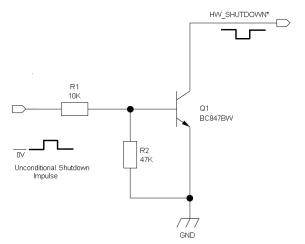


In the following flow chart is detailed the proper restart procedure:



NOTE:

In order to avoid a back powering effect it is recommended to avoid having any HIGH logic level signal applied to the digital pins of the ME910C1 when the module is powered off or during an ON-OFF transition.



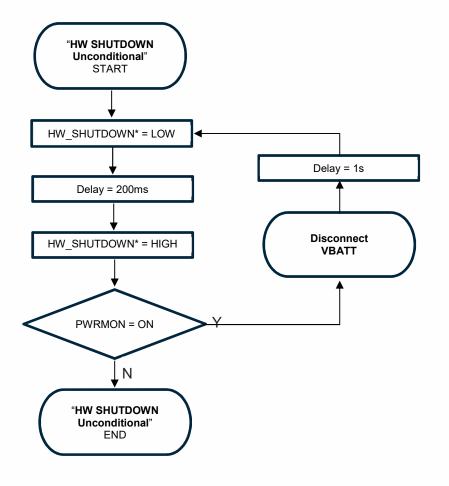



NOTE:

Do not use any pull up resistor on the HW_SHUTDOWN* line nor any totem pole digital output. Using pull up resistor may bring to latch up problems on the ME910C1 power regulator and improper functioning of the module.

To proper power on again the module please refer to the related paragraph ("Power ON")

The unconditional hardware shutdown must always be implemented on the boards and should be used only as an emergency exit procedure.



5.6. Fast power down

The procedure to power off ME910C1 described in Chapter 5.3 normally takes more than 1 second to detach from network and make ME910C1 internal filesystem properly closed. In case of unwanted supply voltage loss the system can be switched off without any risk of filesystem data corruption by implementing Fast Shut Down feature.

Fast Shut Down feature permits to reduce the current consumption and the time-topoweroff to minimum values.




NOTE:

Refer to ME910C1 series AT command reference guide (Fast power down - #FASTSHDN) in order to set up detailed AT command.

5.6.1. Fast Shut Down by Hardware

The Fast Power Down can be triggered by configuration of GPIO_04. HI level to LOW level transition of GPIO commands fast power down.

Example circuit:

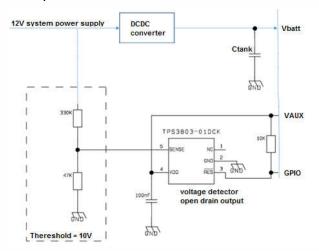





NOTE:

Consider voltage drop under max current conditions when defining the voltage detector thereshold in order to avoid unwanted shutdown.

The capacitor is rated with the following formula:





TIP:

Make the same plot during system verification to check timings and voltage levels.

5.6.2. Fast Shut Down by Software

The Fast Power Down can be triggered by AT command.

5.7. Forced USB boot

If standard firmware upgrade procedures are not possible, FORCED_USB_BOOT pin must be set to 1.8V during poweron of ME910C1.

The input current is very low so 10K resistor can be used to keep this pin in HI state. FORCED_USB_BOOT pin must be connected only during firmware upgrade operation and normally it has to be left open.

FORCED_USB_BOOT pin must be available in the board throught test point for easy connection to external 1.8V supply.



5.8.1. USB 2.0 HS

The ME910C1 includes one integrated universal serial bus (USB 2.0 HS) transceiver. The following table is listing the available signals:

PAD	Signal	I/O	Function	NOTE
B15	USB_D+	I/O	USB differential Data (+)	
C15	USB_D-	I/O	USB differential Data (-)	
A13	VUSB	AI	Power sense for the internal USB transceiver.	Accepted range: 3.0V to 5.5V 100K pull down

The USB_DPLUS and USB_DMINUS signals have a clock rate of 480 MHz, therefore signal traces should be routed carefully. Trace lengths, number of vias and capacitive loading should be minimized. The characteristic impedance value should be as close as possible to 90 Ohms differential.

ESD protection can be added to USB D+/D- lines in case of external connector for cable connection.

Proper components for USB 2.0 must be used.



NOTE:

Disconnect or assert to GND the VUSB pin before activating the DRX

Telit



5.8.2. SPI

The ME910C1 Module is provided by a standard 3-wire master SPI interface + chip select control.

The following table is listing the available signals:

PAD	Signal	I/O	Function	Туре	NOTE
D15	SPI_MOSI	0	SPI MOSI	CMOS 1.8V	Shared with TX_AUX
E15	SPI_MISO	Ι	SPI MISO	CMOS 1.8V	Shared with RX_AUX
F15	SPI_CLK	0	SPI Clock	CMOS 1.8V	
H14	SPI_CS	0	SPI Chip Select	CMOS 1.8V	




NOTE:

Due to the shared functions, SPI port and TX_AUX/RX_AUX port cannot be used simultanously.

Refer to ME910C1 series AT command reference guide for port configuration.



SPI Connections

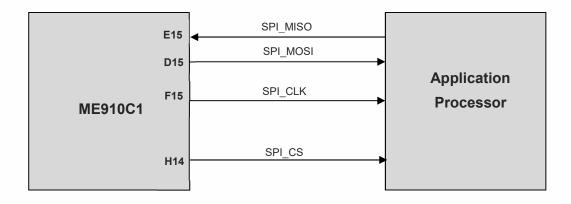

5.8.3. Serial Ports

The ME910C1 module is provided with by 2 Asynchronous serial ports:

- MODEM SERIAL PORT 1 (Main)
- MODEM SERIAL PORT 2 (Auxiliary)

Several configurations can be designed for the serial port on the OEM hardware, but the most common are:

- RS232 PC com port
- microcontroller UART @ 1.8V (Universal Asynchronous Receive Transmit)
- microcontroller UART @ 5V or other voltages different from 1.8V

Depending from the type of serial port on the OEM hardware a level translator circuit may be needed to make the system work. On the ME910C1 the ports are CMOS 1.8.

5.8.3.1. Modem serial port 1

The serial port 1 on the ME910C1 is a +1.8V UART with all the 7 RS232 signals. It differs from the PC-RS232 in the signal polarity (RS232 is reversed) and levels.

The following table is listing the available signals:

RS232 Pin	Signal	PAD	Name	Usage	
1	C109/DCD	N14	Data Carrier Detect	Output from the ME910C1 that indicates the carrier presence	
2	C104/RXD	M15	Transmit line *see Note	Output transmit line of ME910C1 UART	
3	C103/TXD	N15	Receive line *see Note	Input receive of the ME910C1 UART	
4	C108/DTR	M14	Data Terminal Ready	Input to the ME910C1 that controls the DTE READY condition	
6	C107/DSR	P14	Data Set Ready Output from the ME910C indicates the module is re		
7	C106/CTS	P15	Clear to Send	Output from the ME910C1 that controls the Hardware flow control	
8	C105/RTS	L14	Request to Send	Input to the ME910C1 that controls the Hardware flow control	
9	C125/RING	R14	Ring Indicator	Output from the ME910C1 that indicates the incoming call condition	





NOTE:

According to V.24, some signal names are referred to the application side, therefore on the ME910C1 side these signal are on the opposite direction:

TXD on the application side will be connected to the receive line (here named C103/TXD)

RXD on the application side will be connected to the transmit line (here named C104/RXD)

For a minimum implementation, only the TXD, RXD lines can be connected, the other lines can be left open provided a software flow control is implemented.

In order to avoid a back powering effect it is recommended to avoid having any HIGH logic level signal applied to the digital pins of the ME910C1 when the module is powered off or during an ON/OFF transition.

5.8.3.2. Modem serial port 2

The secondary serial port on the ME910C1 is a CMOS1.8V with only the RX and TX signals.

The signals of the ME910C1 serial port are:

P	PAD	Signal	I/O	Function	Туре	NOTE
Γ	D15	TX_AUX	0	Auxiliary UART (TX Data to DTE)	CMOS 1.8V	Shared with SPI_MOSI
E	E15	RX_AUX	I	Auxiliary UART (RX Data from DTE)	CMOS 1.8V	Shared with SPI_MISO





NOTE:

Due to the shared functions, TX_AUX/RX_AUX port and SPI port cannot be used simultanously.

In order to avoid a back powering effect it is recommended to avoid having any HIGH logic level signal applied to the digital pins of the ME910C1 when the module is powered off or during an ON/OFF transition.

Refer to ME910C1 series AT command reference guide for port configuration.

5.8.3.3. RS232 level translation

In order to interface the ME910C1 with a PC com port or a RS232 (EIA/TIA-232) application a level translator is required. This level translator must:

- invert the electrical signal in both directions;
- Change the level from 0/1.8V to +15/-15V.

Actually, the RS232 UART 16450, 16550, 16650 & 16750 chipsets accept signals with lower levels on the RS232 side (EIA/TIA-562), allowing a lower voltage-multiplying ratio on the level translator. Note that the negative signal voltage must be less than 0V and hence some sort of level translation is always required.

The simplest way to translate the levels and invert the signal is by using a single chip level translator. There are a multitude of them, differing in the number of drivers and receivers and in the levels (be sure to get a true RS232 level translator not a RS485 or other standards).

By convention the driver is the level translator from the 0-1.8V UART to the RS232 level. The receiver is the translator from the RS232 level to 0-1.8V UART.

In order to translate the whole set of control lines of the UART you will need:


• 5 drivers



• 3 receivers

An example of RS232 level adaptation circuitry could be done using a MAXIM transceiver (MAX218)

In this case the chipset is capable to translate directly from 1.8V to the RS232 levels (Example done on 4 signals only).

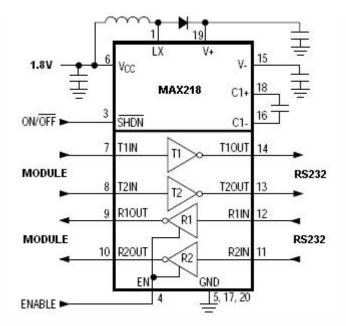

The RS232 serial port lines are usually connected to a DB9 connector with the following layout:

DSR_RS232	DCD_AS535	 σ	<u> </u>	H
	RX_R5232 -	 7	<u>–</u> 0	n.
RTS_RS232	TX_R5232	 _	$\underline{\circ}$	L.
CTS_RS232	DTR_R5232	 œ	07	4
RI_RS232 🗁	DIRENSESE	Ð	0~	
			~Y	ļσ
				,
			//// GND	

5.9. General purpose I/O

The ME910C1 module is provided by a set of Configurable Digital Input / Output pins (CMOS 1.8V). Input pads can only be read; they report the digital value (high or low) present on the pad at the read time. Output pads can only be written or queried and set the value of the pad output.

An alternate function pad is internally controlled by the ME910C1 firmware and acts depending on the function implemented.

The following table shows the available GPIO on the ME910C1:

PAD	Signal	I/O	Output Drive Strength	Default State	NOTE
C8	GPIO_01	I/O	1mA	INPUT – PD (100K)	Alternate function STAT LED
C9	GPIO_02	I/O	1mA	INPUT – PD (100K)	
C10	GPIO_03	I/O	1mA	INPUT – PD (100K)	
C11	GPIO_04	I/O	1mA	INPUT – PD (100K)	
B14	GPIO_05	I/O	1mA	INPUT – PD (100K)	
C12	GPIO_06	I/O	1mA	INPUT – PD (100K)	
C13	GPIO_07	I/O	1mA	INPUT – PD (20K to 100K)	(*)
K15	GPIO_08	I/O	1mA	INPUT – PD (100K)	
L15	GPIO_09	I/O	1mA	INPUT – PD (18K)	
G15	GPIO_10	I/O	1mA	INPUT – PD (100K)	

(*) If used, GPIO_07 must not be pullup to 1.8V during ME910 poweron.

5.9.1. Using a GPIO as INPUT

The GPIO pads, when used as inputs, can be connected to a digital output of another device and report its status, provided this device has interface levels compatible with the 1.8V CMOS levels of the GPIO.

Input current (@1.8V) is about 18uA (corrisponding to 100K pulldown value) in all GPIO pin expect GPIO_09 where current is about 100uA. This value is present since ME910 poweron.



If the digital output of the device to be connected with the GPIO input pad of ME910C1 has interface levels different from the 1.8V CMOS, then it can be buffered with an open collector transistor with a 47K pull up to 1.8V supplied by VAUX/POWERMON R11 pad.



NOTE:

In order to avoid a back powering effect it is recommended to avoid having any HIGH logic level signal applied to the digital pins of the ME910C1 when the module is powered off or during an ON/OFF transition.

Refer to ME910C1 series AT command reference guide for GPIO pins configuration.

5.9.2. Using a GPIO as OUTPUT

The GPIO pads, when used as outputs, can drive 1.8V CMOS digital devices or compatible hardware. When set as outputs, the pads have a push-pull output and therefore the pull-up resistor may be omitted.

5.9.3. Indication of network service availability

The STAT_LED pin status shows information on the network service availability and Call status.

The function is available as alternate function of GPIO_01 (to be enabled using the AT#GPIO=1,0,2 command).

In the ME910C1 modules, the STAT_LED needs an external transistor to drive an external

LED and its voltage level is defined accordingly to the table below:.

Device Status


Led Status



Device off	Permanently off
Not Registered	Permanently on
Registered in idle	Blinking 1sec on + 2 sec off
Registered in idle + power saving	It depends on the event that triggers the wakeup (In sync with network paging)
Connecting	Blinking 1 sec on + 2 sec off

The reference schematic for LED indicator,

R3 must be calculated taking in account VBATT value and LED type. :

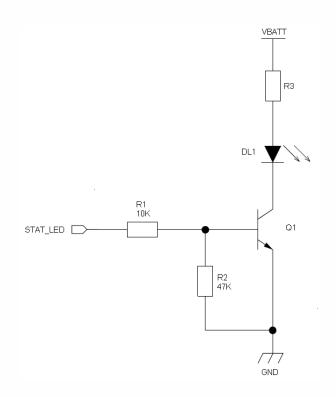

5.10. External SIM Holder

Please refer to the related User Guide (SIM Holder Design Guides, 80000NT10001a).

5.11. ADC Converter

The ME910C1 is provided by one AD converter. It is able to read a voltage level in the range of 0÷1.8 volts applied on the ADC pin input, store and convert it into 10 bit word.

The input line is named as ADC_IN1 and it is available on Pad B11VV0301351 Rev.11Page 58 of 105



The following table is showing the ADC characteristics:

ltem	Min	Typical	Мах	Unit
Input Voltage range	0	-	1.8	Volt
AD conversion	-	-	10	bits
Input Resistance	1	-	-	Mohm
Input Capacitance	-	1	-	pF

The ADC could be controlled using an AT command.

The command is **AT#ADC=1,2**

The read value is expressed in mV

Refer to SW User Guide or AT Commands Reference Guide for the full description of this function.

6. RF SECTION

6.1. Bands Variants

Product	bands
ME910C1-NV	B4,B13
ME910C1-NA	B2,B4,B12, B13
ME910C1-E1	B3,B8,B20
ME910C1-AU	B3, B5,B8,B28
ME910C1-K1	B3,B5,B8
ME910C1-J1	B1,B3,B8,B18,B19,B26
ME910C1-E2	B3,B8,B20, GSM850, GSM900, DCS1800, PCS1900
ME910C1-WW	B1,B2,B3,B4,B5,B8,B12,B13,B18,B19,B20,B26,B28,GSM850, GSM900, DCS1800, PCS1900
ME910C1-P1	B1,B2,B3,B4,B5,B8,B12,B13,B18,B19,B20,B26,B28
ME910C1-P2	B1,B2,B3,B4,B5,B8,B12,B13,B18,B19,B20,B26,B28,GSM850, GSM900, DCS1800, PCS1900

6.2. TX Output power

Band	Mode	Class	RF power (dBm)
all bands	(LTE) CAT-M1	3	23 (+-2dB)
all bands	(LTE) CAT-NB1	3	23 (+-2 dB)
GSM850, GSM900	GPRS (GMSK)	4	33 (+-2 dB)



GSM850, GSM900	EDGE (8PSK)	E2	27 (+-2 dB)
DCS1800, PCS1900	GPRS (GMSK)	4	30 (+-2 dB)
DCS1800, PCS1900	EDGE (8PSK)	E2	26 (+-2 dB)

6.3. RX Sensitivity

Measurement setup

MODE	
(LTE) CAT M1	Throughput >95% According to 3GPP 36.521-1
(LTE) CAT NB1	Throughput >95% According to 3GPP 36.521-1
GPRS	BLER <10%, CS2 According to 3GPP 51.010-1

ME910C1-NA/ ME910C1-NV

MODE / Band	REFsens (dBm)	3GPP REFsens (dBm)
CAT M1 / Band 2	-108.0	-100.3
CAT M1 / Band 4	-107.0	-102.3
CAT M1 / Band 12	-108.0	-99.3
CAT M1 / Band 13	-107.8	-99.3



ME910C1-E1

MODE / Band	REFsens (dBm)	3GPP REFsens (dBm)
CAT M1 / Band 3	-108.0	-99.3
CAT M1 / Band 8	-108.4	-99.8
CAT M1 / Band 20	-107.6	-99.8
CAT NB1 / Band 3	-115.6	-107.5
CAT NB1 / Band 8	-113.8	-107.5
CAT NB1 / Band 20	-114.8	-107.5

ME910C1-AU

MODE / Band	REFsens (dBm)	3GPP REFsens (dBm)
CAT M1 / Band 3	-108.0	-99.3
CAT M1 / Band 5	-108.8	-100.8
CAT M1 / Band 8	-108.4	-99.8
CAT M1 / Band 28	-108.0	-100.8
CAT NB1 / Band 3	-115.6	-107.5
CAT NB1 / Band 5	-114.6	-107.5



CAT NB1 / Band 8	-113.8	-107.5
CAT NB1 / Band 28	-115.2	-107.5

ME910C1-K1

MODE / Band	REFsens (dBm)	3GPP REFsens (dBm)
CAT M1 / Band 3	-108.0	-99.3
CAT M1 / Band 5	-108.8	-100.8
CAT M1 / Band 8	-108.0	-99.8
CAT M1 / Band 26	-108.8	-100.8
CAT NB1 / Band 3	-115.6	-107.5
CAT NB1 / Band 5	-114.6	-107.5
CAT NB1 / Band 8	-113.8	-107.5
CAT NB1 / Band 26	-115.0	-107.5

ME910C1-J1

MODE / Band	REFsens (dBm)	3GPP REFsens (dBm)
CAT M1 / Band 1	-106.8	-102.3
CAT M1 / Band 3	-108.0	-99.3
CAT M1 / Band 8	-108.4	-99.8
CAT M1 / Band 18	-108.4	-102.3
CAT M1 / Band 19	-108.4	-102.3
1VV0301351 Rev.11	Page 63 of 105	2019-06-21



ME910C1-E2

MODE / Band	REFsens (dBm)	3GPP REFsens (dBm)
CAT M1 / Band 3	-106.2	-99.3
CAT M1 / Band 8	-105.0	-99.8
CAT M1 / Band 20	-105.6	-100.8
CAT NB1/ Band 3	-113.4	-107.5
CAT NB1 / Band 8	-113.6	-107.5
CAT NB1 / Band 20	-114.6	-107.5
GPRS / GSM850	-107.4	-104.0
GPRS / GSM900	-107.2	-104.0
GPRS / DCS1800	-109.6	-104.0
GPRS / PCS1900	-109.6	-104.0

ME910C1-WW / ME910C1-P2

Band	REFsens (dBm)	3GPP REFsens (dBm)
CAT M1 / Band 1	-106.8	-102.3
CAT M1 / Band 2	-104.2	-100.3
CAT M1 / Band 3	-106.2	-99.3
CAT M1 / Band 4	-104.2	-102.3
CAT M1 / Band 5	-105.8	-100.8
CAT M1 / Band 8	-105.0	-99.8
CAT M1 / Band 12	-105.6	-99.3
CAT M1 / Band 13	-105.6	-99.3
CAT M1 / Band 18	-105.8	-102.3
CAT M1 / Band 19	-105.8	-102.3
CAT M1 / Band 20	-105.6	-99.8
CAT M1 / Band 26	-105.8	-100.3
CAT M1 / Band 28	-106.2	-100.8
CAT NB1 / Band 1	-113.0	-107.5
CAT NB1 / Band 2	-113.4	-107.5
CAT NB1 / Band 3	-113.6	-107.5
CAT NB1 / Band 5	-114.4	-107.5

-113.4	-107.5
-113.4	-107.5
-113.6	-107.5
-114.6	-107.5
-114.2	-107.5
-114.2	-107.5
-114.2	-107.5
-114.0	-107.5
-107.4	-104.0
-107.2	-104.0
-109.6	-104.0
-109.6	-104.0
	-113.4 -113.6 -114.6 -114.2 -114.2 -114.2 -114.2 -114.0 -107.4 -107.2 -109.6

ME910C1-P1

Band	REFsens (dBm)	3GPP REFsens (dBm)
CAT M1 / Band 1	-106.8	-102.3
CAT M1 / Band 2	-104.2	-100.3
CAT M1 / Band 3	-106.2	-99.3
CAT M1 / Band 4	-104.2	-102.3
CAT M1 / Band 5	-105.8	-100.8
CAT M1 / Band 8	-105.0	-99.8

CAT M1 / Band 12	-105.6	-99.3
CAT M1 / Band 13	-105.6	-99.3
CAT M1 / Band 18	-105.8	-102.3
CAT M1 / Band 19	-105.8	-102.3
CAT M1 / Band 20	-105.6	-99.8
CAT M1 / Band 26	-105.8	-100.3
CAT M1 / Band 28	-106.2	-100.8
CAT NB1 / Band 1	-113.0	-107.5
CAT NB1 / Band 2	-113.4	-107.5
CAT NB1 / Band 3	-113.6	-107.5
CAT NB1 / Band 5	-114.4	-107.5
CAT NB1 / Band 8	-113.4	-107.5
CAT NB1 / Band 12	-113.4	-107.5
CAT NB1 / Band 13	-113.6	-107.5
CAT NB1 / Band 18	-114.6	-107.5
CAT NB1 / Band 19	-114.2	-107.5
CAT NB1 / Band 20	-114.2	-107.5
CAT NB1 / Band 26	-114.2	-107.5
CAT NB1 / Band 28	-114.0	-107.5



6.4. Antenna requirements

The antenna connection and board layout design are the most important aspect in the full product design as they strongly affect the product overall performances, hence read carefully and follow the requirements and the guidelines for a proper design.

The antenna and antenna transmission line on PCB for a Telit ME910C1 device shall fulfil the following requirements:

ME910C1-NA / ME910C1-NV

ltem	Value	
Frequency range	Depending by frequency band(s) provided by the network operator, the customer shall use the most suitable antenna for that/those band(s)	
Bandwidth	140 MHz in LTE Band 2 445 MHz in LTE Band 4 47 MHz in LTE Band 12 41 MHz in LTE Band 13	
Impedance	50 ohm	
Input power	> 24dBm Average power	
VSWR absolute max	≤ 10:1 (limit to avoid permanent damage)	
VSWR recommended	 ≤ 2:1 (limit to fulfill all regulatory requirements) 	

ME910C1-E1/ ME910C1-AU/ ME910C1-K1/ ME910C1-J1

ltem	Value
Frequency range	Depending by frequency band(s) provided by the network operator, the customer shall use the most suitable antenna for that/those band(s)
Bandwidth	250 MHz in LTE Band 1 170 MHz in LTE Band 3 70 MHz in LTE Band 5

	80 MHz in LTE Band 8	
60 MHz in LTE Band 19		
71 MHz in LTE Band 20		
	110 MHz in LTE Band 28	
Impedance	50 ohm	
Input power	> 24dBm Average power	
VSWR absolute max	≤ 10:1 (limit to avoid permanent damage)	
VSWR recommended	 ≤ 2:1 (limit to fulfill all regulatory requirements) 	

ME910C1-E2


ltem	Value	
Frequency range	Depending by frequency band(s) provided by the network operator, the customer shall use the most suitable antenna for that/those band(s)	
	140 MHz in PCS1900	
	170 MHz in LTE Band 3, DCS1800	
Bandwidth	70 MHz in GSM850	
	80 MHz in LTE Band 8, GSM900	
	71 MHz in LTE Band 20	
Impedance	50 ohm	
Input power	> 24dBm Average power	
VSWR absolute max	< 10:1 (limit to avoid permanent damage)	
VSWR recommended	 2:1 (limit to fulfill all regulatory requirements) 	

ME910C1-WW / ME910C1-P2

Item	Value	
Frequency range	Depending by frequency band(s) provided by the network operator, the customer shall use the most suitable antenna for that/those band(s)	
Bandwidth	250 MHz in LTE Band 1 140 MHz in LTE Band B2, PCS1900 170 MHz in LTE Band 3, DCS1800 445 MHz in LTE Band 4 70 MHz in LTE Band 5,12, 13, GSM850 60 MHz in LTE Band 18 60 MHz in LTE Band 19 80 MHz in LTE Band 26 80 MHz in LTE Band 8, GSM900 71 MHz in LTE Band 20 110 MHz in LTE Band 28	
Impedance	50 ohm	
Input power	> 24dBm Average power	
VSWR absolute max	≤ 10:1 (limit to avoid permanent damage)	
VSWR recommended	≤ 2:1 (limit to fulfill all regulatory requirements)	

ME910C1-P1

ltem	Value
Frequency range	Depending by frequency band(s) provided by the network operator, the customer shall use the most suitable antenna for that/those band(s)
Bandwidth	250 MHz in LTE Band 1 140 MHz in LTE Band B2 170 MHz in LTE Band 3

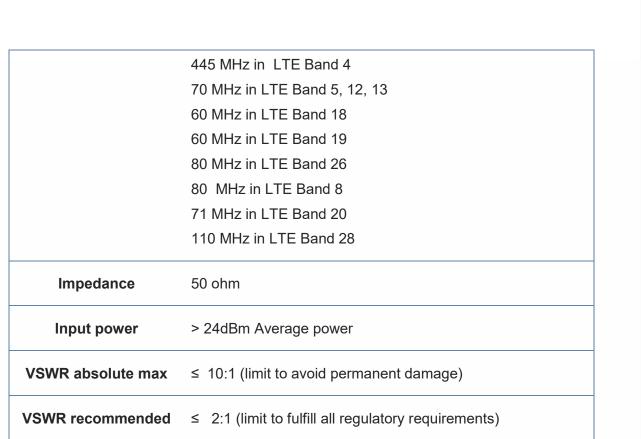

Telit

6.4.1. PCB Design guidelines

When using the ME910C1, since there's no antenna connector on the module, the antenna must be connected to the ME910C1 antenna pad (K1) by means of a transmission line implemented on the PCB.

This transmission line shall fulfil the following requirements:

ltem	Value
Characteristic Impedance	50 ohm (+-10%)
Max Attenuation	0,3 dB
Coupling	Coupling with other signals shall be avoided
Ground Plane	Cold End (Ground Plane) of antenna shall be equipotential to the ME910C1 ground pins


The transmission line should be designed according to the following guidelines:

- Make sure that the transmission line's characteristic impedance is 50ohm ;
- Keep line on the PCB as short as possible, since the antenna line loss shall be less than about 0,3 dB;
- Line geometry should have uniform characteristics, constant cross section, avoid meanders and abrupt curves;
- Any kind of suitable geometry / structure (Microstrip, Stripline, Coplanar, Grounded Coplanar Waveguide...) can be used for implementing the printed transmission line afferent the antenna;
- If a Ground plane is required in line geometry, that plane has to be continuous and sufficiently extended, so the geometry can be as similar as possible to the related canonical model;
- Keep, if possible, at least one layer of the PCB used only for the Ground plane; If possible, use this layer as reference Ground plane for the transmission line;
- It is wise to surround (on both sides) the PCB transmission line with Ground, avoid having other signal tracks facing directly the antenna line track.
- Avoid crossing any un-shielded transmission line footprint with other signal tracks on different layers;
- The ground surrounding the antenna line on PCB has to be strictly connected to the main Ground Plane by means of via holes (once per 2mm at least), placed close to the ground edges facing line track;
- Place EM noisy devices as far as possible from ME910C1 antenna line;
- Keep the antenna line far away from the ME910C1 power supply lines;



- If EM noisy devices (such as fast switching ICs, LCD and so on) are present on the PCB hosting the ME910, take care of the shielding of the antenna line by burying it in an inner layer of PCB and surround it with Ground planes, or shield it with a metal frame cover.
- If EM noisy devices are not present around the line, the use of geometries like Microstrip or Grounded Coplanar Waveguide has to be preferred, since they typically ensure less attenuation if compared to a Stripline having same length;

The following image is showing the suggested layout for the Antenna pad connection:

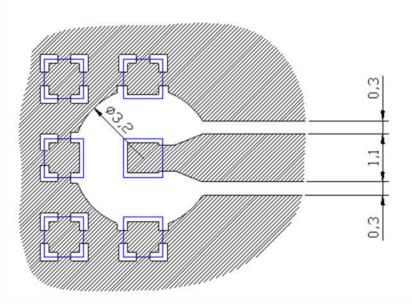



6.4.2. PCB Guidelines in case of FCC Certification


In the case FCC certification is required for an application using ME910C1, according to FCC KDB 996369 for modular approval requirements, the transmission line has to be similar to that implemented on ME910C1 interface board and described in the following chapter.

6.4.2.1. Transmission line design

During the design of the ME910C1 interface board, the placement of components has been chosen properly, in order to keep the line length as short as possible, thus leading to lowest power losses possible. A Grounded Coplanar Waveguide (G-CPW) line has been chosen, since this kind of transmission line ensures good impedance control and can be implemented in an outer PCB layer as needed in this case. A SMA female connector has been used to feed the line.

The interface board is realized on a FR4, 4-layers PCB. Substrate material is characterized by relative permittivity $\epsilon r = 4.6 \pm 0.4$ @ 1 GHz, TanD= 0.019 \div 0.026 @ 1 GHz.


A characteristic impedance of nearly 50 Ω is achieved using trace width = 1.1 mm, clearance from coplanar ground plane = 0.3 mm each side. The line uses reference ground plane on layer 3, while copper is removed from layer 2 underneath the line. Height of trace above ground plane is 1.335 mm. Calculated characteristic impedance is 51.6 Ω , estimated line loss is less than 0.1 dB. The line geometry is shown below:

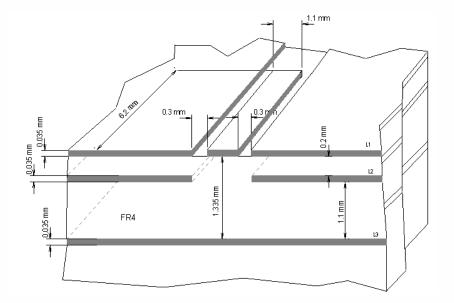





6.4.2.2. Transmission Line Measurements


An HP8753E VNA (Full-2-port calibration) has been used in this measurement session. A calibrated coaxial cable has been soldered at the pad corresponding to RF output; a SMA connector has been soldered to the board in order to characterize the losses of the transmission line including the connector itself. During Return Loss / impedance measurements, the transmission line has been terminated to 50 Ω load. Return Loss plot of line under test is shown below:

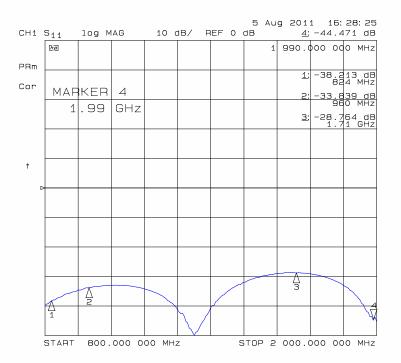



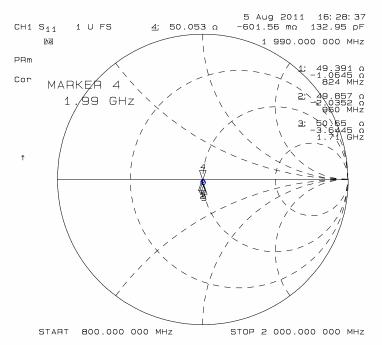

Insertion Loss of G-CPW line plus SMA connector is shown below:

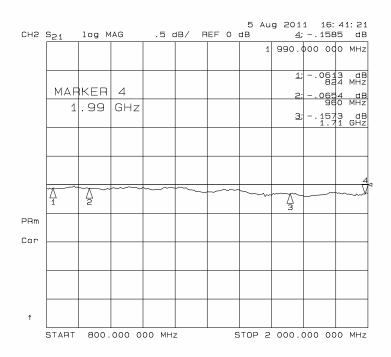



6.4.2.3. Antenna Installation Guidelines

- Install the antenna in a place covered by the LTE signal with CAT-M1 support.
- Antenna must not be installed inside metal cases
- Antenna must be installed according Antenna manufacturer instructions
- Antenna integration should optimize the Radiation Efficiency. Efficiency values > 50% are recommended on all frequency bands
- Antenna integration should not perturb the radiation pattern described in Antenna manufacturer documentation.
- It is preferable to get an omnidirectional radiation pattern to
- Antenna Gain must not exceed values indicated in regulatory requirements, where applicable, in order to meet related EIRP limitations. Typical antenna Gain in most M2M applications does not exceed 2dBi
- If the device antenna is located farther than 20cm from the human body and there are no co-located transmitter then the Telit FCC/IC approvals can be re-used by the end product
- If the device antenna is located closer than 20cm from the human body or there are co-located transmitter then the additional FCC/IC testing may be required for the end product (Telit FCC/IC approvals cannot be reused)



7. AUDIO SECTION

The Telit digital audio interface (DVI) of the ME910C1 Module is based on the I²S serial bus interface standard. The audio port can be connected to end device using digital interface, or via one of the several compliant codecs (in case an analog audio is needed).

7.1. Electrical Characteristics

The product is providing the DVI on the following pins:

Pin	Signal	I/O	Function	Internal Pull Up	Туре
В9	DVI_WA0	I/O	Digital Audio Interface (Word Alignment / LRCLK)		CMOS 1.8V
B6	DVI_RX	Ι	Digital Audio Interface (RX)		CMOS 1.8V
B7	DVI_TX	0	Digital Audio Interface (TX)		CMOS 1.8V
B8	DVI_CLK	I/O	Digital Audio Interface (BCLK)		CMOS 1.8V

7.2. Codec examples

Please refer to the Digital Audio Application note.



8. GNSS SECTION

ME910C1 module includes a state-of-art receiver that can simultaneously search and track satellite signals from multiple satellite constellations. This multi-GNSS receiver uses the entire spectrum of GNSS systems available: GPS, GLONASS, BeiDou, Galileo, and QZSS.

8.1. GNSS Signals Pin-out

Pin	Signal	I/O	Function	Туре
R9	ANT_GNSS	Ι	GNSS Antenna (50 ohm)	
R7	GNSS_LNA_EN	0	GNSS External LNA Enable	CMOS 1.8V

8.2. RF Front End Design

The ME910C1 Module contains a pre-select SAW filter but doesn't contain the LNA needed to reach the maximum sensitivity. Active antenna (antenna with a built-in low noise amplifier) must be used and must be supplied with proper bias-tee circuit.

8.2.1. Guidelines of PCB line for GNSS Antenna

- Ensure that the antenna line impedance is 50ohm.
- Keep the antenna line on the PCB as short as possible to reduce the loss.
- Antenna line must have uniform characteristics, constant cross section, avoid meanders and abrupt curves.
- Keep one layer of the PCB used only for the Ground plane, if possible.
- Surround (on both the sides, over and under) the antenna line on PCB with Ground, avoid having other signal tracks facing directly the antenna line of track.
- The ground around the antenna line on PCB has to be strictly connected to the Ground Plane by placing vias once per 2mm at least.
- Place EM noisy devices as far as possible from antenna line.
- Keep the antenna line far away from power supply lines.
- Keep the antenna line far away from GSM RF lines.
- If you have EM noisy devices around the PCB hosting the module, such as fast switching ICs, take care of the shielding of the antenna line by burying it inside the layers of PCB and surround it with Ground planes, or shield it with a metal frame cover.
- If you do not have EM noisy devices around the PCB hosting the module, use a strip-line on the superficial copper layer for the antenna line. The line attenuation will be lower than a buried one.

8.3. GNSS Antenna Requirements

GNSS active antenna must be used or integrated in the application.



8.3.1. GNSS Antenna specification

Item	Value
Frequency range	1559.0 ~ 1610.0 MHz
Gain	20 ~ 30dB
Impedance	50 ohm
Noise Figure of LNA	< 1.5 (recommended)
DC supply voltage	DC 1.8 ~ 3.3V
VSWR	≤ 3:1 (recommended)

8.3.2. GNSS Antenna – Installation Guidelines

- The antenna must be installed according to the antenna manufacturer's instructions to obtain the maximum performance of GNSS receiver.
- The antenna location must be evaluated carefully if operating in conjunction with any other antenna or transmitter.
- The antenna must not be installed inside metal cases or near any obstacle that may degrade features like antenna lobes and gain.


8.3.3. Powering the External LNA (active antenna)

The LNA of active antenna needs a source of power because 1.8V or 3V DC voltage needed by active antenna is not supplied by the ME910C1 module, but can be easily included by the host design.

The electrical characteristics of the GPS_LNA_EN signal are:

Level	Min [V]	Max [V]
Output High Level	1.6	1.9
Output Low Level	0V	0.3

Example of external antenna bias circuitry:

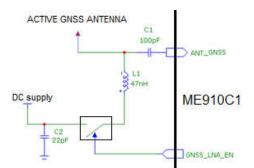

Be aware of max bias current in case of unwanted short on antenna cable, decoupling inductor may be demaged.

In case of LNA with 1.8V supply, VAUX/POWERMON pin can be used to supply active GNSS antenna


8.4. GNSS Characteristics *

The table below specifies the GNSS characteristics and expected performance The values are related to typical environment and conditions Table 1 GNSS Characteristics (* external LNA)

Parameters		Typical Measurement	Notes
	Standalone or MS Based Tracking Sensitivity	-161 dBm	
Sensitivity	Navigation	-158 dBm	
	Cold Start Sensitivity	-146 dBm	
	Hot	<1s	GNSS Simulator test
TTFF	Warm	21s	GNSS Simulator test
	Cold	28s	GNSS Simulator test
Min Navigation update rate		1Hz	
Dynamics		2g	
A-GPS		Supported	

9. MECHANICAL DESIGN

9.1. Drawing

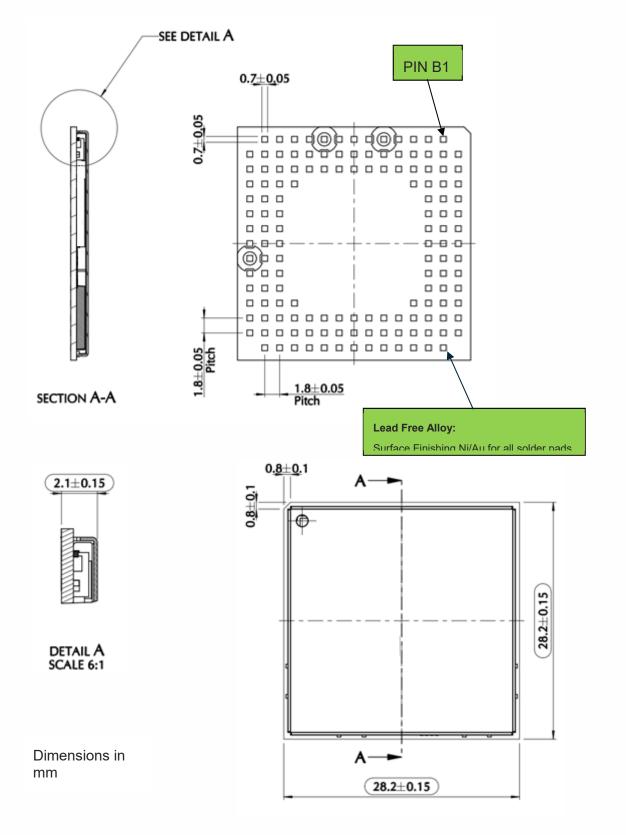




10. APPLICATION PCB DESIGN

The ME910C1 modules have been designed in order to be compliant with a standard leadfree SMT process

10.1. Footprint

TOP VIEW

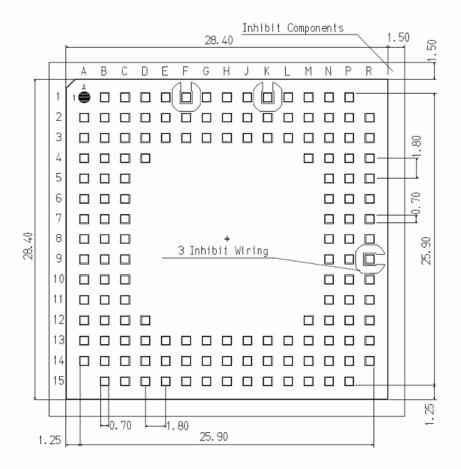

In order to easily rework the ME910C1 is suggested to consider on the application a 1.5 mm placement inhibit area around the module.

It is also suggested, as common rule for an SMT component, to avoid having a mechanical part of the application in direct contact with the module.




NOTE:

In the customer application, the region under WIRING INHIBIT (see figure above) must be clear from signal or ground paths.



10.2. PCB pad design


Non solder mask defined (NSMD) type is recommended for the solder pads on the PCB.

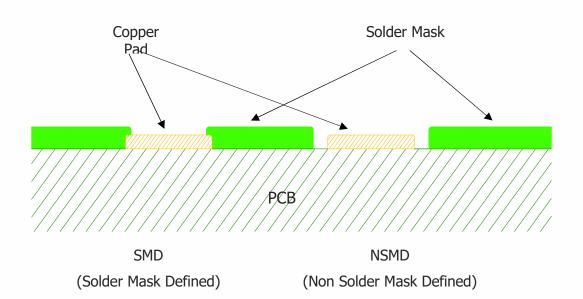




10.3. PCB pad dimensions

The recommendation for the PCB pads dimensions are described in the following image (dimensions in mm)

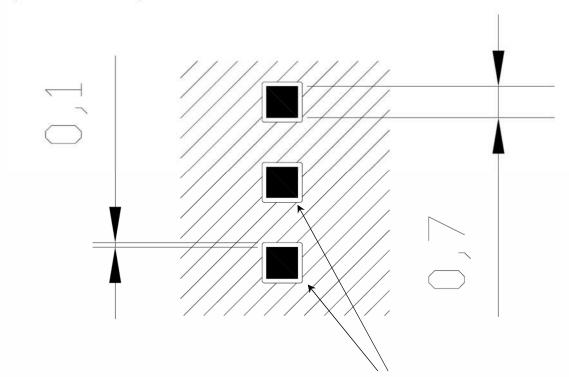

Solder resist openings

It is not recommended to place via or micro-via not covered by solder resist in an area of 0,3 mm around the pads unless it carries the same signal of the pad itself

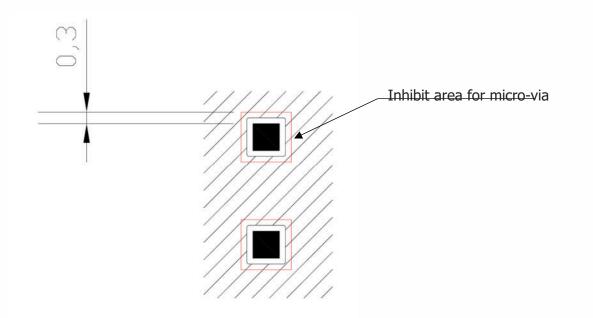

Holes in pad are allowed only for blind holes and not for through holes.

Recommendations for PCB pad surfaces:

Finish	Layer Thickness (um)	Properties
Electro-less Ni / Immersion Au	3 –7 / 0.05 – 0.15	good solder ability protection, high shear force values

The PCB must be able to resist the higher temperatures which are occurring at the leadfree process. This issue should be discussed with the PCB-supplier. Generally, the wettability of tin-lead solder paste on the described surface plating is better compared to lead-free solder paste.

It is not necessary to panel the application's PCB, however in that case it is suggested to use milled contours and predrilled board breakouts; scoring or v-cut solutions are not recommended

10.4. Stencil

Stencil's apertures layout can be the same of the recommended footprint (1:1), we suggest a thickness of stencil foil \ge 120 µm.


10.5. Solder paste

Item	Lead Free
Solder Paste	Sn/Ag/Cu

We recommend using only "no clean" solder paste in order to avoid the cleaning of the modules after assembly



10.6. Solder Reflow

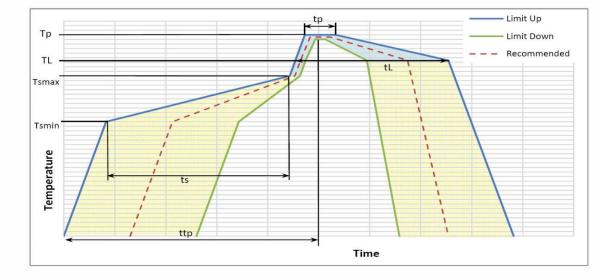

Recommended solder reflow profile:



WARNING:

The above solder reflow profile represents the typical SAC reflow limits and does not guarantee adequate adherence of the module to the customer application throughout the temperature range. Customer must optimize the reflow profile depending on the overall system taking into account such factors as thermal mass and warpage.

Profile Feature	Pb-Free Assembly	Free
Average ramp-up rate (T $_{L}$ to T _P)	3°C/second max	
Preheat		
– Temperature Min (Tsmin)	150°C	
– Temperature Max (Tsmax)	200°C	
– Time (min to max) (ts)	60-180 seconds	
IVV0301351 Rev.11	Page 88 of 105	2019-06-2



Tsmax to TL	
– Ramp-up Rate	3°C/second max
Time maintained above:	
– Temperature (TL)	217°C
– Time (tL)	60-150 seconds
Peak Temperature (Tp)	245 +0/-5°C
Time within 5°C of actual Peak	10-30 seconds
Temperature (tp)	
Ramp-down Rate	6°C/second max.
Time 25°C to Peak Temperature	8 minutes max.



NOTE:

All temperatures refer to topside of the package, measured on the package body surface




WARNING:

THE ME910C1 MODULE WITHSTANDS ONE REFLOW PROCESS ONLY.




11.1. Tray

The ME910 modules are packaged on trays that can be used in SMT processes for pick & place handling. The first Marketing and Engineering samples of the ME910C1 series will be shipped with the current packaging of the xE910 modules (on trays of 20 pieces each). Please note that Telit is going to introduce a new packaging for the xE910 family, as per the Product Change Notification PCN-0000-14-0055, therefore the mass production units of ME910C1 will be shipped according to the following drawings:

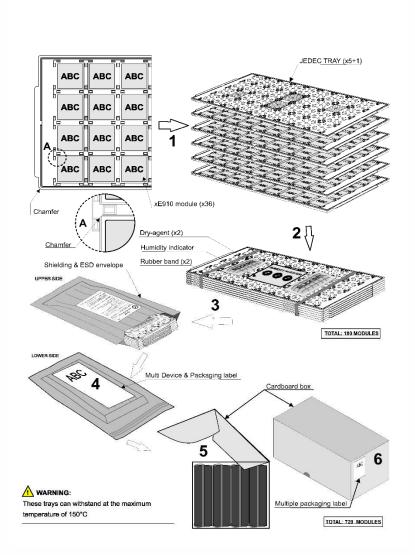



Telit

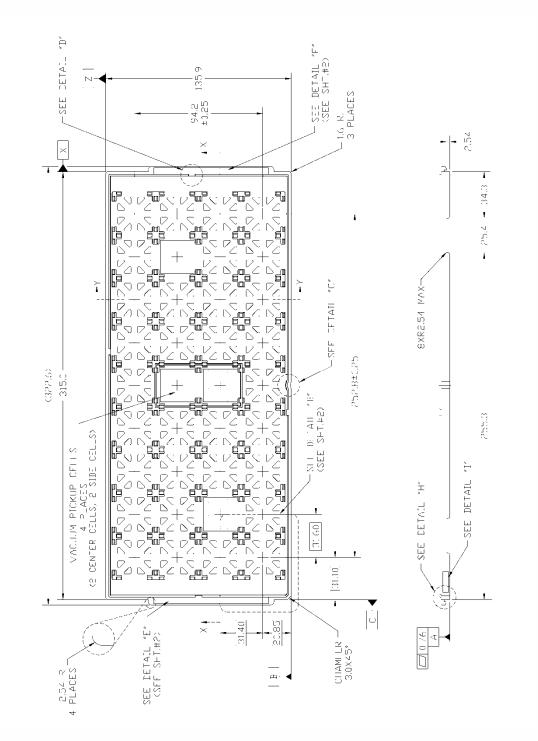

11.2. Reel

The ME910 can be packaged on reels of 200 pieces each. See figure for module positioning into the carrier.

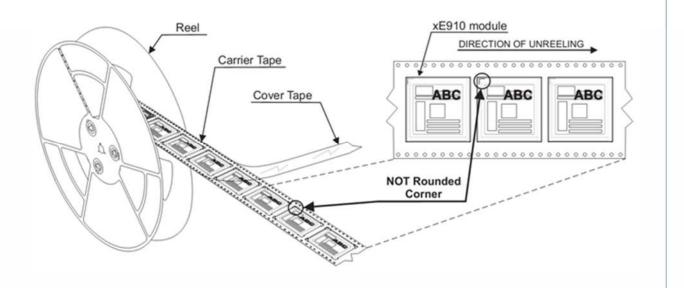


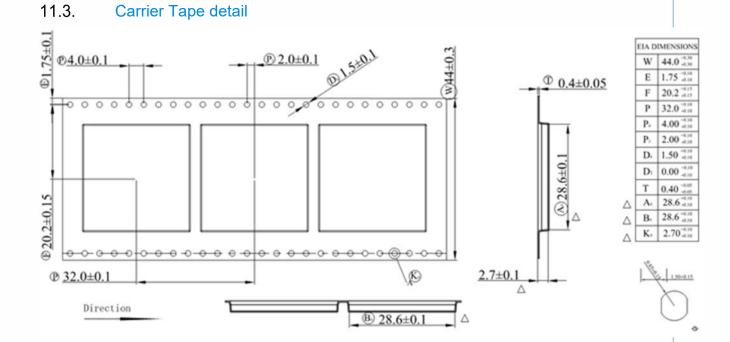





Telit

11.4. Reel detail

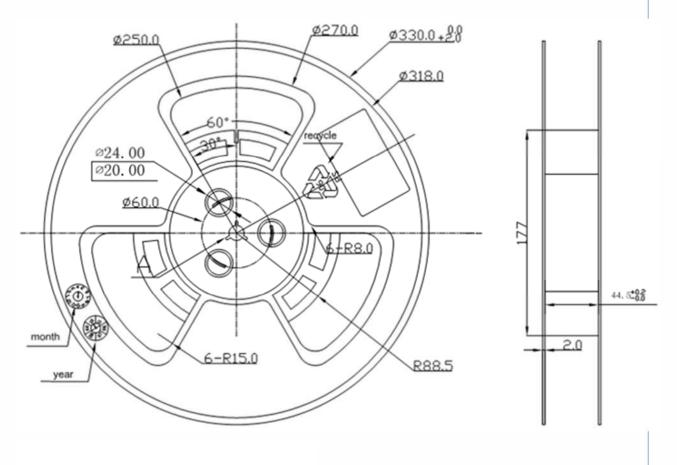

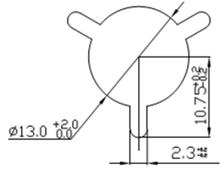

11.5. Packaging detail

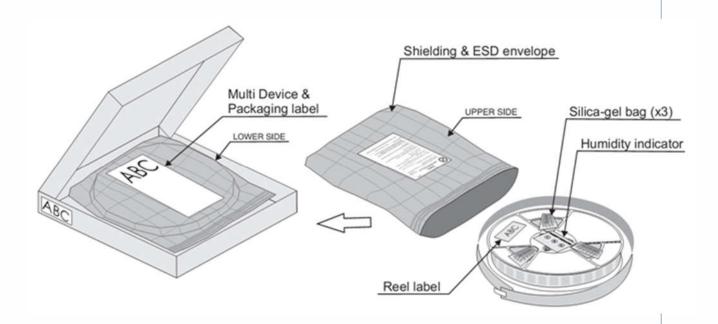

11.6. Moisture sensitivity

The ME910C1 is a Moisture Sensitive Device level 3, in according with standard IPC/JEDEC J-STD-020, take care all the relatives requirements for using this kind of components.

Moreover, the customer has to take care of the following conditions:

a) Calculated shelf life in sealed bag: 12 months at <40°C and <90% relative humidity (RH).

b) Environmental condition during the production: 30°C / 60% RH according to IPC/JEDEC J-STD-033A paragraph 5.

c) The maximum time between the opening of the sealed bag and the reflow process must

- be 168 hours if condition b) "IPC/JEDEC J-STD-033A paragraph 5.2" is respected
- d) Baking is required if conditions b) or c) are not respected
- e) Baking is required if the humidity indicator inside the bag indicates 10% RH

or more

12. CONFORMITY ASSESSMENT ISSUES

12.1. Approvals

- RED (ME910C1-E1, ME910C1-E2)
- GCF (ME910C1-AU, ME910C1-NA, ME910C1-WW, ME910C1-E1, ME910C1-E2, ME910C1-P2)
- PTCRB (ME910C1-NA, ME910C1-WW)
- FCC, IC (ME910C1-NA, ME910C1-NV, ME910C1-WW)
- RoHS and REACH (all versions)
- Approvals for major Mobile Network Operators

12.2. FCC certificates

The FCC Certificate is available here: https://www.fcc.gov/oet/ea/fccid

12.3. IC/ISED certificates

The ISED Certificate is available here:

https://sms-sgs.ic.gc.ca/equipmentSearch/searchRadioEquipments?execution=e1s1&lang=enintersearch/searchRadioEquipments?execution=e1s1&lang=enintersearch/searchRadioEquipments?execution=e1s1&lang=enintersearch/searchRadioEquipments?execution=e1s1&lang=enintersearch/searchRadioEquipments?execution=e1s1&lang=enintersearch/searchRadioEquipments?execution=e1s1&lang=enintersearch/searchRadioEquipments?execution=e1s1&lang=enintersearch/searchRadioEquipments?execution=e1s1&lang=enintersearch/search/searchRadioEquipments?execution=e1s1&lang=enintersearch/search/searchRadioEquipments?execution=e1s1&lang=enintersearch/search/searchRadioEquipments?execution=e1s1&lang=enintersearch/s

12.4. FCC/ISED Regulatory notices

Modification statement

Telit has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment.

Telit n'approuve aucune modification apportée à l'appareil par l'utilisateur, quelle qu'en soit la nature. Tout changement ou modification peuvent annuler le droit d'utilisation de l'appareil par l'utilisateur.

Interference statement

This device complies with Part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.





Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Wireless notice

This device complies with FCC/ISED radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the ISED radio frequency (RF) Exposure rules. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. The antenna should be installed and operated with minimum distance of 20 cm between the radiator and your body.

Le présent appareil est conforme à l'exposition aux radiations FCC / ISED définies pour un environnement non contrôlé et répond aux directives d'exposition de la fréquence de la FCC radiofréquence (RF) et RSS-102 de la fréquence radio (RF) ISED règles d'exposition. L'émetteur ne doit pas être colocalisé ni fonctionner conjointement avec à autre antenne ou autre émetteur. *L'antenne doit être installée de façon à garder une distance minimale de 20 centimètres entre la source de rayonnements et votre corps.*

FCC Class B digital device notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-3 (B) / NMB-3 (B)



This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de classe B est conforme à la norme canadienne ICES-003.

List of applicable FCC rules

Model	Applicable FCC Rules Parts
ME910C1-NA	Part 2, 90, 15B, 24E, 27
ME910C1-WW	Part 2, 90, 15B, 24E, 22H, 27
ME910C1-P1	Part 2, 90, 15B, 24E, 22H, 27
ME910C1-P2	Part 2, 90, 15B, 24E, 22H, 27

Antennas

This radio transmitter has been approved by FCC and ISED to operate with the antenna types listed below with the maximum permissible gain indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Туре
Ominidirectional type
Antenna Gain 2.14 dBi

Max Gain				
Band	ME910C1- NA/NE910C1-NA	ME910C1-NV	ME910C1- WW/ME910C1-P2	ME910C1-P1
GSM/GPRS 850			2,6 dBi	
GSM/GPRS 1900			2,5 dBi	
FDD 2	9,01 dBi		9,0 dBi	9,0 dBi
FDD 3				
FDD 4	6,00 dBi	6,00 dBi	6,0 dBi	6,0 dBi
FDD 5			7,1 dBi	7,1 dBi
FDD 12	6,6 dBi		6,6 dBi	6,6 dBi
FDD 13	6,9 dBi	6,9 dBi	6,9 dBi	6,9 dBi
FDD 26			7,0 dBi	7,0 dBi

Le présent émetteur radio a été approuvé par ISDE pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal. Les types d'antenne non inclus dans cette liste, et dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

Туре	
Ominidirectional type	
Antenna Gain 2.14 dBi	

Max Gain				
Band	ME910C1- NA/NE910C1-NA	ME910C1-NV	ME910C1- WW/ME910C1-P2	ME910C1-P1
GSM/GPRS 850			2,6 dBi	
GSM/GPRS 1900			2,5 dBi	
FDD 2	9,01 dBi		9,0 dBi	9,0 dBi
FDD 3				
FDD 4	6,00 dBi	6,00 dBi	6,0 dBi	6,0 dBi
FDD 5			7,1 dBi	7,1 dBi
FDD 12	6,6 dBi		6,6 dBi	6,6 dBi
FDD 13	6,9 dBi	6,9 dBi	6,9 dBi	6,9 dBi
FDD 26			7,0 dBi	7,0 dBi

Label and compliance information



The product has a FCC ID label on the device itself. Also, the OEM host end product manufacturer will be informed to display a label referring to the enclosed module The exterior label will read as follows: "Contains Transmitter Module FCC ID: RI7ME910C1-P2" or "Contains FCC ID: RI7ME910C1-P2".

Below list of all the models and related FCC ID:

Model	FCC ID
ME910C1-NA	RI7ME910C1NA
ME910C1-WW	RI7ME910C1WW
ME910C1-P1	RI7ME910C1P1
ME910C1-P2	RI7ME910C1P2

Information on test modes and additional testing requirements

The module has been evaluated in mobile stand-alone conditions. For different operational conditions from a stand-alone modular transmitter in a host (multiple, simultaneously transmitting modules or other transmitters in a host), additional testing may be required (collocation, retesting...)

If this module is intended for use in a portable device, you are responsible for separate approval to satisfy the SAR requirements of FCC Part 2.1093 and IC RSS-102.

Additional testing, Part 15 Subpart B disclaimer

The modular transmitter is only FCC authorized for the specific rule parts (i.e., FCC transmitter rules) listed on the grant, and that the host product manufacturer is responsible for compliance to any other FCC rules that apply to the host not covered by the modular transmitter grant of certification. If the grantee markets their product as being Part 15 Subpart B compliant (when it also contains unintentional-radiator digital circuity), then the grantee shall provide a notice stating that the final host product still requires Part 15 Subpart B compliance testing with the modular transmitter installed. The end product with an embedded module may also need to pass the FCC Part 15 unintentional emission testing requirements and be properly authorized per FCC Part 15.

12.5. Declaration of Conformity

Hereby, Telit Communications S.p.A declares that the ME910C1 Module is in compliance with Directive 2014/53/EU.



The full text of the EU declaration of conformity is available at the following internet address: <u>http://www.telit.com/red</u>



13. SAFETY RECOMMENDATIONS

13.1. READ CAREFULLY

Be sure the use of this product is allowed in the country and in the environment required. The use of this product may be dangerous and has to be avoided in the following areas:

- Where it can interfere with other electronic devices in environments such as hospitals, airports, aircrafts, etc.
- Where there is risk of explosion such as gasoline stations, oil refineries, etc. It is the responsibility of the user to enforce the country regulation and the specific environment regulation.

Do not disassemble the product; any mark of tampering will compromise the warranty validity. We recommend following the instructions of the hardware user guides for correct wiring of the product. The product has to be supplied with a stabilized voltage source and the wiring has to be conformed to the security and fire prevention regulations. The product has to be handled with care, avoiding any contact with the pins because electrostatic discharges may damage the product itself. Same cautions have to be taken for the SIM, checking carefully the instruction for its use. Do not insert or remove the SIM when the product is in power saving mode.

The system integrator is responsible for the functioning of the final product; therefore, care has to be taken to the external components of the module, as well as any project or installation issue, because the risk of disturbing the GSM network or external devices or having impact on the security. Should there be any doubt, please refer to the technical documentation and the regulations in force. Every module has to be equipped with a proper antenna with specific characteristics. The antenna has to be installed with care in order to avoid any interference with other electronic devices and has to guarantee a minimum distance from the body (20 cm). In case this requirement cannot be satisfied, the system integrator has to assess the final product against the SAR regulation.

The equipment is intended to be installed in a restricted area location.

The equipment must be supplied by an external specific limited power source in compliance with the clause 2.5 of the standard IEC 60950-1.

The European Community provides some Directives for the electronic equipment introduced on the market. All of the relevant information is available on the European Community website:

http://ec.europa.eu/enterprise/sectors/rtte/documents/

The text of the Directive 99/05 regarding telecommunication equipment is available,

while the applicable Directives (Low Voltage and EMC) are available at:

http://ec.europa.eu/enterprise/sectors/electrical/

14. ACRONYMS

TTSC	Telit Technical Support Centre	
USB	Universal Serial Bus	
HS	High Speed	
DTE	Data Terminal Equipment	
UMTS	Universal Mobile Telecommunication System	
WCDMA	Wideband Code Division Multiple Access	
HSDPA	High Speed Downlink Packet Access	
HSUPA	High Speed Uplink Packet Access	
UART	Universal Asynchronous Receiver Transmitter	
HSIC	High Speed Inter Chip	
SIM	Subscriber Identification Module	
SPI	Serial Peripheral Interface	
ADC	Analog – Digital Converter	
DAC	Digital – Analog Converter	
I/O	Input Output	
GPIO	General Purpose Input Output	
CMOS	Complementary Metal – Oxide Semiconductor	
MOSI	Master Output – Slave Input	
MISO	Master Input – Slave Output	
CLK	Clock	

CS	Chip Select	
RTC	Real Time Clock	
РСВ	Printed Circuit Board	
ESR	Equivalent Series Resistance	
VSWR	Voltage Standing Wave Radio	
VNA	Vector Network Analyzer	

15. DOCUMENT HISTORY

Revision	Date	Changes
0	2017-01-16	First issue (preliminary)
1	2017-02-10	Power consumption and Pinout clarification
2	2017-07-20	Added par.11 – Conformity Assessment Issues
3	2017-08-02	Updated Applicable Product Table
4	2017-09-11	Added GNSS part; Updated RF sensitivity
5	2017-11-30	Added Section 5.4 – Wake from deep sleep mode
6	2018-03-05	Added ME910C1-E2, ME910C1-WW variants
7	2018-04-04	Updated par 13 – Safety Recommendations Updated RX Sensitivity Section
8	2018-09-28	Updated applicability table
9	2018-12-10	Updated ME910C1-NA bands
10	2019-04-05	Updated par 10.6 Solder Reflow Added ME910C1-P1 and ME910C1-P2 variants
11	2019-06-21	Modified Par 12 - Conformity Assessment Issues

SUPPORT INQUIRIES

Link to www.telit.com and contact our technical support team for any questions related to technical issues.

www.telit.com

Telit Communications S.p.A. Via Stazione di Prosecco, 5/B I-34010 Sgonico (Trieste), Italy

Telit IoT Platforms LLC 5300 Broken Sound Blvd, Suite 150 Boca Raton, FL 33487, USA

Telit Wireless Solutions Inc. 3131 RDU Center Drive, Suite 135 Morrisville, NC 27560, USA

Telit Wireless Solutions Co., Ltd. 8th Fl., Shinyoung Securities Bld. 6, Gukjegeumyung-ro8-gil, Yeongdeungpo-gu Seoul, 150-884, Korea



Telit Wireless Solutions Ltd. 10 Habarzel St. Tel Aviv 69710. Israel

Telit Wireless Solutions Technologia e Servicos Ltda Avenida Paulista, 1776, Room 10.C 01310-921 São Paulo, Brazil

Telit reserves all rights to this document and the information contained herein. Products, names, logos and designs described herein may in whole or in part be subject to intellectual property rights. The information contained herein is provided "as is". No warranty of any kind, either express or implied, is made in relation to the accuracy, reliability, fitness for a particular purpose or content of this document. This document may be revised by Telit at any time. For most recent documents, please visit www.telit.com Copyright © 2016, Telit