

Controller Module and USB Dongle User Guide

Table of Contents

Section	Page	Section	Page
Introduction		Software	
Qualified Persons	2	Download Software	5
Read this Form	2	Install Software	5
Proper Application	2	Launch Software	5
Retain this Form	2	Connect to a TripSaver II Controller Module	
Regulatory Information	3	and USB Dongle	6
Hardware			
Contents of TripSaver II Controller Module	4		



Introduction

Qualified Persons

WARNING

The equipment covered by this publication must be installed, operated, and maintained by qualified persons who are knowledgeable in the installation, operation, and maintenance of radios in electric power distribution equipment, along with the associated hazards. A qualified person is a radio technician who is qualified to install transmission-power-limited radio equipment per FCC Part 15 and who is trained and competent in:

- The skills and techniques necessary to distinguish exposed live parts from nonlive parts of electrical equipment
- The skills and techniques necessary to determine the proper approach distances corresponding to the voltages to which the qualified person will be exposed
- The proper use of the special precautionary techniques, personal protective equipment, insulating and shielding materials, and insulated tools for working on or near exposed energized parts of electrical equipment

These instructions are intended only for such qualified persons. They are not intended to be a substitute for adequate training and experience in safety procedures for this type of equipment.

Read this Form

NOTICE

Thoroughly and carefully read this form before programming, operating, or maintaining your S&C TripSaver II Controller Module and USB Dongle User Guide.

Proper Application

WARNING

The equipment in this publication must be selected for a specific application. The application must be within the ratings furnished for the selected equipment.

Retain this Form

This form should be available for reference wherever a Controller Module and USB Dongle User Guide is to be used. Retain this form in a location where you can easily retrieve and refer to it.

Regulatory Information

This device complies with part 15 of the FCC rules and regulations regarding unlicensed transmissions. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme aux normes Industry Canada exemptes de licence RSS standard(s). Son fonctionnement est soumis aux deux conditions suivantes : (1) cet appareil ne doit pas provoquer d'interférences et (2) cet appareil doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable.

IMPORTANT! Changes or modifications not expressly approved by S & C Electric Company could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CAN ICES-3 (A)/NMB-3(A)

TripSaverII Controller Details

Model number: TSII-CONTRL2

Model number: TSII-CONTRL3

FCC ID: U3D-TSIICONTRL2






TripSaverII USB Dongle Details

Model Number: TSII-DONGLE

FCC ID: RUN1322C-USB

IC: 6744A-1322XUSB

Contents of
TripSaver II
Controller Module

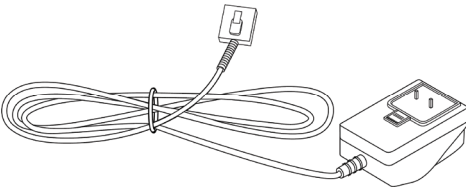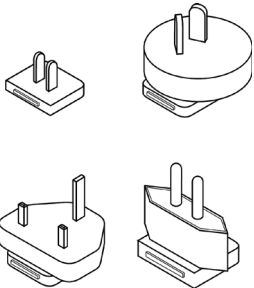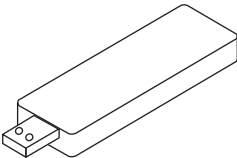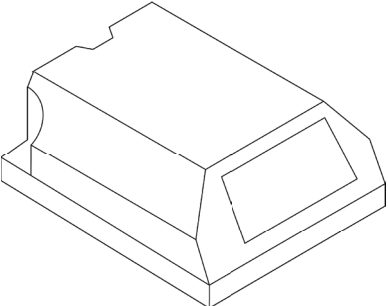 <p>Ac Adapter</p>	 <p>Power Outlet Plug Adapters</p>
 <p>USB Dongle</p>	 <p>Controller Module</p>
 <p>This Manual</p>	

Download Software

IntelliLink® TripSaver II Controller Module Setup Software is available for download only to customers who have purchased the module. For each controller module purchased, the user is entitled to install and use S&C IntelliLink TripSaver II Controller Module Setup Software on no more than two computers at a time. The latest software release is posted on the S&C Automation Customer Support Portal at **www.sandc.com/support/automation-customer-support-portal.asp**. You will need a username and password to log in to the portal. If you are a new S&C customer, complete the form in the lower section of the webpage and a new username and password will be sent to you. If you already have a password, click the **Log-In To Secure Site** button. Enter the username and password to log into the portal. Download the installer **ILTS Setup-1.165.15712.0 from the portal**.

Install Software

Double-click the downloaded installer file and follow the on-screen instructions. The installer will automatically install the Microsoft .NET framework onto your computer if the required .NET version is missing. You will need administrative privileges to finish the installation.

Launch Software

Click the green ILTS icon on your desktop or in the **Start** menu to launch the TripSaver II Controller Module Setup Software. A warning screen will be displayed right after the software is launched. **Read the message carefully and understand the warning.** Proceed by clicking the green **I have read and understand the above warning** button.

Once you launch the software, you can configure and save settings under the **Stand-alone** (Offline) mode.

Connect to a TripSaver II Controller Module

To connect to a TripSaver II Controller Module to apply your new settings, follow these steps.

Step 1

Install USB Transceiver

A USB transceiver must be installed on your computer to communicate with a TripSaver II Controller Module. Insert the USB transceiver into any USB port on your computer. See Figure 1. The installation process should be automatic. Note: You do not need the USB transceiver to be installed to install the software and to run the software in **Standalone** (offline) mode.

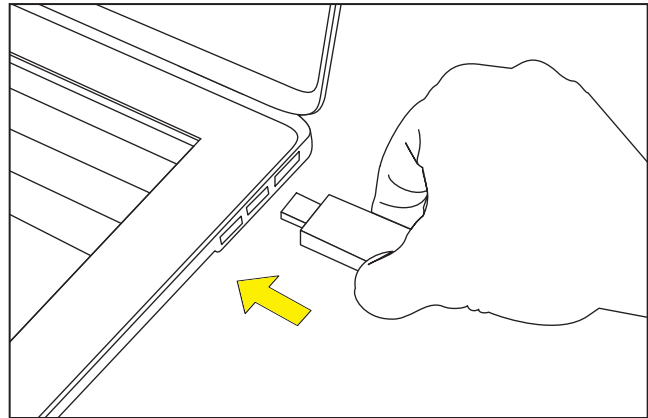


Figure 1. Insert the USB transceiver.

Step 2

Assemble Power Supply and Power Up TripSaver II Controller Module

A TripSaver II Controller Module must be powered by the power module to enable its communication capability. Complete the following steps before attempting to communicate with your TripSaver II Controller Module:

- (a) Insert the connector from the power module onto the pins in the TripSaver II Controller Module, as shown in Figure 2.
- (b) Install the proper power outlet plug adapter onto the AC adapter. See Figure 3.
- (c) Plug the ac adapter into a wall outlet. See Figure 4.



Figure 2. Insert the connector from the power module.

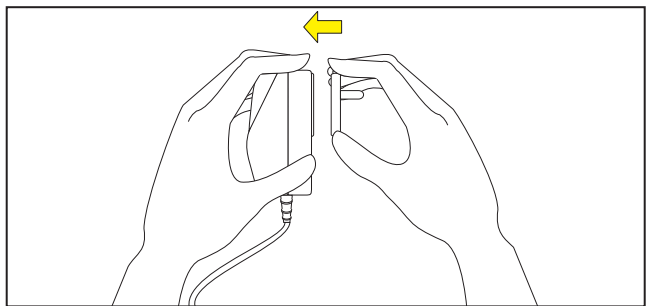


Figure 3. Insert power outlet plug adapter.

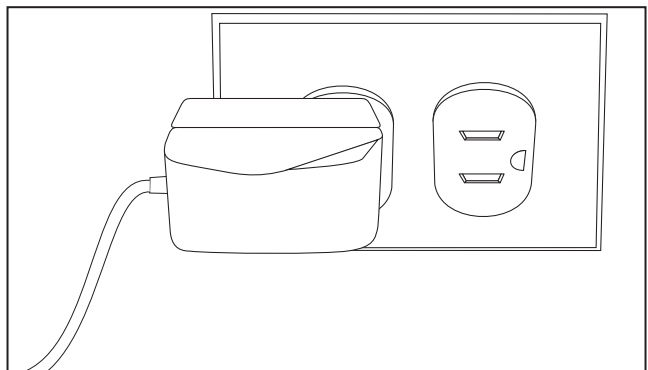


Figure 4. Plug the adapter into a wall outlet.

- (d) To verify that your TripSaver II Controller Module is powered up, place a magnet next to the controller module and observe the LCD screen. See Figure 5. If the LCD screen begins to scroll, it indicates the unit has been successfully powered up.

Your setup, at the end of Step 2, should look like the picture in Figure 5..



Figure 5. Verify module is powered up.

Connect to a TripSaver II Controller Module

Step 3

Obtain Transceiver ID

A Transceiver ID unique to each TripSaver II Controller Module is needed to establish communications between your computer and the device. See Figure 6. The ID consists of a 32-digit character string in the format of


“0019C900.00020000. _____”.

You must enter the ID in order to communicate with each TripSaver II Controller Module.

The Transceiver ID is also labelled on the top of the controller module side attached to each TripSaver II Controller Module when it leaves S&C Electric Company.

Step 4

Connect to Device

To connect to a TripSaver II Controller Module, select **Connection>Connect to Device** from the main menu or click the Connect to Device icon  in the quick access toolbar. Make sure that the USB transceiver is already plugged into your computer.

Next, a Transceiver ID Request dialog box will appear. See Figure 7. Enter the Transceiver ID of the TripSaver II Controller Module you want to connect to, and click on the **OK** button to connect. The first 16 digits of the ID are pre-typed. You only need to enter the last 16 digits.

During the connection process, a status bar will be displayed. Wait about ten seconds for the connection process to finish, or click the **Cancel** button to cancel the connection process.

You will be able to see the *Status* Screen after your TripSaver II Controller Module is successfully connected. Now, you can view existing settings, status information, and event logs of the TripSaver II Controller Module, or apply new settings to the device.

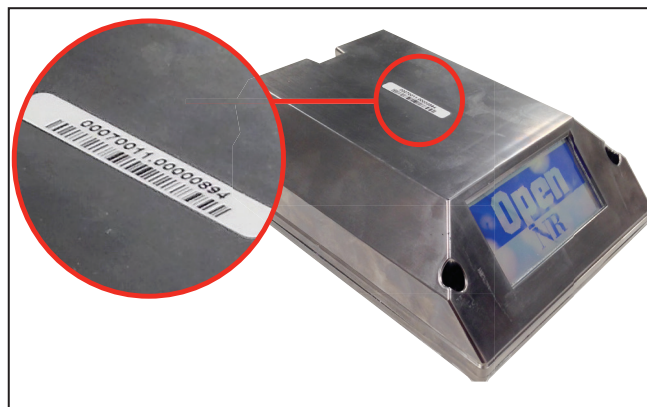


Figure 6. The transceiver ID.

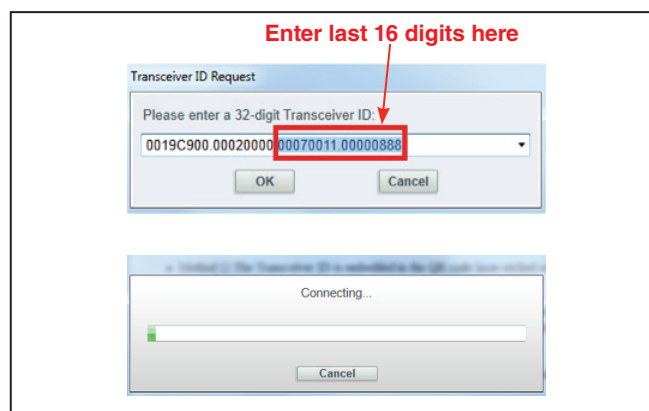


Figure 7. Enter the transceiver ID number.