




Tianxuan M620

Handheld Thermal Camera

User Manual V1.0.3

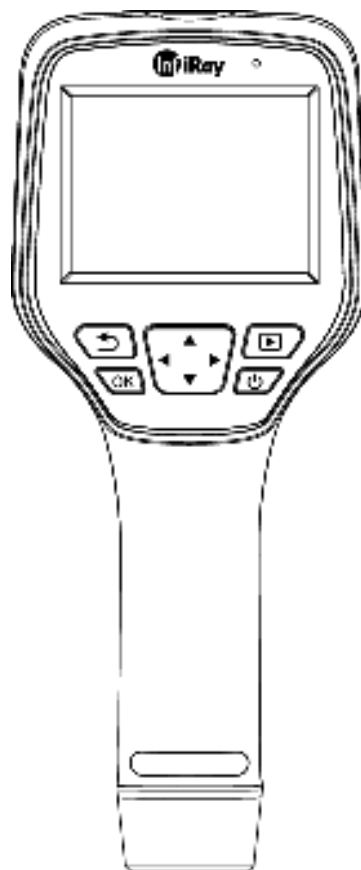

IRay Technology Co., Ltd.

www.infiray.com



Introduction to IRay Technology

IRay Technology Co., Ltd. concentrates on developing infrared thermal imaging technologies and manufacturing relevant products, with completely independent intellectual property rights. IRay is committed to providing global customers with professional and competitive infrared thermal imaging products and solutions. The main products include IRFPA detectors, thermal imaging modules, and terminal thermal imaging products.

With R&D personnel accounts for 48% of all employees, 787 intellectual property projects in terms of IRay have been authorized and accepted: 629 patented technologies authorized and accepted in China (including those for integrated circuit chips, MEMS sensors design and manufacture, Matrix III image algorithms and intelligent precise temperature measurement algorithms, etc.); 18 patented technologies authorized and accepted overseas; 101 software copyrights; and 39 integrated circuit layout designs. (The statistic data is up to August, 2021)

IRay products have been applied in various fields, including epidemic prevention and control, industrial thermography, security and fire control, night vision observation, automatic driving, Internet of Things, AI, and machine vision.

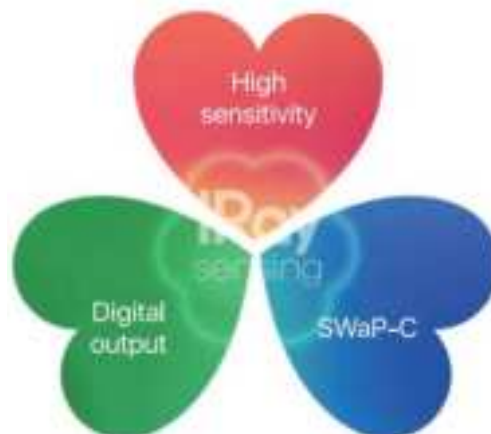


Table of Contents

1.Legal Disclaimer	1
1.1 Legal Disclaimer	1
1.2 Copyright	1
1.3 Quality Assurance	1
2.Safety Information	2
3.Notice to User	3
3.1 Calibration	3
3.2 Accuracy	3
3.3 Video Teaching	3
3.4 Documentation Updates	3
3.5 Scope of Application	3
4.Customer Help	3
4.1 FAQ	3
4.2 Download	3
5.Product Introduction	4
5.1 Camera (View from the front)	4
5.2 Buttons (View from the rear)	5
5.3 Connector and Memory Card	6
6.Quick Start Guide	7
7.User Interface	8
8.Operation Instruction	9
8.1 Charging	9
8.1.1 Charge with a Power Adapter	9
8.1.2 Charge with a Computer	9
8.1.3 Charge with a Charging Base	9
8.2 Power On/Off	9
8.3 Focus Adjustment	10
8.4 Images/Videos Capture	10
8.5 View Photos/Videos	10
8.6 Measurement Mode	12
8.7 Measurement Parameters	12
8.8 Palettes	14
8.9 Image Mode	15
8.9.1 Image Mode Introduction	15
8.9.2 Setting Steps	17
8.10 Non-uniformity Correction	17

8.10.1 Non-uniformity Correction Introduction	17
8.10.2 Non-uniformity Correction Operations	17
8.11 Contrast Adjustment	17
8.12 Digital Zoom	18
8.13 Other Settings	20
8.13.1 Temperature Measurement Mode	20
8.13.2 Above/Below Temperature Alarm	21
8.13.3 Wi-Fi Settings	22
8.13.4 Snapshot Settings	23
8.13.5 Video Settings	24
8.13.6 Smart Patrol Inspection	24
8.13.7 Analyze Settings	26
8.13.8 Dual-spectrum Alignment	28
8.13.9 Automatic Power-off	29
8.13.10 System Settings	29
9.Introduction of Application Scenarios	31
9.1 Detecting of Power Distribution Cabinet	31
9.2 Liquid Level Detecting of the Storage Tank	31
9.3 Circuit Board R&D	32
9.4 Defect Detecting of Refractory Material in Rotary Kiln	32
10.Structural Drawings	33
11.FAQ	34
12.Cleaning Thermal Camera	34
12.1 Cleaning Camera Housing, Cables and Other Items	34
12.2 Cleaning Infrared Lens	35

1. Legal Disclaimer

1.1 Legal Disclaimer

The thermal cameras manufactured by IRAY TECHNOLOGY are warranted for a period of two-year and the accessories are warranted for a period of three-month from the delivery date of the original purchase, provided such products have been under normal storage, use and maintenance.

This warranty extends only to the original purchaser and is not transferable. It is not applicable to any product which has been subjected to misuse, neglect, accident or abnormal conditions of operation.

In the case of a defect in a product covered by this warranty the product must not be further used or maintained in order to prevent additional damage. The purchaser shall promptly report any defect to IRAY TECHNOLOGY or this warranty will not apply.

IRAY TECHNOLOGY will, at its option, repair or replace any such defective product free of charge if, upon inspection, the product or accessories prove to be defective, the user can contact with after-sales service department of IRAY TECHNOLOGY within the said warranty period.

1.2 Copyright

©IRay Technology Co., Ltd. 2022. All rights reserved worldwide. All contents in this manual, including words, pictures, images, etc., belong to IRAY TECHNOLOGY CO., LTD. (Hereinafter referred to as "THE COMPANY" or "IRAY TECHNOLOGY"). No part of the manual, in whole or part, may be copied, photocopied, translated, or transmitted without the prior written permission of IRAY TECHNOLOGY.

This manual is used as a guide. The photos, graphics, diagrams and illustrations provided in the manual are only used to explain, which may be different from the specific product. The real product shall prevail. We try our best to make sure the contents in this manual are accurate. We do not provide any representations or warranties in this manual.

IRAY TECHNOLOGY reserve the right to update the manual. If you need the latest version of this manual, please contact us. It is recommended that you use this manual with the guidance of professionals.

1.3 Quality Assurance

The Quality Management System under which these products are developed and manufactured has been certified in accordance with the ISO9001 standard.

We reserve the right to make changes and improvements on any of the products without prior notice.

2.Safety Information



WARNING

1. Make sure you read all applicable Material Safety Data Sheets (SDS) and warning labels on containers before you use a liquid. The liquids can be dangerous. Injury to persons can occur.
2. It is prohibited to use the product in a high temperature above 85 °C or in a low temperature below -45 °C.
3. It is recommended to be used on the condition of RH between 10% and 95% (no condensation).
4. It is forbidden to disassemble or refit the thermal camera at will.



CAUTION

1. No matter there is a lens cover or not, do not point the infrared thermal camera towards strong light or equipment with laser radiation. This will affect the accuracy of the thermal camera and even damage the detector in the thermal camera.
2. Do not use the product under conditions that doesn't match the environmental requirements. For specific use environment requirements, see the product parameter table.
3. Do not apply solvents or equivalent liquids to the camera, the cables, or other items.
4. Be careful when you clean the infrared lenses. The lens has an anti-reflective coating which is easily damaged. Damage to the infrared lens can occur with too much force or cleaning with rough objects such as tissues.

3.Notice to User

3.1 Calibration

IRAY TECHNOLOGY recommends that you verify your calibration yearly in order to ensure accuracy. You can verify the calibration through IRAY TECHNOLOGY or third-party organizations.

3.2 Accuracy

For very accurate results, we recommended that you wait 5 minutes after you have started the camera before measuring a temperature.

3.3 Video Teaching

You can search for mount and use videos from our website(www.infiray.com).

3.4 Documentation Updates

Our manuals are updated several times per year, and we also issue product-critical notifications of changes on a regular basis. Please visit our website to access the latest manuals and notifications.

3.5 Scope of Application

This manual is applicable for all products in a range, which means that parts of the manual may not apply to a particular model.

4.Customer Help

4.1 FAQ

You can find answers to FAQ about this model on the service support page of our official website.


4.2 Download

You can download the following contents from our website: www.infiray.com

- Product Documentation
- Client Software
- Video Teaching Courses

5.Product Introduction

5.1 Camera (View from the front)

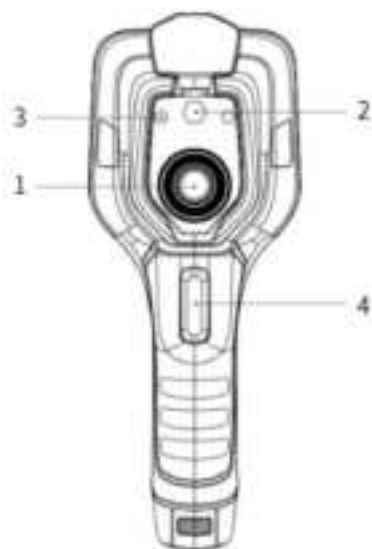


No.	Components
1	Infrared Lens
2	Digital Camera
3	Laser Pointer
4	Trigger

Table 5.1 Introduction to Camera Components

Note: the laser warning label is stuck on the lens cap.




5.2 Buttons (View from the rear)

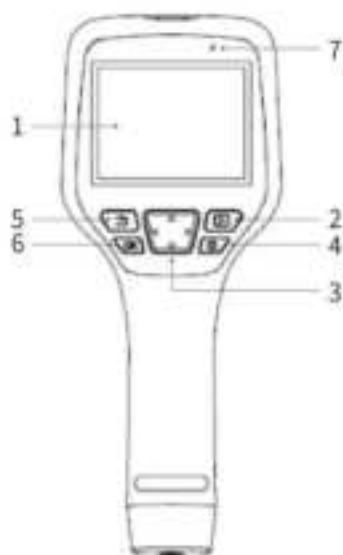

No.	Components	Function Description
1	Display screen	
2	Gallery button	Press to open the gallery. Long press to perform image uniformity correction.
3	Navigation button	Make selections for the menu, settings, gallery by clicking up/down/left/right.
4	Power/Laser button	Long press to turn on/off. When it is on, click to turn on/off the laser pointer.
5	Back button	Click to cancel the operation or return to the previous one. Long press to perform image uniformity correction.
6	Enter button	Click OK to confirm the operation.
7	Microphone	It's used to record voice notes after shooting.

Table 5.2 Component Introduction (View from the Rear)

5.3 Connector and Memory Card

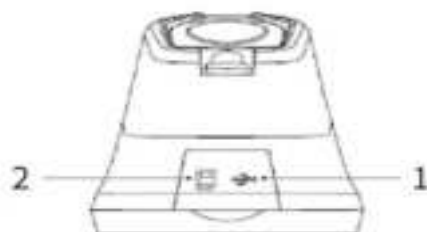

No.	Name	Description
1	USB Interface	<ul style="list-style-type: none">● Connect a USB cable with the power adapter for charging.● Connect a USB cable to a computer to charge or transfer data.
2	SD Card	<ul style="list-style-type: none">● Standard MicroSD card, standard 32GB, Max 32GB, it can save 140,000 images at most (exfat format), capacity extendable● The SD card can be taken out and transfer data to PC or other devices with a card reader.

Table 5.3 Connector and Memory Card

6.Quick Start Guide

Please follow the procedures:

1.Charging

- (1) 5V 3A power adapter and USB cable can be used to charge the device.
- (2) You can charge the device by connecting the USB cable in the accessory to the computer.

Note: This method of charging takes longer time than using the power adapter.

- (3) Charging base can also be used to charge the battery.
- (4) Please charge the thermal camera at room temperature.

2.Power on

Long press the power button to start the device.

3.Target Searching

Point the thermal camera at the object of interest.

4.Image Capturing

Click the trigger button to capture the image, and record the video by long pressing the trigger button.

5.Analysis by PC Software

Run the client after downloading the software to PC, and then use a USB cable or SD card to import data for further analysis.

Note: Please import the files of the same name with suffixes of jpg and irg together with the data. The file with the suffix irg contains data related to temperature. If lost, normal analysis cannot be carried out.

6.Analysis by APP

Download and install the App on the mobile device. Enable hotspot on the thermal camera to which the mobile device is connected, run the App and import the data for further analysis.

7.User Interface

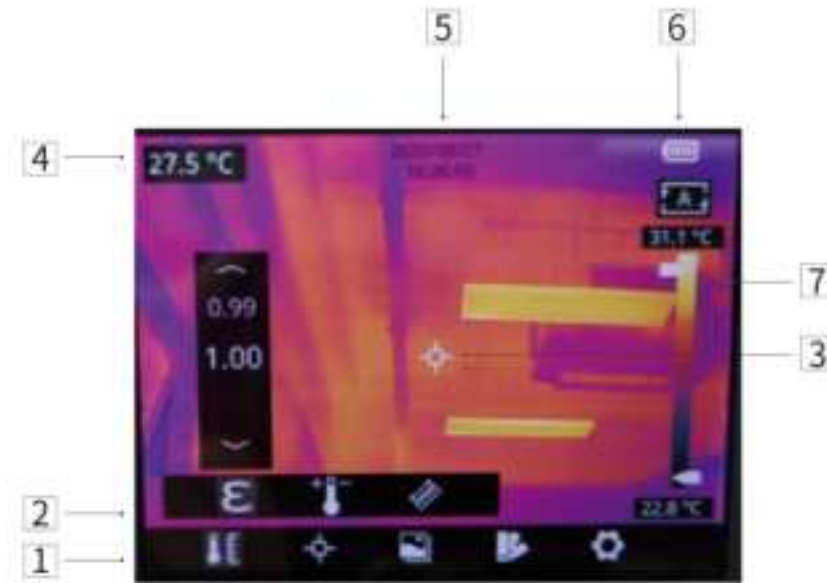


Figure7.1 User Interface

No.	Name	Description
1	Main Menu	parameters, measurement mode, image mode, color palettes and other settings can be set.
2	Sub Menu	specific options can be set, such as a specific color palette.
3	Temperature measurement spot	measurements of center spot, high/low temperature spot tracking, customize spot, customize line, customize area measurement are available.
4	Center spot temperature	the temperature of the center spot is displayed.
5	Date and time	date and time are displayed.
6	Battery capacity	the remaining battery capacity is displayed.
7	Temperature range	the temperature range in the current screen can be displayed.

Table 7.1 Interface Introduction

8.Operation Instruction

8.1 Charging

8.1.1 Charge with a Power Adapter

1. Plug the power adapter into the socket.
2. Use a USB cable to connect the adapter and the camera to charge.

Note: It takes about 3h to get the device fully charged.

8.1.2 Charge with a Computer

1. Use a USB cable to connect the thermal camera to the computer to charge.

Note: when charging with a computer, the computer should be turned on, and the charging time is longer than using an adapter.

8.1.3 Charge with a Charging Base

1. Connect the power adapter and the charging base with a USB cable, and plug the power adapter into the socket.
2. Take out the battery and place it correctly in the charging base to charge.

Note: When the battery is not placed, the indicator of the charging base flashes; the indicator turns red when the battery is placed and charging; the indicator becomes green when the battery is fully charged.

8.2 Power On/Off

1. Press the power button continuously to start the device.
2. Press the power button about 3 seconds to turn it off.

8.3 Focus Adjustment

Make sure that the device is powered on, align the camera at the measured scene, rotate the focus ring beside the lens clockwise or counterclockwise, which can make the image clearer via focal length adjustment, see the following figure for the detailed adjustment method:




Figure 8.1 Focus Adjustment Through Focus Ring

8.4 Images/Videos Capture


1. In the observation interface, adjust the focus ring till the image is clear. Short press the trigger button to take the photo. Long press the trigger button to start recording video, and finish recording by releasing the trigger button.
2. Tap the save button on the touch screen or click *OK* or short press the trigger to save the picture. Tap other buttons on the screen or use the navigation button + *OK* to make recording annotation, scan the QR code to name the file, or cancel saving photos.

8.5 View Photos/Videos


The pictures you took are saved in the SD card, and you can follow the below steps to view them at any time.


1. Enter the photo gallery by clicking gallery button.
2. Choose the image view modes by clicking the drop-down arrow , there are two kinds of modes: sort


by filename or sort by time.

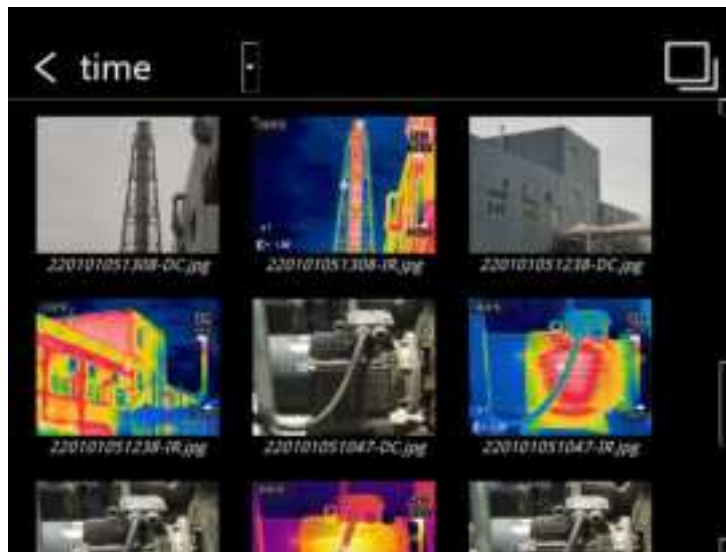

3. Select the picture or video you want to view by pressing the navigation button or touch screen.
4. Press **OK** or click the picture or video to view it in full screen. Select the delete option and then confirm to delete the current item. Select the rename option and confirm to rename the current item.

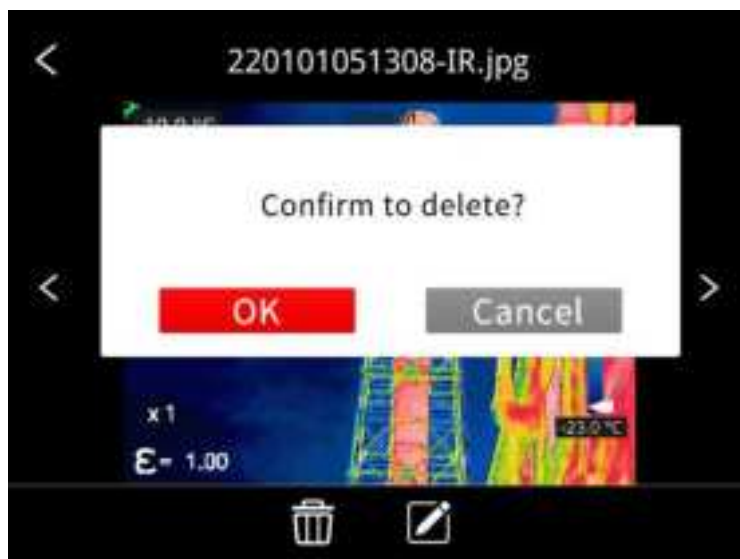

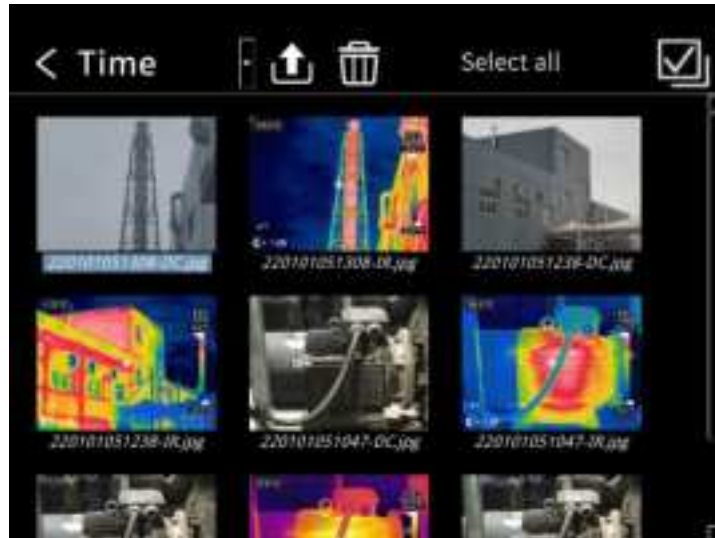

5. When in the preview interface, click the multiple button  in the upper right corner of the screen, then select the picture or video to be deleted, and delete the selected items by pressing the delete button.



6. Return to observation interface by clicking the gallery button, back button or touching the screen.


8.6 Measurement Mode


In the observation interface, press OK shortly to enter the main menu, and select *Measurement Settings*  with the navigation button. Press OK again to enter the secondary menu, select different measurement modes by shifting left or right on the navigation button, and press OK to save your option. In the observation interface, click anywhere on the screen to enter the main menu. Then click *Measurement Settings*  to select the desired measurement mode, and make it effective by clicking the screen area.




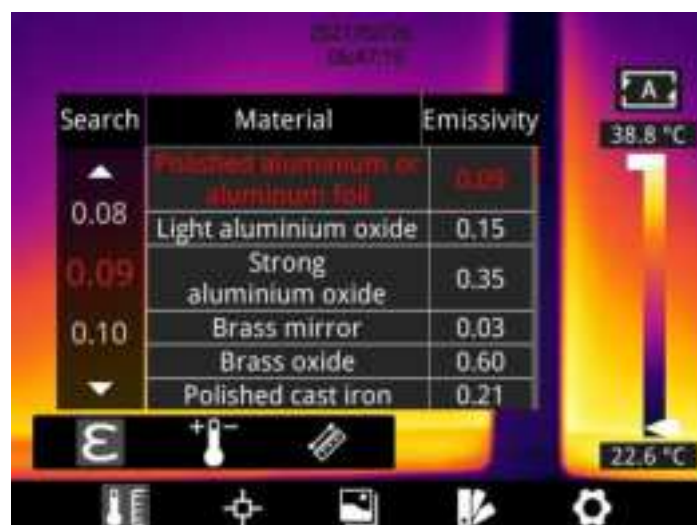
8.7 Measurement Parameters


In the observation interface, press OK to enter the main menu, use the navigation button to select the

parameter setting , then press OK again to enter the secondary menu. Select different temperature measurement parameters by shifting left or right, and press the enter button to parameterize. After setting, press OK again to save your option.


In the observation interface, click anywhere on the screen to enter the main menu. Click Parameter Setting  to set the parameter. After finishing the setting, click the screen area to take effect.


- **Emissivity** : in order to obtain more accurate measurement results, you need to set the emissivity according to the target to be measured before each measurement, instead of using the default configuration. Emissivity refers to the ratio of the radiant ability of an object to the radiant ability of a blackbody at the same temperature, which is relative to the reflectivity of the object. The lower the emissivity, the higher the proportion of energy being reflected. The higher the emissivity, the lower the proportion of energy being reflected. For example, the emissivity of human skin is 0.98, and the emissivity of printed circuit boards is 0.91. For more information on emissivity, you can click the *Emissivity* button or refer to the quick start guide in the package or inquire from other sources.




- **Ambient temperature**  : the reflection temperature of the object surface will affect the measurement result, especially when the object emissivity is low or the object temperature and the reflection temperature differ greatly, this effect will increase. So the result needs to be compensated to eliminate influences of the surface reflection temperature. However, it is usually difficult to determine the reflected temperature of an object. The ambient temperature can be used to replace the reflected temperature in actual measurement.




- **Distance**  : distances have effects on the measurement results. In order to get accurate measurement, distance information of the object is necessary for the thermal camera to compensate the result.

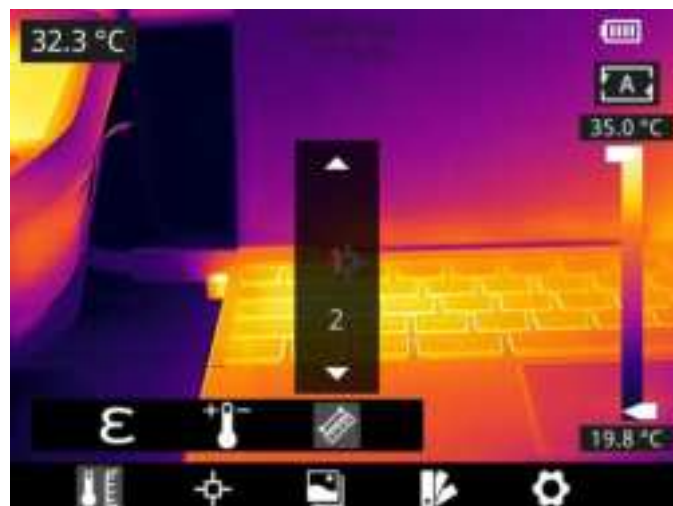

8.8 Palettes

In the observation interface, short press OK to enter the main menu, and select *palette setting*  with the navigation button. Press OK again to enter the sub menu, select different palettes by shifting left and

right on the navigation button, and then press the enter button to save your option.

In the observation interface, click anywhere on the touch screen to enter the main menu. Click *palette setting*  to choose a palette and save your option by clicking the screen area.




8.9 Image Mode


8.9.1 Image Mode Introduction

Four image modes are available.


- Thermal Fusion: an image fused to a certain scale between an infrared image and a visible image.

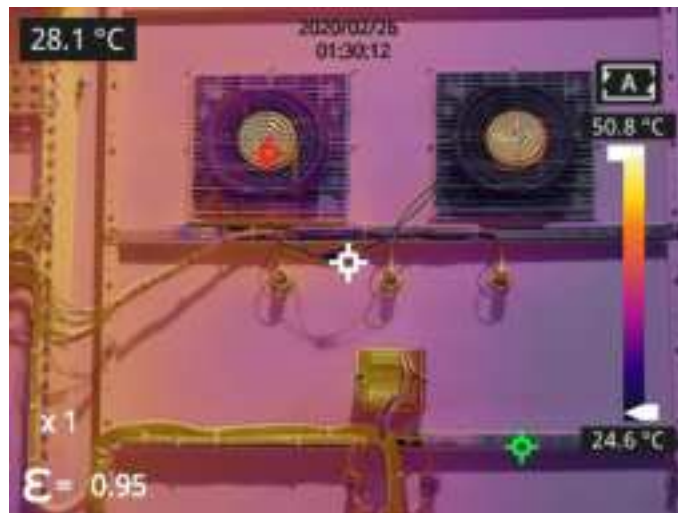


- PIP: infrared image superimposed at the center of the visible image.

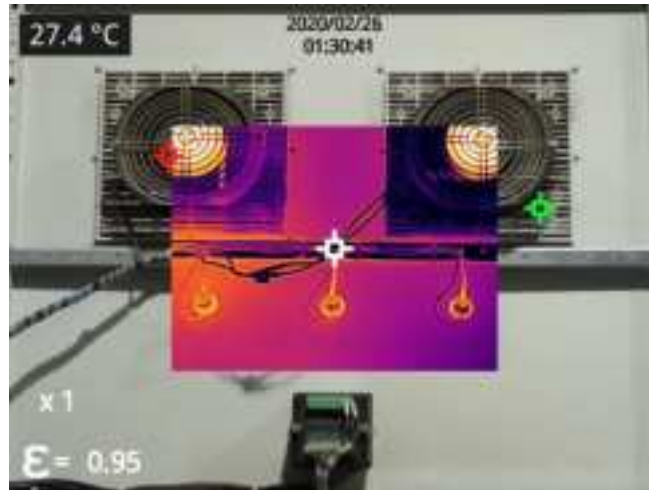

- Thermal imaging: infrared images.

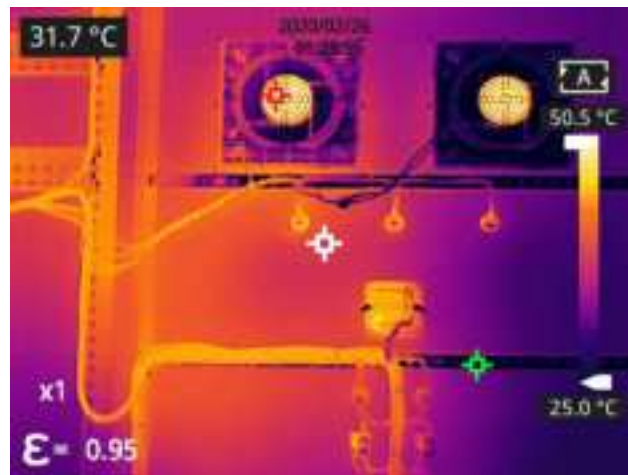

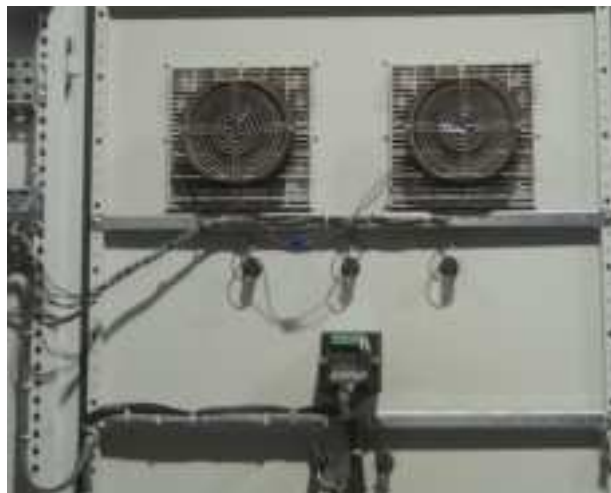

- Digital camera: visible images.



Note: For better dual-light image effects, when in PIP or thermal fusion modes, you need to set the actual distance, that is, the approximate distance from the thermal camera to the object. If the preset alignment parameters cannot meet the requirements, you can also manually perform fusion alignment in the settings or drag on the touch screen.

8.9.2 Setting Steps

In the observation interface, press OK shortly to enter the main menu, and select image mode  through the navigation button. Then press OK again to enter the secondary menu, there different image mode can be selected by shifting left or right on the navigation button. Save your option by pressing enter button.

In the observation interface, click any place on the screen to enter the main menu. Click image mode  and select the desired image mode, and then click on the screen area. The option is saved.





8.10 Non-uniformity Correction

8.10.1 Non-uniformity Correction Introduction


Non-uniformity correction is used to compensate for non-uniformity of detector pixels or non-uniformity caused by other optical interference.

If there is more noise in the image, non-uniformity correction is needed, which is common when the ambient temperature changes rapidly.

8.10.2 Non-uniformity Correction Operations


In the imaging interface, press the back button  or the gallery button  continuously to perform non-uniformity correction.

8.11 Contrast Adjustment


In the observation interface, the contrast of the infrared image can be adjusted by sliding up and down the arrow button  on the *temperature range* on the right side of the screen, the upper limit and lower


limit of the temperature scale can be set manually.

The default level is 24.2°C-34.6°C in auto mode:

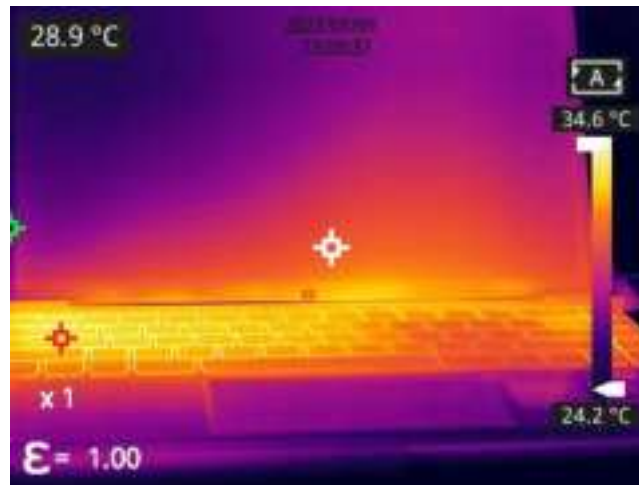

The lower limit of the temperature scale is manually adjusted as 27.7°C:

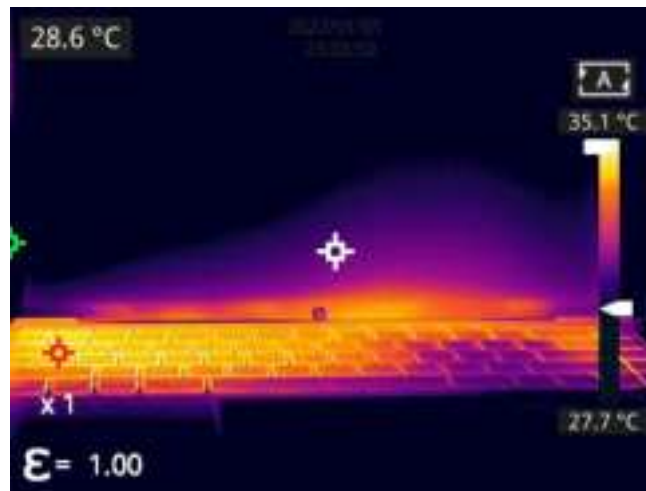


Press **A**  in the upper right corner of the interface to return to auto-contrast mode. The upper limit and lower limit are auto adjusted according to the Max. temp and Min. temp in the auto mode, the image color is distributed based on the color of the temperature scale.

8.12 Digital Zoom


In observation interface, press navigation button to perform Max. 8×digital zoom.

- 1×digital zoom:

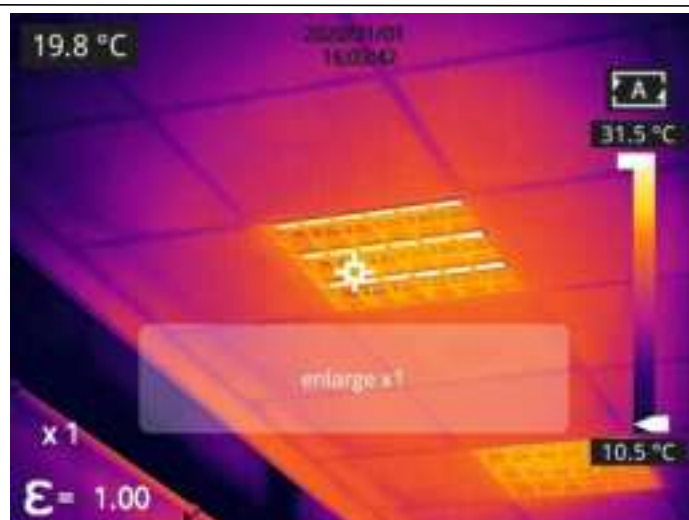


Note: this function is only enabled under infrared mode or visible mode.


- 2×digital zoom:

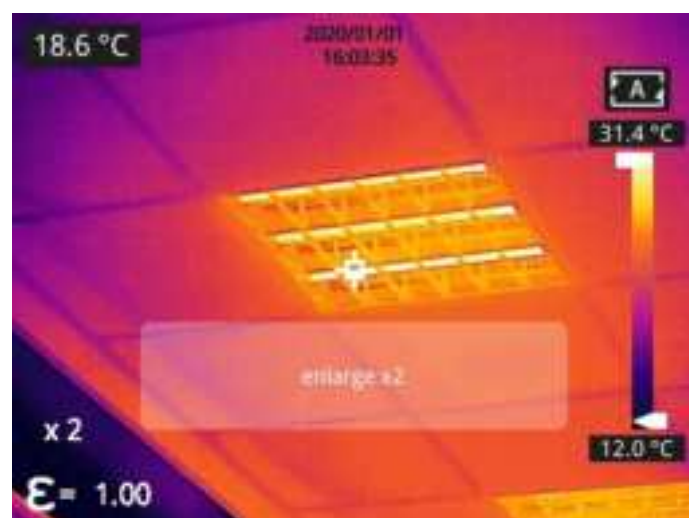

- 4×digital zoom:

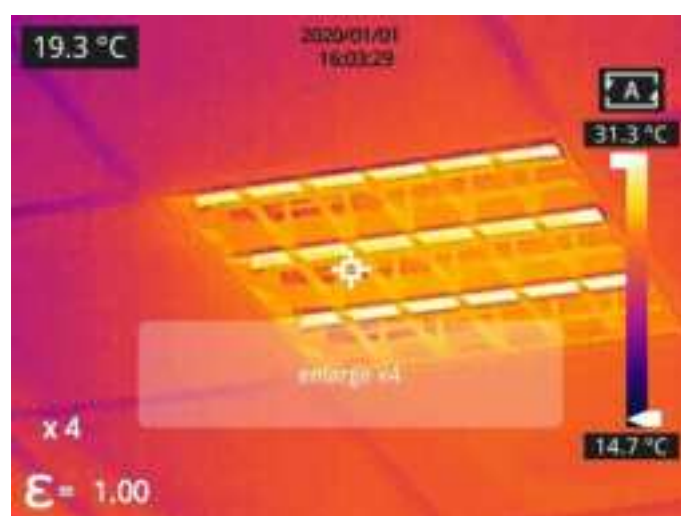

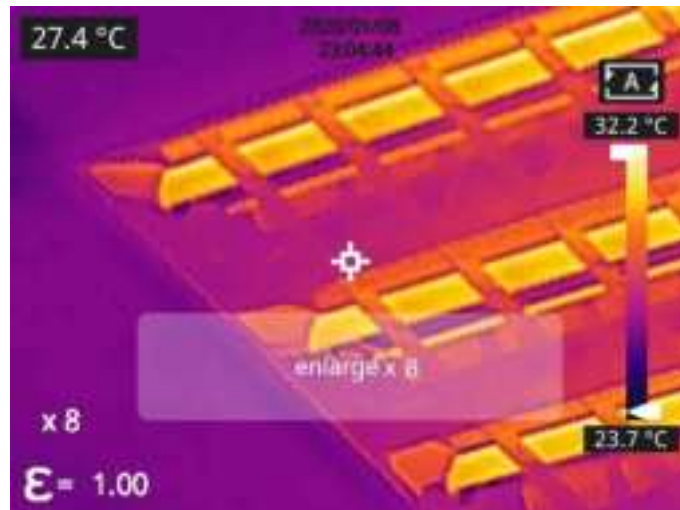

- 8×digital zoom:




Note: This function can be enabled in IR mode or Visible mode.

8.13 Other Settings

Other settings include date and time, unit, and other items.

- 1) In the observation interface, press OK shortly to enter the main menu, and select *Settings*  to enter other settings.
- 2) In the observation interface, tap anywhere on the screen to enter the main menu, and tap *Settings*  to enter other settings.

8.13.1 Temperature Measurement Mode

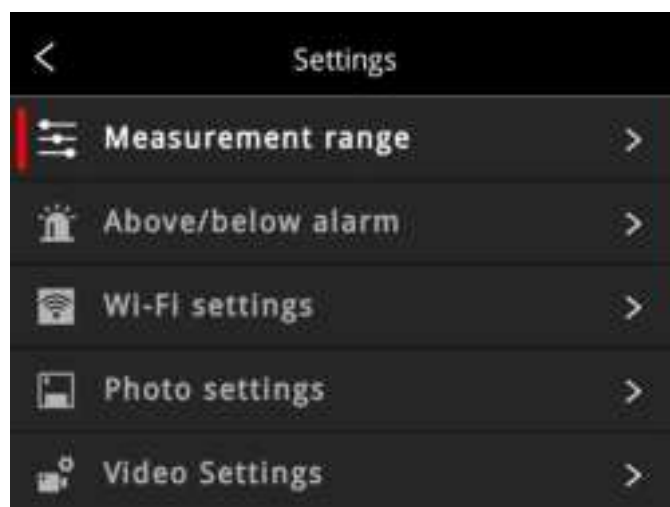

- -20~150°C: the image details are better, and the maximum temperature measured is 150°C. This mode by default.

- 100~650℃: the image details are slightly worse, and the maximum temperature measured is 650℃. Select the desired mode via navigation button and short press Ok; You can also switch mode via the touch screen.



Select the options up-down by navigation button, press OK to confirm; You can also select the options via touch screen.

8.13.2 Above/Below Temperature Alarm



1.High temperature alarm switch: click to enable or disable the function of high temperature alarm.

Temperature setting for high temperature alarm: click on the pop-up keyboard and set the alarm temperature, 120℃ by default.

2.Low temperature alarm switch: click to enable or disable the function of low temperature alarm. Function.

Temperature setting for low temperature alarm: click on the pop-up keyboard and set the alarm temperature, 0℃ by default.


- Auto Alarm Snapshot: click to enable or disable, disable by default. Auto capture image during alarm.
- Time Interval: the time interval of alarm snapshot is 10s by default, click to perform custom setup.
- Number of Snapshot: 100 by default, click to perform custom setup.

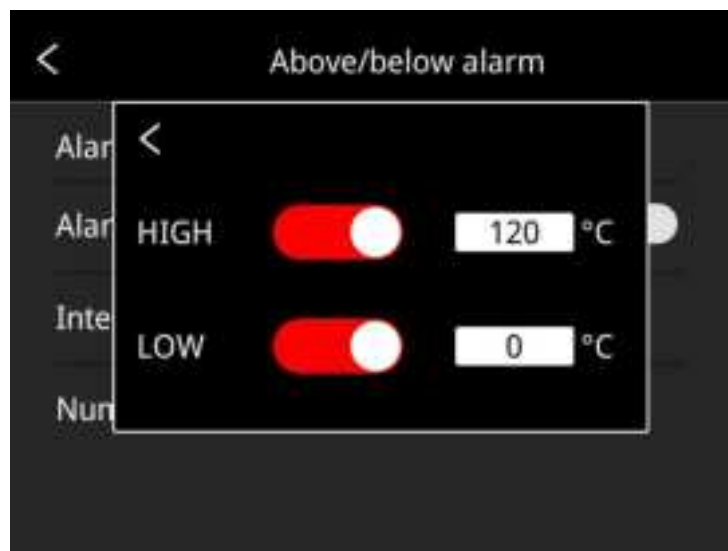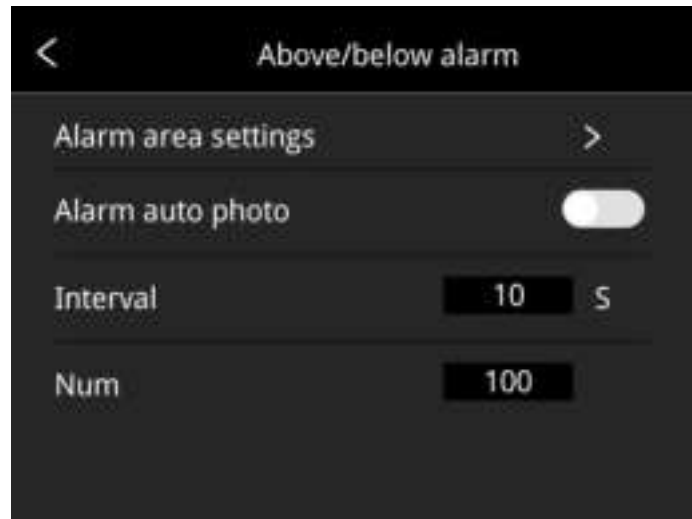

8.13.3 Wi-Fi Settings


Click and enter Wi-Fi settings interface.

- Hotspot Switch: turn on hotspot and set the network name and password, then click OK.

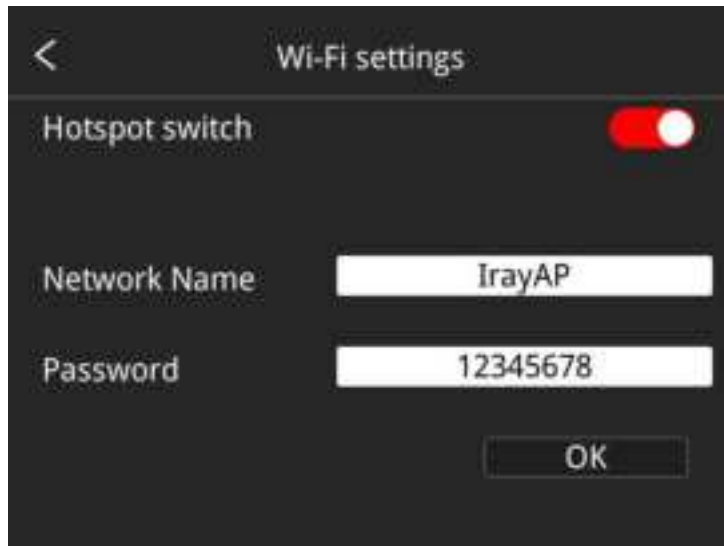**Note:**

- 1)The specialized app is needed while this function is enabled. You need connect the hotspot manually after turning hotspot on, and you can transmit the saved pictures or videos to mobile device to perform secondary analysis.
- 2)Turn off hotspot when it is not used, or else the power consumption will be faster.


8.13.4 Snapshot Settings

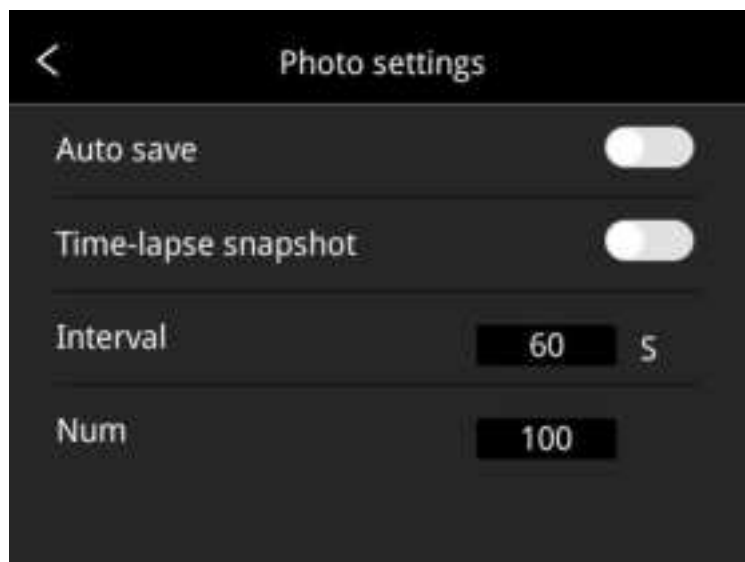


- Auto save of manual snapshot switch: click to enable or disable the function of auto save of manual snapshot, disabled by default.
- Time-lapse snapshot: click to enable or disable the function of time-lapse snapshot.
- Time interval of time-lapse snapshot: 60s by default, click to perform custom setup.
- Number of time-lapse snapshots: 100 by default, click to perform custom settings.

8.13.5 Video Settings


- Normal video capture mode: defaulted video mode. The Max temp, Min temp and Center spot of the full frame will be displayed on the captured video, the temp value is located on the top left screen.

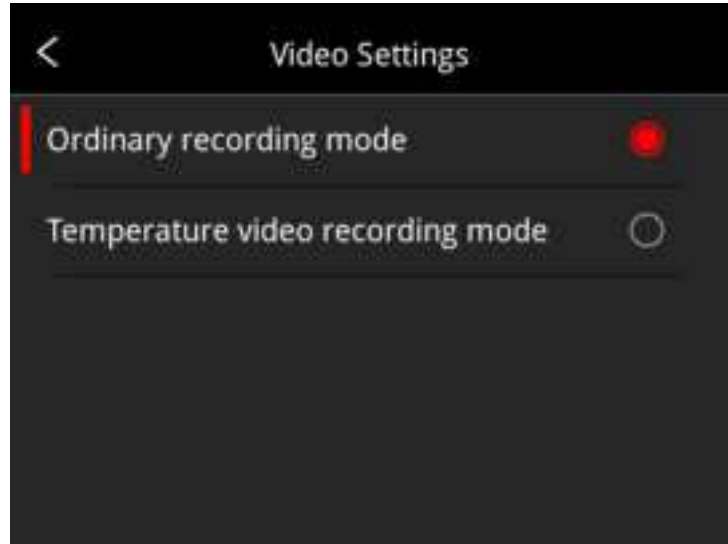

- Temperature video capture mode: defaulted time interval is 0.05s, click to perform custom settings. The relating temperature data is saved in the captured videos, the off-line secondary analysis is supported in the thermographic analysis software.

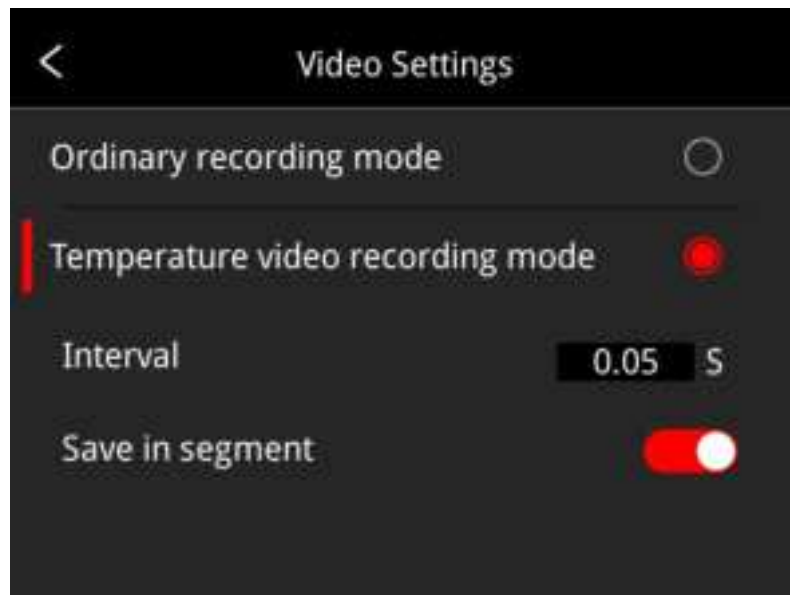

8.13.6 Smart Patrol Inspection

Click *Import*, select the desired smart capture package, click *Import* again, then select the corresponding task to start the smart capture, the detailed operation is: click the start button  on

the right side; to end the snapshot by clicking the back button  on the left side.




2. Long press the patrol task to import new patrol tasks, delete the selected patrol task, select all patrol tasks or quit.




3. Method of making smart capure package:

- (1) The smart capture package does not have fixed template, the user can design the title and contents according to actual situation.
- (2) The user can name the smart capture package to clearly distinguish different tasks according to the actual situation in the general mode.
- (3) Create file folder named inspection in the root directory of SD card, put the newly created smart capture package in this folder, insert the SD card into the camera, then the package can be imported into the camera.


8.13.7 Analyze Settings

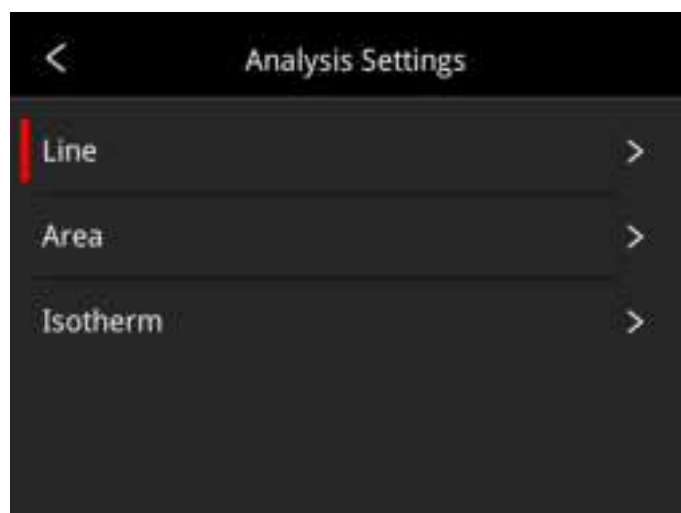

- Temperature measurement lines: temperature trend display can be enabled, disabled by default. The following is an illustration of temperature measurement line.

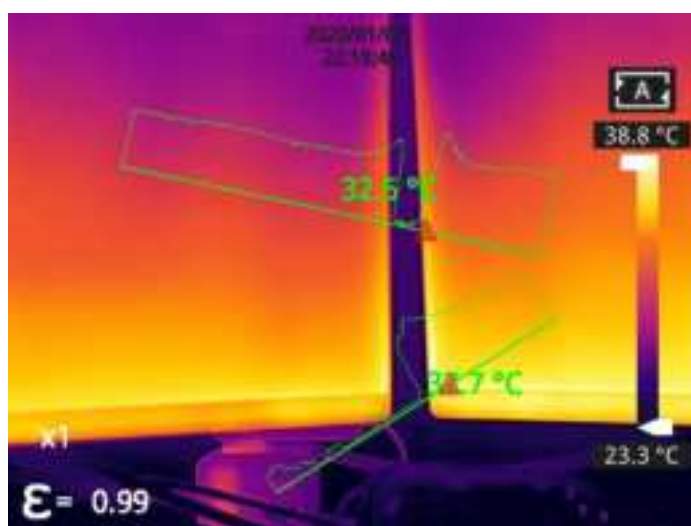


- Temperature measurement regions: the Max. temperature, the Min. temperature and the AVG temperature can be displayed; The Max. temperature is enabled, the Min. temperature and the AVG. temperature is disabled by default.

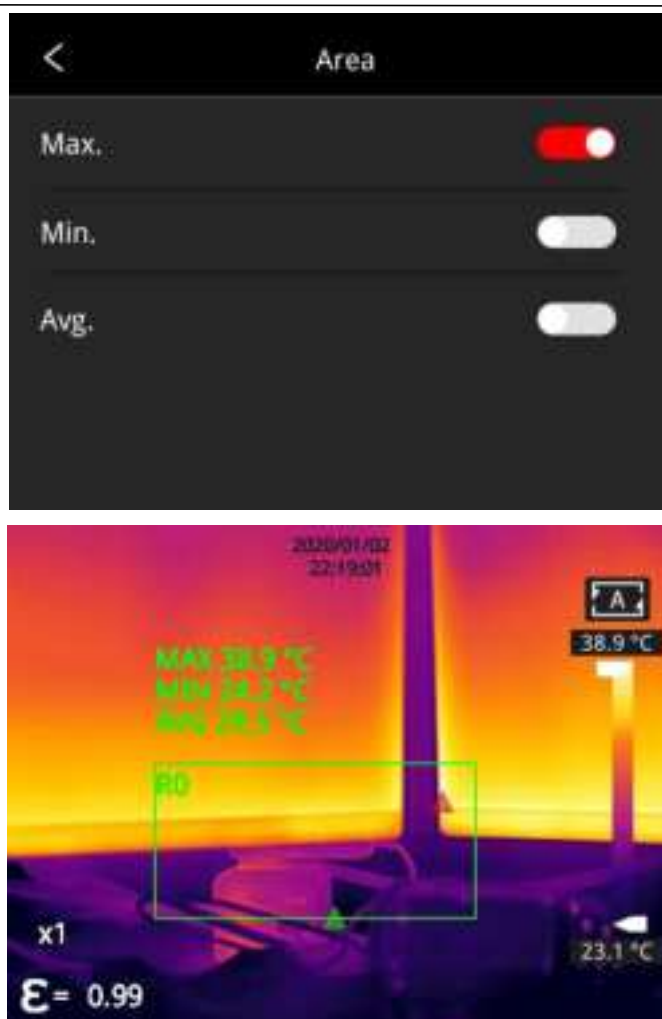

- Isotherm: click to enable or disable the function of isotherm, disabled by default. The Max and Min of isotherm value can be self-defined; the image in a certain temperature range can be selected and auto fill the image color according to the temperature scale to better view the temperature distribution of a certain interested temperature range.



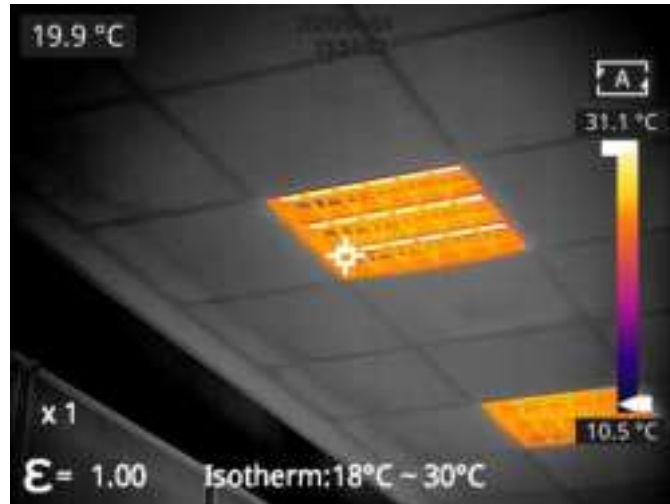

8.13.8 Dual-spectrum Alignment


- Dual-spectrum Fusion Alignment

This function can be used to manually register infrared and visible images. First select coarse tuning and fine tuning, and then perform image alignment through navigation buttons. After finished, click OK or enter button to save the settings. (You can drag on the touch screen with one finger to achieve fusion alignment in dual-spectrum fusion mode).




- Picture-in-picture Adjustment

This function can be used to adjust the position of the picture-in-picture. First select coarse tuning and fine tuning, and then adjust the position of the picture-in-picture by the navigation buttons. When finished, click OK or enter button to save the settings. (You can move the PIP by dragging the picture with your one finger, and adjust the PIP size by dragging the picture edges).

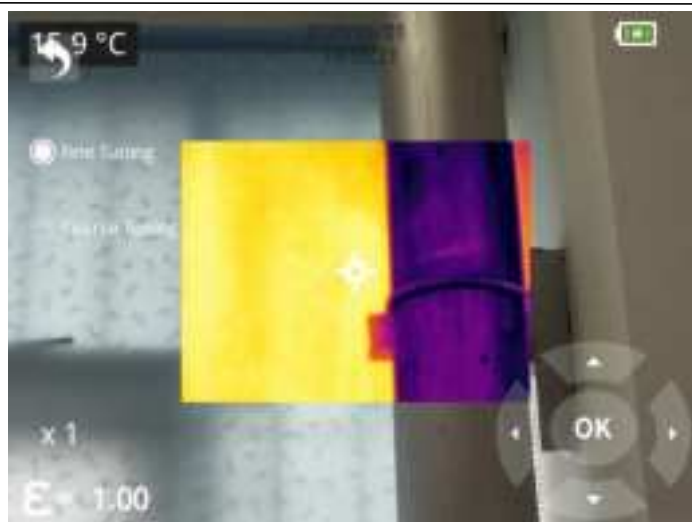

8.13.9 Automatic Power-off

- 5Min: click to perform auto shut down after 5 minutes.
- 10Min: click to perform auto shut down after 10 minutes.
- 20Min: click to perform auto shut down after 20 minutes.
- Off: Click to disable the function of auto shutdown, this function is disabled by default.

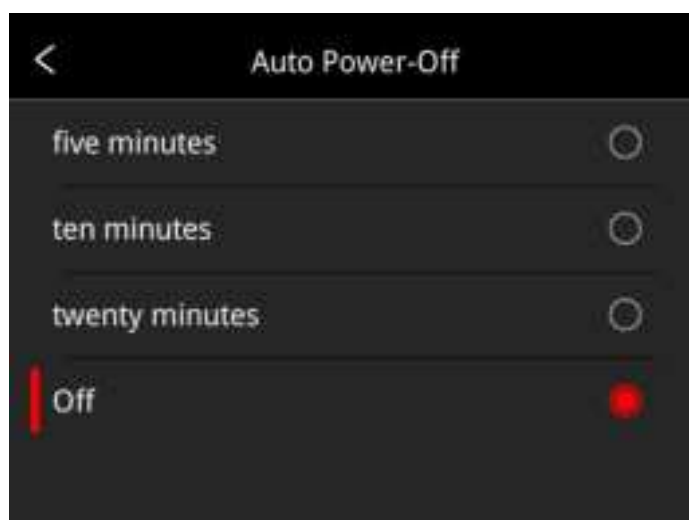

8.13.10 System Settings

1. Device Information

Click to check model, version, SD card capacity and SD card remaining capacity.

2. Date & Time

Click to perform date and time settings. The year can be self-defined from the Year 2020 to the Year 2037,

the month, day, hour and min can be changed.

3. Unit

(1) Temperature Unit: switch between Celsius, Fahrenheit and Kelvin.

(2) Distance Unit: switch between meter and foot.

4. Screen Brightness

Click to perform date and time settings.

- High: click to set the screen brightness as high brightness.
- Medium: click to set the screen brightness as medium brightness, medium brightness by default.
- Low: click to set the screen brightness as low brightness.

5. Formatting the SD Card

Click and then press OK to format the SD card as FAT32.

6. USB Mode

There are two options for data transmission: U disk and USB camera.

- U disk mode: the saved images and videos can be read and analyzed when the camera is connected with other devices via a data cable in this mode.
- USB camera: the real-time image view and spot/line/region analysis can be achieved on the PC when the camera is connected with the PC via a data cable in this mode.

7. Restore Factory Settings

Click and then press OK, the camera will power off automatically a few seconds later, the settings will restore to the factory default state after reboot.

8. Software Update

Download the latest software to *Update* file in SD memory, click *Update from SD memory* to update. The camera will power off automatically, the software will update to the latest version after reboot.

9.Introduction of Application Scenarios

9.1 Detecting of Power Distribution Cabinet

The temperature distribution of power distribution equipment can directly reflect the running status of the equipment. Improper contact or damage may cause abnormal high temperature. The inspection personnel can detect anomalies in time and ensure the safety of power distribution equipment with the aid of M 620 handheld thermal cameras.

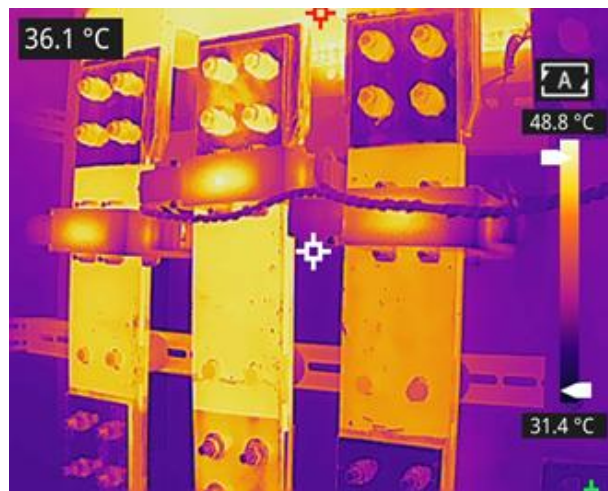


Figure9.1 Detecting of Power Distribution Cabinet

9.2 Liquid Level Detecting of the Storage Tank

There is a temperature difference between the liquid stored in the tank and the upper gas, which can be transmitted to the tank shell. M 620 handheld thermal camera can be used to observe the liquid level of the storage tank from a far distance to prevent the accidental failure caused by the failure of the liquid level meter.

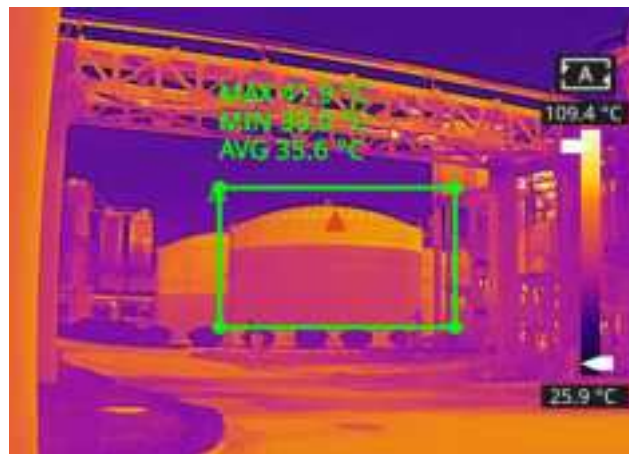


Figure 9.2 Liquid Level Detecting of the Storage Tank

9.3 Circuit Board R&D

The circuit board is small in size, high in integration and complex in structure, so the traditional contact detection consumes lots of time and energy. Infrared thermal imaging technology has absolute advantage in detecting faulty circuit board. M 620 handheld thermal cameras can be used to quickly find abnormal high or low temperature components and determine circuit board malfunctions.




Figure 9.3 Circuit Board R&D

9.4 Defect Detecting of Refractory Material in Rotary Kiln

Rotary kiln is an important equipment for hazardous waste incineration. As the rotary kiln runs for a long time, the lining material may erode and become thin or even fall off, resulting in abnormal external temperature. M 620 handheld thermal cameras can be used to detect the abnormal high temperature of the outer wall, find and locate the high temperature position, and take corresponding measures to avoid safety accidents.



Figure 9.4 Defect Detecting of Refractory Material in Rotary Kiln

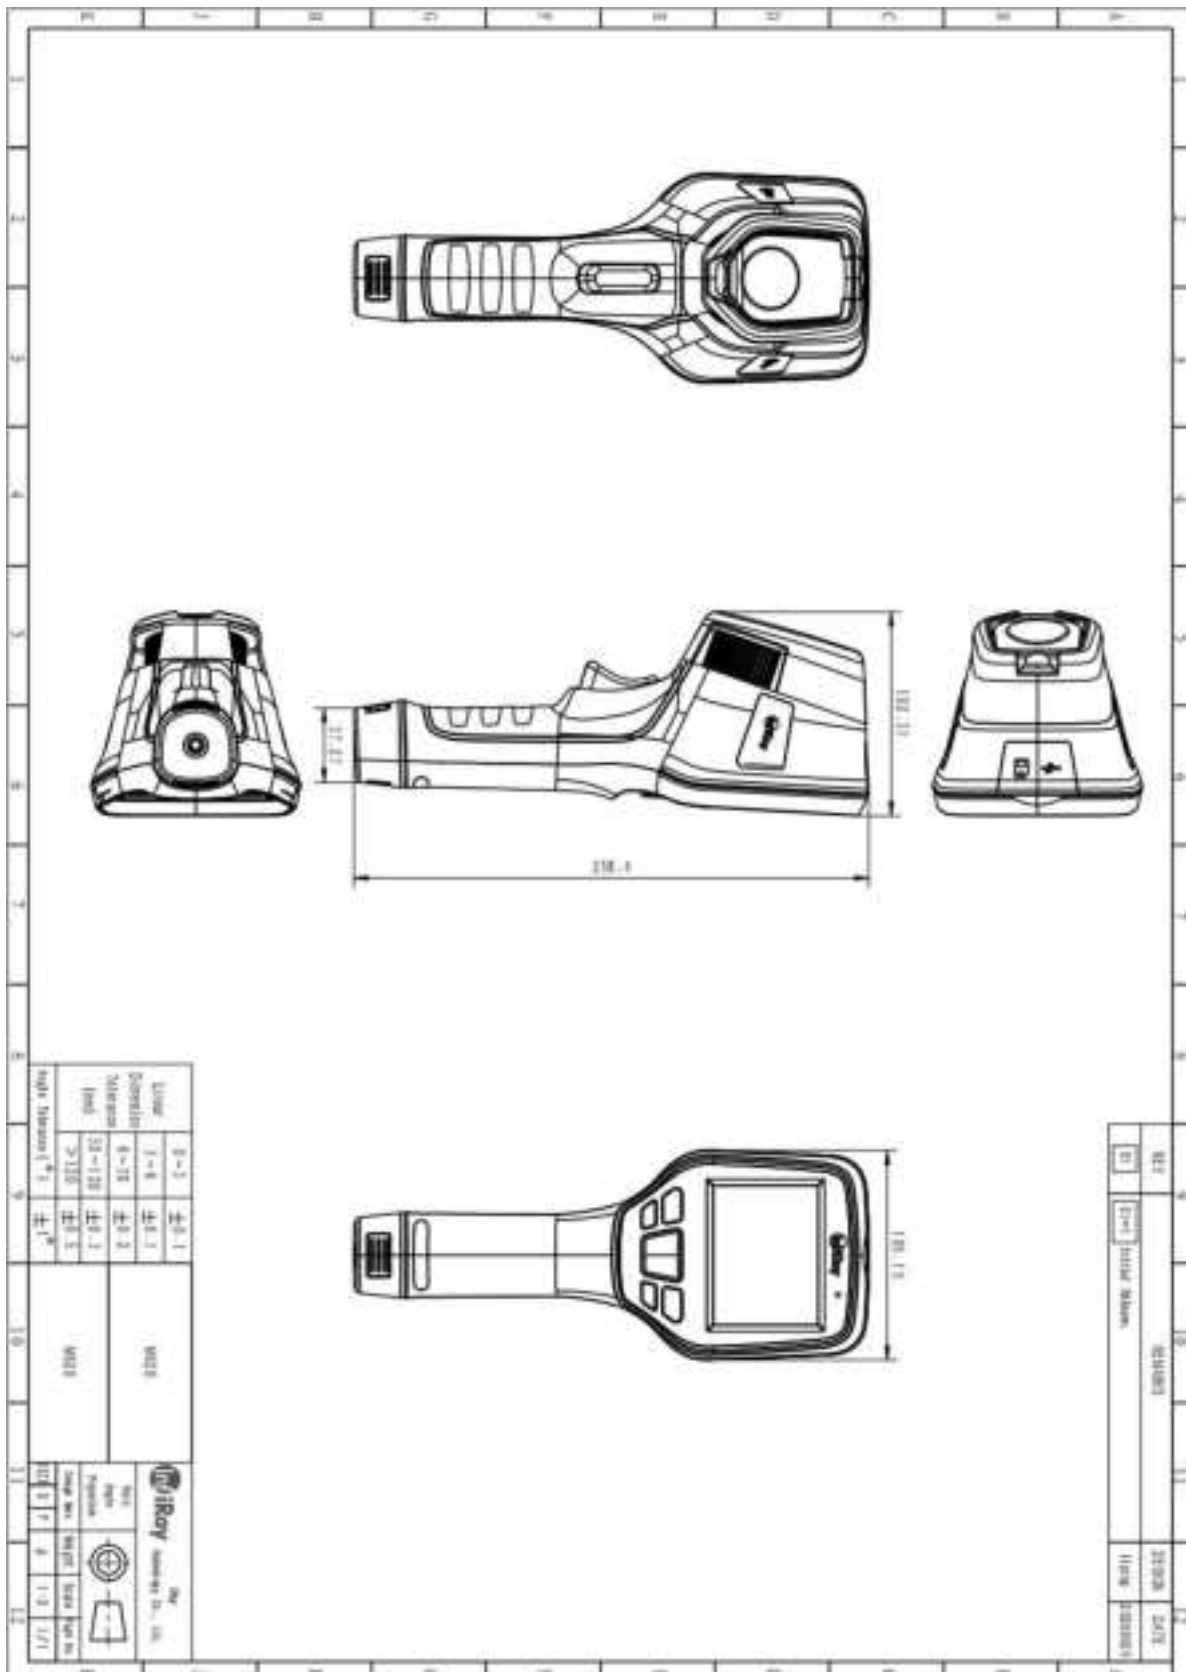

11.FAQ

1. The dual-spectrum fusion can not be used properly.

Possible cause: the dual-spectrum fusion has not been adjusted for targets of different distances.

Solution: the dual-spectrum alignment can be adjusted by fine tuning or coarse tuning through the navigation bar.

2. The image is too bright or too dark, highlighting targets within a certain temperature range.

Possible cause: the manual level/span has been enabled.

Solution: click A in the top right corner of the screen to enable auto level/span.

12.Cleaning Thermal Camera

12.1 Cleaning Camera Housing, Cables and Other Items

Camera Housing, Cables and Other Items	
Liquids	<p>One of the following liquids can be used.</p> <ol style="list-style-type: none"> 1.Warm water 2.A Weak detergent solution
Cleaning Tools	A soft cloth
Cleaning Procedure	<p>Please follow this procedure:</p> <ol style="list-style-type: none"> 1.Soak a soft cloth in the liquid. 2.Twist the cloth to remove excess liquid. 3.Clean the camera parts with the cloth.



CAUTION

Do not apply solvents or similar liquids to the camera, the cables, or other items. This can cause damage.

12.2 Cleaning Infrared Lens

Cleaning Infrared Lens	
Liquids	<p>One of the following liquids can be used.</p> <ol style="list-style-type: none"> 1. Commercial lens cleaning liquid with more than 30% is isopropyl alcohol. 2. 96% ethyl alcohol(C_2H_5OH).
Cleaning Tools	cotton wool
Cleaning Procedure	<p>Please follow this procedure:</p> <ol style="list-style-type: none"> 1. Soak the cotton wool in the liquid. 2. Twist the cotton wool to remove the excess liquid. 3. Clean the lens one time only and discard the cotton wool.



CAUTION

Do not clean the infrared lens too vigorously. This can damage the anti-reflective coating.

FCC Statement:

FCC-ID: 2AYGT-M620

Labeling requirements:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Information to the user

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For a Class A digital device or peripheral, the instructions furnished the user shall include the following or similar statement, placed in a prominent location in the text of the manual.

Note:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

Body-worn Operation

This device was tested for typical body-support operations. To comply with RF exposure requirements, a minimum separation distance of 0.5cm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

We, IRay Technology Co., Ltd., hereby declare that this product was tested conforming to the applicable FCC rules under the most accurate measurement standards possible, and that all the necessary steps have been taken and are in force to assure that production units of the same equipment will continue to comply with the Commissions requirements.

Worth comes from Service

24h Hotline:

400-998-3088

Technical Support

Hotline:

400-883-0800

Customized Services