



User Manual

Wireless 5x2 HD Matrix

GWHDMS52

PART NO. M1229

Table of Contents

Important Information	4
Introduction	8
Package Contents	8
Requirements	8
Overview	9
Hardware Installation	12
Step 1: Setup the Transmitter	12
Step 2: Setup the Receiver	13
Step 3: Setup the IR blaster extender cable and IR sensor extender cable	14
Step 4: Mounting the Receiver to a Wall (Optional)	15
Basic Operation	16
Advanced Operation	22
Naming the Input Source Devices	22
Pairing new transmitter with existing receiver (optional)	23
Multiple Transmitter Selection	24
Supported Resolution	26
Audio Bit Rate Support	27
Specifications	28
Troubleshooting	29
Federal Communications Commission (FCC) Statement	31
Limited Warranty	31
Contact	31

Important Information

Please take the time to read this user manual before using the Transmitter and Receiver. It contains important information about operating your Full HD video wireless kit.

Our limited warranty applies when the product is handled properly for intended use, in accordance with its operating instruction. However, the warranty may be void in the following cases:

- Repair, product modification or alteration have been performed by unauthorized service personnel
- Damages caused by accidents, including but not limited to, lightning, water, fire, or moisture
- Use of an AC adapter not compatible with the product and its voltage rating
- The model number on the product has been altered, deleted, removed or made illegible

Safety Precautions

	Warning! RISK OF ELECTRICAL SHOCK DO NOT OPEN	
TO REDUCE THE RISK OF ELECTRICAL SHOCK. DO NOT REMOVE THE COVER. NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.		



Danger: Be careful with electricity.

- Power to the units must be switched off before any work is undertaken, such as any AV device connection or TV connection.
- Power outlet: To prevent electric shock, make sure to use the appropriate AC adapters as power supply to the transmitter and the receiver.

- Power cord: Be sure the power cord is routed so that it will not be stepped on or pinched by heavy items
- Power overloading: Avoid overloading electrical outlets or extension cords which otherwise could result in electric shock or fire
- Lightning: Disconnect the product from the power source if it is left unattended for a long period of time, and to protect the product from lightning.
- Always disconnect the power cord from the power outlet when you are not using your Full HD Video wireless kit. This reduces the risk of electric shocks or fire



Warning

- This product should not be exposed to dripping or splashing. No object filled with liquids, such as vases, should be placed on the product
- Object Entry: To avoid electric shock, never stick anything in the slots on the case or remove the cover
- Place receiver/transmitter on a flat, hard and stable surface
- Ventilation: Do not block the ventilation slots on the receiver/transmitter or place any heavy object on the top cover.
- Blocking the air flow could damage the receiver. Arrange components so that air can flow freely around the receiver. Ensure that there is adequate ventilation if the receiver is placed in a stand
- Put the receiver/transmitter in a properly ventilated area, away from direct sunlight or any source of heat
- Water Exposure: To reduce the risk of fire or electric shock, do not expose the receiver/transmitter to rain or moisture.
- This is indoor solution
- Our company has the right to modify this document without any notice

Special Notice

- Never use this product nearby an aircraft or medical facility. It can cause interference or undesirable effect on the operation result
- Use of this product in the following locations may result in abnormal video and audio output (noise, blocked image... etc.).
 1. Product installed in the walls made of concrete
 2. Product is situated near the refrigerator or metal fitment
 3. A cluttered room where the wireless signals may be blocked
- This product has been tested and manufactured to comply with each country's safety rules. However, there is no guarantee that interference will not occur in some installation scenario. If the interference happens, increase the distance between the transmitter and receiver
- GWHDS52 may interfere 5GHz wireless devices, such as routers or other wireless devices. Therefore, if you have an 802.11n router, configure it to the 2.4 GHz band rather than the 5GHz band
- Optimal range between GWHDS52 transmitter and receiver is between 2 and 20 meters within line of sight

System Warning

FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:****Using the System in the US**

- Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.
- This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance
- Outdoor operations in the 5150~5250MHz band are prohibited.
- This device has no Ad-hoc capability for 5250~5350MHz and 5470~5725MHz.
- The device not operation in 5600~5650MHz.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 1. this device may not cause harmful interference, and
 2. this device must accept any interference received, including interference that may cause undesired operation.

FCC Statement

The user is cautioned that this device should be used only as specified within this manual to meet RF exposure requirements. Use of this device in a manner inconsistent with this manual could lead to excessive RF exposure conditions.

**Industry Canada Statement**

This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Caution:

1. the device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;
2. High-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350 MHz and 5470~5600MHz, 5650~5725MHz and that these radars could cause interference and/or damage to LE-LAN devices.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

IMPORTANT NOTE:

- In the event that these conditions can not be met (for example certain laptop configurations or co-location with another transmitter), then the Canada authorization is no longer considered valid and the IC ID can not be used on the final product. In these circumstances, the OEM integrator

will be responsible for re-evaluating the end product (including the transmitter) and obtaining a separate Canada authorization.

utilisateurs, le type d'antenne et son gain doivent être choisis afin que la puissance isotrope rayonnée équivalente (PIRE) ne dépasse pas ce qui est nécessaire pour une communication réussie.

French translation:

Ce dispositif est conforme à la norme CNR-210 d'Industrie Canada applicable aux appareils radio exempts de licence. Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

NOTE IMPORTANTE:

Déclaration d'exposition aux radiations:
Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

- i. les dispositifs fonctionnant dans la bande 5 150-5 250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux;
- ii. De plus, les utilisateurs devraient aussi être avisés que les utilisateurs de radars de haute puissance sont désignés utilisateurs principaux (c.-à-d., qu'ils ont la priorité) pour les bandes 5 250-5 350 MHz et 5470~5600MHz, 5650~5725MHz et que ces radars pourraient causer du brouillage et/ou des dommages aux dispositifs LAN-EL.

En vertu de la réglementation de l'industrie du Canada, cet émetteur de radio ne peut fonctionner à l'aide d'une antenne d'un type et un maximum (ou moins) Gain approuvé pour l'émetteur par Industrie Canada. Pour réduire le risque d'interférence aux autres

Introduction

IOGEAR's GWHDM52 Wireless 5 x 2 HD Matrix is the first to send Full uncompressed HD 1080p, connects up to 5 source devices and allow you to switch and independently select any source between 2 HDTVs. The wireless matrix feature is the biggest breakthrough in wireless AV solutions today. This means you can watch cable TV in the living room while independently select a Blu-ray movie to watch in the bedroom at the same time. Its capable of streaming Full HD 1080p with support for 3D content and digital audio up to 100 feet* away within the home or desired set up.

The Wireless 5 x 2 HD Matrix is setting a new standard in wireless connectivity, flexibility, convenience, and decor.

The solution consists of a Wireless Transmitter and a Wireless Receiver with connections for HDMI and Component, along with a loop through (local port) for an advanced 2 HDTV set ups. It also includes USB connectivity for the addition of a computer / laptop giving you wireless control from the second room. Infrared (IR) pass-through enables wireless control of your source devices and helps consolidate your HD A/V electronics, such as a DVD / Blu-ray players, DVR / Cable boxes, Game consoles and computers to design your own custom entertainment space.

The Wireless 5 x 2 HD Matrix does not require a line-of-sight placement, keeping home theater devices neatly out of sight, which enables a quick, simple, and flexible wireless HD or 3D audio / video solution.

Package Contents

1 x Wireless Transmitter	2 x Power Adapter
1 x Wireless Receiver	1 x HDMI Cable
2 x Remote Controls w/ batteries	1 x User's Guide
1 x Component Adapter Cable	1 x Warranty Card
1 x IR Blaster Cable (Transmitter)	
1 x IR Sensor Extender Cable (Receiver)	

Requirements

Display

1 x HDMI input

Media Source

1 x HDMI output

1 x Component output

Overview

Transmitter


Top view

- 1. Source LEDs**
These LED indicators are lit in solid green to show current input
- 2. Source Selection Button**
Press to switch Source inputs connected to the transmitter.
- 3. Power Button with LED Indicator**
Press to turn the transmitter on/off. The indicator in the power button is lit in solid green when the power is on, and turns red in standby mode.



Back view

- 1. Power Adapter DC IN**
- 2. IR OUT Blaster Extender Jack**
Plug the IR Blaster Cable into the IR OUT jack of the transmitter
- 3. Component IN (Optional)**
Connect Transmitter to source device Component port with the provided Adapter Cable.
- 4. HDMI IN**
Connect Transmitter to High-definition audio / video devices via an HDMI cable.
- 5. HDMI OUT**
Connect to an HDTV via an HDMI cable.
- 6. Mini USB Port**
For USB HID connection.(Keyboard / Mouse control) Connect to USB enabled laptop or computer.

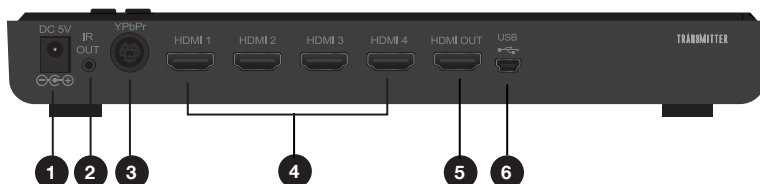

Receiver

Top view


1. **Power Button with LED indicator**
Press to turn the receiver On and Off. The indicator in the power button lights up in green when the power is on, and turns red in standby mode.
2. **Source Button**
Press this button for Source device input selection

3. **Video status LED**
For video input status indication. Please refer to page 19, section 7 for the detailed information.
4. **Wireless status LED**
For wireless link status indication. Please refer to page 19, section 7 for the detailed information.




Back view

1. **Power Adapter DC IN**
Connect to receiver's power adapter.
2. **USB HID**
Support USB HID function for keyboard / mouse usage.
3. **HDMI OUT**
Connect to an HDTV via an HDMI cable.
4. **IR IN**
Available to connect IR sensor extender cable.

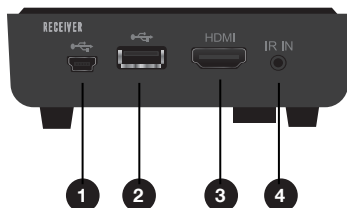

Remote Control

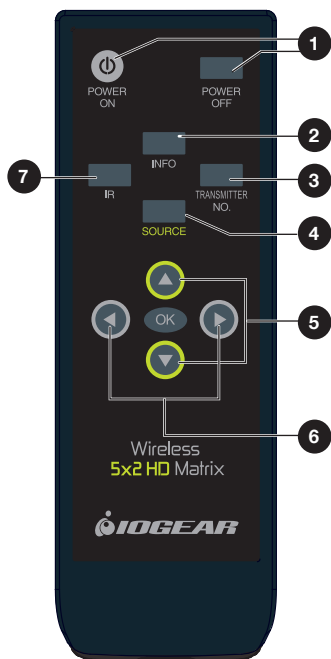

1. POWER ON / POWER OFF Buttons

Press Power ON to turn the Transmitter & Receiver ON. Press Power OFF to turn the Transmitter & Receiver OFF. When both Transmitter & Receiver Power LEDs are red, press Power ON to the Receiver to wake-up both the Receiver and Transmitter automatically.

2. INFO Button

Press this button to the Transmitter or Receiver to display OSD for system related information on HDTV.

3. TRANSMITTER NO. Button

Press to switch different transmitter inputs. Please refer to page 24, Multiple Transmitter Selection section

4. SOURCE Button

Press to select the audio/video source inputs to the Transmitter or Receiver. Press OK to switch to the source input selected.

5. Up and Down Arrow Buttons

Press to select the audio/video source inputs for transmitter display. Press OK to switch to the source input selected.

6. Left and Right Arrow Buttons


Press to select the audio/video source inputs for receiver display. Press OK to switch to the source input selected.

7. IR Button

Press to switch the IR Blaster frequency to meet Source device's requirement. It can switch the IR Blaster frequency from 47KHz to 56KHz to 38KHz recurring.

8. Battery Compartment


- Remove the remote control battery door by pushing the bottom clip in and lifting on the battery door
- Place the two AAA batteries into the remote control and replace the battery door until it snaps in place

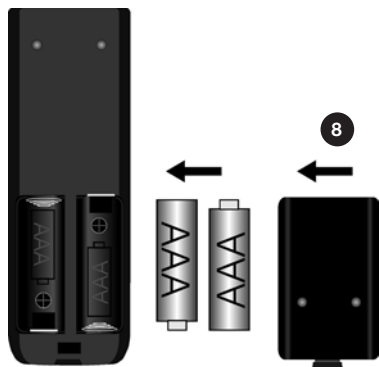

Hardware Installation

Step 1: Setup the Transmitter

Connect up to 5 Audio / Video Source Devices and a HDTV to the transmitter:

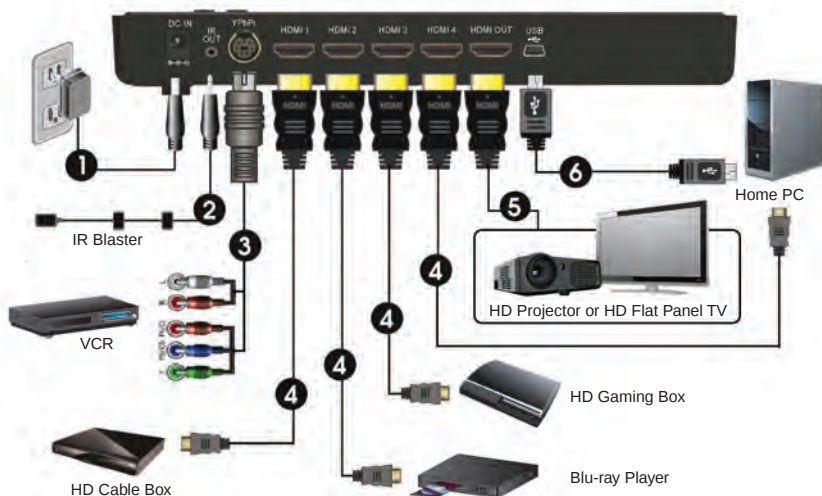

1. Connect the supplied power adapter to the DC IN jack of the transmitter and a wall socket. The LED indicator in the POWER button lights up in green when it is connected to power.
2. Plug in the provided IR blaster cable. Please refer to page 14, step 3 for the detail setup instruction.
3. Connect to source device through by Component (YPbPr) Adapter cable.
4. Connect up to 4 High-Definition(HD) AV sources via "HDMI OUT" through by HDMI cable.
5. Connect the transmitter's "HDMI OUT" to the local HDTV "HDMI IN" port with an HDMI cable
6. Connect the mini USB port to the USB port of PC (or Notebook) with a mini USB to Type A USB cable for USB HID control (keyboard / mouse) on receiver side.

Step 2: Setup the Receiver

HDTV Connection with receiver:



1. Connect the supplied mini USB power adapter to the DC IN jack of the receiver and a wall socket. The POWER LED indicator lights up in green when the receiver is connected to power.
2. Connect either a USB based Keyboard or Mouse to the USB port on the back of the receiver.
*(LOGEAR Wireless AV Multimedia Keyboards with trackball make a perfect companion: GKM561R, GKM681R, GKM581R and GKM571R)
3. Connect an HDMI cable to the HDMI OUT jack of the receiver and to the HDMI-IN on the HDTV (or an HD projector). Press the Source button on your receiver or the left and right arrows button on the remote to select the appropriate "HDMI" video input.
4. Plug in the IR sensor extender cable provided. Please refer to page 14, Step 3 of the Hardware Installation section.

Step 3: Setup the IR blaster extender cable and IR sensor extender cable

The IR relays infrared commands from your remote control to your device.

Users can control their AV devices by pointing their remote control to the receiver or IR sensor extender cable. (IR distance from remote to receiver / IR sensor cable is 30 feet line of sight.)


A: Transmitter

1. Plug the IR Blaster cable in to the IR "Out" jack of the transmitter.
2. Apply the IR blaster head directly over the eye of the IR sensor of your High Definition audio/video device. This allows the remote control of your devices from another room when using the wireless receiver.



B: Receiver


1. Place the wireless receiver out of sight and use the IR Sensor extender for remote control of your devices.
2. Plug the IR Sensor Extender cable into the IR "IN" jack of the receiver and place sensor on front of the TV for convenient operation.

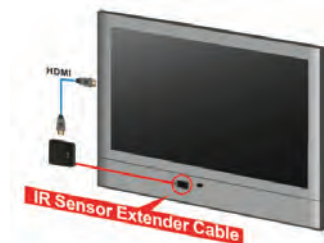

Note: In some instances, the IR sensor on your source device may be difficult to find. To help simplify this process, cut a piece of cardboard to the same size as the front panel of your source device and place a 1 inch hole in the middle of the cardboard. Power ON your source device and play a movie or other video content. Place the cardboard hole over the left side of the source device and using the source device's remote control directly over the cardboard hole, press the pause button repetitively while gradually moving the cardboard hole from left to right making sure to keep the remote control's beam directly over the cardboard hole. Once the source device recognizes the pause button being pressed, you have located the position of the remote control IR sensor on the source device and that is where you will place the IR Blaster's sensor. The IR sensor supports 36KHz~56KHz (NEC, RC5, RC6) remote signal protocol.

Step 4: Mounting the Receiver to a Wall (Optional)

1. Refer the drawing at right that has relative position of the main holes that will be needed to be drilled into the wall.
2. Drill two 1/4" pilot holes.

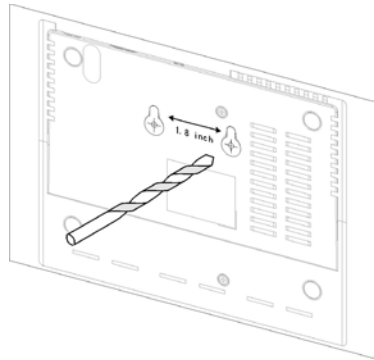


3. Insert the supplied two Anchors into the wall. If necessary, use a small hammer to lightly tap the anchors flush to the wall.



4. Insert two screws into the anchors. Leave 1/4" length for mounting the Transmitter, 5/8" for the Receiver.



5. Place receiver main holes over the protruding screws and slide down into position.

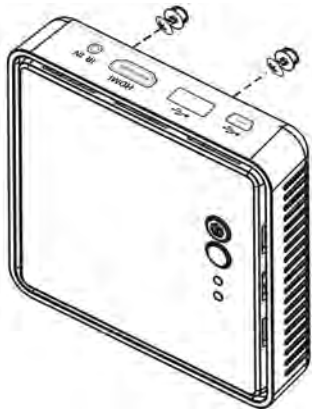

Basic Operation

1. After the power adapter is plugged into the electrical outlet, the device will turn ON automatically.



2. If the receiver is in Standby mode (POWER LED on the receiver is lit in red), press the POWER button ON to the receiver and then transmitter and receiver will establish link automatically. You may also turn POWER ON to the receiver with the remote control.

Please note that the HDMI out on the transmitter will always be ON even when the transmitter is in standby mode.



3. Power ON all connected displays (ie TV, monitor, projector) and source devices (ie cable box, Blu-ray player, game console, computer).

4. During warm-up, the transmitter's Power LED and the receiver's wireless status LED will blink green until the signal link between the transmitter and the receiver is established. It will take approximately 15 ~ 20 seconds for system to fully boot-up successfully.



5. Ensure your TV or projector is in “HDMI input” mode.



6. When the GWHDM52 is first powered on, the input default is set to Source 1. Note that any time a source input is switched, it will take approximately 15 ~ 20 seconds for the image to appear. There are 3 ways to switch between connected source devices as follows:

- A. Press the SOURCE button on the top of the receiver or transmitter to switch the source inputs until you see the desire video program being broadcasted from your source device.




B. Remote Arrow Keys Switching

- Transmitter side: Press By pressing the **“Up”** or **“Down”** arrow keys on the remote control, it will pop up the on-screen display and allow you to cycle through each input. Stop on the one you wish to watch and it will switch to that direct input / source device.



Transmitter Source Switch Up/Down arrow buttons

OSD Displayed:

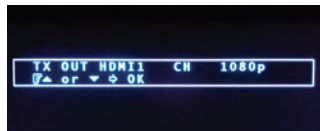

- Receiver side: By pressing the **“Left”** or **“Right”** arrow keys on the remote control, it will pop up the on-screen display and allow you to cycle through each input. Stop on the one you wish to watch and it will switch to that direct input / source device.



Receiver Source Switch Left/Right arrow buttons

- C. Remote Control Source Button: Press the SOURCE button on the remote control to directly switch between connected input sources. Keep pressing the SOURCE button until the desired input source is selected.



Note: Pressing “Up” or “Down” on receiver side or pressing “Left” or “Right” on transmitter side will not initiate switching.

7. If operation is normal, the POWER/Wireless status LED and Source Status LED will glow in solid green. Please refer to the LED status table below that contains detailed LED indicator and OSD descriptions for the transmitter and receiver:

Item / Mode	Status Description	Tx / Rx Power LED	Tx Source LED	Rx Video LED	Rx Wireless LED	OSD Display
Standby	For power saving mode.	Static Red	off	off	off	   ON
Initial Boot up / Warm up	It will spend 15 ~ 20 seconds for system boot up.	Tx Blinking Green Rx Static Green	Blinking	Blinking	Blinking	4 levels looping  
Searching available channels	Continuing search available channels If system can't establish link over 80s after initialization.	Tx Blinking Green Rx Static Green	Blinking		Blinking	 (X)    Looping display these two OSD
Wireless linked Mode	No input from selected source (Note B)	Static Green	Blinking (Quickly)	Blinking (Quickly)	Static Green	   (X)
	Video format not recognized (Note C)	Static Green	Blinking (Slowly)	Blinking (Slowly)	Static Green	   !
	Video format is recognized	Static Green	Static Green	Static Green	Static Green	-

Notes:

- If the RF connection boot-up has exceeded 80 seconds and still not established a link between the transmitter and receiver, it is due either to lost link or the transmitter is most likely out of range. You may have to verify the range and adjust or shorten the distance between your HDTV set with the transmitter and the receiver. The maximum video transmission range for 1080p content is up to 100 feet in line of sight (LOS). The minimum range is 6.5 feet.
- Please make sure the source device has been powered ON and the signal output is set to HDMI out; also try to re-plug the HDMI cable to make sure the HDMI connector had seated properly.
- If there is no video displayed and OSD display shows "Not Supported Format", this is an indication that the video resolution or frame rate from the computer is not supported, please refer to page 26 to switch to a supported video resolution.
- If you have more than one pair of this product, each transmitter and receiver should be at least 6.5 feet away from one another.

E. On Screen Display (OSD) vs. Remote Control Instruction


- (1) In Active mode, press the **POWER** button on the top of receiver or transmitter or press the remote control's Power button and point it to the receiver or transmitter, both receiver and transmitter will enter Standby mode and transmitter's HDMI out remains on.

OSD Displays: (Display 3secs and then enter Standby mode.)



- (2) Press the **INFO** button on the remote control to display signal quality, source, channel and resolution information for user reference. Press the **INFO** button again to exit the INFO OSD.

OSD Displays:



- (3) Press the **SOURCE** button on the remote control or on the top of transmitter (or receiver) for audio/video source input selection.


OSD Displays:



- (4) Press the **IR** button and then the "Up" and "Down" keys on the remote control to change the IR Blaster frequency. The IR frequency can be switched from 47KHz, to 56KHz, and to 38KHz recurring. Note that the IR blaster frequency default setting is 47KHz.


Press once for current IR frequency status display.

OSD Displays:



Press "Up" or "Down" arrow keys on the remote control, it will pop up the on-screen display and allow you to switch IR blaster frequency.


OSD Displays:



8. USB HID Setup Instructions

You can conveniently control your computer connected to the transmitter from the receiver side wirelessly via the GWHDS52 USB connections.

- (1) Transmitter – Using a Mini USB to USB Type A USB cable, Plug the mini USB side into the transmitter and the USB type A into the computer you wish to control.

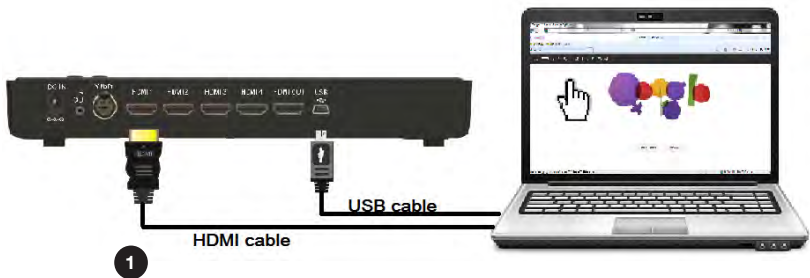

- (2) Receiver – You can connect either a USB based Keyboard or Mouse to the USB port on the back of the receiver.
*(IOGEAR Wireless AV Multimedia Keyboards with trackball makes a perfect companion: GKM561R, GKM681R, GKM581R and GKM571R)




Advanced Operation

Naming the Input Source Devices

1. Press and hold the Source button on the top of transmitter for over 3 seconds.
A source naming OSD will appear on the screen:



2. The current source input may be named by pointing the remote control at the transmitter and using the remote control $\uparrow\downarrow$ keys to change the letters or numbers; $\leftarrow\rightarrow$ keys to move the cursor.

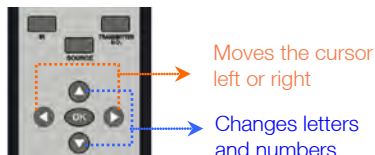

3. After completing source naming, please press the source key on the remote control or on the top of transmitter housing to confirm and save the new source name.




4. You will see the new source name on the OSD for both transmitter and receiver each time the source with the new name is selected.

Pairing new transmitter with existing receiver (optional)

Enter the Pairing mode for transmitter:

1. Unplug Power Adapter from the transmitter.
2. Press and hold down the Power button on the transmitter.
3. Plug in Power adapter to the transmitter.
4. Keep holding down the Power button on the transmitter until the power LED is blinking orange indicating that the transmitter has entered the Pairing mode.

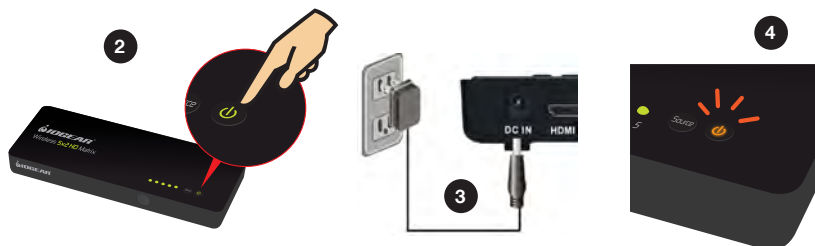

Use the same operation method of the receiver to enter the pairing mode.



Once the receiver enters the pairing mode, the OSD shows:

Searching...

Both transmitter and receiver will enter the Pairing mode and it will search and pair automatically. The OSD shows:

Adding GWHDS2...

Once the pairing is finished, both transmitter and receiver will re-boot and link to each other automatically.

Multiple Transmitter Selection

1. Verify that the power is removed from Transmitter 1. Press Transmitter No. key on the remote control and point it at Receiver 1.

OSD Displays:

Select Transmitter Number:

→ GWHDS52

→ GWHDS52



SETUP

Up to 4 transmitters may be detected. Press up / down and OK button on remote control for selection.

2. Enter SETUP menu. OSD Displays:

SETUP:

→ Add New Transmitter

→ Remove Transmitter

→ Modify Transmitter Name

↶ **Return**

3. Enter “Add New Transmitter” menu if you would like to add a Transmitter.

OSD Displays:

SEARCHING.....

Press transmitter no. key to escape
SEARCHING

During this period, press and hold the power down on Transmitter 2, and plug in power. Hold the power button down until the Power LED on Transmitter 2 start to blink orange which indicates that the Transmitter 2 has entered the “connecting” mode. After the receiver has found the new transmitter, the OSD Displays.

Select New Transmitter

→ GWHDS52

↶ **Return**

Once Transmitter 2 and Receiver 1 are connected and video is displayed, you may apply power to Transmitter 1. Receiver 1 will now see 2 transmitters and can be selected via the Transmitter No. button on the remote control. To add Transmitter 3 and 4, repeat steps 1 ~ 4.

Note – You may connect multiple transmitters but you may only have one receiver running at any given time. When Receiver 1 is connected to Transmitter 2, Receiver 2 will be disconnected and need to be re-paired to restore wireless video function with Transmitter 2.

4. Enter “Remove Transmitter” menu if you would like to remove a transmitter
OSD Displays:

Remove Transmitter:

→ GWHDS52

→ GWHDS52

↶ **Return**

Using the remote control, press the up/down arrow keys to select the transmitter to be removed and press OK.

5. Enter “Modify Transmitter Name” menu if you would like to modify a transmitter name
OSD shows:

Edit Transmitter name:

→ GWHDS52

→ GWHDS52

↶ **Return**

Using the remote control, press the up/down arrow keys to select the transmitter to have its name modified and press OK

Edit Transmitter name:

→ GWHDS52

↶ **Return** **IR Key=Delete**

↑ ↓ = A~Z+0~9 ⇐ ⇨ = cursor

Press the Up/Down keys on the remote to select alphabet characters; Press the Left/Right keys on the remote to move the cursor; Press IR key to back space.

Supported Resolution

If the SOURCE LED continues to blink in green (slower than “no signal” mode); OSD display:  , and there is no video displayed or the video quality suffers, it indicates that the video frame rate from your A/V source device is not supported. Ensure that the consumer timing of your HDMI device is compliant with the standard listed below:

2D Video Format Timings	Resolution	Support
Primary CEA Video Timing		
640x480p @ 59.94 / 60Hz	480p	YES
720x480p @ 59.94Hz		YES
720x480p @ 60Hz		YES
720x576p @ 50Hz	576p	YES
1280x720p @ 50Hz	720p	YES
1280x720p @ 59.94 / 60Hz		YES
1920x1080i @ 50Hz	1080i	YES
1920x1080i @ 59.94 / 60Hz		YES
1920x1080p @ 50Hz	1080p / 60	YES
1920x1080p @ 59.94 / 60Hz		YES
Secondary CEA Video Timing		
1920x1080p @ 23.98 / 24Hz	1080p / 24	YES
1920x1080p @ 25Hz		YES
1920x1080p @ 29.97 / 30Hz		YES
VESA Timing (DVI only)		
640x480 @ 59.94 / 72.809Hz	VGA	YES
800x600 @ 60.317 / 72.188Hz	SVGA	YES
1024x768 @ 60 / 70.069Hz	XGA	YES
1280x768 @ 60 Hz	WXGA	YES
1280x1024 @ 60 Hz	SXGA	YES

If the Source/Status LED continues to blink green (slower than “no signal” mode); or OSD display shows **3D**, please check that both TVs connected to the transmitter and receiver support 3D video format and try to switch the 3D video format to one of the 3D timings listed below.

Mandatory CEA 3D Video Format Timings	Support
1280x720p @ 50Hz Top-and-Bottom	Yes
1280x720p @ 50Hz Frame packing	Yes
1280x720p @ 59.94 / 60Hz Top-and-Bottom	Yes
1280x720p @ 59.94 / 60Hz Frame packing	Yes
1920x1080i @ 50Hz Side-by-Side (Half)	Yes
1920x1080i @ 59.94 / 60Hz Side-by-Side (Half)	Yes
1920x1080p @ 23.98 / 24Hz Top-and-Bottom	Yes
1920x1080p @ 23.98 / 24Hz Frame packing	Yes

Audio Bit Rate Support

- Digital Audio from HDMI inputs: Up to 6Mbit/s bit-rate support.
- Support AC3 and DTS.
- 2-channel PCM: 16~24 bits audio sample with 32~96KHz sampling rate as below:

2channel PCM	32KHz	44.1KHz	48KHz	96KHz
16 bits	YES	YES	YES	YES
24 bits	YES	YES	YES	YES

Specifications

Supported Video Resolutions	HDMI Input	3D, 1080p, 1080i, 720p, 576p, 480p	
	Component Input	1080i, 720p, 576p, 576i, 480p, 480i	
Supported Audio Formats	Digital Audio	Up to 6 Mbps AC3 and DTS	
	Analog Audio	48KHz and 24-bit Per Sample	
Transmission Distance		The maximum video transmission range is 100ft (The minimum range is 6.5ft). Line of sight (LOS) scenarios	
Remote Control Range		30 feet LOS	
System Latency		Very low latency (<1ms)	
Antenna		High Performance Internal Antennas	
Operating Frequencies		4.9~ 5.9GHz (Include non-DFS and DFS Frequency Bands)	
Power Supply		100~ 240V AC in, 5V DC out Power Adaptor	
Operating Temperature		0~40°C	
Interfaces		Transmitter (Tx)	Receiver (Rx)
A/V Interfaces	HDMI Input	Four (Type A)	-
	Component Input	One w/ specific adapter cable	
	HDMI Output	One (Type A)	One (Type A)
Control Signal Interfaces	IR Sensor	YES	YES
	IR Blaster Extender	2.5mm Jack	-
	IR Sensor Extender	-	2.5mm Jack
Power Interface	Power Input	5V DC Jack	5V mini USB
Switches	Power Switch	YES (One Push Button)	YES (One Push Button)
	Source Switch	YES (One Push Button)	YES (One Push Button)
LEDs	Power LED	1 x LED (Two Tone: Green/Red)	1 x LED (Two Tone: Green/Red)
	Source LED (Tx) Status LED (Rx)	5 x Green LEDs	2 x Green LEDs: Video signal, Wireless signal
Dimensions inches (mm)		9.2"(w) x 3.8"(h) x 1.28" (h) (234mm x 96.5mm x 32.5mm)	3.74"(w) x 3.74"(l) x 1.4"(h) (95mm x 95mm x 35.5mm)

Troubleshooting

1. **Problem:** The power indicator LED doesn't light up.

Solution:

Check the power adapters of the Transmitter/Receiver to see if they are properly inserted into a functioning power outlet.

2. **Problem:** No video is displayed on your TV screen.

Solution:

- Verify that the proper cables have been selected and installed between the transmitter input and your High-Definition device output
- On your TV side (connected to the Receiver), select the HDMI as input source.
- Verify the status of POWER LED and SOURCE/Status LED indicator as below:

Power LED Flashing in Green OSD displayed: (4 levels looping) 	• Ensure the transmission range between the transmitter and the receiver is NOT over 100 feet (LOS - line of sight) transmission distance. • Try to move the transmitter closer to the receiver.
POWER LED in solid Green + Slow and Flashing SOURCE LED OSD displayed:  	• Ensure your video resolution and frame rate is recognized, supported, and within the transmission range. • Connect the source device to your TV to check and modify the video format compatibility. • Check if the video resolution from your display is set to 1080p, 1080i, 720p, 576p, or 480p resolution. Please refer page 26 for the detail supported Resolution.
POWER LED in solid Green status LED Flash Quickly OSD displayed :  	• Ensure the proper cables are connected between the transmitter and your AV source devices. • Ensure your source devices connected to the transmitter are powered on. • Ensure the proper cables are connected between the receiver and your 2nd HDTV near the receiver.

3. **Problem:** Poor picture quality or intermittent video

Solutions:

- Check if your video resolution with HDMI input from your device is either 1080p, 1080i, 720p, 576p, or 480p. Please refer to page 26 where the video frame rate from your device GWHDS52 can support is defined.
- Ensure the transmission distance is less than 100 feet (LOS)
- Barriers - Consider an installation plan that has the least numbers of barriers (walls, panels, beams) possible between the transmitter and receiver.

*Distances, quality and signal may vary depending on environment; solid objects such as steel, concrete and brick may view shorter distances or complete loss of signal

4. Problem: No audio

Solution:

- Check your TV's volume is properly set and not set in "MUTE" mode.
- Check if your source player's audio volume has been turned up..
- Ensure the bit rate of audio from the source device can be supported by GWHDM52. Please refer to the details in page 27 Audio Bit Rate Support.

5. Problem: IR Blaster can't control Source device.

Solution:

- Check where is IR sensor is located on the Source device. Make sure that the IR Blaster sensor is close and straight in front of the Source device's IR sensor. Please refer Installation, step 3 for reference setup.
- Change IR Blaster frequency to meet Source device's requirement. See the page 14 for the IR blaster frequency switch.

6. Problem: No 3D video output. OSD displayed:

Solutions:

OSD display: TX  or/and RX 

- Check both of TVs (includingTx and Rx side) should support 3D video format. If either one of the TVs only supports 2D format, then 3D output might not be supported.
- If user wants to display 3D video on HDTV which supported 3D video, please turn off the 2D HDTV and RE-power On the 3D HDTV. Then set the source player to 3D video format output for the 3D display.
- Check the video output setting of Source player (ex. Blu-ray Disc, PS3..etc.). If the video output setting of Source player is 3D video format, it might produce a display on the HDTV which not supports 3D format.
- 3D video format do not support on current equipments status. If user wants to display 3D video on HDTV which supported 3D video, please turn off 2D HDTV and RE-power on 3D HDTV. Then set the source player to 3D video format output for the 3D display.
- 3D video format do not support on current equipments status. Please switch the 3D video format to HDMI 1.4a 3D format. Please check page 27 for a list of all supported 3D format of this product.

Federal Communications Commission (FCC) Statement

The user is cautioned that this device should be used only as specified within this manual to meet RF exposure requirements. Use of this device in a manner inconsistent with this manual could lead to excessive RF exposure conditions.

Limited Warranty

WE'RE HERE TO HELP YOU! NEED ASSISTANCE SETTING UP THIS PRODUCT?

Make sure you:

1. Visit www.iogear.com for more product information
2. Visit www.iogear.com/support for live help and product support

Warranty Information

This product carries a 1 Year Limited Warranty. For the terms and conditions of this warranty, please go to <http://www.iogear.com/support/warranty>

Register online at <http://www.iogear.com/register>

Important Product Information

Product Model _____

Serial Number _____

Contact

IOGEAR

Toll Free 866-9-IOGEAR (USA)

Phone: 949-453-8782

19641 Da Vinci, Foothill Ranch, CA 92610

www.iogear.com

support@iogear.com

