

BG96-NA

Hardware Design

LTE Module Series

Rev. BG96-NA_Hardware_Design_V1.0

Date: 2017-04-28



Our aim is to provide customers with timely and comprehensive service. For any assistance, please contact our company headquarters:

Quectel Wireless Solutions Co., Ltd.

Office 501, Building 13, No.99, Tianzhou Road, Shanghai, China, 200233

Tel: +86 21 5108 6236

Email: info@quectel.com

Or our local office. For more information, please visit:

<http://www.quectel.com/support/salesupport.aspx>

For technical support, or to report documentation errors, please visit:

<http://www.quectel.com/support/techsupport.aspx>

Or Email to: Support@quectel.com

GENERAL NOTES

QUECTEL OFFERS THE INFORMATION AS A SERVICE TO ITS CUSTOMERS. THE INFORMATION PROVIDED IS BASED UPON CUSTOMERS' REQUIREMENTS. QUECTEL MAKES EVERY EFFORT TO ENSURE THE QUALITY OF THE INFORMATION IT MAKES AVAILABLE. QUECTEL DOES NOT MAKE ANY WARRANTY AS TO THE INFORMATION CONTAINED HEREIN, AND DOES NOT ACCEPT ANY LIABILITY FOR ANY INJURY, LOSS OR DAMAGE OF ANY KIND INCURRED BY USE OF OR RELIANCE UPON THE INFORMATION. ALL INFORMATION SUPPLIED HEREIN IS SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

COPYRIGHT

THE INFORMATION CONTAINED HERE IS PROPRIETARY TECHNICAL INFORMATION OF QUECTEL CO., LTD. TRANSMITTING, REPRODUCTION, DISSEMINATION AND EDITING OF THIS DOCUMENT AS WELL AS UTILIZATION OF THE CONTENT ARE FORBIDDEN WITHOUT PERMISSION. OFFENDERS WILL BE HELD LIABLE FOR PAYMENT OF DAMAGES. ALL RIGHTS ARE RESERVED IN THE EVENT OF A PATENT GRANT OR REGISTRATION OF A UTILITY MODEL OR DESIGN.

Copyright © Quectel Wireless Solutions Co., Ltd. 2017. All rights reserved.

About the Document

History

Revision	Date	Author	Description
1.0	2017-04-28	Allen WANG/ Daryl DU	Initial

Contents

About the Document	2
Contents	3
Table Index	5
Figure Index	6
1 Introduction	7
1.1. Safety Information	8
2 Product Concept	12
2.1. General Description	12
2.2. Key Features	13
2.3. Functional Diagram	14
2.4. Evaluation Board	15
3 Application Interfaces	16
3.1. General Description	16
3.2. Pin Assignment	17
3.3. Pin Description	18
3.4. Operating Modes	23
3.5. Power Saving	23
3.5.1. Sleep Mode	23
3.5.1.1. UART Application	24
3.5.1.2. USB Application with USB Remote Wakeup Function	24
3.5.1.3. USB Application with USB Suspend/Resume and RI Function	25
3.5.1.4. USB Application without USB Suspend Function	26
3.5.2. Airplane Mode	27
3.6. Power Supply	27
3.6.1. Power Supply Pins	27
3.6.2. Decrease Voltage Drop	28
3.6.3. Monitor the Power Supply	29
3.7. Turn on and off Scenarios	29
3.7.1. Turn on Module Using the PWRKEY	29
3.7.2. Turn off Module	31
3.7.2.1. Turn off Module Using the PWRKEY Pin	31
3.7.2.2. Turn off Module Using AT Command	31
3.8. Reset the Module	31
3.9. (U)SIM Card Interfaces	33
3.10. USB Interface	35
3.11. UART Interfaces	37
3.12. I2C Interfaces	39
3.13. Network Status Indication	40
3.14. STATUS	41
3.15. Behavior of the RI	41

3.16.	USB_BOOT Interface.....	42
4	GNSS Receiver	43
4.1.	General Description	43
4.2.	GNSS Performance	43
4.3.	Layout Guidelines	44
5	Antenna Interfaces.....	45
5.1.	MainAntenna Interface	45
5.1.1.	Pin Definition.....	45
5.1.2.	Operating Frequency	45
5.1.3.	Reference Design of RF Antenna Interface	45
5.1.4.	Reference Design of RF Layout.....	46
5.2.	GNSS Antenna Interface.....	48
5.3.	Antenna Installation	49
5.3.1.	Antenna Requirements	49
5.3.2.	Recommended RF Connector for Antenna Installation	50
6	Electrical, Reliability and Radio Characteristics	52
6.1.	Absolute Maximum Ratings	52
6.2.	Power Supply Ratings.....	52
6.3.	Operating Temperature	53
6.4.	Current Consumption	53
6.5.	RF Output Power	54
6.6.	RF Receiving Sensitivity	54
6.7.	Electrostatic Discharge	54
7	Mechanical Dimensions.....	55
7.1.	Mechanical Dimensions of the Module.....	55
7.2.	Recommended Footprint.....	57
7.3.	Design Effect Drawings of the Module	58
8	Storage, Manufacturing and Packaging	59
8.1.	Storage	59
8.2.	Manufacturing and Welding	60
8.3.	Packaging	60
9	Appendix A References	61
10	Appendix B GPRS Coding Schemes	65
11	Appendix C GPRS Multi-slot Classes.....	66
12	Appendix D EDGE Modulation and Coding Schemes.....	67

Table Index

TABLE 1: FREQUENCY BANDS OF BG96-NA MODULE.....	12
TABLE 2: KEY FEATURES OF BG96-NA.....	13
TABLE 3: I/O PARAMETERS DEFINITION.....	18
TABLE 4: PIN DESCRIPTION.....	18
TABLE 5: OVERVIEW OF OPERATING MODES.....	23
TABLE 6: VBAT AND GND PINS.....	28
TABLE 7: PWRKEY PIN DESCRIPTION.....	29
TABLE 8: RESET_N PIN DESCRIPTION.....	32
TABLE 9: PIN DEFINITION OF THE (U)SIM CARD INTERFACES.....	33
TABLE 10: PIN DESCRIPTION OF USB INTERFACE.....	35
TABLE 11: PIN DEFINITION OF UART1 INTERFACE.....	37
TABLE 12: PIN DEFINITION OF UART2 INTERFACE.....	37
TABLE 13: LOGIC LEVELS OF DIGITAL I/O.....	38
TABLE 14: PIN DEFINITION OF I2C INTERFACES.....	39
TABLE 15: PIN DEFINITION OF NETWORK STATUS INDICATOR.....	40
TABLE 16: WORKING STATE OF THE NETWORK STATUS INDICATOR.....	40
TABLE 17: PIN DEFINITION OF STATUS.....	41
TABLE 18: DEFAULT BEHAVIOR OF RI.....	42
TABLE 19: PIN DEFINITION OF USB_BOOT INTERFACE.....	42
TABLE 20: GNSS PERFORMANCE.....	43
TABLE 21: PIN DEFINITION OF THE RF ANTENNA INTERFACE.....	45
TABLE 22: MODULE OPERATING FREQUENCIES.....	45
TABLE 23: PIN DEFINITION OF GNSS ANTENNA INTERFACE.....	48
TABLE 24: GNSS FREQUENCY.....	48
TABLE 25: MAIN ANTENNA REQUIREMENTS.....	49
TABLE 26: ABSOLUTE MAXIMUM RATINGS.....	52
TABLE 27: POWER SUPPLY RATINGS.....	52
TABLE 28: OPERATING TEMPERATURE.....	53
TABLE 29: CONDUCTED RF OUTPUT POWER.....	54
TABLE 30: BG96-NA CONDUCTED RF RECEIVING SENSITIVITY.....	54
TABLE 31: RELATED DOCUMENTS.....	61
TABLE 32: TERMS AND ABBREVIATIONS.....	61
TABLE 33: DESCRIPTION OF DIFFERENT CODING SCHEMES.....	65
TABLE 34: GPRS MULTI-SLOT CLASSES.....	66
TABLE 35: EDGE MODULATION AND CODING SCHEMES.....	67

Figure Index

FIGURE 1: FUNCTIONAL DIAGRAM	15
FIGURE 2: PIN ASSIGNMENT (TOP VIEW)	17
FIGURE 3: SLEEP MODE APPLICATION VIA UART	24
FIGURE 4: SLEEP MODE APPLICATION WITH USB REMOTE WAKEUP	25
FIGURE 5: SLEEP MODE APPLICATION WITH RI	26
FIGURE 6: SLEEP MODE APPLICATION WITHOUT SUSPEND FUNCTION	26
FIGURE 7: STAR STRUCTURE OF THE POWER SUPPLY	28
FIGURE 8: TURN ON THE MODULE USING DRIVING CIRCUIT	29
FIGURE 9: TURN ON THE MODULE USING KEYSTROKE	30
FIGURE 10: TIMING OF TURNING ON MODULE	30
FIGURE 11: TIMING OF TURNING OFF MODULE.....	31
FIGURE 12: REFERENCE CIRCUIT OF RESET_N BY USING DRIVING CIRCUIT	32
FIGURE 13: REFERENCE CIRCUIT OF RESET_N BY USING BUTTON	32
FIGURE 14: TIMING OF RESETTING MODULE	33
FIGURE 15: REFERENCE CIRCUIT OF (U)SIM CARD INTERFACE WITH AN 8-PIN (U)SIM CARD CONNECTOR.....	34
FIGURE 16: REFERENCE CIRCUIT OF (U)SIM CARD INTERFACE WITH A 6-PIN (U)SIM CARD CONNECTOR.....	34
FIGURE 17: REFERENCE CIRCUIT OF USB APPLICATION	36
FIGURE 18: REFERENCE CIRCUIT WITH TRANSLATOR CHIP	38
FIGURE 19: REFERENCE CIRCUIT WITH TRANSISTOR CIRCUIT	39
FIGURE 20: REFERENCE CIRCUIT OF THE NETWORK INDICATOR.....	40
FIGURE 21: REFERENCE CIRCUIT OF THE STATUS	41
FIGURE 22: REFERENCE CIRCUIT OF USB_BOOT INTERFACE	42
FIGURE 23: REFERENCE CIRCUIT OF RF ANTENNA INTERFACE	46
FIGURE 24: MICROSTRIP LINE DESIGN ON A 2-LAYER PCB.....	46
FIGURE 25: COPLANAR WAVEGUIDE LINE DESIGN ON A 2-LAYER PCB.....	47
FIGURE 26: COPLANAR WAVEGUIDE LINE DESIGN ON A 4-LAYER PCB (LAYER 3 AS REFERENCE GROUND).....	47
FIGURE 27: COPLANAR WAVEGUIDE LINE DESIGN ON A 4-LAYER PCB (LAYER 4 AS REFERENCE GROUND).....	47
FIGURE 28: REFERENCE CIRCUIT OF GNSS ANTENNA INTERFACE.....	49
FIGURE 29: DIMENSIONS OF THE UF.L-R-SMT CONNECTOR (UNIT: MM)	50
FIGURE 30: MECHANICALS OF UF.L-LP CONNECTORS	50
FIGURE 31: SPACE FACTOR OF MATED CONNECTOR (UNIT: MM)	51
FIGURE 32: MODULE TOP AND SIDE DIMENSIONS.....	55
FIGURE 33: MODULE BOTTOM DIMENSIONS (BOTTOM VIEW)	56
FIGURE 34: RECOMMENDED FOOTPRINT (TOP VIEW)	57
FIGURE 35: TOP VIEW OF THE MODULE	58
FIGURE 36: BOTTOM VIEW OF THE MODULE.....	58
FIGURE 37: REFLOW SOLDERING THERMAL PROFILE.....	60

1 Introduction

This document defines the BG96-NA module and describes its air interface and hardware interface which are connected with your application.

This document can help you quickly understand module interface specifications, electrical and mechanical details, etc. Associated with application note and user guide, you can use BG96-NA module to design and set up mobile applications easily.

1.1. Safety Information

The following safety precautions must be observed during all phases of the operation, such as usage, service or repair of any cellular terminal or mobile incorporating BG96-NA module. Manufacturers of the cellular terminal should send the following safety information to users and operating personnel, and incorporate these guidelines into all manuals supplied with the product. If not so, Quectel assumes no liability for the customer's failure to comply with these precautions.



Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a mobile while driving (even with a handsfree kit) causes distraction and can lead to an accident. You must comply with laws and regulations restricting the use of wireless devices while driving.



Switch off the cellular terminal or mobile before boarding an aircraft. Make sure it is switched off. The operation of wireless appliances in an aircraft is forbidden, so as to prevent interference with communication systems. Consult the airline staff about the use of wireless devices on boarding the aircraft, if your device offers an Airplane Mode which must be enabled prior to boarding an aircraft.



Switch off your wireless device when in hospitals, clinics or other health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.



Cellular terminals or mobiles operating over radio frequency signal and cellular network cannot be guaranteed to connect in all conditions, for example no mobile fee or with an invalid (U)SIM card. While you are in this condition and need emergent help, please remember using emergency call. In order to make or receive a call, the cellular terminal or mobile must be switched on and in a service area with adequate cellular signal strength.



Your cellular terminal or mobile contains a transmitter and receiver. When it is ON, it receives and transmits radio frequency energy. RF interference can occur if it is used close to TV set, radio, computer or other electric equipment.



In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other cellular terminals. Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles such as grain, dust or metal powders, etc.

1.2 FCC Certification Requirements.

According to the definition of mobile and fixed device is described in Part 2.1091(b), this device is a mobile device.

And the following conditions must be met:

1. This Modular Approval is limited to OEM installation for mobile and fixed applications only. The antenna installation and operating configurations of this transmitter, including any applicable source-based time-averaging duty factor, antenna gain and cable loss must satisfy MPE categorical Exclusion Requirements of 2.1091.

2. The EUT is a mobile device; maintain at least a 20 cm separation between the EUT and the user's body and must not transmit simultaneously with any other antenna or transmitter.

3.A label with the following statements must be attached to the host end product: This device contains FCC ID: XMR201705BG96NA

4.To comply with FCC regulations limiting both maximum RF output power and human exposure to RF radiation, maximum antenna gain (including cable loss) must not exceed:

☐ LTE Band2: $\leq 8.00\text{dBi}$

☐ LTE Band4: $\leq 5.00\text{dBi}$

☐ LTE Band12: $\leq 8.734\text{dBi}$

☐ LTE Band13: $\leq 9.173\text{dBi}$

5. This module must not transmit simultaneously with any other antenna or transmitter

6. The host end product must include a user manual that clearly defines operating requirements and conditions that must be observed to ensure compliance with current FCC RF exposure guidelines.

For portable devices, in addition to the conditions 3 through 6 described above, a separate approval is required to satisfy the SAR requirements of FCC Part 2.1093

If the device is used for other equipment that separate approval is required for all other operating configurations, including portable configurations with respect to 2.1093 and different antenna configurations.

For this device, OEM integrators must be provided with labeling instructions of finished products.

Please refer to KDB784748 D01 v07, section 8. Page 6/7 last two paragraphs:

A certified modular has the option to use a permanently affixed label, or an electronic label. For a permanently affixed label, the module must be labeled with an FCC ID - Section 2.926 (see 2.2 Certification (labeling requirements) above). The OEM manual must provide clear instructions explaining to the OEM the labeling requirements, options and OEM user manual instructions that are required (see next paragraph).

For a host using a certified modular with a standard fixed label, if (1) the module's FCC ID is not visible when installed in the host, or (2) if the host is marketed so that end users do not have straightforward commonly used methods for access to remove the module so that the FCC ID of the module is visible; then an additional permanent label referring to the enclosed module: "Contains Transmitter Module FCC ID: XMR201705BG96NA" or "Contains FCC ID: XMR201705BG96NA" must be used. The host OEM user manual must also contain clear instructions on how end users can find and/or access the module and the FCC ID.

The final host / module combination may also need to be evaluated against the FCC Part 15B criteria for unintentional radiators in order to be properly authorized for operation as a Part 15 digital device.

The user's manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. In cases where the manual is provided only in a form other than paper, such as on a computer disk or over the Internet, the information required by this section may be included in the manual in that alternative form, provided the user can reasonably be expected to have the capability to access information in that form.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

To ensure compliance with all non-transmitter functions the host manufacturer is responsible for ensuring compliance with the module(s) installed and fully operational. For example, if a host was previously authorized as an unintentional radiator under the Declaration of Conformity procedure without a transmitter certified module and a module is added, the host manufacturer is responsible for ensuring that the after the module is installed and operational the host continues to be compliant with the Part 15B unintentional radiator requirements

2 Product Concept

2.1. General Description

BG96-NA module is an embedded IoT (LTE CatM1) wireless communication module without receive diversity. It supports Half-duplex LTE-FDD wireless communication, which provides data connectivity on LTE-FDD networks. The following table shows the frequency bands of BG96-NA module.

Table 1: Frequency Bands of BG96-NA Module

Module	LTE Bands	GSM	Rx-diversity	GNSS (Optional)
BG96-NA	FDD: B2/B4/B12/B13	Not Supported	Not Supported	GPS, GLONASS, BeiDou/Compass, Galileo, QZSS

With a compact profile of 22.5mm × 26.5mm × 2.3mm, BG96-NA can meet almost all requirements for M2M applications such as automotive, metering, tracking system, security, router, wireless POS, mobile computing device, PDA phone, tablet PC, etc.

BG96-NA is an SMD type module which can be embedded into application through its 102 LGA pads.

BG96-NA supports internet service protocols like TCP, UDP and PPP. Extended AT commands have been developed for customers to use these internet service protocols easily.

2.2. Key Features

The following table describes the detailed features of BG96-NA module.

Table 2: Key Features of BG96-NA

Features	Details
Power Supply	Supply voltage: 3.3V~4.3V Typical supply voltage: 3.8V
Transmitting Power	Class 3 (23dBm±2.7dB) for LTE-FDD bands
LTE Features	Support up to LTE Cat M1 Support 1.08MHz RF bandwidth Support SISO in DL direction Cat M1: Max. 375kbps (DL)/375kbps (UL)
Internet Protocol Features*	Support TCP/UDP/PPP protocols Support PAP (Password Authentication Protocol) and CHAP (Challenge Handshake Authentication Protocol) protocols which are usually used for PPP connections
SMS*	Text and PDU mode Point to point MO and MT SMS cell broadcast SMS storage: ME by default
(U)SIM Interface	Support (U)SIM card: 1.8V, 3.0V
USB Interface	Compliant with USB 2.0 specification (slave only); the data transfer rate can reach up to 480Mbps Used for AT command communication, data transmission, GNSS NMEA output, software debugging and firmware upgrade Support USB drivers for Windows XP, Windows Vista, Windows 7, Windows 8/8.1, Windows 10, Windows CE 5.0/6.0/7.0*, Linux 2.6/3.x/4.1, Android 4.x/5.x/6.0
UART Interface	UART1: Used for AT command communication and data transmission Baud rate reach up to 3000000bps; 115200bps by default Support RTS and CTS hardware flow control UART2: Used for module debugging and log output 115200bps baud rate
AT Commands	3GPP TS 27.007 and 3GPP TS 27.005 AT commands, as well as Quectel enhanced AT commands
Network Indication	OneNETLIGHT pin for network connectivity status indication

Antenna Interfaces	Including main antenna (ANT_MAIN) and GNSS antenna (ANT_GNSS) interfaces
Physical Characteristics	Size: 22.5mm ×26.5mm×2.3mm Weight: 3.1g
Temperature Range	Operation temperature range: -35°C ~ +75°C ¹⁾ Extended temperature range: -40°C ~ +85°C ²⁾
Firmware Upgrade	USB interface and DFOTA*
RoHS	All hardware components are fully compliant with EU RoHS directive

NOTES

- ¹⁾ Within operation temperature range, the module is 3GPP compliant.
- ²⁾ Within extended temperature range, the module remains the ability to establish and maintain SMS, data transmission, etc. There is no unrecoverable malfunction. Only one or more parameters like P_{out} might reduce in their value and exceed the specified tolerances. When the temperature returns to the normal operating temperature levels, the module will meet 3GPP compliant again.
- “*” means under development.

2.3. Functional Diagram

The following figure shows a block diagram of BG96-NA and illustrates the major functional parts.

- Power management
- Baseband
- DDR+NAND flash
- Radio frequency
- Peripheral interfaces

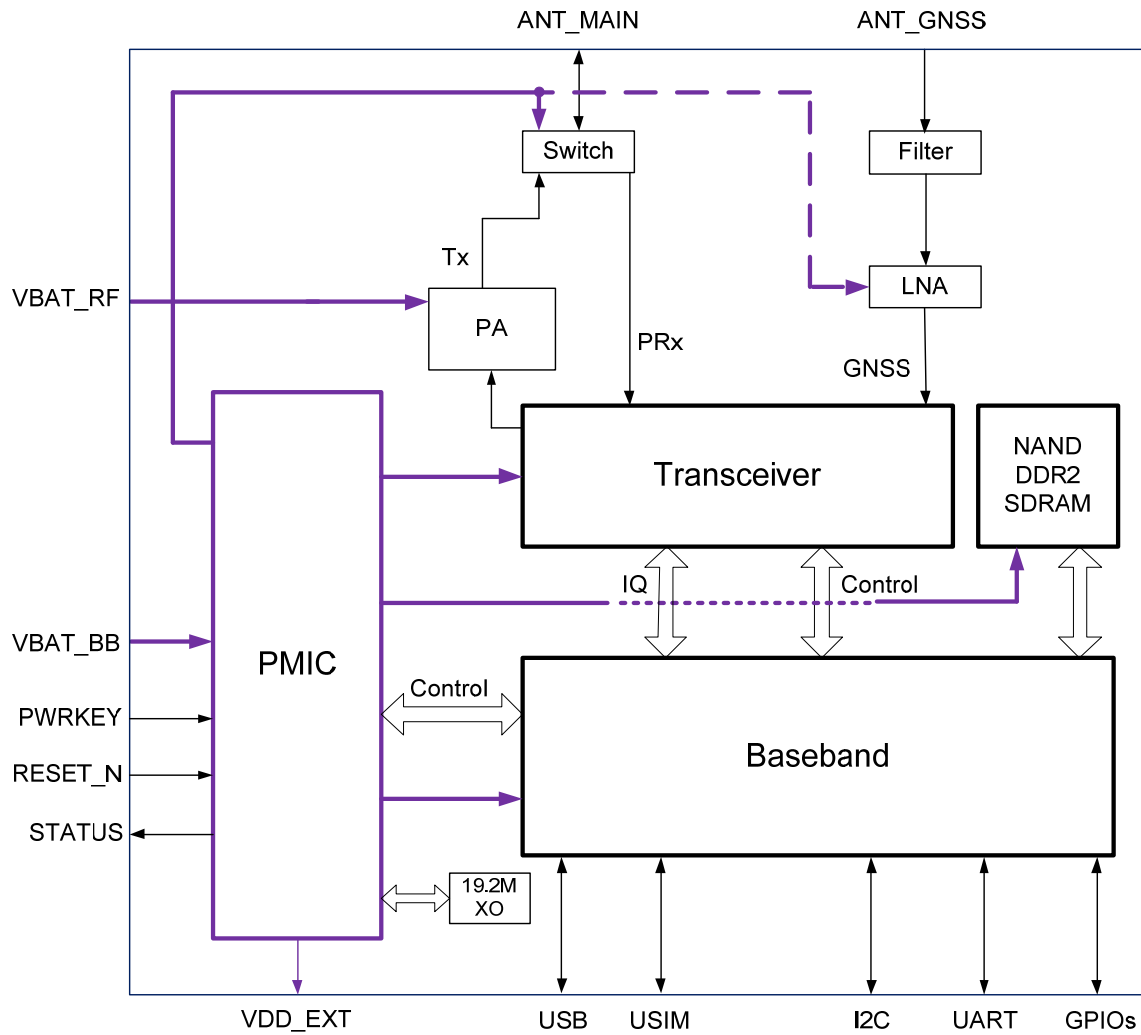


Figure 1: Functional Diagram

NOTE

“*” means under development.

2.4. Evaluation Board

In order to help customers develop applications conveniently with BG96-NA, Quectel supplies the evaluation board (EVB), USB data cable, earphone, antenna and other peripherals to control or test the module.

3 Application Interfaces

3.1. General Description

BG96-NA is equipped with 62-pin 1.1mm pitch SMT pads plus 40-pin ground pads and reserved pads that can be connected to customers' cellular application platform. The subsequent chapters will provide detailed description of interfaces listed below:

- Power supply
- (U)SIM card interfaces
- USB interface
- UART interfaces
- Network status indication
- USB_BOOT interface

3.2. Pin Assignment

The following figure shows the pin assignment of the BG96-NA module.

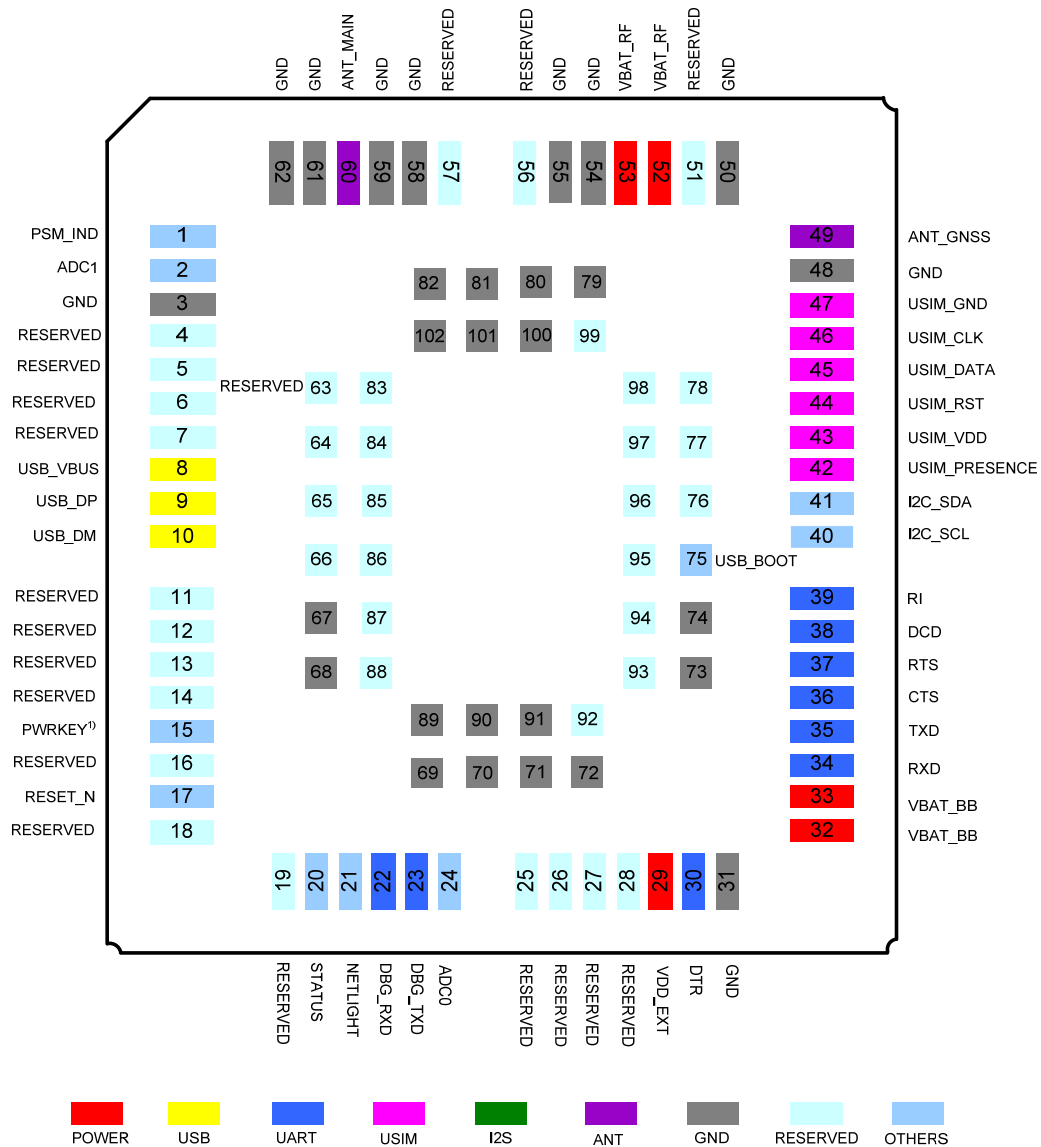


Figure 2: Pin Assignment (Top View)

NOTES

1. Keep all RESERVED pins and unused pins unconnected.
2. GND pads should be connected to ground in the design.
3. ¹⁾PWRKEY output voltage is 0.8V because of the diode drop in the Qualcomm chipset.
4. "*" means under development.

3.3. Pin Description

The following tables show the pin definition and description of BG96-NA.

Table 3: I/O Parameters Definition

Type	Description
IO	Bidirectional
DI	Digital input
DO	Digital output
PI	Power input
PO	Power output
AI	Analog input
AO	Analog output
OD	Open drain

Table 4: Pin Description

Power Supply					
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
VBAT_BB	32, 33	PI	Power supply for module baseband part.	Vmax=4.3V Vmin=3.3V Vnorm=3.8V	
VBAT_RF	52,53	PI	Power supply for module RF part.	Vmax=4.3V Vmin=3.3V Vnorm=3.8V	
VDD_EXT	29	PO	Provide 1.8V for external circuit.	Vnorm=1.8V I _O max=50mA	Power supply for external GPIO's pull up circuits.
GND	3, 31, 48, 50, 54, 55, 58, 59, 61, 62, 67~74, 79~82, 89~91, 100~102		Ground		

Turn on/off

Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
PWRKEY	15	DI	Turnon/off the module	V _{IH} max=2.1V V _{IH} min=1.3V V _{IL} max=0.5V	The output voltage is 0.8V because of the diode drop in the Qualcomm chipset.
RESET_N	17	DI	Reset the module	V _{IH} max=2.1V V _{IH} min=1.3V V _{IL} max=0.5V	If unused, keep this pin open.

Status Indication

Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
STATUS	20	OD	Indicate the module's operating status.	V _{OH} min=1.35V V _{OL} max=0.45V	1.8V power domain. If unused, keep this pin open.
NETLIGHT	21	DO	Indicate the module's network activity status.	V _{OH} min=1.35V V _{OL} max=0.45V	1.8V power domain. If unused, keep it open.

USB Interface

Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
USB_VBUS	8	PI	USB detection	V _{max} =5.25V V _{min} =3.0V V _{norm} =5.0V	
USB_DP	9	IO	USB differential data bus (+)	Compliant with USB 2.0 standard specification.	Require differential impedance of 90ohm.
USB_DM	10	IO	USB differential data bus (-)	Compliant with USB 2.0 standard specification.	Require differential impedance of 90ohm.

(U)SIM Interface

Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
USIM_GND	47		Specified ground for (U)SIM card		
USIM_VDD	43	PO	Power supply for (U)SIM card	For 1.8V(U)SIM: V _{max} =1.9V V _{min} =1.7V	Either 1.8V or 3.0V is supported by the module automatically.

				For 3.0V(U)SIM: $V_{max}=3.05V$ $V_{min}=2.7V$ $I_{Omax}=50mA$	
USIM_DATA	45	IO	Data signal of (U)SIM card	For 1.8V (U)SIM: $V_{ILmax}=0.6V$ $V_{IHmin}=1.2V$ $V_{OLmax}=0.45V$ $V_{OHmin}=1.35V$ For 3.0V (U)SIM: $V_{ILmax}=1.0V$ $V_{IHmin}=1.95V$ $V_{OLmax}=0.45V$ $V_{OHmin}=2.55V$	
USIM_CLK	46	DO	Clock signal of (U)SIM card	For 1.8V (U)SIM: $V_{OLmax}=0.45V$ $V_{OHmin}=1.35V$ For 3.0V (U)SIM: $V_{OLmax}=0.45V$ $V_{OHmin}=2.55V$	
USIM_RST	44	DO	Reset signal of (U)SIM card	For 1.8V (U)SIM: $V_{OLmax}=0.45V$ $V_{OHmin}=1.35V$ For 3.0V (U)SIM: $V_{OLmax}=0.45V$ $V_{OHmin}=2.55V$	
USIM_PRESENCE	42	DI	(U)SIM card insertion detection	$V_{ILmin}=-0.3V$ $V_{ILmax}=0.6V$ $V_{IHmin}=1.2V$ $V_{IHmax}=2.0V$	1.8V power domain. If unused, keep it open.

UART1 Interface

Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
RI	39	DO	Ring indicator	$V_{OLmax}=0.45V$ $V_{OHmin}=1.35V$	1.8V power domain. If unused, keep it open.
DCD	38	DO	Data carrier detection	$V_{OLmax}=0.45V$ $V_{OHmin}=1.35V$	1.8V power domain. If unused, keep it open.
RTS	37	DI	Request to send	$V_{ILmin}=-0.3V$ $V_{ILmax}=0.6V$	1.8V power domain. If unused, keep it open.

				$V_{IHmin}=1.2V$ $V_{IHmax}=2.0V$	
CTS	36	DO	Clear to send	$V_{OLmax}=0.45V$ $V_{OHmin}=1.35V$	1.8V power domain. If unused, keep it open.
TXD	35	DO	Transmit data	$V_{OLmax}=0.45V$ $V_{OHmin}=1.35V$	1.8V power domain. If unused, keep it open.
RXD	34	DI	Receive data	$V_{ILmin}=-0.3V$ $V_{ILmax}=0.6V$ $V_{IHmin}=1.2V$ $V_{IHmax}=2.0V$	1.8V power domain. If unused, keep it open.
DTR	30	DI	Data terminal ready, sleep mode control.	$V_{ILmin}=-0.3V$ $V_{ILmax}=0.6V$ $V_{IHmin}=1.2V$ $V_{IHmax}=2.0V$	1.8V power domain. Pull-up by default. Low level wakes up the module. If unused, keep it open.

UART2 Interface

Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
DBG_TXD	23	DO	Transmit data	$V_{OLmax}=0.45V$ $V_{OHmin}=1.35V$	1.8V power domain. If unused, keep it open.
DBG_RXD	22	DI	Receive data	$V_{ILmin}=-0.3V$ $V_{ILmax}=0.6V$ $V_{IHmin}=1.2V$ $V_{IHmax}=2.0V$	1.8V power domain. If unused, keep it open.

I2C Interface

Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
I2C_SCL	40	OD	I2C serial clock. Used for external codec.		External pull-up resistor is required. 1.8V only. If unused, keep it open.
I2C_SDA	41	OD	I2C serial data. Used for external codec.		External pull-up resistor is required. 1.8V only. If unused, keep it open.

RF Interface

Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
ANT_MAIN	60	IO	Main antenna interface	50Ωimpedance	

ANT_GNSS	49	AI	GNSS antenna interface	50Ω impedance	If unused, keep it open.
Other Pins					
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
PSM_IND*	1	DO	Power saving mode indicator	V _{IL} min=-0.3V V _{IL} max=0.6V V _{IH} min=1.2V V _{IH} max=2.0V	1.8V power domain. If unused, keep it open.
USB_BOOT	75	DI	Force the module to boot from USB port.	V _{IL} min=-0.3V V _{IL} max=0.6V V _{IH} min=1.2V V _{IH} max=2.0V	1.8V power domain. If unused, keep it open.
ADC Interface					
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
ADC1	2	AI	General purpose analog to digital converter	Voltage range: 0.3V to VBAT_BB	If unused, keep it open.
ADC0	24	AI	General purpose analog to digital converter	Voltage range: 0.3V to VBAT_BB	If unused, keep it open.
RESERVED Pins					
Pin Name	Pin No.	I/O	Description	DC Characteristics	Comment
RESERVED	4~7, 11~14, 16, 18, 19, 25~28, 51, 56, 57, 63~66, 76~78, 8, 83~88, 92~99		Reserved		Keep these pins unconnected.

NOTES

1. Keep all RESERVED pins and unused pins unconnected.
2. “*” means under development.

3.4. Operating Modes

The table below briefly summarizes the various operating modes referred in the following chapters.

Table 5: Overview of Operating Modes

Mode	Details	
Normal Operation	Idle	Software is active. The module has registered on network, and it is ready to send and receive data.
	Data	Network connection is ongoing. In this mode, the power consumption is decided by network setting and data transfer rate.
Minimum Functionality Mode	AT+CFUN command can set the module to a minimum functionality mode without removing the power supply. In this case, both RF function and (U)SIM card will be invalid.	
Airplane Mode	AT+CFUN command or W_DISABLE# pin can set the module to airplane mode. In this case, RF function will be invalid.	
Sleep Mode	In this mode, the current consumption of the module will be reduced to the minimal level. During this mode, the module can still receive paging message, SMS and TCP/UDP data from the network normally.	
PSM*	A UE may adopt the PSM (Power Saving Mode) for reducing its power consumption. PSM is similar to power-off, but the UE remains registered on the network and there is no need to re-attach or re-establish PDN connections. When the module is successfully entered into the PSM, PSM_IND* outputs a low level.	
Power Down Mode	In this mode, the power management unit shuts down the power supply. Software is not active. The serial interface is not accessible. Operating voltage (connected to VBAT_RF and VBAT_BB) remains applied.	

NOTES

1. In PSM or sleep mode, it is recommended to use UART interface for module connection. USB connection is NOT recommended as it will cause increase in power consumption.
2. "*" means under development.

3.5. Power Saving

3.5.1. Sleep Mode

BG96-NA is able to reduce its current consumption to a minimum value during the sleep mode. The following section describes power saving procedure of BG96-NA module.

3.5.1.1. UART Application

If the host communicates with module via UART interface, the following preconditions can let the module enter into sleep mode.

- Execute **AT+QSCLK=1** command to enable sleep mode.
- Drive DTR to high level.

The following figure shows the connection between the module and the host.

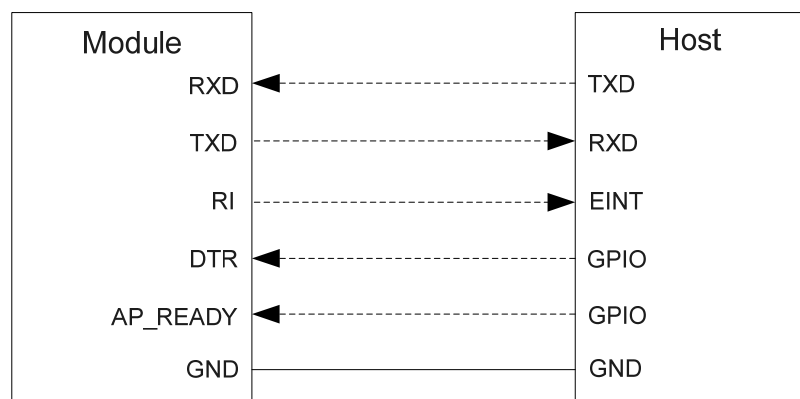


Figure 3: Sleep Mode Application via UART

- Driving the host DTR to low level will wake up the module.
- When BG96-NA has URC to report, RI signal will wake up the host. Refer to **Chapter 3.15** for details about RI behavior.
- AP_READY* will detect the sleep state of the host (can be configured to high level or low level detection). Please refer to **AT+QCFG="apready"** command for details.

3.5.1.2. USB Application with USB Remote Wakeup Function

If the host supports USB suspend/resume and remote wakeup functions, the following three preconditions must be met to let the module enter into sleep mode.

- Execute **AT+QSCLK=1** command to enable the sleep mode.
- Ensure the DTR is held in high level or keep it open.
- The host's USB bus, which is connected with the module's USB interface, enters into suspended state.

The following figure shows the connection between the module and the host.

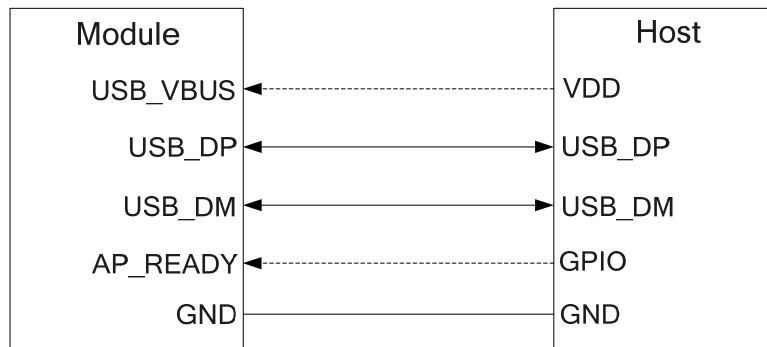


Figure 4: Sleep Mode Application with USB Remote Wakeup

- Sending data to BG96-NA through USB will wake up the module.
- When BG96-NA has URC to report, the module will send remote wake-up signals via USB bus so as to wake up the host.

3.5.1.3. USB Application with USB Suspend/Resume and RI Function

If the host supports USB suspend/resume, but does not support remote wake-up function, the RI signal is needed to wake up the host. There are three preconditions to let the module enter into the sleep mode.

- Execute **AT+QSClk=1** command to enable sleep mode.
- Ensure the DTR is held in high level or keep it open.
- The host's USB bus, which is connected with the module's USB interface, enters into suspended state.

The following figure shows the connection between the module and the host.

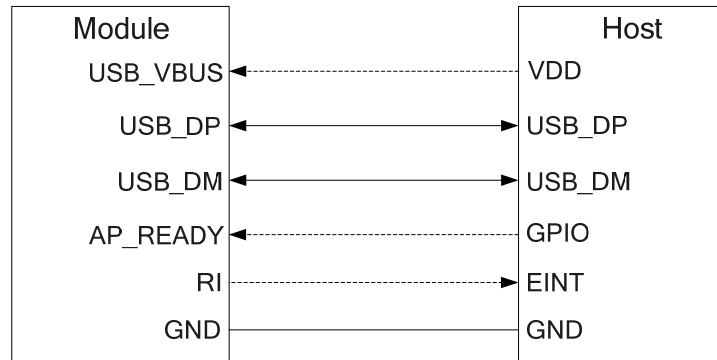


Figure 5: Sleep Mode Application with RI

- Sending data to BG96-NA through USB will wake up the module.
- When BG96-NA has URC to report, RI signal will wake up the host.

3.5.1.4. USB Application without USB Suspend Function

If the host does not support USB suspend function, you should disconnect USB_VBUS with additional control circuit to let the module enter into sleep mode.

- Execute **AT+QSCLK=1** command to enable the sleep mode.
- Ensure the DTR is held in high level or keep it open.
- Disconnect USB_VBUS.

The following figure shows the connection between the module and the host.

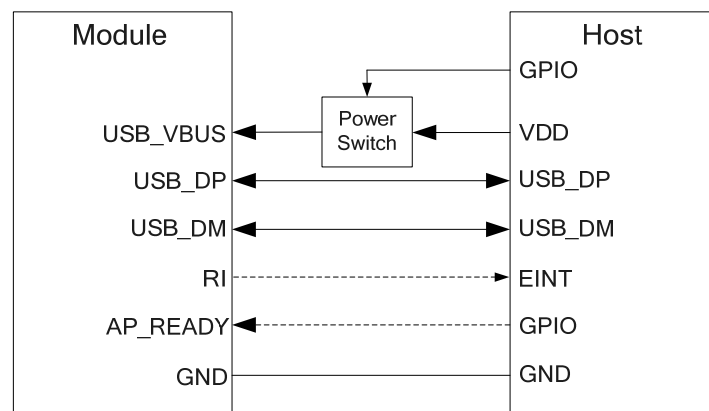


Figure 6: Sleep Mode Application without Suspend Function

Switching on the power switch to supply power to USB_VBUS will wake up the module.

NOTE

1. Please pay attention to the level match shown in dotted line between the module and the host. Refer to **document [1]** for more details about BG96-NA power management application.
2. “*” means under development.

3.5.2. Airplane Mode

When the module enters into airplane mode, the RF function does not work, and all AT commands correlative with RF function will be inaccessible. This mode can be set via the following ways.

Hardware:

W_DISABLE# is pulled up by default. Driving it to low level will let the module enter into airplane mode.

Software:

AT+CFUN command provides choice of the functionality level.

- **AT+CFUN=0**: Minimum functionality mode. Both (U)SIM and RF functions are disabled.
- **AT+CFUN=1**: Full functionality mode (by default).
- **AT+CFUN=4**: Airplane mode. RF function is disabled.

NOTES

1. The W_DISABLE# control function is disabled in firmware by default. It can be enabled by **AT+QCFG="airplanecontrol"** command. The command is still under development.
2. The execution of **AT+CFUN** command will not affect GNSS function.

3.6. Power Supply

3.6.1. Power Supply Pins

BG96-NA provides four VBAT pins for connection with an external power supply. There are two separate voltage domains for VBAT.

- Two VBAT_RF pins for module RF part.
- Two VBAT_BB pins for module baseband part.

The following table shows the details of VBAT pins and ground pins.

Table 6: VBAT and GND Pins

Pin Name	Pin No.	Description	Min.	Typ.	Max.	Unit
VBAT_RF	52,53	Power supply for module RF part.	3.3	3.8	4.3	V
VBAT_BB	32,33	Power supply for module baseband part.	3.3	3.8	4.3	V
GND	3, 31, 48,50, 54, 55,58, 59, 61,62, 67~74, 79~82,89~91, 100~102	Ground	-	-	-	-

3.6.2. Decrease Voltage Drop

The power supply range of the module is from 3.3V to 4.3V. Please make sure that the input voltage will never drop below 3.3V.

To decrease voltage drop, a bypass capacitor of about 100μF with low ESR should be used, and a multi-layer ceramic chip (MLCC) capacitor array should also be used to provide the low ESR. The main power supply from an external application has to be a single voltage source and can be expanded to two sub paths with star structure. The width of VBAT_BB trace should be no less than 1mm, and the width of VBAT_RF trace should be no less than 2mm. In principle, the longer the VBAT trace is, the wider it will be.

Three ceramic capacitors (100nF, 33pF, 10pF) are recommended to be applied to the VBAT pins. These capacitors should be placed close to the VBAT pins. In addition, in order to get a stable power source, it is suggested that you should use a zener diode of which reverse zener voltage is 5.1V and dissipation power is more than 0.5W. The following figure shows the star structure of the power supply.

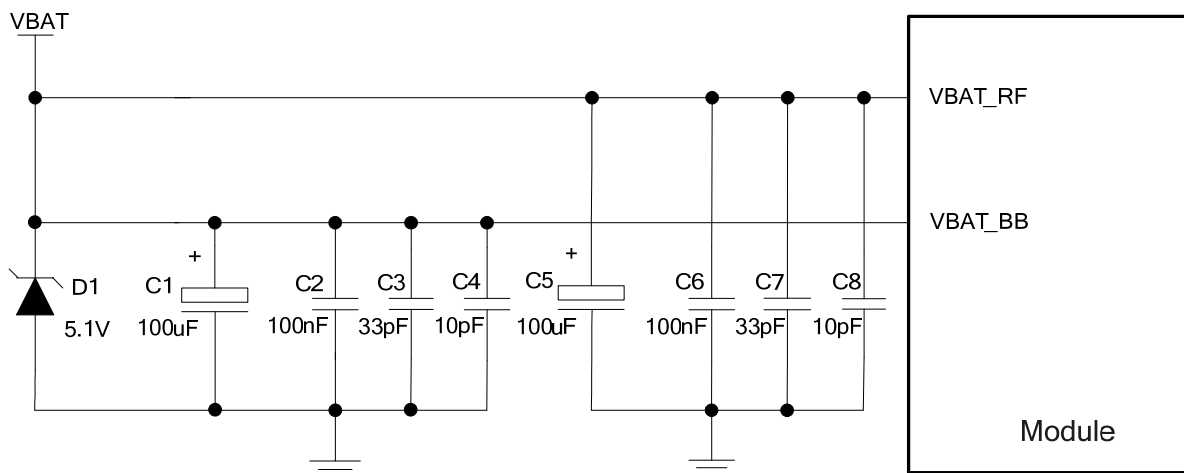


Figure 7: Star Structure of the Power Supply

3.6.3. Monitor the Power Supply

AT+CBC command can be used to monitor the VBAT_BB voltage value. For more details, please refer to *document [2]*.

3.7. Turn on and off Scenarios

3.7.1. Turn on Module Using the PWRKEY

The following table shows the pin definition of PWRKEY.

Table 7: PWRKEY Pin Description

Pin Name	Pin No.	Description	DC Characteristics	Comment
PWRKEY	15	Turn on/off the module	$V_{IHmax}=2.1V$ $V_{IHmin}=1.3V$ $V_{ILmax}=0.5V$	The output voltage is 0.8V because of the diode drop in the Qualcomm chipset.

When BG96-NA is in power down mode, it can be turned on to normal mode by driving the PWRKEY pin to a low level for at least 100ms. It is recommended to use an open drain/collector driver to control the PWRKEY. After STATUS pin outputting a high level, PWRKEY pin can be released. A simple reference circuit is illustrated in the following figure.

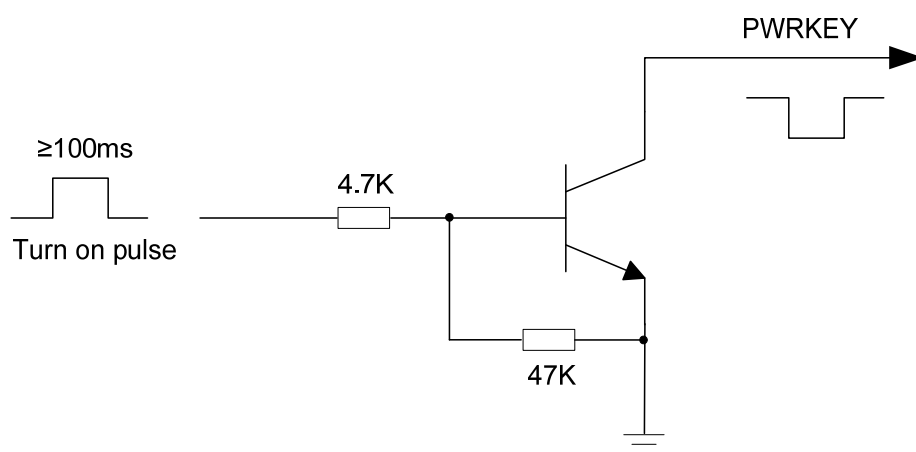


Figure 8: Turn on the Module Using Driving Circuit

The other way to control the PWRKEY is using a button directly. When pressing the key, electrostatic strike may generate from finger. Therefore, a TVS component is indispensable to be placed nearby the button for ESD protection. A reference circuit is shown in the following figure.

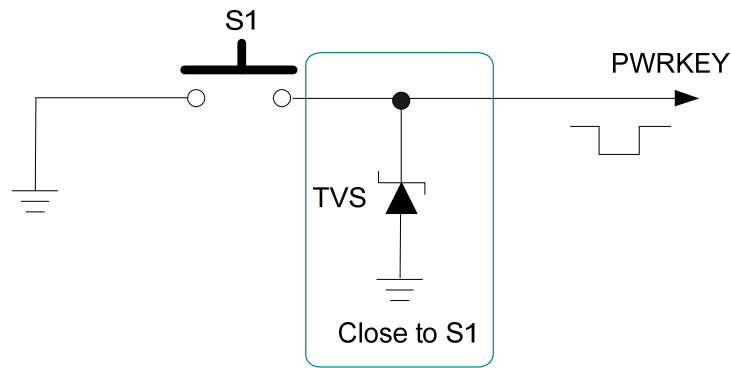


Figure 9: Turn on the Module Using Keystroke

The turn on scenario is illustrated in the following figure.

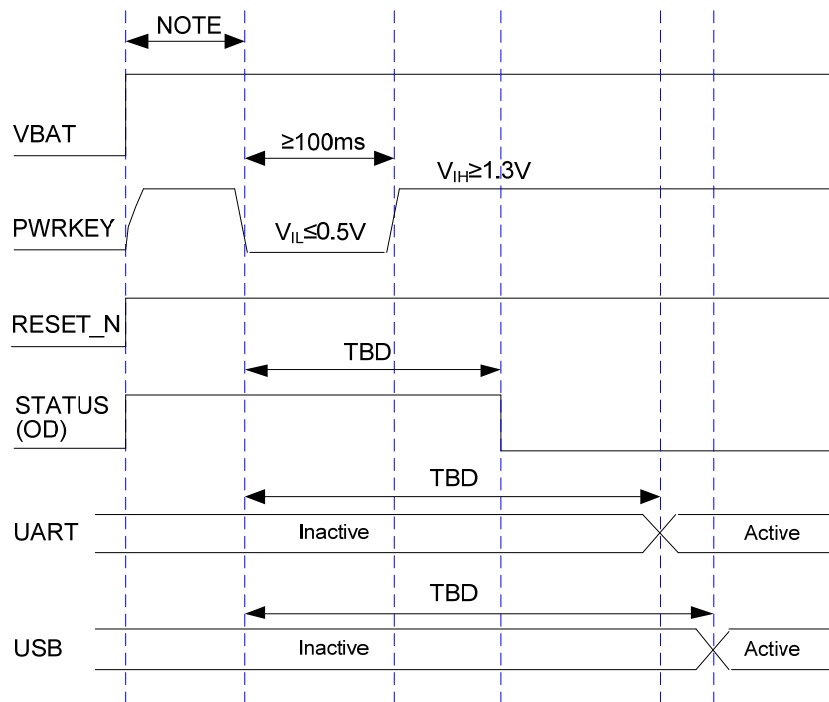


Figure 10: Timing of Turning on Module

NOTE

Make sure that VBAT is stable before pulling down PWRKEY pin. The time between them is no less than 30ms.

3.7.2. Turn off Module

The following procedures can be used to turn off the module:

- Normal power down procedure: Turn off the module using the PWRKEY pin.
- Normal power down procedure: Turn off the module using **AT+QPOWD** command.

3.7.2.1. Turn off Module Using the PWRKEY Pin

Driving the PWRKEY pin to a low level voltage (the specific time is TBD), the module will execute power-down procedure after the PWRKEY is released. The power-down scenario is illustrated in the following figure.

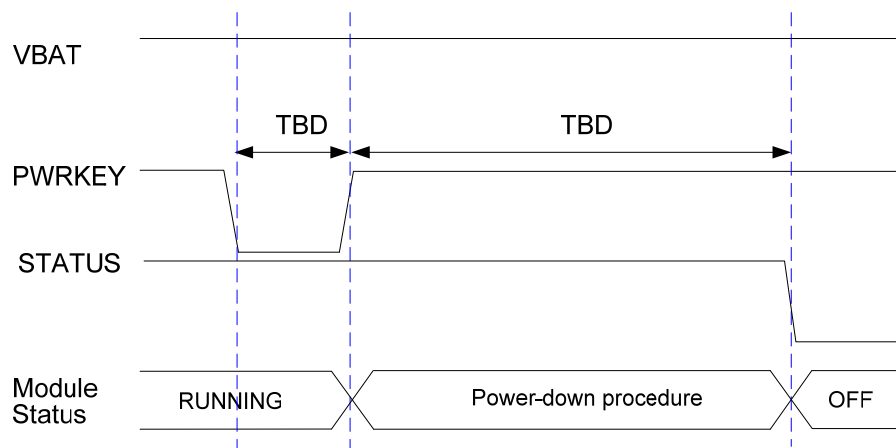


Figure 11: Timing of Turning off Module

3.7.2.2. Turn off Module Using AT Command

It is also a safe way to use **AT+QPOWD** command to turn off the module, which is similar to turning off the module via PWRKEY pin.

Please refer to **document [2]** for details about **AT+QPOWD** command.

3.8. Reset the Module

The RESET_N pin can be used to reset the module. The module can be reset by driving RESET_N to a low level voltage for time between Treset_min and Treset_max.

Table 8: RESET_N Pin Description

Pin Name	Pin No.	Description	DC Characteristics	Comment
RESET_N	17	Reset the module	$V_{IHmax}=2.1V$ $V_{IHmin}=1.3V$ $V_{ILmax}=0.5V$	

The recommended circuit is similar to the PWRKEY control circuit. An open drain/collector driver or button can be used to control the RESET_N.

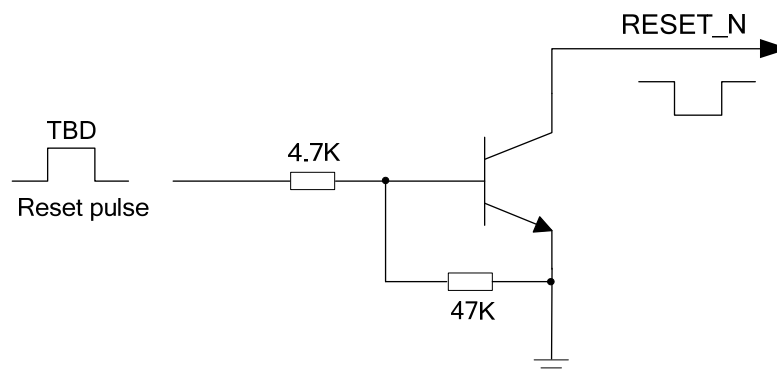


Figure 12: Reference Circuit of RESET_N by Using Driving Circuit

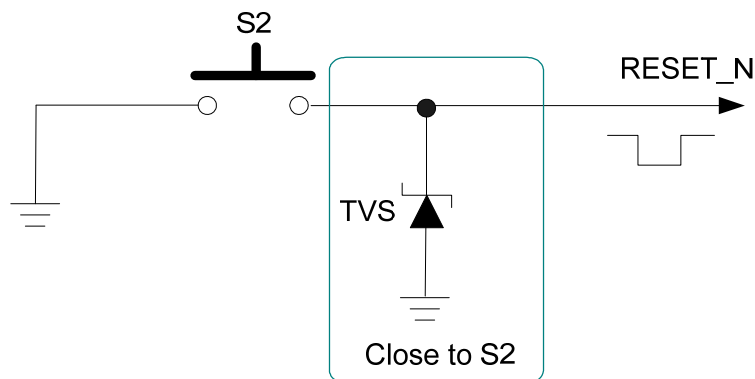


Figure 13: Reference Circuit of RESET_N by Using Button

The reset scenario is illustrated in the following figure.

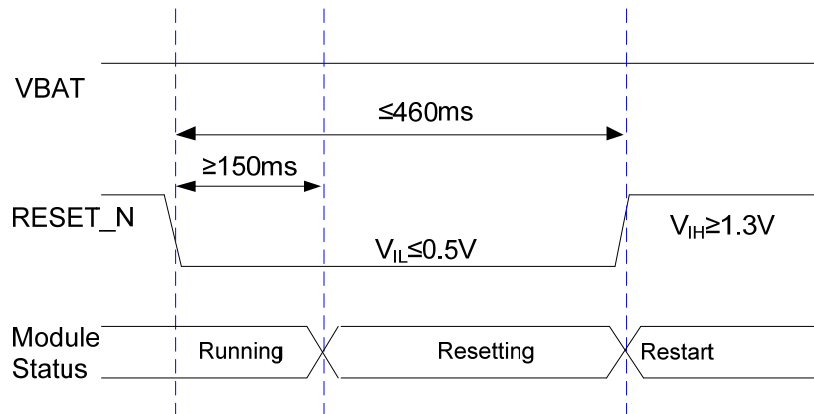


Figure 14: Timing of Resetting Module

NOTES

1. Use RESET_N only when turning off the module by **AT+QPOWD** command and PWRKEY pin failed.
2. Ensure that there is no large capacitance on PWRKEY and RESET_N pins.

3.9. (U)SIM Card Interfaces

The (U)SIM card interface circuitry meets ETSI and IMT-2000 SIM interface requirements. Both 1.8V and 3.0V (U)SIM cards are supported.

Table 9: Pin Definition of the (U)SIM Card Interfaces

Pin Name	Pin No.	I/O	Description	Comment
USIM_VDD	43	PO	Power supply for (U)SIM card	Either 1.8V or 3.0V is supported by the module automatically.
USIM_DATA	45	IO	Data signal of (U)SIM card	
USIM_CLK	46	DO	Clock signal of (U)SIM card	
USIM_RST	44	DO	Reset signal of (U)SIM card	
USIM_PRESENCE	42	DI	(U)SIM card insertion detection	
USIM_GND	47		Specified ground for (U)SIM card	

BG96-NA supports (U)SIM card hot-plug via the USIM_PRESENCE pins. The function supports low level and high level detections and is disabled by default. Please refer to **document [2]** about **AT+QSIMDET** command for details.

The following figure shows a reference design for (U)SIM card interface with an 8-pin (U)SIM card connector.

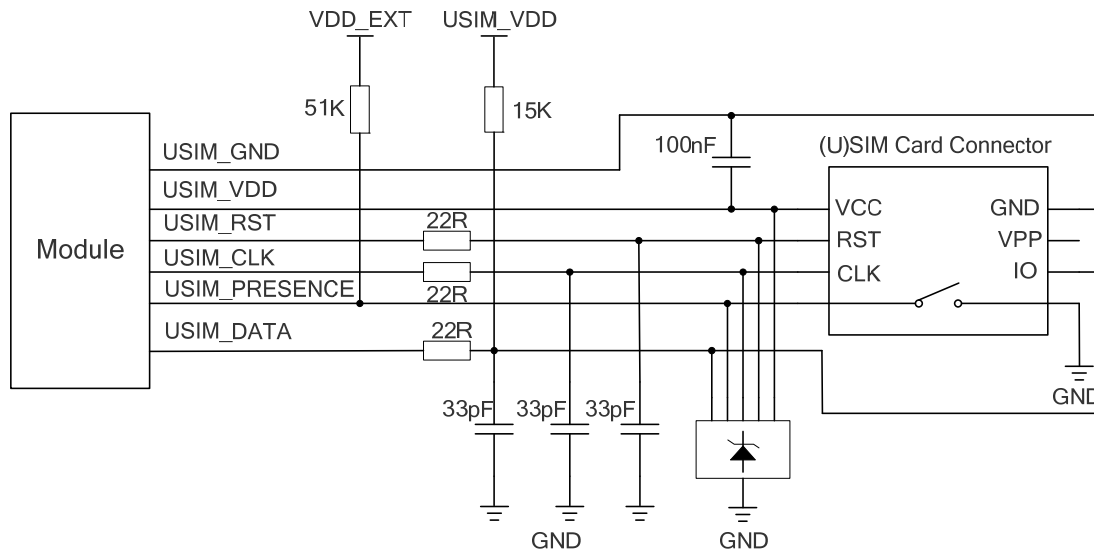


Figure 15: Reference Circuit of (U)SIM Card Interface with an 8-Pin (U)SIM Card Connector

If (U)SIM card detection function is not needed, please keep USIM_PRESENCE unconnected. A reference circuit for (U)SIM card interface with a 6-pin (U)SIM card connector is illustrated in the following figure.

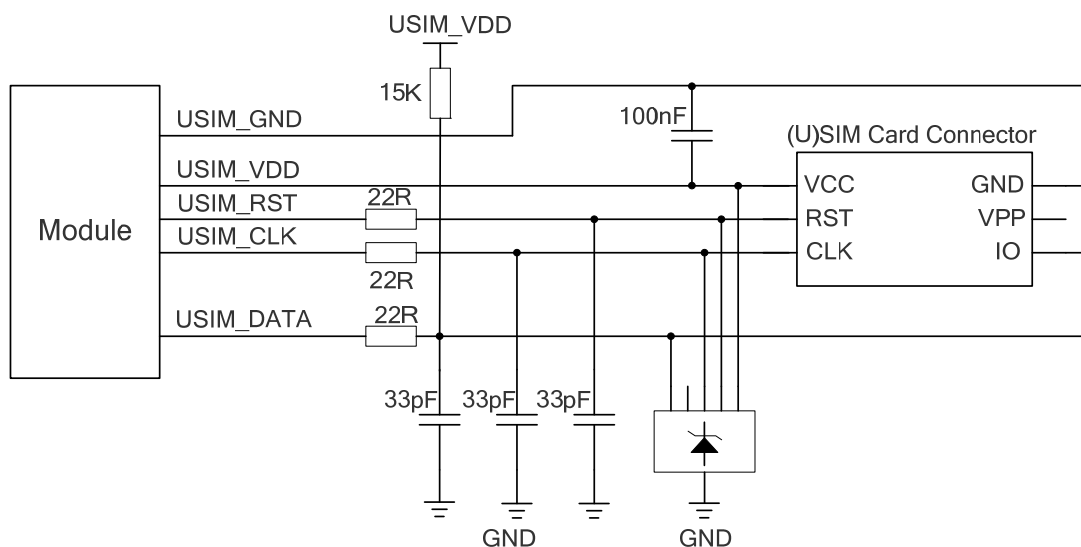


Figure 16: Reference Circuit of (U)SIM Card Interface with a 6-Pin (U)SIM Card Connector

In order to enhance the reliability and availability of the (U)SIM card in applications, please follow the criteria below in (U)SIM circuit design:

- Keep layout of (U)SIM card as close to the module as possible. Keep the trace length as less than 200mm as possible.
- Keep (U)SIM card signals away from RF and VBAT traces.
- Assure the ground between the module and the (U)SIM card connector short and wide. Keep the trace width of ground and USIM_VDD no less than 0.5mm to maintain the same electric potential.
- To avoid cross-talk between USIM_DATA and USIM_CLK, keep them away from each other and shield them with surrounded ground.
- In order to offer good ESD protection, it is recommended to add a TVS diode array which parasitic capacitance should be not more than 50pF. The 22ohm resistors should be added in series between the module and the (U)SIM card so as to suppress EMI spurious transmission and enhance ESD protection. The 33pF capacitors are used for filtering interference of GSM900. Please note that the (U)SIM peripheral circuit should be close to the (U)SIM card connector.
- The pull-up resistor on USIM_DATA line can improve anti-jamming capability when long layout trace and sensitive occasion are applied, and should be placed close to the (U)SIM card connector.

3.10. USB Interface

BG96-NA contains one integrated Universal Serial Bus (USB) transceiver which complies with the USB 2.0 specification and supports high-speed (480Mbps) and full-speed (12Mbps) modes. The USB interface is used for AT command communication, data transmission, software debugging and firmware upgrade. The following table shows the pin definition of USB interface.

Table 10: Pin Description of USB Interface

Pin Name	Pin No.	I/O	Description	Comment
USB_VBUS	8	PI	Used for detecting the USB connection.	Typical 5.0V
USB_DP	9	IO	USB differential data bus (+)	Require differential impedance of 90Ω.
USB_DM	10	IO	USB differential data bus (-)	Require differential impedance of 90Ω.
GND	3		Ground	

More details about the USB 2.0 specifications, please visit <http://www.usb.org/home>.

The USB interface is recommended to be reserved for firmware upgrade in your design. The following figure shows a reference circuit of USB interface.

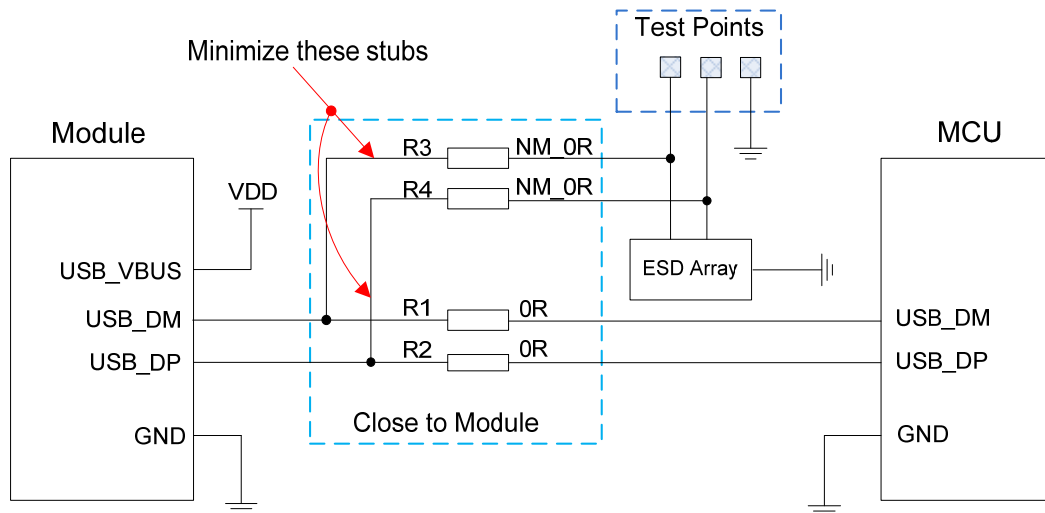


Figure 17: Reference Circuit of USB Application

In order to meet ensure the integrity of USB data line signal, components R1, R2, R3 and R4 must be placed close to the module, and also these resistors should be placed close to each other. The extra stubs of trace must be as short as possible.

In order to ensure the USB interface design corresponding with the USB 2.0 specification, please comply with the following principles.

- It is important to route the USB signal traces as differential pairs with total grounding. The impedance of USB differential trace is 90ohm.
- Do not route signal traces under crystals, oscillators, magnetic devices and RF signal traces. It is important to route the USB differential traces in inner-layer with ground shielding on not only upper and lower layers but also right and left sides.
- Pay attention to the influence of junction capacitance of ESD protection components on USB data lines. Typically, the capacitance value should be less than 2pF.
- Keep the ESD protection components to the USB connector as close as possible.

NOTE

BG96-NA module can only be used as a slave device.

3.11. UART Interfaces

The module provides two UART interfaces: the UART1 interface and UART2 interface. The following are their features.

- The UART1 interface supports 9600, 19200, 38400, 57600, 115200, 230400, 460800, 921600 and 3000000bps baud rates, and the default is 115200bps. This interface is used for data transmission and AT command communication.
- The UART2 interface supports 115200bps baud rate. It is used for module debugging and log output.

The following tables show the pin definition of the main and debug UART interfaces.

Table 11: Pin Definition of UART1 Interface

Pin Name	Pin No.	I/O	Description	Comment
DTR	30	DI	Sleep mode control	1.8V power domain
RXD	34	DI	Receive data	1.8V power domain
TXD	35	DO	Transmit data	1.8V power domain
CTS	36	DO	Clear to send	1.8V power domain
RTS	37	DI	Request to send	1.8V power domain
DCD	38	DO	Data carrier detection	1.8V power domain
RI	39	DO	Ring indicator	1.8V power domain

Table 12: Pin Definition of UART2 Interface

Pin Name	Pin No.	I/O	Description	Comment
DBG_TXD	23	DO	Transmit data	1.8V power domain
DBG_RXD	22	DI	Receive data	1.8V power domain

The logic levels are described in the following table.

Table 13: Logic Levels of Digital I/O

Parameter	Min.	Max.	Unit
V_{IL}	-0.3	0.6	V
V_{IH}	1.2	2.0	V
V_{OL}	0	0.45	V
V_{OH}	1.35	1.8	V

The module provides 1.8V UART interface. A level translator should be used if your application is equipped with a 3.3V UART interface. A level translator TXS0108EPWR provided by Texas Instrument is recommended. The following figure shows a reference design.

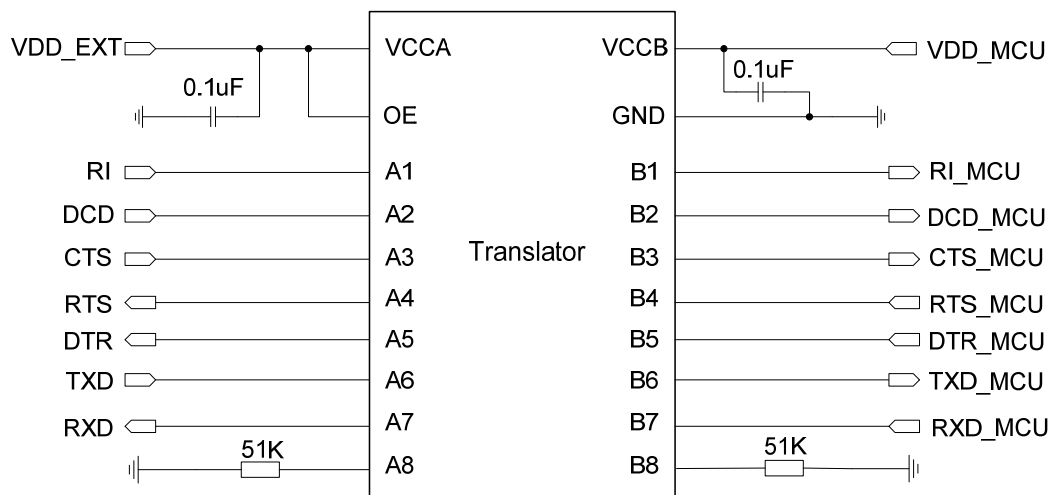


Figure 18: Reference Circuit with Translator Chip

Please visit <http://www.ti.com> for more information.

Another example with transistor translation circuit is shown as below. The circuit design of dotted line section can refer to the circuit design of solid line section, in terms of both module input and output circuit designs, but please pay attention to the direction of connection.

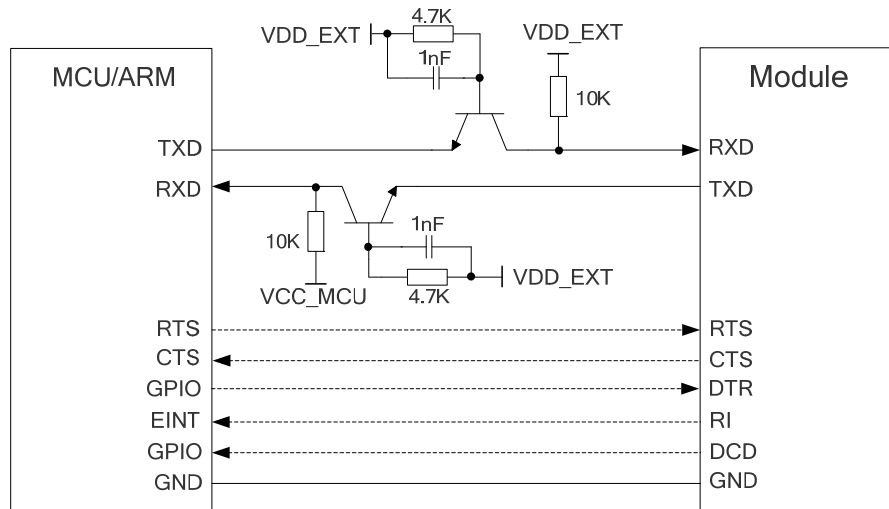


Figure 19: Reference Circuit with Transistor Circuit

NOTE

Transistor circuit solution is not suitable for applications with high baud rates exceeding 460Kbps.

3.12. I2C Interfaces

BG96-NA provides one I2C interface.

The following table shows the pin definition of I2C interfaces which can be applied on audio codec design.

Table 14: Pin Definition of I2C Interfaces

Pin Name	Pin No.	I/O	Description	Comment
I2C_SCL	40	OD	I2C serial clock	Require external pull-up to 1.8V
I2C_SDA	41	OD	I2C serial data	Require external pull-up to 1.8V

3.13. Network Status Indication

BG96-NA provides one network indication pin: NETLIGHT. The pin is used to drive a network status indication LED.

The following tables describe the pin definition and logic level changes of NETLIGHT in different network status.

Table 15: Pin Definition of Network Status Indicator

Pin Name	Pin No.	I/O	Description	Comment
NETLIGHT	21	DO	Indicate the module's network activity status.	1.8V power domain

Table 16: Working State of the Network Status Indicator

Pin Name	Logic Level Changes	Network Status
NETLIGHT	Flicker slowly (200ms High/1800ms Low)	Network searching
	Flicker slowly (1800ms High/200ms Low)	Idle
	Flicker quickly (125ms High/125ms Low)	Data transfer is ongoing

A reference circuit is shown in the following figure.

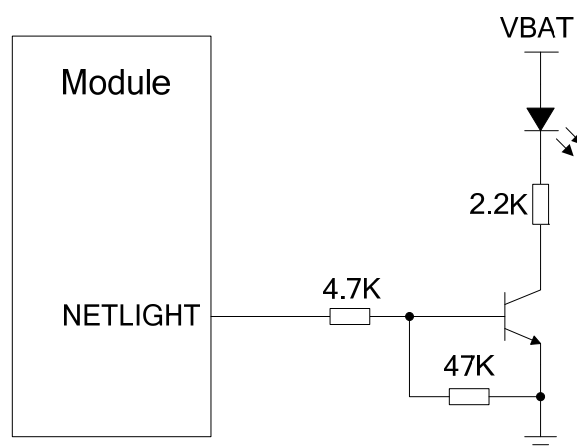


Figure 20: Reference Circuit of the Network Indicator

3.14. STATUS

The STATUS pin is an open drain output for indicating the module's operation status. It can be connected to a GPIO of DTE with a pulled up resistor, or an LED indication circuit as below. When the module is turned on normally, the STATUS will present a low state. Otherwise, the STATUS will present high-impedance state.

Table 17: Pin Definition of STATUS

Pin Name	Pin No.	I/O	Description	Comment
STATUS	20	OD	Indicate the module's operation status	1.8V power domain

The following figure shows different circuit designs of STATUS, and you can choose either one according to your application demands.

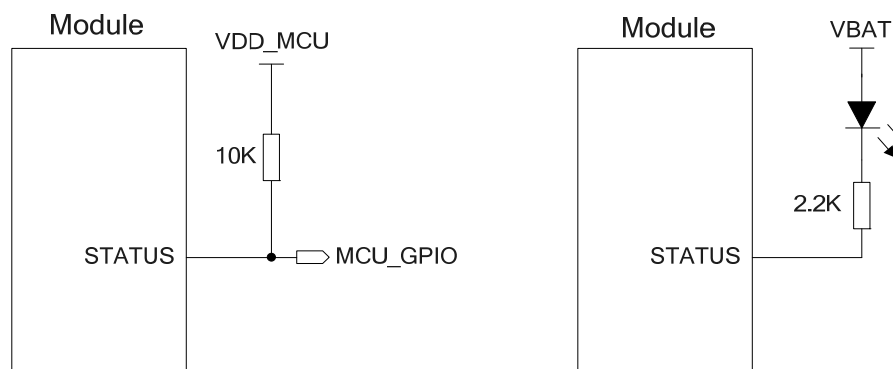


Figure 21: Reference Circuit of the STATUS

3.15. Behavior of the RI

AT+QCFG="risignaltype", "physical" command can be used to configure RI behavior.

No matter on which port URC is presented, URC will trigger the behavior of RI pin.

NOTE

URC can be output from UART port, USB AT port and USB modem port by **AT+QURCCFG** command. The default port is USB AT port.

The default behaviors of RI are shown as below.

Table 18:Default Behavior of RI

State	Response
Idle	RI keeps at high level.
URC	RI outputs 120ms low pulse when new URC returns.

The RI behavior can be changed by **AT+QCFG="urc/ri/ring"** command. Please refer to **document [2]** for details.

3.16. USB_BOOT Interface

BG96-NA provides a USB_BOOT pin. During development or factory production, USB_BOOT pin can force the module to boot from USB port for firmware upgrade.

Table 19: Pin Definition of USB_BOOT Interface

Pin Name	Pin No.	I/O	Description	Comment
USB_BOOT	75	DI	Force the module to boot from USB port	1.8V power domain. Active high. If unused, keep it open.

The following figure shows a reference circuit of USB_BOOT interface.

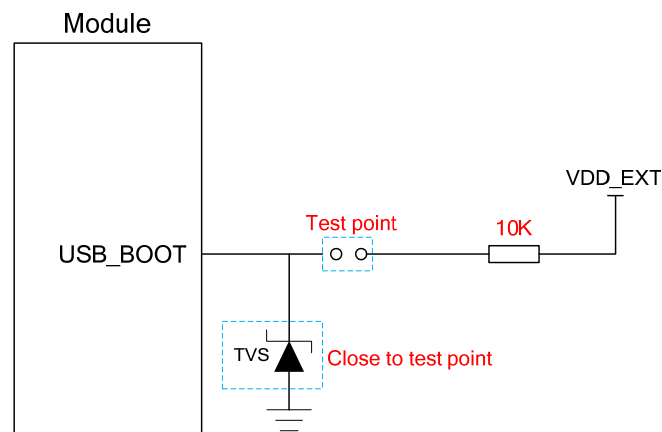


Figure 22: Reference Circuit of USB_BOOT Interface

4 GNSS Receiver

4.1. General Description

BG96-NA includes a fully integrated global navigation satellite system solution that supports Gen8C-Lite of Qualcomm (GPS, GLONASS, BeiDou/Compass, Galileo and QZSS).

BG96-NA supports standard NMEA-0183 protocol, and outputs NMEA sentences at 1Hz data update rate via USB interface by default.

By default, BG96-NA GNSS engine is switched off. It has to be switched on via AT command. For more details about GNSS engine technology and configurations, please refer to **document [3]**.

4.2. GNSS Performance

The following table shows the GNSS performance of BG96-NA.

Table 20: GNSS Performance

Parameter	Description	Conditions	Typ.	Unit
Sensitivity (GNSS)	Cold start	Autonomous	TBD	dBm
	Reacquisition	Autonomous	TBD	dBm
	Tracking	Autonomous	TBD	dBm
TTFF (GNSS)	Cold start @open sky	Autonomous	TBD	s
		XTRA enabled	TBD	s
	Warm start @open sky	Autonomous	TBD	s
		XTRA enabled	TBD	s
	Hot start	Autonomous	TBD	s
		Autonomous	TBD	s

	@open sky	XTRA* enabled	TBD	s
Accuracy (GNSS)	CEP-50	Autonomous @open sky	TBD	m

NOTES

1. Tracking sensitivity: the lowest GNSS signal value at the antenna port on which the module can keep on positioning for 3 minutes.
2. Reacquisition sensitivity: the lowest GNSS signal value at the antenna port on which the module can fix position again within 3 minutes after loss of lock.
3. Cold start sensitivity: the lowest GNSS signal value at the antenna port on which the module fixes position within 3 minutes after executing cold start command.
4. "*" means under development.

4.3. Layout Guidelines

The following layout guidelines should be taken into account in your design.

- Maximize the distance between GNSS antenna and main antenna.
- Digital circuits such as (U)SIM card, USB interface, camera module, display connector and SD card should be kept away from the antennas.
- Use ground vias around the GNSS trace and sensitive analog signal traces to provide coplanar isolation and protection.
- Keep 50 ohm characteristic impedance for the ANT_GNSS trace.

Please refer to **Chapter 5** for GNSS antenna reference design and antenna installation information.

5 Antenna Interfaces

BG96-NA antenna interfaces include a main antenna interface and a GNSS antenna interface. The antenna interfaces have an impedance of 50 ohm.

5.1. Main Antenna Interface

5.1.1. Pin Definition

The pin definition of main antenna interface is shown below.

Table 21: Pin Definition of the RF Antenna Interface

Pin Name	Pin No.	I/O	Description	Comment
ANT_MAIN	60	IO	Main antenna interface	50 ohm impedance

5.1.2. Operating Frequency

Table 22: Module Operating Frequencies

3GPP Band	Transmit	Receive	Unit
B2	1850~1910	1930~1990	MHz
B4	1710~1755	2110~2155	MHz
B12	699~716	728~746	MHz
B13	777~787	746~757	MHz

5.1.3. Reference Design of RF Antenna Interface

A reference design of ANT_MAIN antenna pads is shown as below. It should reserve a π -type matching circuit for better RF performance. The capacitors are not mounted by default.

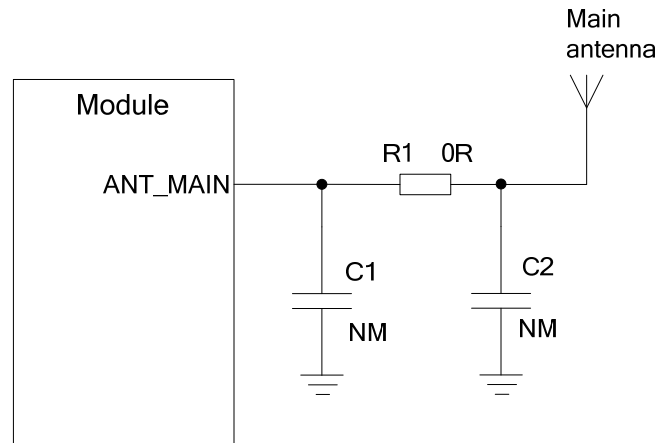


Figure 23: Reference Circuit of RF Antenna Interface

NOTE

Place the π -type matching components (R1, C1, C2) as close to the antenna as possible.

5.1.4. Reference Design of RF Layout

For user's PCB, the characteristic impedance of all RF traces should be controlled as 50 ohm. The impedance of the RF traces is usually determined by the trace width (W), the materials' dielectric constant, the distance between signal layer and reference ground (H), and the clearance between RF trace and ground (S). Microstrip line or coplanar waveguide is typically used in RF layout for characteristic impedance control. The following are reference designs of microstrip line or coplanar waveguide with different PCB structures.

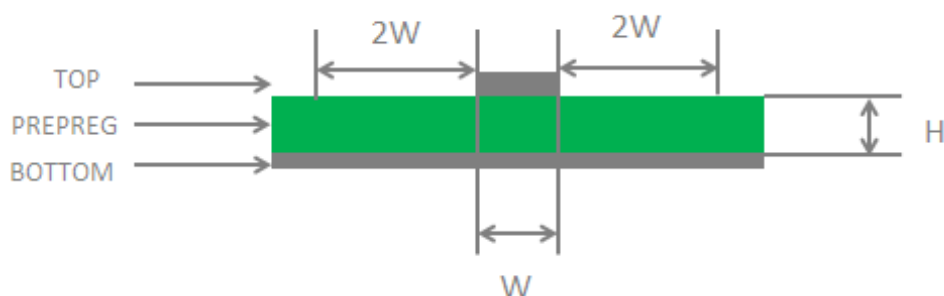


Figure 24: Microstrip Line Design on a 2-layer PCB

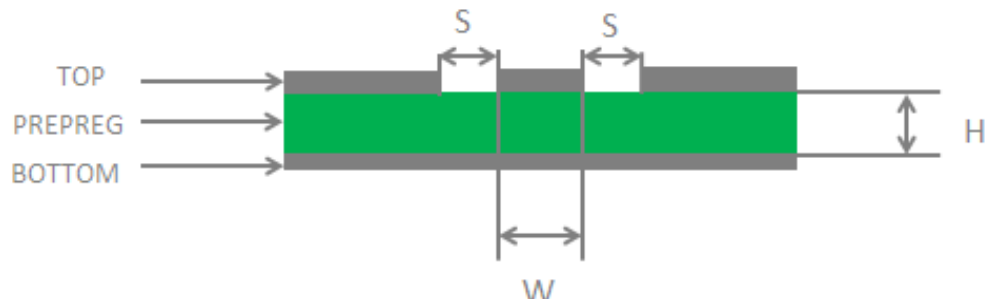


Figure 25: Coplanar Waveguide Line Design on a 2-layer PCB

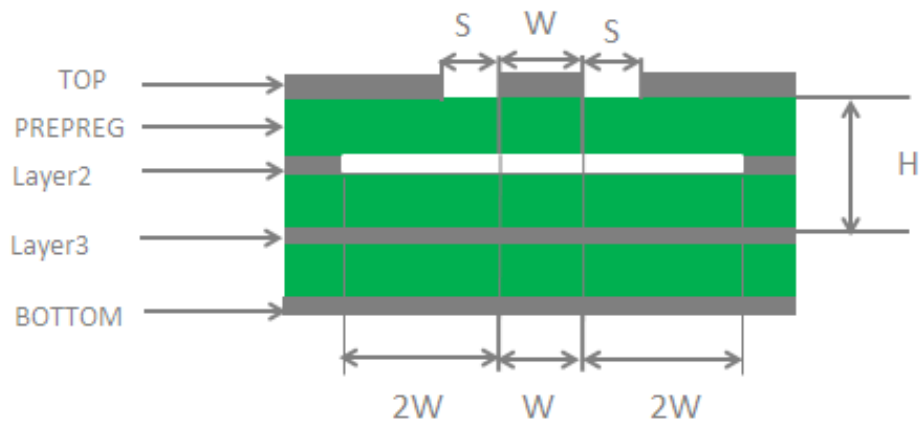


Figure 26: Coplanar Waveguide Line Design on a 4-layer PCB (Layer 3 as Reference Ground)

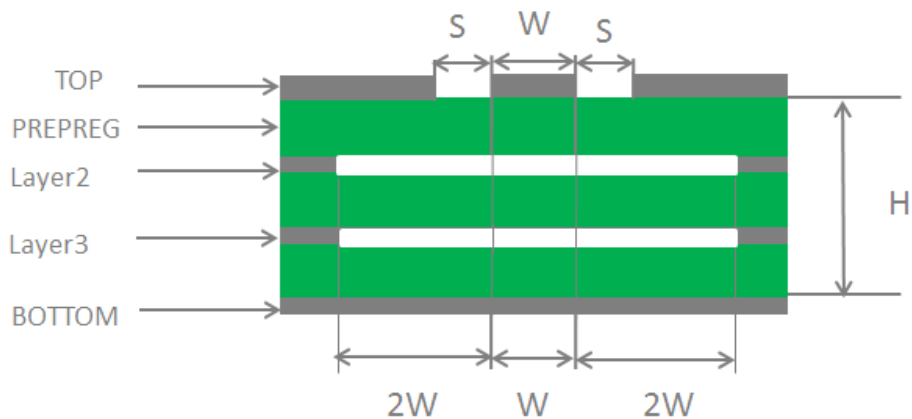


Figure 27: Coplanar Waveguide Line Design on a 4-layer PCB (Layer 4 as Reference Ground)

In order to ensure RF performance and reliability, the following principles should be complied with in RF layout design:

- Use impedance simulation tool to control the characteristic impedance of RF traces as 50ohm.
- The GND pins adjacent to RF pins should not be hot welded, and should be fully connected to ground.
- The distance between the RF pins and the RF connector should be as short as possible, and all the right angle traces should be changed to curved ones.
- There should be clearance area under the signal pin of the antenna connector or solder joint.
- The reference ground of RF traces should be complete. Meanwhile, adding some ground vias around RF traces and the reference ground could help to improve RF performance. The distance between the ground vias and RF traces should be no less than two times the width of RF signal traces (2*W).

For more details about RF layout, please refer to **document [4]**.

5.2. GNSS Antenna Interface

The following tables show the pin definition and frequency specification of GNSS antenna interface.

Table 23: Pin Definition of GNSS Antenna Interface

Pin Name	Pin No.	I/O	Description	Comment
ANT_GNSS	49	AI	GNSS antenna interface	50 ohm impedance

Table 24: GNSS Frequency

Type	Frequency	Unit
GPS/Galileo/QZSS	1575.42±1.023	MHz
GLONASS	1597.5~1605.8	MHz
BeiDou	1561.098±2.046	MHz

A reference design of GNSS antenna interface is shown as below.

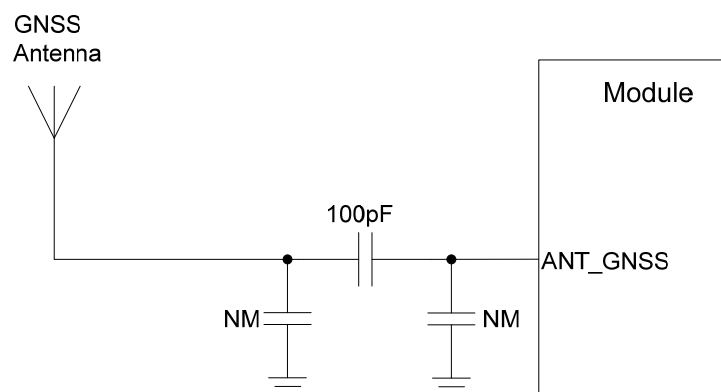


Figure 28: Reference Circuit of GNSS Antenna Interface

NOTES

1. An external LDO can be selected to supply power according to the active antenna requirement.
2. If the module is designed with a passive antenna, then the VDD circuit is not needed.

5.3. Antenna Installation

5.3.1. Antenna Requirements

The following table shows the requirements on main antenna.

Table 25: Main Antenna Requirements

Type	Requirements
LTE	VSWR: ≤ 2
	Gain (dBi): 1
	Max Input Power (W): 50
	Input Impedance (ohm): 50
	Polarization Type: Vertical
	Cable Insertion Loss: <1.5dB (LTE B1/B2/B3/B4)

5.3.2. Recommended RF Connector for Antenna Installation

If RF connector is used for antenna connection, it is recommended to use the UF.L-R-SMTconnector provided by HIROSE.

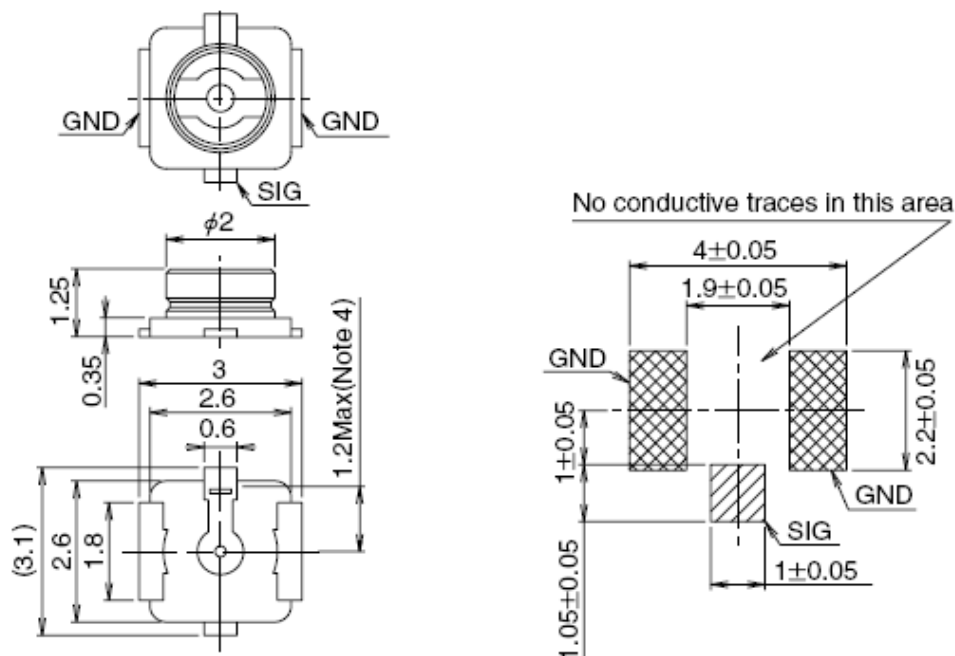


Figure 29: Dimensions of the UF.L-R-SMT Connector (Unit: mm)

U.FL-LP serial connectors listed in the following figure can be used to match the UF.L-R-SMT.

Part No.	U.FL-LP-040	U.FL-LP-066	U.FL-LP(V)-040	U.FL-LP-062	U.FL-LP-088
Mated Height	2.5mm Max. (2.4mm Nom.)	2.5mm Max. (2.4mm Nom.)	2.0mm Max. (1.9mm Nom.)	2.4mm Max. (2.3mm Nom.)	2.4mm Max. (2.3mm Nom.)
Applicable cable	Dia. 0.81mm Coaxial cable	Dia. 1.13mm and Dia. 1.32mm Coaxial cable	Dia. 0.81mm Coaxial cable	Dia. 1mm Coaxial cable	Dia. 1.37mm Coaxial cable
Weight (mg)	53.7	59.1	34.8	45.5	71.7
RoHS	YES				

Figure 30:Mechanicals of UF.L-LP Connectors

The following figure describes the space factor of mated connector.

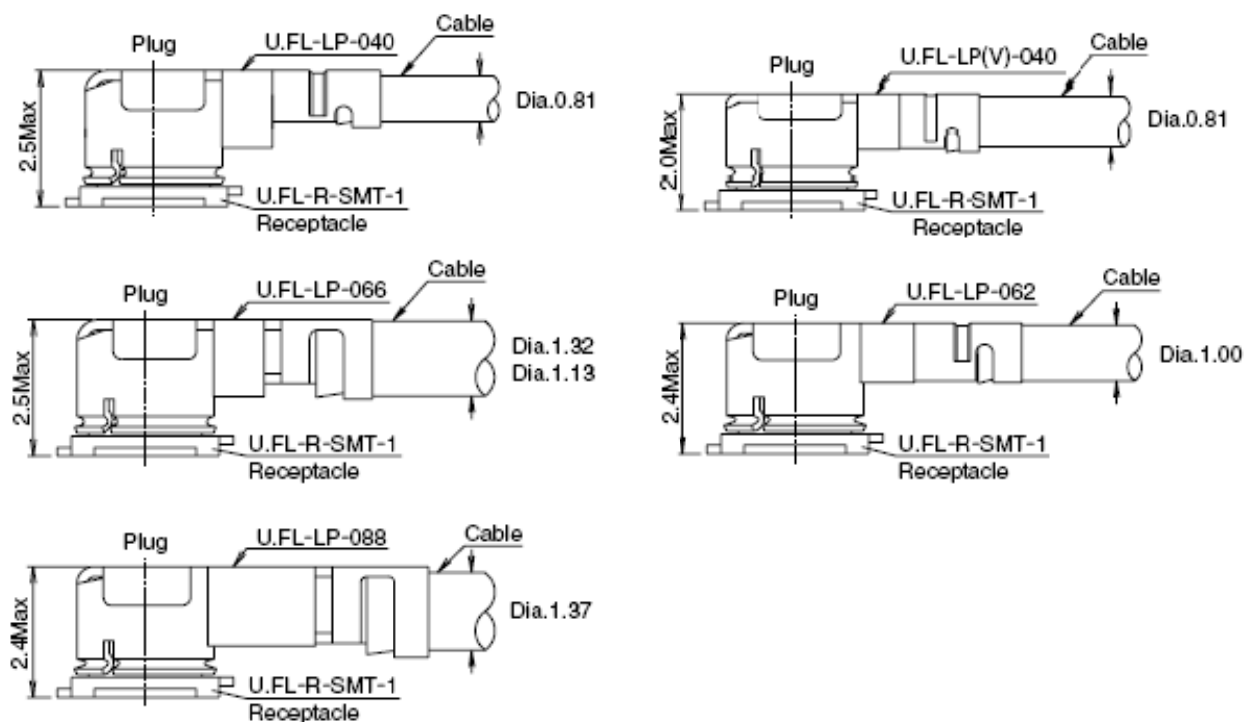


Figure 31:Space Factor of Mated Connector (Unit: mm)

For more details, please visit <http://www.hirose.com>.

6 Electrical, Reliability and RadioCharacteristics

6.1. Absolute Maximum Ratings

Absolute maximum ratings for power supply and voltage on digital and analog pins of the module are listed in the following table.

Table 26: Absolute Maximum Ratings

Parameter	Min.	Max.	Unit
VBAT_RF/VBAT_BB	-0.3	4.7	V
USB_VBUS	-0.3	5.5	V
Peak Current of VBAT_BB	0	TBD	A
Peak Current of VBAT_RF	0	TBD	A
Voltage at Digital Pins	-0.3	2.3	V

6.2. Power Supply Ratings

Table 27: Power Supply Ratings

Parameter	Description	Conditions	Min.	Typ.	Max.	Unit
VBAT	VBAT_BB and VBAT_RF	Voltage must stay within the min/max values, including voltage drop, ripple and spikes.	3.3	3.8	4.3	V

Parameter	Description	Conditions	Min.	Typ.	Max.	Unit
I _V BAT	Peak supply current (during transmissionslot)			TBD	TBD	A
USB_VBUS	USB detection		3.0	5.0	5.25	V

6.3. Operating Temperature

The operating temperature is listed in the following table.

Table 28: Operating Temperature

Parameter	Min.	Typ.	Max.	Unit
OperationTemperature Range ¹⁾	-35	+25	+75	°C
Extended Temperature Range ²⁾	-40		+85	°C

NOTES

- ¹⁾ Within operation temperature range, the module is 3GPP compliant.
- ²⁾ Within extended temperature range, the module remains the ability to establish and maintain SMS, data transmission, etc. There is no unrecoverable malfunction. Only one or more parameters like P_{out} might reduce in their value and exceed the specified tolerances. When the temperature returns to the normal operating temperature levels, the module will meet 3GPP compliant again.

6.4. Current Consumption

The information will be added in the future version of this document.

6.5. RF Output Power

The following table shows the RF output power of BG96-NA module.

Table 29: Conducted RF Output Power

Frequency	Max.	Min.
LTE-FDD B2/B4B12/B13	23dBm±2.7dB	TBD

6.6. RF Receiving Sensitivity

The following table shows the conducted RF receiving sensitivity of BG96-NA module.

Table 30: BG96-NA Conducted RF Receiving Sensitivity

Frequency	Primary	Diversity	SISO	3GPP
LTE-FDD B2	TBD	Not Supported	TBD	-100.3dBm
LTE-FDD B4	TBD	Not Supported	TBD	-102.3dBm
LTE-FDD B12	TBD	Not Supported	TBD	-99.3dBm
LTE-FDD B13	TBD	Not Supported	TBD	-93.3dBm

6.7. Electrostatic Discharge

The information will be added in the future version of this document.

7 Mechanical Dimensions

This chapter describes the mechanical dimensions of the module. All dimensions are measured in mm.

7.1. Mechanical Dimensions of the Module


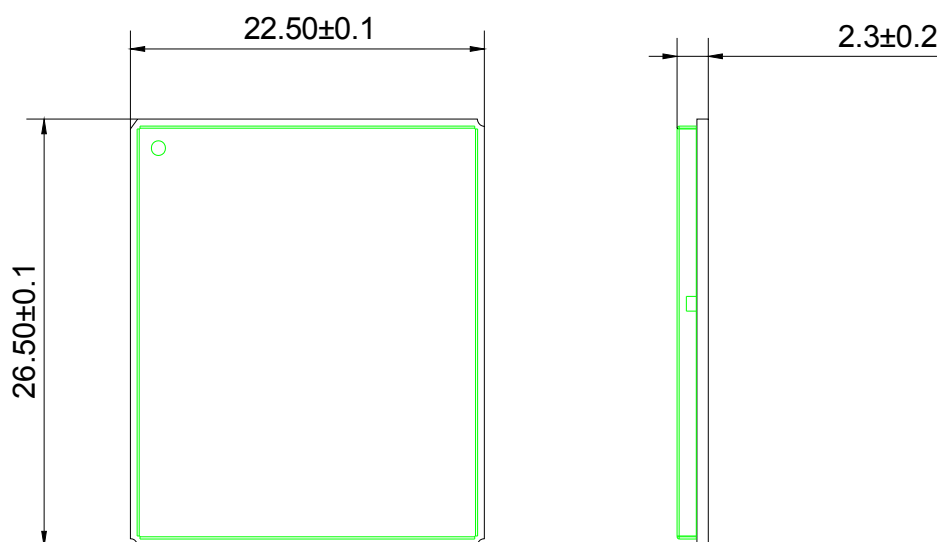


Figure 32: Module Top and Side Dimensions

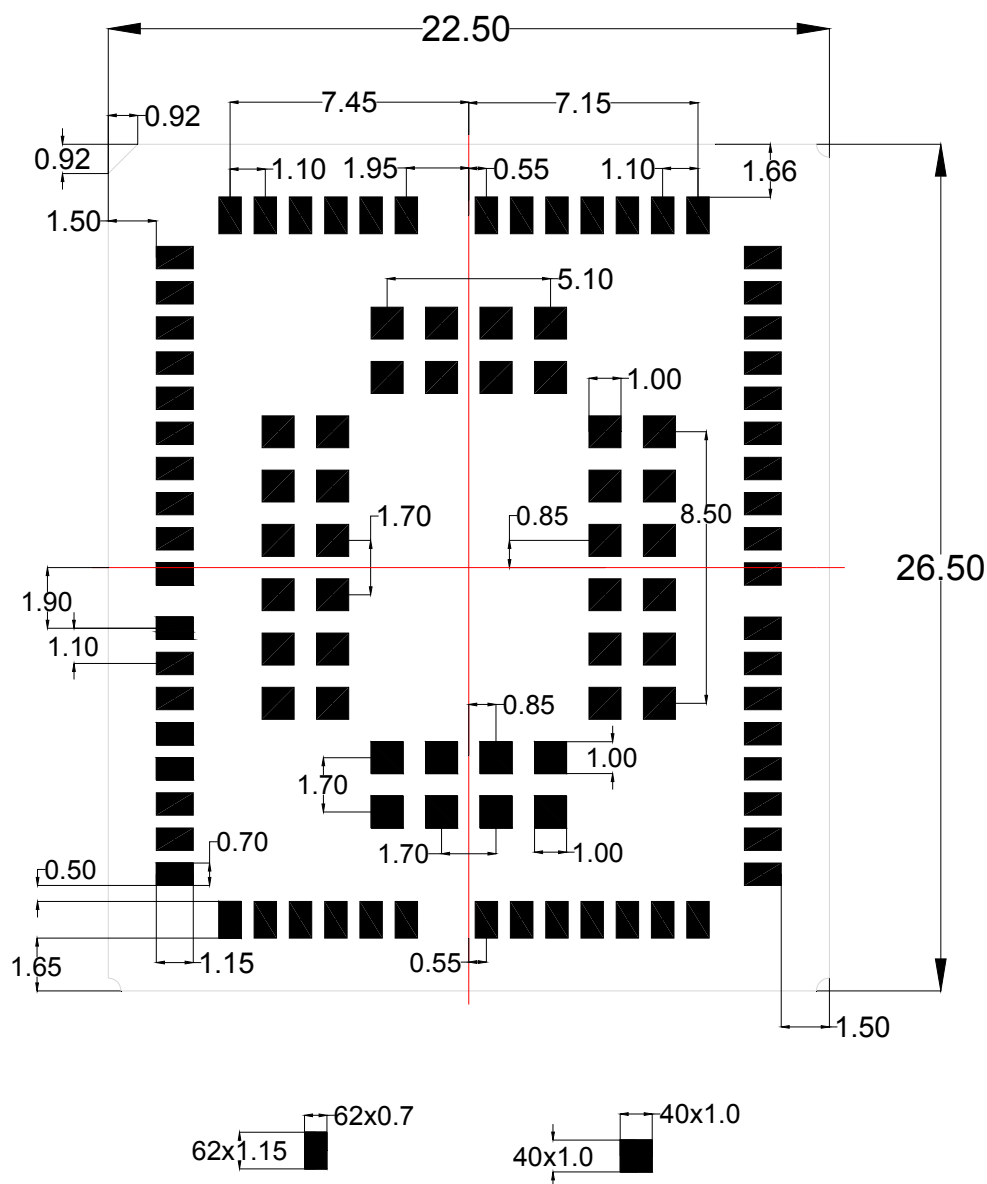

7.2. Recommended Footprint

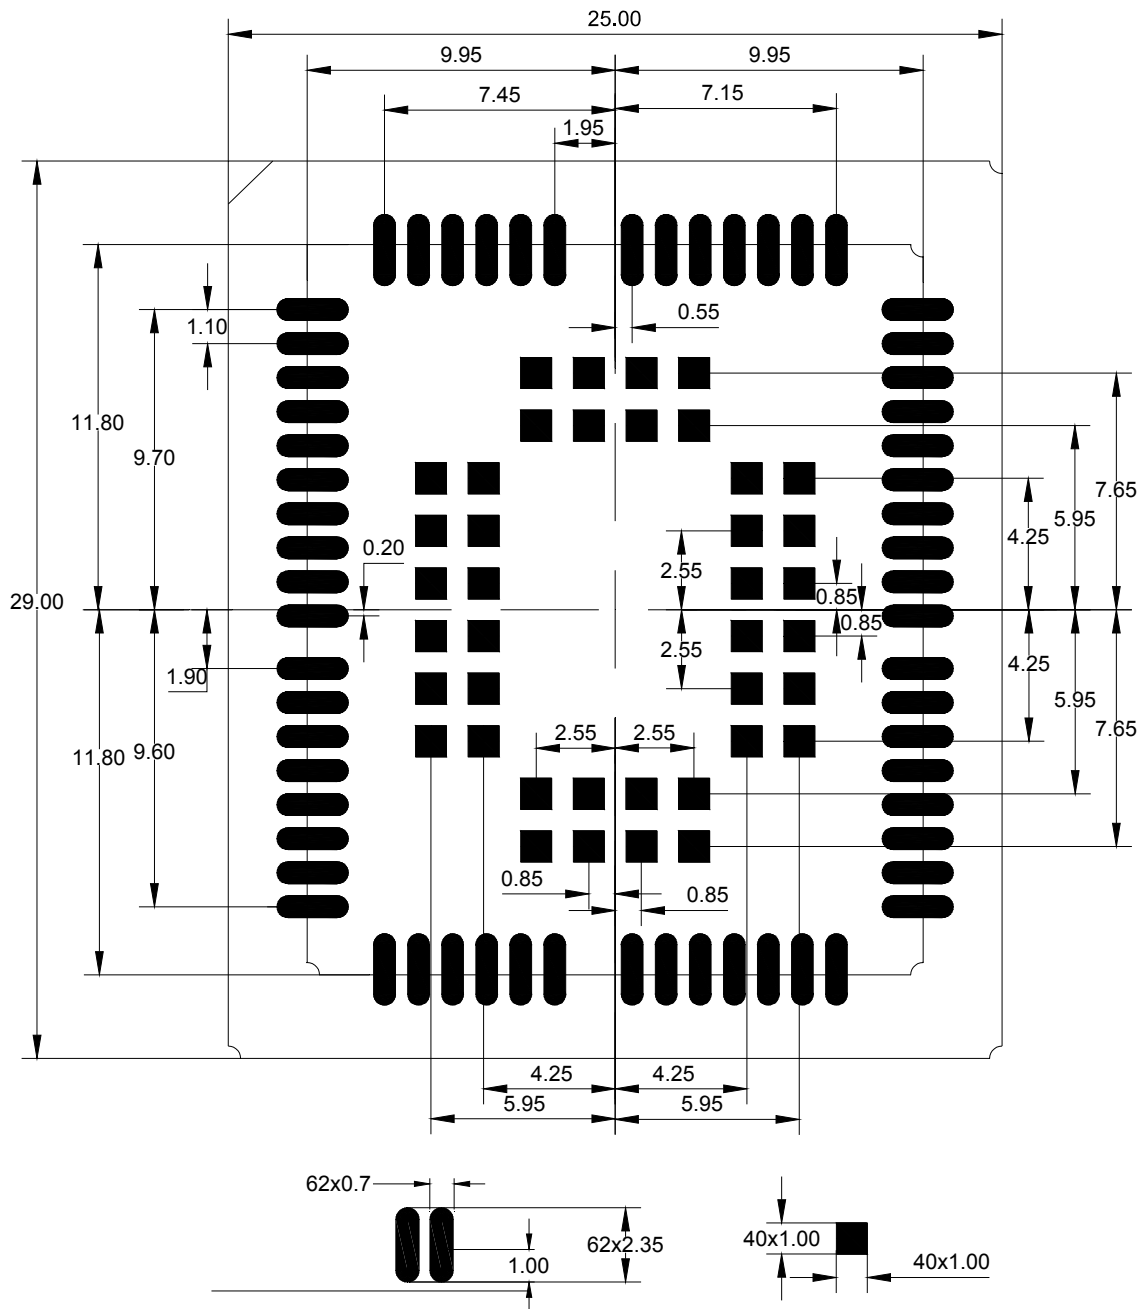


Figure 34: Recommended Footprint (Top View)

NOTE

For easymaintenance of the module, please keep about 3mm between the module and other components in the host PCB.

7.3. Design Effect Drawings of the Module



Figure 35: Top View of the Module

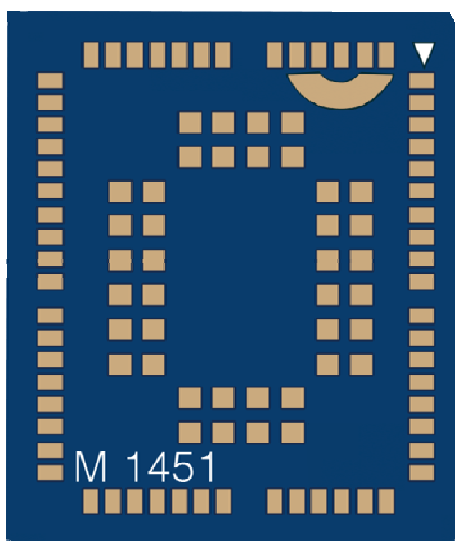


Figure 36: Bottom View of the Module

NOTE

These are design effect drawings of BG96-NA module. For more accurate pictures, please refer to the module that you get from Quectel.

8 Storage, Manufacturing and Packaging

8.1. Storage

BG96-NA is stored in a vacuum-sealed bag. The storage restrictions are shown as below.

1. Shelf life in the vacuum-sealed bag: 12 months at $<40^{\circ}\text{C}/90\%\text{RH}$.
2. After the vacuum-sealed bag is opened, devices that will be subjected to reflow soldering or other high temperature processes must be:
 - Mounted within 72 hours at the factory environment of $\leq 30^{\circ}\text{C}/60\%\text{RH}$.
 - Stored at $<10\%\text{RH}$.
3. Devices require baking before mounting, if any circumstance below occurs.
 - When the ambient temperature is $23^{\circ}\text{C} \pm 5^{\circ}\text{C}$ and the humidity indication card shows the humidity is $>10\%$ before opening the vacuum-sealed bag.
 - Device mounting cannot be finished within 72 hours at factory conditions of $\leq 30^{\circ}\text{C}/60\%$
4. If baking is required, devices may be baked for 48 hours at $125^{\circ}\text{C} \pm 5^{\circ}\text{C}$.

NOTE

As the plastic package cannot be subjected to high temperature, it should be removed from devices before high temperature (125°C) baking. If shorter baking time is desired, please refer to *IPC/JEDECJ-STD-033* for baking procedure.

8.2. Manufacturing and Welding

Push the squeegee to apply the solder paste on the surface of stencil, thus making the paste fill the stencil openings and then penetrate to the PCB. The force on the squeegee should be adjusted properly so as to produce a clean stencil surface on a single pass. To ensure the module soldering quality, the thickness of stencil for the module is recommended to be 0.18mm. For more details, please refer to [document \[5\]](#).

It is suggested that the peak reflow temperature is 235~245°C (for SnAg3.0Cu0.5 alloy). The absolute max reflow temperature is 260°C. To avoid damage to the module caused by repeated heating, it is suggested that the module should be mounted after reflow soldering for the other side of PCB has been completed. Recommended reflow soldering thermal profile is shown below.

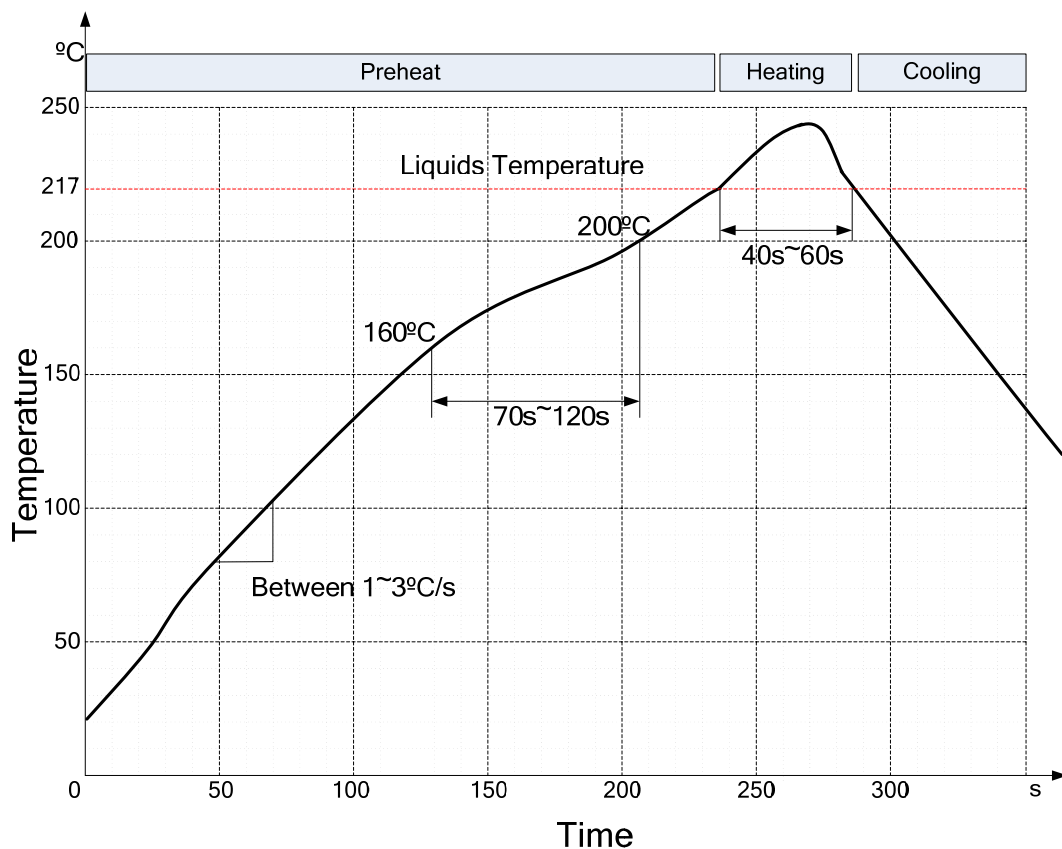


Figure 37: Reflow Soldering Thermal Profile

8.3. Packaging

The information will be added in the future version of this document.

9 Appendix A References

Table 31: Related Documents

SN	Document Name	Remark
[1]	Quectel_BG96_Power_Management_Application_Note	BG96 Power Management Application Note
[2]	Quectel_BG96_AT_Commands_Manual	BG96 AT Commands Manual
[3]	Quectel_BG96_GNSS_AT_Commands_Manual	BG96 GNSS AT Commands Manual
[4]	Quectel_RF_Layout_Application_Note	RF Layout Application Note
[5]	Quectel_Module_Secondary_SMT_User_Guide	Module Secondary SMT User Guide

Table 32: Terms and Abbreviations

Abbreviation	Description
AMR	Adaptive Multi-rate
bps	Bits Per Second
CHAP	Challenge Handshake Authentication Protocol
CS	Coding Scheme
CSD	Circuit Switched Data
CTS	Clear To Send
DC-HSPA+	Dual-carrier High Speed Packet Access
DFOTA	Delta Firmware Upgrade Over The Air
DL	Downlink
DTR	Data Terminal Ready

DTX	Discontinuous Transmission
EFR	Enhanced Full Rate
ESD	Electrostatic Discharge
FDD	Frequency Division Duplex
FR	Full Rate
GMSK	Gaussian Minimum Shift Keying
GSM	Global System for Mobile Communications
HR	Half Rate
HSPA	High Speed Packet Access
HSDPA	High Speed Downlink Packet Access
HSUPA	High Speed Uplink Packet Access
I/O	Input/Output
Inorm	Normal Current
LED	Light Emitting Diode
LNA	Low Noise Amplifier
LTE	Long Term Evolution
MIMO	Multiple Input Multiple Output
MO	Mobile Originated
MS	Mobile Station (GSM engine)
MT	Mobile Terminated
PAP	Password Authentication Protocol
PCB	Printed Circuit Board
PDU	Protocol Data Unit
PPP	Point-to-Point Protocol
QAM	Quadrature Amplitude Modulation

QPSK	Quadrature Phase Shift Keying
RF	Radio Frequency
RHCP	Right Hand Circularly Polarized
Rx	Receive
SISO	Single Input Single Output
SMS	Short Message Service
TDD	Time Division Duplexing
TX	Transmitting Direction
UL	Uplink
UMTS	Universal Mobile Telecommunications System
URC	Unsolicited Result Code
(U)SIM	(Universal) Subscriber Identity Module
V _{max}	Maximum Voltage Value
V _{norm}	Normal Voltage Value
V _{min}	Minimum Voltage Value
V _{IHmax}	Maximum Input High Level Voltage Value
V _{IHmin}	Minimum Input High Level Voltage Value
V _{ILmax}	Maximum Input Low Level Voltage Value
V _{ILmin}	Minimum Input Low Level Voltage Value
V _{Imax}	Absolute Maximum Input Voltage Value
V _{Imin}	Absolute Minimum Input Voltage Value
V _{OHmax}	Maximum Output High Level Voltage Value
V _{OHmin}	Minimum Output High Level Voltage Value
V _{OLmax}	Maximum Output Low Level Voltage Value
V _{OLmin}	Minimum Output Low Level Voltage Value

VSWR	Voltage Standing Wave Ratio
------	-----------------------------

WCDMA	Wideband Code Division Multiple Access
-------	--

10 Appendix B GPRS Coding Schemes

Table 33: Description of Different Coding Schemes

Scheme	CS-1	CS-2	CS-3	CS-4
Code Rate	1/2	2/3	3/4	1
USF	3	3	3	3
Pre-coded USF	3	6	6	12
Radio Block excl.USF and BCS	181	268	312	428
BCS	40	16	16	16
Tail	4	4	4	-
Coded Bits	456	588	676	456
Punctured Bits	0	132	220	-
Data Rate Kb/s	9.05	13.4	15.6	21.4

11 Appendix C GPRS Multi-slot Classes

Twenty-nine classes of GPRS multi-slot modes are defined for MS in GPRS specification. Multi-slot classes are product dependent, and determine the maximum achievable data rates in both the uplink and downlink directions. Written as 3+1 or 2+2, the first number indicates the amount of downlink timeslots, while the second number indicates the amount of uplink timeslots. The active slots determine the total number of slots the GPRS device can use simultaneously for both uplink and downlink communications.

The description of different multi-slot classes is shown in the following table.

Table 34: GPRS Multi-slot Classes

Multislot Class	Downlink Slots	Uplink Slots	Active Slots
1	1	1	2
2	2	1	3
3	2	2	3
4	3	1	4
5	2	2	4
6	3	2	4
7	3	3	4
8	4	1	5
9	3	2	5
10	4	2	5
11	4	3	5
12	4	4	5

12 Appendix D EDGE Modulation and Coding Schemes

Table 35: EDGE Modulation and Coding Schemes

Coding Schemes	Modulation	Coding Family	1 Timeslot	2 Timeslot	4 Timeslot
CS-1:	GMSK	/	9.05kbps	18.1kbps	36.2kbps
CS-2:	GMSK	/	13.4kbps	26.8kbps	53.6kbps
CS-3:	GMSK	/	15.6kbps	31.2kbps	62.4kbps
CS-4:	GMSK	/	21.4kbps	42.8kbps	85.6kbps
MCS-1	GMSK	C	8.80kbps	17.60kbps	35.20kbps
MCS-2	GMSK	B	11.2kbps	22.4kbps	44.8kbps
MCS-3	GMSK	A	14.8kbps	29.6kbps	59.2kbps
MCS-4	GMSK	C	17.6kbps	35.2kbps	70.4kbps
MCS-5	8-PSK	B	22.4kbps	44.8kbps	89.6kbps
MCS-6	8-PSK	A	29.6kbps	59.2kbps	118.4kbps
MCS-7	8-PSK	B	44.8kbps	89.6kbps	179.2kbps
MCS-8	8-PSK	A	54.4kbps	108.8kbps	217.6kbps
MCS-9	8-PSK	A	59.2kbps	118.4kbps	236.8kbps