



ix104 USER'S HANDBOOK





iX104 USER'S HANDBOOK

Xplore Technologies® has made every effort to ensure the accuracy and completeness of this document; however, because ongoing development efforts are made to continually improve the capabilities of our products, we cannot guarantee the accuracy of the contents of this document. We disclaim liability for errors, omissions, or future changes herein.

Xplore and the Xplore logo are registered trademarks of Xplore Technologies Corp.; iX104 is a trademark of Xplore Technologies Corp.

Kensington and MicroSaver are registered trademarks of the Kensington Technology Group.

Microsoft is a registered trademark of Microsoft Corporation. Windows 2000 Professional, Windows XP Professional, and Windows XP Tablet PC Edition are trademarks of Microsoft Corporation.

PCMCIA and CardBus are registered trademarks of the Personal Computer Memory Card International Association.

Intel, Pentium, and SpeedStep are registered trademarks of Intel Corporation.

Wi-Fi is a trademark of the Wireless Ethernet Compatibility Alliance (WECA).

FireWire is a registered trademark of Apple Computer, Inc.


ISODAMP is a registered trademark of Aearo Company.

All other brands, product names, company names, trademarks and service marks used herein are property of their respective companies.

Copyright © 2003 Xplore Technologies Corp. All rights reserved. No part of this publication may be copied, reproduced, or translated, without the prior written consent of Xplore Technologies. No part of this publication may be stored or transmitted in any electronic form without the prior consent of Xplore Technologies. Any unauthorized use is a violation of copyright laws.

PN: 95-01016

Edition: Second, July 2003



DECLARATION OF CONFORMITY according to FCC Part 15

Responsible Party Name: Xplore Technologies Corp.

Address: 14000 Summit Drive, Suite 900, Austin, Texas 78728

Telephone: 512.336.7797

Declares that product: Model Series: iX104 Complies with Part 15 of the FCC Rules

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and, (2) This device must accept any interference received, including interference that may cause undesired operation.



WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance may void the user's authority to operate this equipment.

For more information about FCC rules and their applicability to the iX104, see Appendix E, "Agency Notices."

Warranty Information

The iX104 and iX104-TPC are backed by a standard 12-month International Limited Warranty. An extended International Limited Warranty is available. Check the service kit included with your computer for warranty terms and conditions.

Important safety information

Before you use the iX104 or the iX104 dock, read these safety instructions and the operation instructions in this handbook.

Failure to observe all these instructions voids the Limited Warranty and may lead to suspension or denial of services to the offender, or legal action, or both.

Follow any special regulations governing the use of the computer and, if radio-enabled, always switch it off in areas where radio devices are forbidden or when the radio device can cause interference or danger.

Always follow any safety laws and regulations pertaining to the use of cell phones and two-way radios, because these laws and regulations typically apply to the use of the wireless-enabled iX104.

Observe all restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, and wherever blasting operations are in progress or in any area in which restrictions on radio transmissions are imposed.

Switch off the iX104 when in an aircraft. The iX104 is not FAA-approved for use on aircraft. The effect of the use of the iX104 in aircraft is unknown. Using the iX104 in an aircraft may affect aircraft instrumentation, communication, and performance; may disrupt the network; and may be illegal.

Operating the wireless-enabled iX104 may interfere with the functioning of inadequately protected medical devices such as pacemakers. Consult a physician or the manufacturer of the medical device if you have any questions.

Radio signals from your iX104 will not affect the operation of most modern equipment, but certain electronic equipment, including automotive systems, may not be shielded against radio signals from your iX104. Check with the manufacturer of your motor vehicle or the manufacturer's representative to determine whether using the iX104 will present any safety issues.

Avoid using the iX104 in any environment that requires your full attention, such as when driving a vehicle. If you need to use your iX104 while driving, have a passenger use it for you or find a safe location to halt your vehicle.

 **WARNING**
Use only battery types specified in this handbook. Using any other type of battery can be dangerous and can disable the iX104.

 **WARNING**
Do not use any dock or any other accessory or attachment that is not manufactured or supplied by Xplore or an authorized Xplore accessories supplier. Use of any accessory or attachment that is not supplied or approved for use with the iX104 by Xplore is not permitted because it may cause hazards.

Operate the iX104 only from the type of power source indicated on the marking label. (See page 53 for more information about the battery and power supply.) Route power supply cords so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords at plugs and convenience receptacles, and at the point where cords exit from the computer or its dock. Do not overload wall outlets, extension cords, or integral convenience receptacles because this can cause fire or electric shock.

Unplug the iX104 and refer the iX104 and dock for service to qualified service personnel if any of the following conditions occur:

- The power supply cord or plug is damaged.
- The iX104 or dock does not operate normally when you follow the instructions in this book.
- The iX104 or dock exhibits a distinct change in performance.

Adjust only controls for which there are instructions in this book. An improper adjustment of other controls can result in damage and may require extensive work by a qualified technician to restore the iX104 or dock to normal operation.



CAUTION
Avoid prolonged physical contact with the exposed metal surfaces on the front and back of the computer. While the computer may not feel hot to the touch, if you maintain physical contact with the computer for a long time (for example, if you rest the computer on your lap for a long time), your skin may suffer low-heat injury. In addition, be careful when you remove a PC card that has been used for a long time, because the card may be hot.

Contents

Welcome	13
Who this handbook is for	14
About your computer	15
Package contents	16
Optional accessories	16
Contacting Xplore	18
 1 Getting Started	 19
Getting to know your iX104	19
Features and controls	19
Front view	19
Back view	20
Top view	22
Bottom view	23
Right side view	24
Left side view	25
LED indicators	26
Quick-start guide	28
Application, Windows, and hot keys	28
Navigation keys	31
Navigation controls with the tablet in portrait mode	31
Navigation controls with the tablet in landscape mode	32

2 Using the iX104 33

Turning on the computer	33
Turning off the computer	34
Using the Reset switch	35
Suspending and resuming operation	36
Suspending operation	37
Resuming operation	38
Using the pen	39
Using the pen to perform mouse functions	40
Changing the pen double-click speed	41
Positioning the pen and pen tether	42
Using the joystick (the navigation control key)	43
Changing the screen orientation	44
Adjusting the screen brightness	45
Disabling automatic backlight control	45
Docking the iX104	46
Connecting devices	47
Connecting FireWire devices	47
Connecting to a local area network	48
Connecting USB-compatible devices	48
Connecting an external microphone	49
Adjusting microphone volume	49
Connecting a headphone or speakers	50
Adjusting headphone or speaker volume	50
Connecting a monitor or projection panel	51
Activating the monitor or projection panel	51
Connecting an XPL snap-on expansion module	52

Using the battery	53
Charging the battery pack	53
If you do not have an external battery charger	53
If you have an external battery charger	54
Removing and installing the battery	55
Removing the battery	55
Installing the battery	57
Discarding a battery	57
Using power options	58
Changing the computer's power schemes	58
Changing battery alarm settings	59
Checking battery power status	59
Selecting power settings	60
Enabling Hibernation mode	60
Tips for conserving battery power	61
Programming hot keys	62
Programming hot keys to start applications, open documents, or go to a Web site	63
Programming hot keys to perform pre-defined functions	67
Programming hot keys to perform other key functions	69

3	Maintaining the iX104	73
----------	------------------------------	-----------

Caring for the computer	73
Checking power cords and connectors.	73
Protecting the computer from damage.	73
Preventing the computer from overheating	74
Storing the computer	75
Caring for the display screen	75
Protecting the display screen	75

Calibrating the pen	77
Calibrating the pen for an iX104 touch screen	78
Calibrating the pen for an iX104-TPC active screen.....	79
When to replace the pen	80
 A Troubleshooting	 81
B Using BIOS and AOS Functions	85
Enabling manual LCD backlight control	87
 C Glossary	 89
D Hardware Specifications	93
E Agency Notices	101
Index	107


Welcome

Welcome to the Xplore Technologies® iX104™, the rugged pen tablet designed, tested, and manufactured to meet the environmental and physical real-world challenges faced by today's mobile workers. The iX104 not only works the way you do, but can also take the abuses of everyday wear and tear. The iX104 design is based on years of experience in rugged mobile applications.

Advanced technology, innovative design, and a rugged case are just a few highlights of your iX104 system. Equally important is Xplore's commitment to ensuring that you are treated with the same respect and honesty you offer to your customers and peers every day.

Who this handbook is for

This handbook provides instructions for using the Xplore Technologies iX104 Pen Tablet (iX104) and iX104 Pen Tablet PC (iX104-TPC).

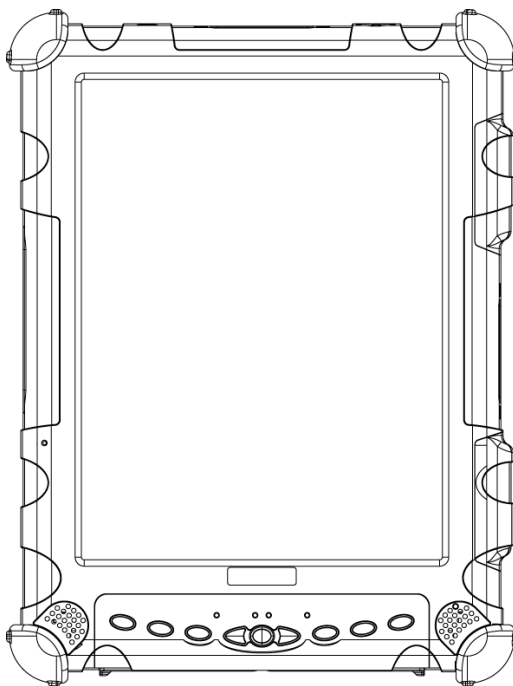

This handbook assumes that you have basic experience using computers and Microsoft® Windows®.

About your computer

The iX104 and the iX104-TPC are high-performance, pen-based computers that support Microsoft Windows XP® Professional Tablet PC Edition, Windows XP Professional, and Windows 2000 Professional operating systems.

The iX104 has a *touch screen* that you control by using your finger, the pen included with the iX104, or any suitable pointing device. The iX104-TPC has an *active screen* that you control by using the special, enhanced pen included with the iX104-TPC.

Note

In this handbook, all information applies to both the iX104 and iX104-TPC unless otherwise noted.

The iX104 and iX104-TPC have been engineered and tested to meet Military Standards for Environmental Extremes (MIL STD 810F). Your computer includes the following features that make it exceptionally rugged and durable:

- Durable, long-lasting, dense magnesium enclosure
- Interior and exterior multi-layer magnesium frames and cavities
- ISODAMP® shock absorbing materials in patented bumpering system and gasket protection mechanisms
- Shock-isolated hard disk
- Integrated, protected wireless LAN and WAN antennas for dual mode operation
- Locked in place memory, cables, and connectors
- Proprietary thermal management system

Package contents

Check to make sure your iX104 package includes the following items:

- Quick Start Guide
- Battery pack
- Power cord
- AC adapter
- Pen
- Pen tether
- iX104 pen tablet or iX104-TPC pen tablet PC
- Warranty information kit
- This handbook

Optional accessories

Your package also includes any optional accessories you ordered.

Optional accessories

Docking options

- iX104 office dock
- iX104 vehicle dock

Carrying cases

- Ballistic nylon hands-free carry case
 - Ballistic nylon portfolio case
-

Optional accessories (continued)

Storage options

- External USB floppy disk drive
 - External USB CD-ROM drive
-

Memory

- 512 MB SODIMM, 133 MHz
 - 40 GB 2.5-inch rugged hard disk
-

Power options

- AC adapter with U.S. cord
 - Main battery pack (4500 mAh)
 - Extended life battery pack (9000 mAh)
 - Auto adapter (cigarette lighter adapter)
-

Additional accessories

- USB non-rugged mini keyboard (83-key)
 - USB rugged, backlit mini keyboard (83-key)
 - Screen protectors (2-pack)
 - Passive stylus (for use with the iX104)
 - Active stylus (for use with the iX104-TPC)
 - Pen tether
 - Hand straps
-

Contacting Xplore

If you purchased your iX104 from an authorized Xplore dealer, contact the dealer for service and support.

If you purchased your iX104 directly from Xplore, use any of the following methods to contact Xplore for service and support:

Toll free	1-866-296-8541, extension 222
Fax	1-512-336-7791
E-mail	support@xploretech.com
Web site	http://www.xploretech.com

Before you contact Xplore, have the following information ready so that the customer support representative can quickly provide a solution:

Product name: iX104
Product serial number
Purchase date
Conditions under which the problem occurred
Any error messages that were displayed
Type of device connected, if any

The serial number is on the back of the computer. See page 20.

1 Getting Started

This chapter gives you an overview of your iX104 and includes a quick-start guide to iX104 keys.


Getting to know your iX104

For more information about each component, see Chapter 2.

This section shows the locations of some of your computer's important components.

Features and controls

Front view

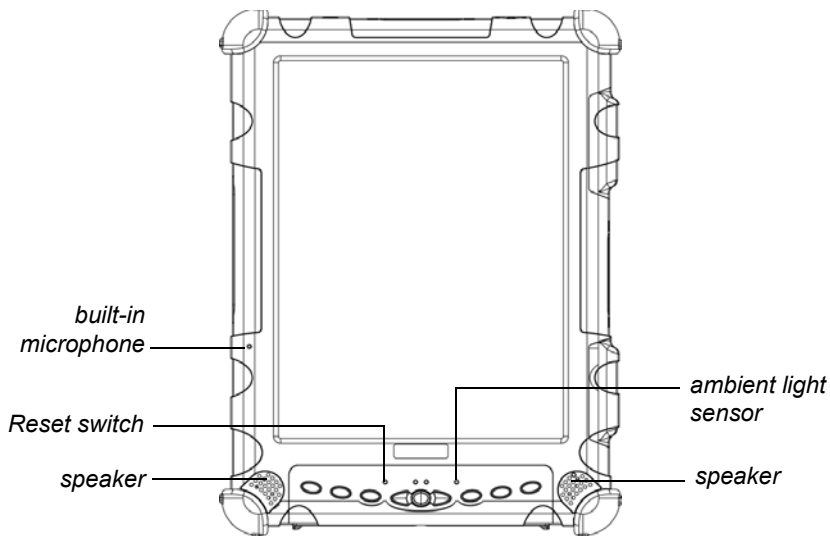


Built-in microphone – Enables you to input mono audio. Includes noise cancellation.

Reset switch – Enables you to turn off the computer when using the Power On/Off key is not effective. (See page 35.)

Speakers – Enable you to listen to stereo audio files. Sealed to provide protection from the environment.

Ambient light sensor – Automatically controls the amount of backlight sent to the screen. Provides optimum brightness for the lighting conditions in which you are working.

Back view

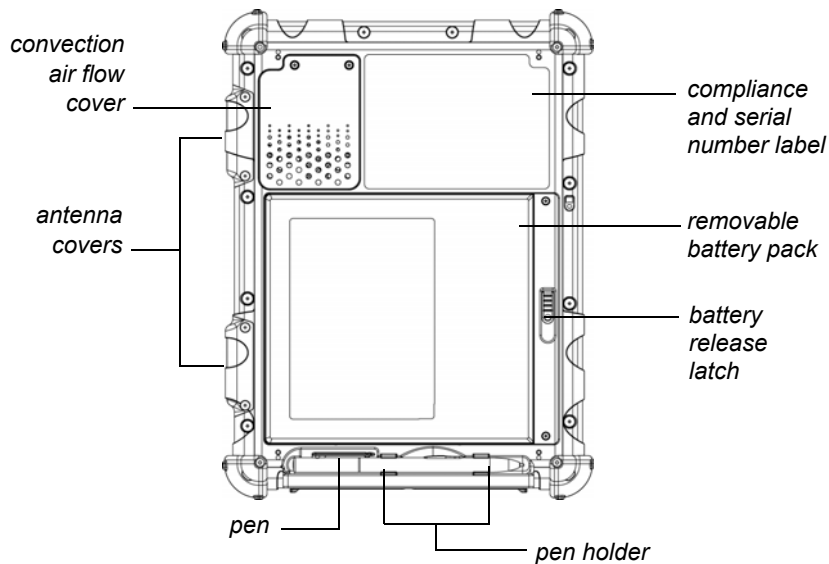

Convection air flow cover – Magnesium cover over the thermal transfer bay that manages heat movement out of the computer.

Antenna covers – For optional wireless LAN and WAN models, protect and secure the radio antennas (accessible by authorized service personnel only).


Pen – The main device you use to enter data and control applications (instead of a mouse or a keyboard). Also called the *stylus*. See “Using the pen” on page 39.

Pen holder – Provides a place to secure the pen when you are not using it.

Battery release latch – Provides access to the battery.

Removable battery pack – Battery that runs the computer when battery power is required.

Compliance and serial number label – Includes regulatory compliance numbers and the computer’s unique serial number.

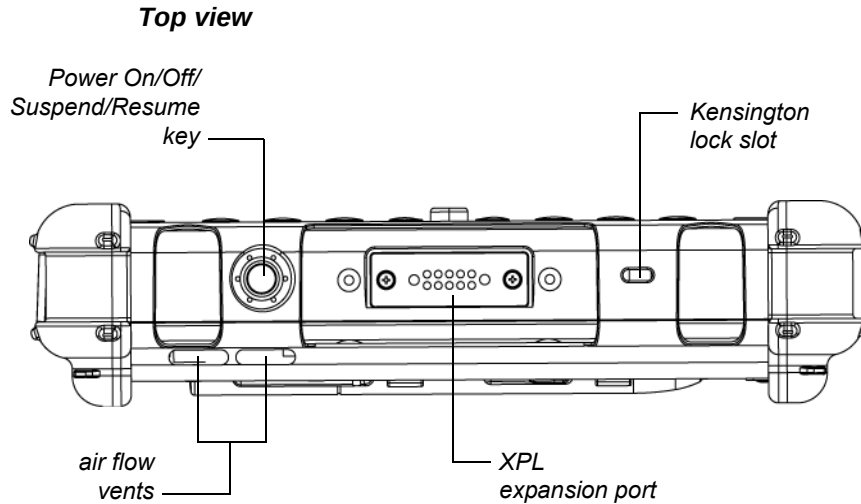


Power On/Off/Suspend/Resume key – Press the key to turn the computer on or off, or to suspend or resume operation.

Air flow vents – Helps prevent the computer from overheating by forcing heat away from the computer. (Do not block the vents.)

XPL expansion port – A USB port (compliant with USB Standard Revision 1.1) that enables you to connect an XPL snap-on expansion module for devices such as cameras, radios, and fingerprint scanners.

Kensington™ lock slot – Connector for the optional Kensington MicroSaver™-compatible security cable.

Contact your reseller for information about the XPL expansion module and the Kensington security cable.

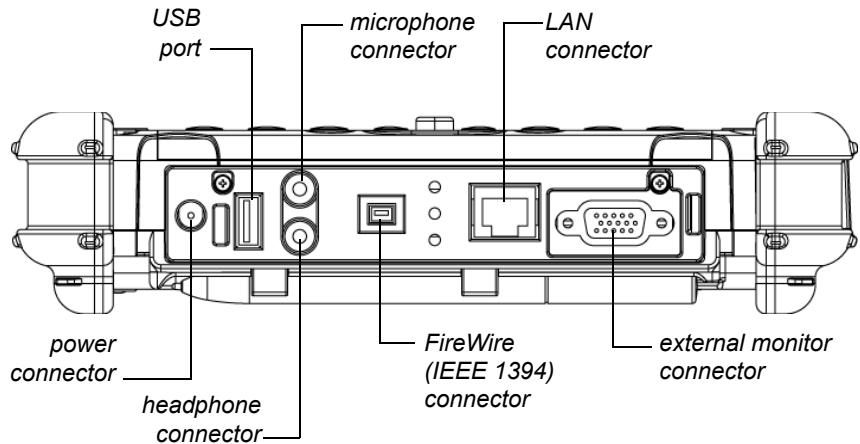Bottom view

The connectors on the bottom of the computer are located behind the outer doors.

Power connector – For the optional AC adapter or auto adapter. (See “Optional accessories” on page 16.)

USB 2.0 port – For Universal Serial Bus devices (compliant with USB Standard Revision 2.0).

Headphone connector – For stereo headphones or speakers.

Microphone connector – For an external microphone.

Firewire connector – For FireWire® (IEEE 1394) devices such as digital video cameras.

LAN connector – For connecting a standard RJ-45 connector to the computer’s internal local area network (LAN) card.


External monitor connector – For an external monitor or projection panel.

The optional Office and Vehicle Docks include additional USB ports. See “Optional accessories” on page 16.

Chapter 1. Getting Started

Getting to know your iX104


Right side view

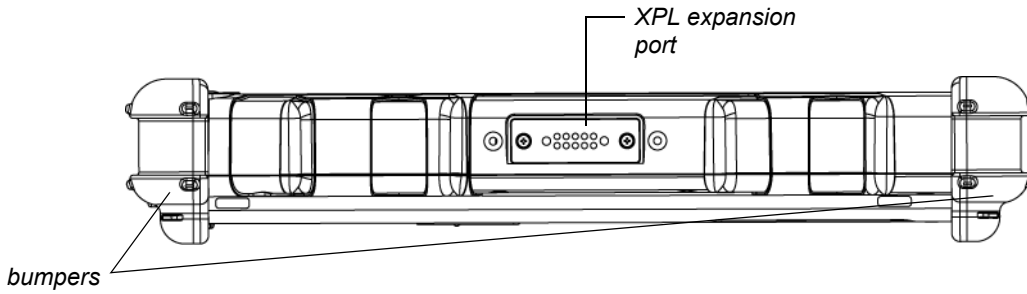

Bumpers – Fabricated from rugged material. Raised to help protect the computer from damage.

Contact your reseller for information about the XPL expansion module and the Kensington security cable.

XPL expansion port – A USB port (compliant with USB Standard Revision 1.1) that enables you to connect an XPL snap-on expansion module for devices such as cameras, radios, and fingerprint scanners.

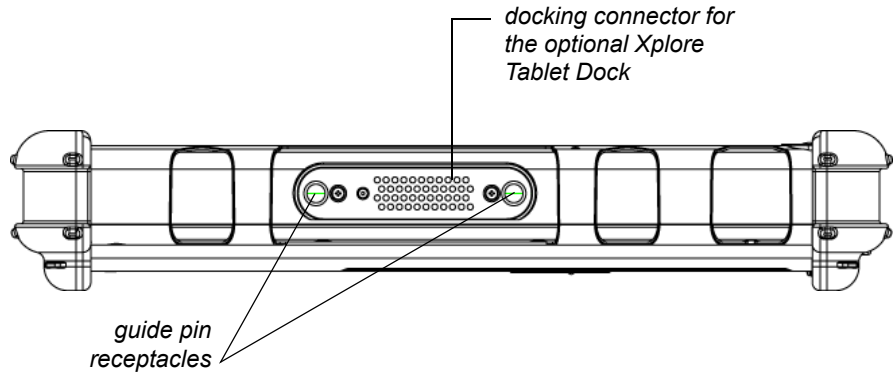Left side view


See “Optional accessories” on page 16.

Docking connector – Enables you to connect the optional Xplore Tablet Dock.

Guide pin receptacles – Help assure secure connection of the optional Xplore Tablet Dock.

LED indicators

The LED indicator lights show the status of system functions such as power and battery levels.

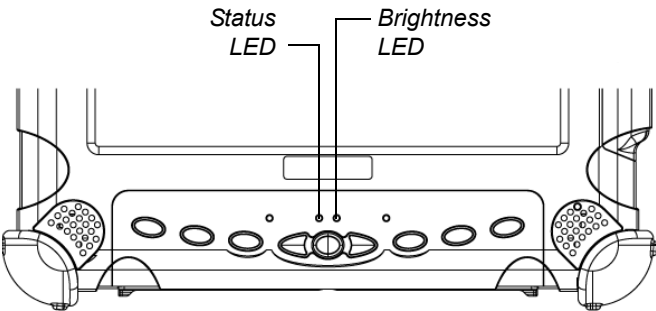

The following table defines the various LED states.

Table 1 Status LED indicator

Mode/State	LED State	Meaning
On state	green, continuous	The computer is on, ready for use, and functioning normally. The battery is fully charged.
Charging	green, blinking	The AC adapter is plugged in and the battery is charging.
Off state	off (no light)	The computer is off.
Suspend mode	yellow, continuous	The computer is on and is in Suspend or Hibernation mode.
Thermal control	yellow, blinking	The computer is on and is in Warm-up mode, with the LCD and backlight off. After the system has warmed to a safe level, the LCD and backlight turn on.

Table 1 *Status LED indicator (continued)*

Mode/State	LED State	Meaning
On state	red, blinking	The computer is powered on, running under battery power, and the charge level in the battery is at a minimum warning level. Plug the computer into an AC/DC power source or install a charged battery.
On state	red, continuous	• The computer is on, running under battery power, and the charge level in the battery has reached a critical level. Plug the computer into an AC/DC power source or install a charged battery. • The computer has encountered a fault and is preventing normal operation. (Contact your help desk.)

Table 2 *Brightness LED indicator*

Mode/State	LED State	Meaning
Auto state	yellow, continuous	Automatic backlight control is active.
Manual	off	Manual backlight control is enabled. The backlight is under your manual control.

Quick-start guide

This section is a quick guide to using the main features of your computer. (See Chapter 2 for detailed information.)

Application, Windows, and hot keys

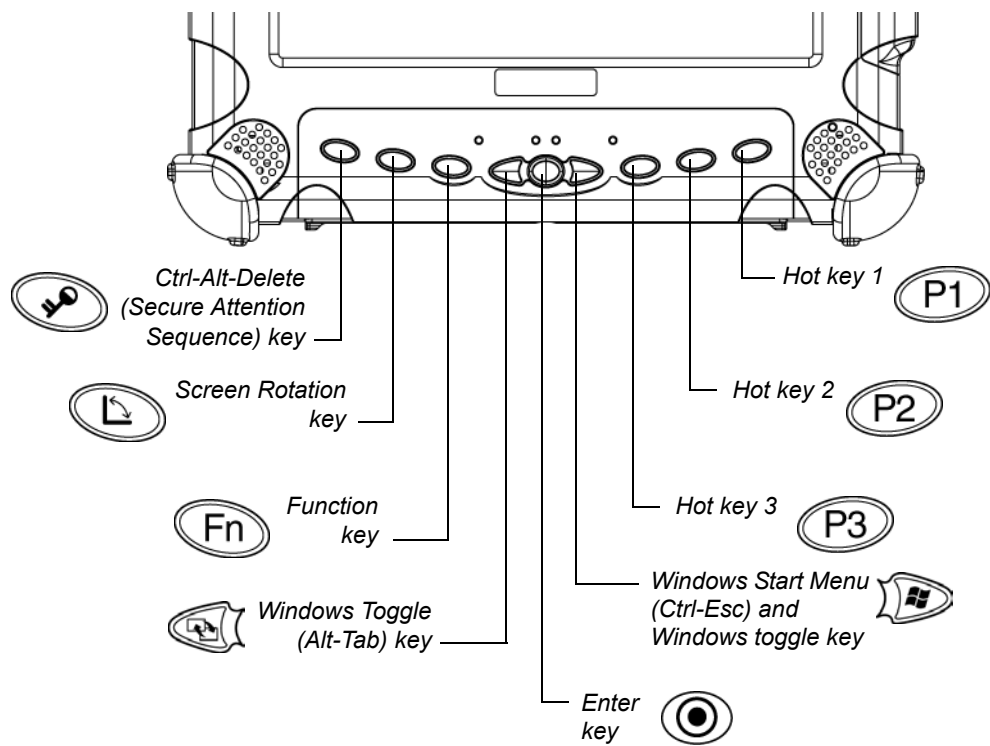


Table 3 Main keys

Press this key...	To perform this function
	- Log on after resuming operation from power management, powering on, or locking. - After logging on, launch Windows Task Manager.
	Rotate screen orientation between portrait (vertical) and landscape (horizontal).
	Use in combination with another key to perform various functions. (See page 30.)
	Toggle between programs and/or windows (the same as pressing Alt-Tab on a keyboard).
	Perform the same functions as the Enter key on a keyboard.
	Open the Windows Start menu.
	Open Help, or perform a different function that you program this key to perform.
	Open Internet Explorer, or perform a different function that you program this key to perform.
	Open your email application, or perform a different function that you program this key to perform.


Table 4 *Function mode keys*

Press these keys...	To perform this function
 	Dim the brightness of the LCD backlight.
 	Increase the brightness of the LCD backlight.
 	Send video display to a monitor or projection panel connected to the computer (and back to the computer again). (This key combination is not programmable.)
 	Default function: Select the input device. You can program this key combination to perform a different function.
 	Default function: Open the pen calibration program. You can program this key combination to perform a different function.
 	Perform the same functions as the Esc key on a keyboard.

Navigation keys


The following illustrations and tables provide a quick reference for using the navigation keys.

Navigation controls with the tablet in portrait mode

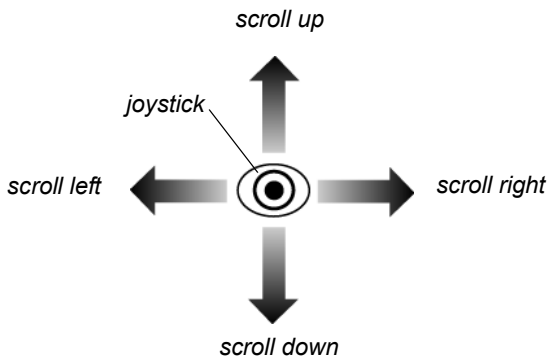

Press the Function key...	and move the joystick in this direction...	to perform this function
		Page Up
		Page Down
		Shift+Tab
		Tab

Navigation controls with the tablet in landscape mode

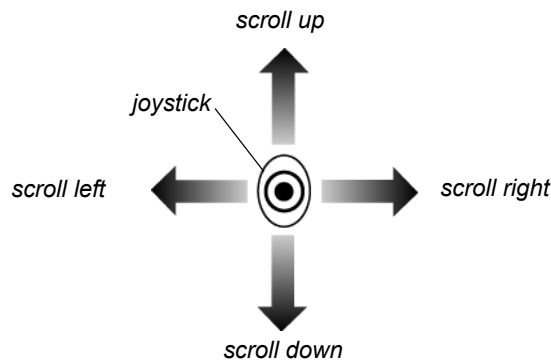

Press the Function key...	and move the joystick in this direction...	to perform this function
		Page Up
		Page Down
		Shift+Tab
		Tab


2 Using the iX104

This chapter contains detailed instructions for using your computer.

Turning on the computer


1. Make sure the computer is off.

*When the computer is off,
the Status LED is off.*

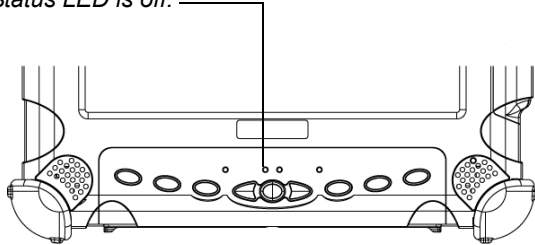

2. Make sure the battery is charged or that the computer is plugged in to an external power source.
3. Press the Power On/Off/Suspend/Resume button.

*Power On/Off/
Suspend/Resume
button*

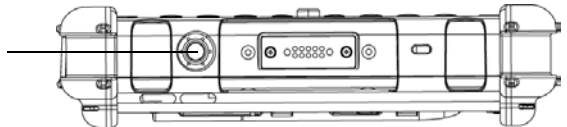


Turning off the computer

When the computer is in Suspend mode, the Status LED is continuously yellow.

1. If the computer is in Suspend mode, press the Power On/Off/Suspend/Resume button to resume operation. (See page 37 for information about Suspend mode.)


*Power On/Off/
Suspend/Resume
button*

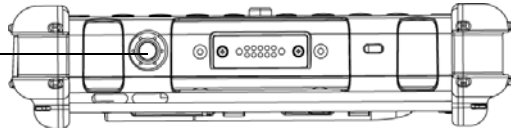

2. Make sure the battery is charged or that the computer is plugged in to an external power source.
3. Save your work and close all programs.
4. From the Windows Start menu, click Turn Off Computer.
5. The Turn off computer dialog box opens.
6. Click Turn Off.

Using the Reset switch

If the computer does not seem to be accepting input and you cannot turn it off by using the method described in “Turning off the computer,” press the Reset switch. (Use a ball point pen or similar instrument to press the switch).

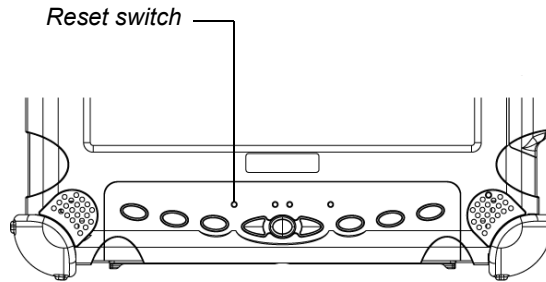

Note

Use the Reset switch only if you cannot turn off the computer by any other means, because you may lose unsaved data.

Suspending and resuming operation

To conserve battery power when you do not want to turn off the computer or when you need to install a charged battery pack, put the computer into Suspend mode. (You can suspend operation without closing any programs or Windows.)

When you suspend operation:

- Programs that are running stop (but do not close).
- Active data is saved.
- The system enters one of the following low-power modes:
 - Suspend-to-RAM mode – The Status LED light is continuously yellow. Active data is saved in RAM and most other components are turned off.

Although the computer uses very little power when in Suspend-to-RAM mode, eventually the battery's power does run out. If you will not be using the computer for an extended period of time, turn the computer off instead of using Suspend-to-RAM mode.

- Hibernation mode – Active data is saved on the hard disk and power usage is reduced to the same level as when the computer is turned off. In Hibernation mode, there is no danger of losing data if battery power is lost.

Note

For more information, see “Using power options” on page 58.

Notes

If you have set your computer to turn power off (in the Power Options utility in Windows Control Panel), you cannot suspend operation. To change power settings, see “Using power options” on page 58.

If the Suspend action of the Power On/Off/Suspend/Resume button has been disabled to prevent accidental interruption, pressing the button does not suspend the computer. You must use a software application to suspend the computer. For more information, contact your help desk or your iX104 dealer.

If your computer is connected to a network, the network may automatically log you off after a period of inactivity while system operation is suspended. Contact your help desk or system administrator to learn your log-off time limit.


Suspending operation

Use one of the following methods to suspend operation:

Method 1

Press the Power On/Off/Suspend/Resume button.


*Power On/Off/
Suspend/Resume
button*

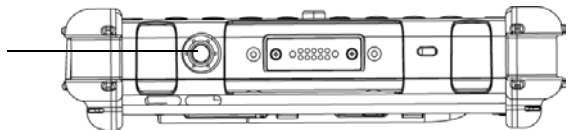**Method 2**

1. From the Windows Start menu, press Turn Off Computer.
2. The Turn off computer dialog box opens.

3. Press Stand By.

When operation is suspended, the Status LED displays a continuous yellow light.

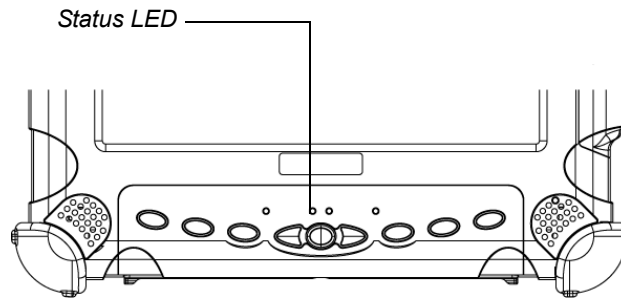


Resuming operation

To resume operation when the computer is in Suspend mode, press the Power On/Off/Suspend/Resume button.

Note

Press the button only *once*.

*Power On/Off/
Suspend/Resume
button*

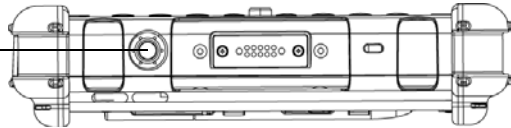

After a minute or two, the computer resumes normal operation. When the Status LED displays a continuous green light, you can begin using the computer.

Note

Resuming operation from Hibernation mode takes a little longer than from Suspend-to-RAM mode.

Using the pen

You can use the pen to select items and to navigate through programs.

If your computer is an iX104-TPC (active screen):

Use the special multi-function pen provided with the computer.

If your computer is an iX104 (touch screen):

Use the pen provided with the computer, another similar pointing device, or your finger.


**WARNING**

Do not use items such as a ball point pen or a screwdriver that can damage the computer. Damage caused by using an item not provided with the computer is not covered by the iX104 warranty.

Note

Before you use the pen the first time, or if the action you are trying to perform does not occur when you use the pen, calibrate the pen as described in “Calibrating the pen” on page 77.

Using the pen to perform mouse functions

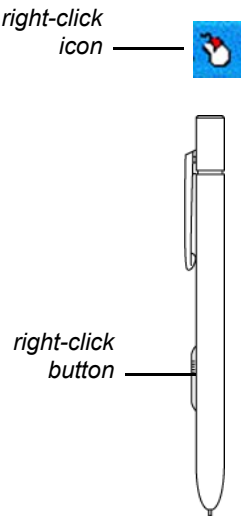

To perform this function...	Do this
Select an object (left button click).	Tap the pen tip once on the object.
Perform a double-click.	Quickly tap the pen tip twice on the object.
Perform a right-click.	If your computer is an iX104 (touch screen): In the Windows taskbar, press the right-click icon; then click the object. If your computer is an iX104-TPC (active screen): Hold the pen directly on the object until the right-click icon appears. or Press the right-click button on the pen while you click the object.
Move or drag an object.	Place the pen tip on the object; then continue to hold the pen tip against the screen as you move the pen.

Changing the pen double-click speed

The pen double-click speed is in sync with the mouse double-click speed. To change the speed:

- 1.** Click the Windows Start button.
- 2.** Click the Settings option.
- 3.** Click the Control Panel option.
- 4.** In the Control Panel window:

If your computer is an iX104 (touch screen):

Click the Pointer Devices icon.


If your computer is an iX104-TPC (active screen):

Click the Tablet and Pen Settings icon.


- 5.** Click the Windows tab.
- 6.** Follow the instructions that appear in the Windows tab.

Positioning the pen and pen tether

The pen tether helps prevent the loss of your pen. The following illustration shows how to position the pen and pen tether.

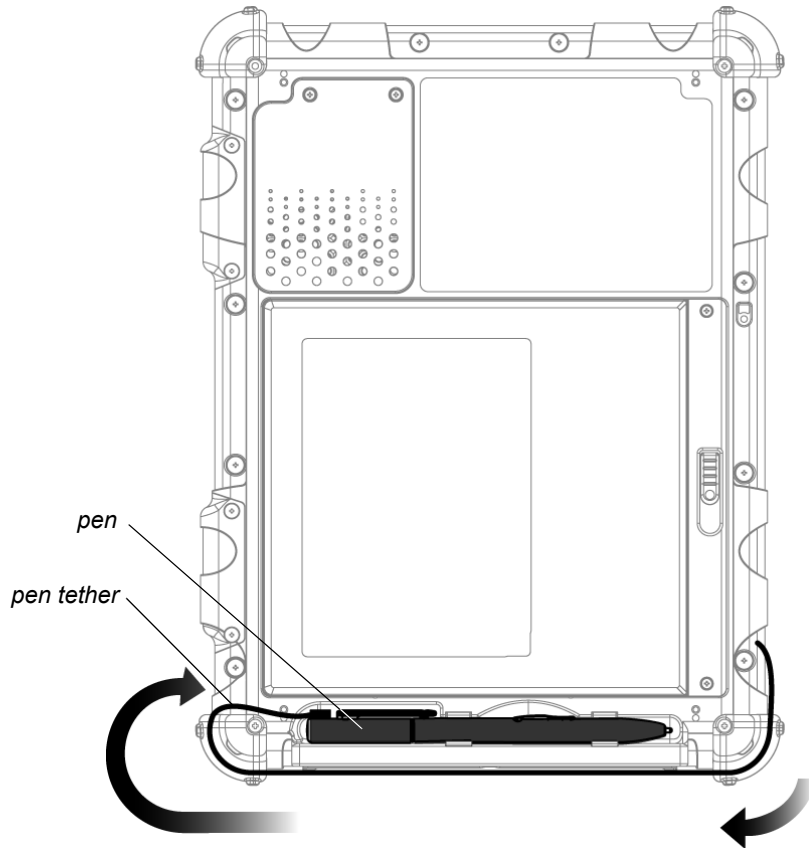

Using the joystick (the navigation control key)

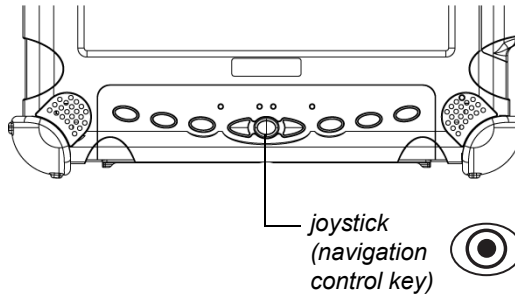

Press the joystick to perform the same functions as pressing Enter on a keyboard.

Push the joystick up, down, left or right to move a highlighted item accordingly (the same as pressing the arrow keys on a keyboard). Use the Fn key in combination with the joystick to perform other functions, such as Page Up and Tab.


Note

See page 31 and page 32 for diagrams of how to use the joystick and other navigation control buttons.

Changing the screen orientation



To rotate the screen orientation from portrait (vertical) to landscape (horizontal) mode or from landscape to portrait mode, press the screen rotation key.

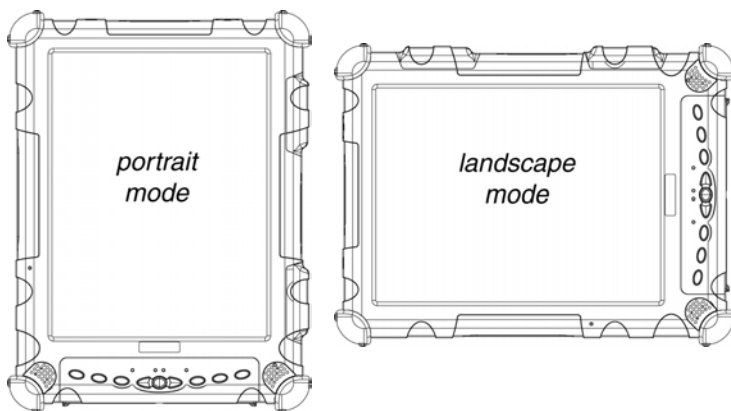

Adjusting the screen brightness

To dim the brightness of the LCD backlight:

Press the Function key and the Windows toggle key.



To increase the brightness of the LCD backlight:


Press the Function key and the Windows Start key.



Disabling automatic backlight control

When the ambient light sensor is enabled, the computer automatically controls the amount of backlight sent to the screen to provide optimum brightness for the lighting conditions in which you are working.


When the ambient light sensor is enabled, the Brightness LED glows continuously yellow. When the ambient light sensor is disabled and the backlight is under manual control, the Brightness LED is off.

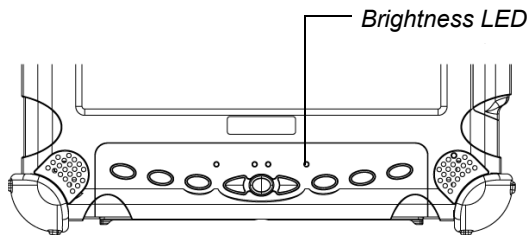

To disable automatic backlight control, see “Enabling manual LCD backlight control” on page 87.

Docking the iX104

If you have the optional Xplore Tablet Dock (see “Optional accessories” on page 16), connect it to the iX104 at the docking port.

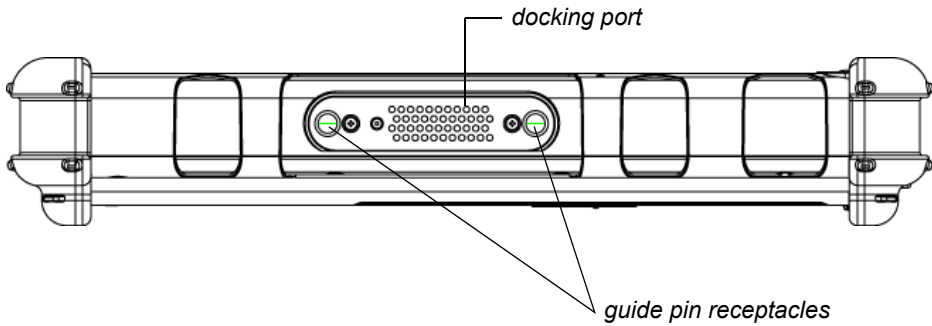

Connecting devices


Refer to the following subsections for information about connecting external devices to your computer.

Note

If the device you want to use does not appear to be working with your computer, the device may need to be enabled in the computer's configuration program. Contact your local help desk or Xplore reseller.


Connecting FireWire devices

Connect a FireWire device (such as a digital camera, a digital video camera, or a CD-ROM or DVD drive) to the Firewire (IEEE 1394) connector on the computer.

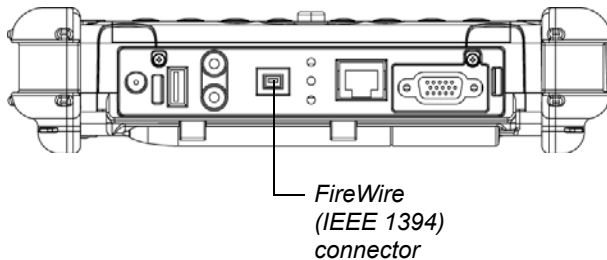

Connecting to a local area network


Connect a local area network (LAN) cable's RJ-45 connector to the internal LAN interface card. (See your network system administrator for more information.)

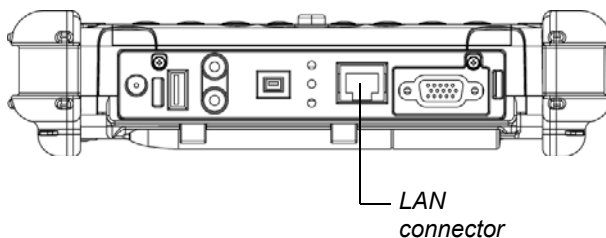


Connecting USB-compatible devices

Devices must be in compliance with USB Standard Revision 2.0.

Connect any USB-compatible device to the computer's USB port.

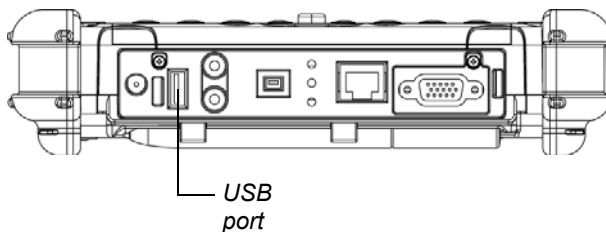

Connecting an external microphone

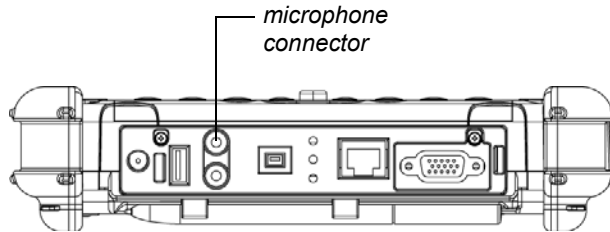


Adjusting microphone volume

If necessary, adjust the volume of the microphone as follows:



1. Press the Windows Start key.
2. Click the Control Panel option.
3. In the Control Panel window, double-click the Sounds and Audio Properties icon.
4. In the Sounds and Audio Properties window, click the Audio tab.
5. In the Sound recording area, click the Volume button.
6. Adjust the volume.
7. Click OK.


Connecting a headphone or speakers

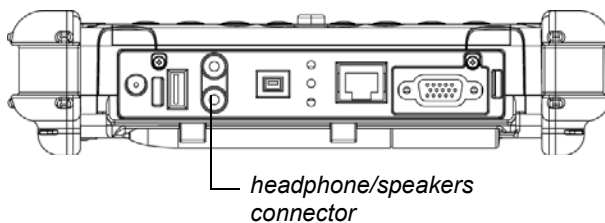

Adjusting headphone or speaker volume


1. Click the audio icon in the Status area of the Windows taskbar. 

The volume control area opens.

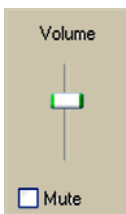

2. If the Mute check box is checked, uncheck it.
3. Move the slider bar up or down to increase or decrease the volume.

Connecting a monitor or projection panel

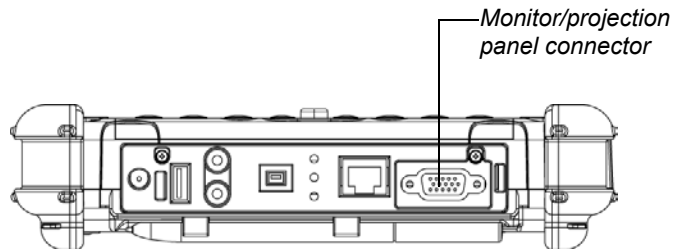

Activating the monitor or projection panel

To change the video output to the monitor or projection panel:

Press the Fn-P1 key combination.




To change the video output back to the computer screen:

Press the Fn-P1 key combination again.


Connecting an XPL snap-on expansion module

Top view

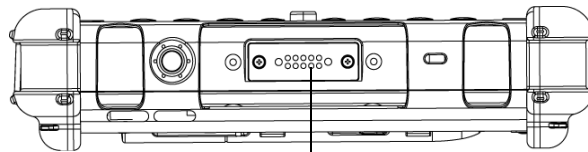

*XPL expansion
port*

Side view

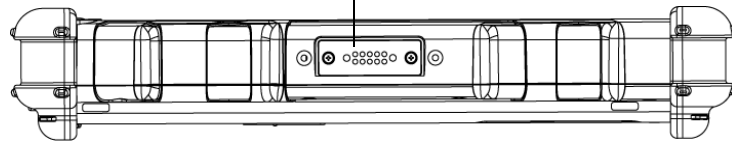

Using the battery


You can recharge, remove, and replace the battery pack.

Charging the battery pack

If you do not have an external battery charger

Follow these steps to charge the battery while it is installed in the computer:

1. Connect a power source, such as an AC adapter or cigarette lighter adapter, to the power connector on the computer.

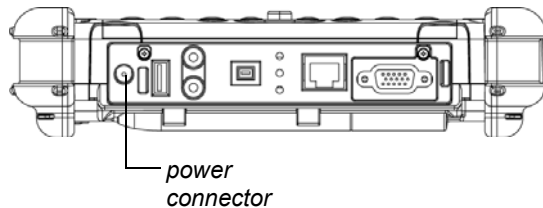

If the battery charge is below 90%, the battery begins charging and the Status LED flashes green. (If the battery charge is higher than 90%, the battery will not charge, preventing battery overcharge.)

- 2. Check the level of charge. (See “Checking battery power status” on page 59.)

The charging process continues until the battery charge reaches 100%.

Table 5 shows the approximate time required to charge the battery level to 100%.

Table 5 *Approximate battery charge time*

Battery pack capacity	Charge time when the computer is not in use	Charge time when the computer is in use*
4500 mAh	2.5 hours	3.5 hours
9000 mAh	3.5 hours	5.5 hours

* Varies according to the application(s) in use.

If you have an external battery charger

- 1. Remove the battery pack (see page 55).
- 2. Use the external battery charger to charge the battery.
- 3. Install the battery (see page 57).

Removing and installing the battery

You can remove the battery and use an (optional) external charger to charge it.

Removing the battery

1. To swap with a charged battery:


Use one of the methods described in “Suspending operation” on page 37 to suspend operation.

If a charged battery is not available:

Save your work and close all running programs; then shut down the computer or put the computer in Hibernation mode (see “Suspending operation” on page 37).

Note: To avoid losing unsaved data, wait until the computer has completed switching to Suspended mode before removing the battery.

2. On the computer, slide the battery release latch in the direction indicated.

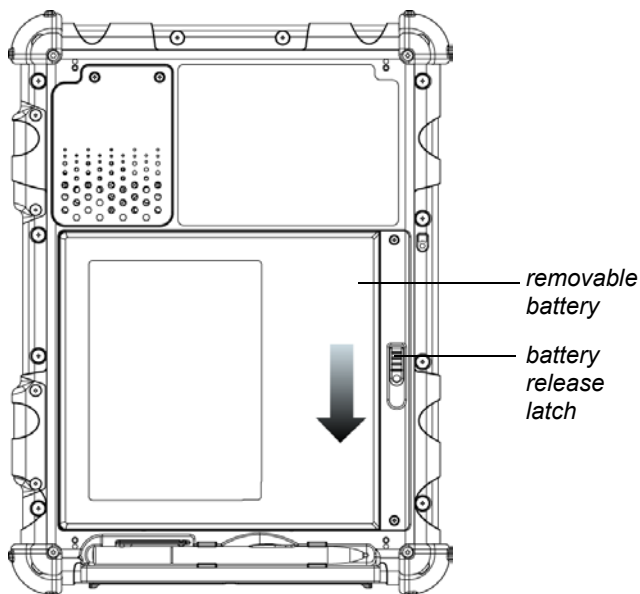


3. Pull the battery away from the computer and remove it.

Note

After removing the battery, you must replace the battery or connect the computer to an external power supply within **3 to 5 minutes** or the computer completely loses power.

Installing the battery

1. Orient the battery with the slides in the empty battery tray.

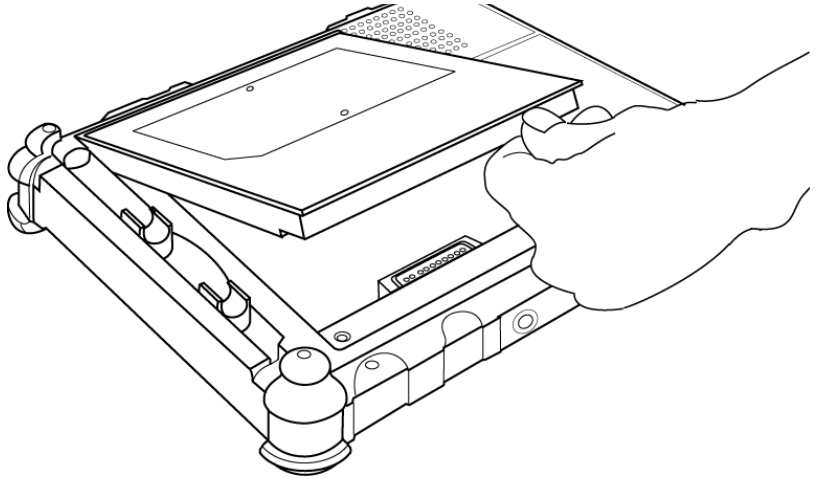

2. Slide the battery into the tray and press it firmly until it is seated.
The battery release latch returns to its original position and locks the battery in place.

Discarding a battery

Dispose of a spent battery in accordance with your local government regulations. Under Federal, state, or local law, it may be illegal to put batteries in the trash. Contact your system administrator or your municipal solid waste disposal department or provider for information.


Using power options

This section explains how to use the Power Options Properties window to manage the computer's power use.



On the Windows taskbar, click the battery icon.

The Power Options Properties window opens.

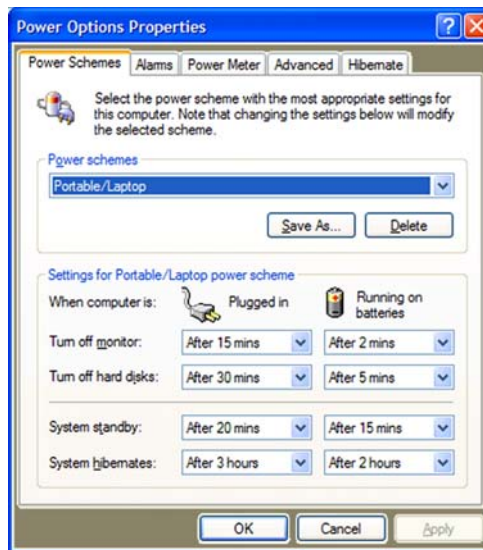


Changing the computer's power schemes

In the Power Options Properties window, select the Power Schemes tab; then select options from the drop-down lists.


Changing battery alarm settings

In the Power Options Properties window (page 58), select the Alarms tab; then use the slider bars to change the alarm settings.

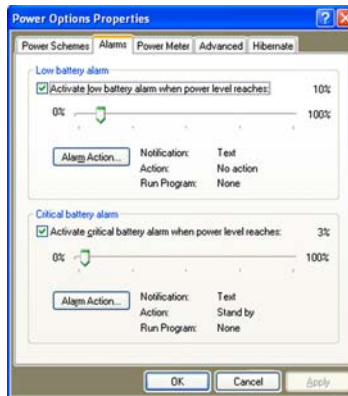


Checking battery power status

In the Power Options Properties window (page 58), select the Power Meter tab. The window shows the amount of power left in the battery.

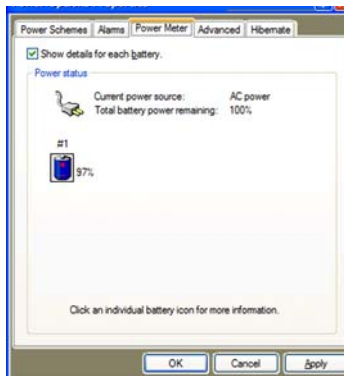

Selecting power settings

In the Power Options Properties window (page 58), select the Advanced tab; then select the power settings options you want to use.

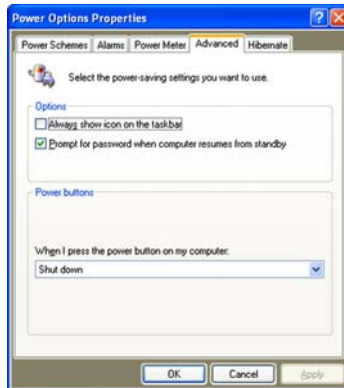

Enabling Hibernation mode

In the Power Options Properties window (page 58), select the Hibernate tab; then check the Enable Hibernation check box.



Tips for conserving battery power

The following tips help you extend the life of your battery by conserving battery power:

- Use an external power source such as the AC or auto adapter whenever available.
- Suspend operation if you know that you will not be using the system for a while. (See “Suspending operation” on page 37.)
- Turn off the computer if you will not be using it for an extended period of time.
- Adjust power options to automatically conserve power. (See “Using power options” on page 58.)

Programming hot keys

Xplore pre-programs the P1, P2, and P3 hot keys and Function mode hot key combinations to perform certain functions by default. However, you can program them to perform different functions, as described in this section.

Table 6 Programmable hot keys

Key	Default function
	Starts Help.
	Starts Internet Explorer.
	Starts your email application.

Table 7 Programmable Function mode hot key combinations


Key combination	Default function
 	Sends video display to a monitor or projection panel. (Not programmable.)
 	Selects the input device.
 	Starts the pen calibration program.

Programming hot keys to start applications, open documents, or go to a Web site




1. In the Status area of the Windows taskbar, click the iX104 Configuration icon.

The Launch Button QuickShow dialog box opens.

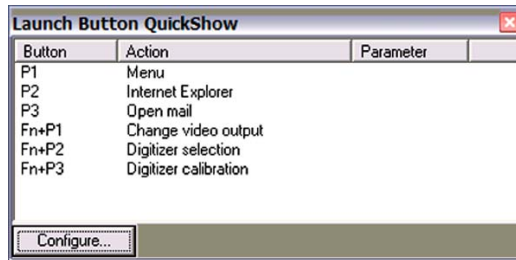

2. Click the Configure button.

The Panel Control Center window opens.

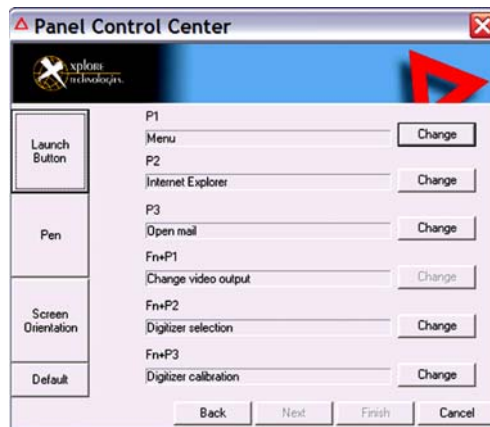

3. Click the Change button next to the key or key combination you want to program.

The following options appear:



4. Click Launch an Application, Document or Web site.

The following options appear:



5. To start an application:

- a** Click Launch an Application.
- b** In the File text box, type the name of the application you want the hot key or Function mode hot key combination to start.

Note: Type the name of executable file that starts the application. For example: word.exe, notepad.exe, excel.exe.



- c** Click Change.

To open a document:

- a** Click Open a Document.
- b** In the File text box, type the name of the document you want the hot key or Function mode hot key combination to open. (For example: spreadsheet.xls, airports.doc, wiringdiagram.jpg)
- c** Click Change.

To open a multimedia file:

- a** Click Open a Multimedia file.
- b** In the File text box, type the name of the multimedia file you want the hot key or Function mode hot key combination to open. (For example: 911training.dir, demo.ppt)
- c** Click Change.

To open a Web page:

- a** Click Open a Web page.
- b** In the File text box, type the URL of the Web page you want the hot key or Function mode hot key combination to open. (For example: <http://www.xploretech.com>)
- c** Click Change.


- 6.** Program more hot keys, or click Finish to close the Panel Control Center window.

Programming hot keys to perform pre-defined functions




1. In the Status area of the Windows taskbar, click the iX104 Configuration icon.

The Launch Button QuickShow dialog box opens.

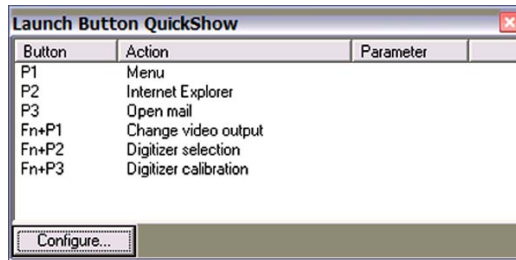

2. Click the Configure button.

The Panel Control Center window opens.

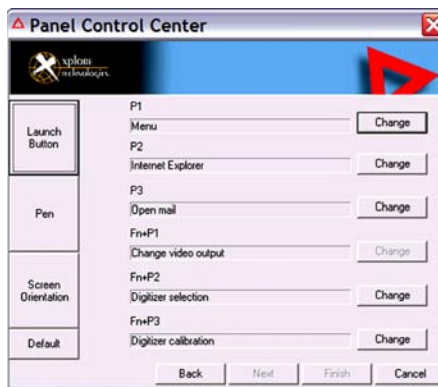


3. Next to the key or key combination you want to program, click the Change button.

The following options appear:



4. Click Start a pre-defined function.
5. In the Function selection drop-down list, select an option.

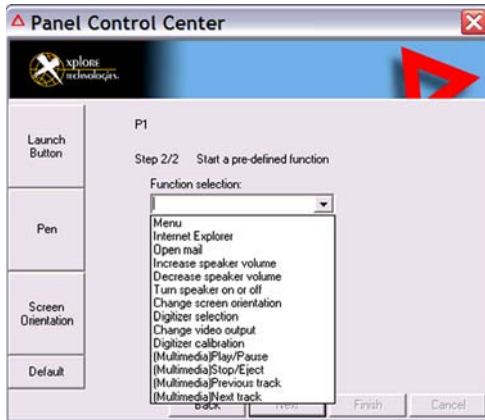


6. Program more hot keys, or click Finish to close the Panel Control Center window.

Programming hot keys to perform other key functions




1. In the Status area of the Windows taskbar, click the iX104 Configuration icon.

The Launch Button QuickShow dialog box opens.

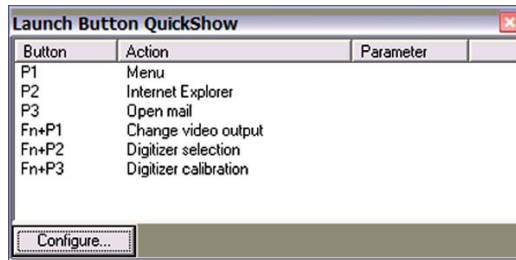

2. Click the Configure button.

The Panel Control Center window opens.

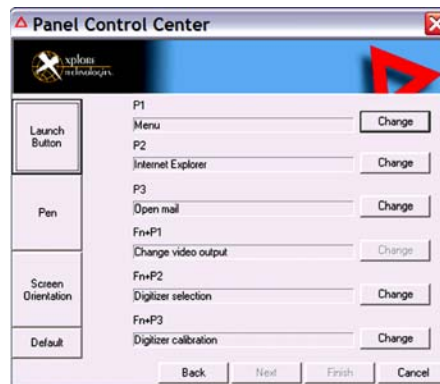


3. Next to the key or key combination you want to program, click the Change button.

The following options appear:



4. Click Press a key or key combination.

The following options appear:

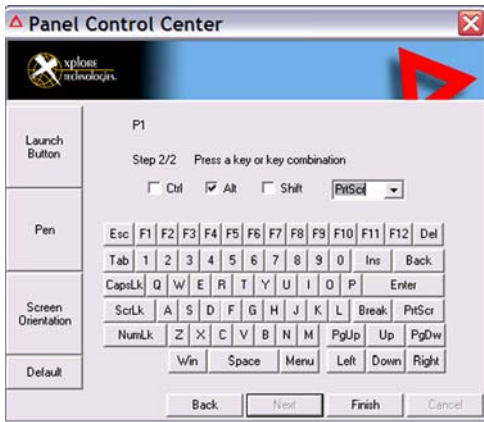

5. If you want the hot key or hot key combination to perform the function of a single key:

- a** If the Ctrl, Alt, or Shift boxes are checked, uncheck them.
- b** Click the key you want the hot key or hot key combination to perform. (For example: F6, G, or Caps Lock)

If you want the hot key or hot key combination to perform the function of a key combination:

- a** Check the Ctrl, Alt, or Shift box.
- b** From the drop-down list, select the additional key, or click the key on the keyboard.

Examples

To cause the hot key to perform the *print screen* function (Alt-Print Scrn): Check the Alt check box; then select PrtScr from the drop-down list.

To cause the hot key to perform the *paste* function (Ctrl-V): Check the Ctrl check box; then click the V key.

6. Program more hot keys, or click Finish to close the Panel Control Center window.

3 Maintaining the iX104

This chapter provides instructions for maintaining your computer.

Caring for the computer

This section provides information about how to keep your computer in top working condition.

Checking power cords and connectors

Check AC and DC power cords and power connectors periodically for damage. Replace the power cord immediately if you find any damage.


Protecting the computer from damage

- Your computer is designed to sustain a multiple-axis drop to a non-yielding surface. Do not intentionally drop the computer, because the cumulative effects of multiple drops may damage the computer.
- Do not place heavy objects on the computer.
- Do not disassemble the computer.
- Keep the computer at least 5 inches (13 centimeters) away from any electrical appliance that generates a strong magnetic field, such as a motor, magnet, TV, refrigerator, or large audio speakers.

Preventing the computer from overheating

The computer monitors its internal temperature. As the internal temperature approaches the tolerable limits of heat-sensitive components, system functions are automatically limited or turned off to prevent damage.

To prevent the computer from overheating, do not obstruct the computer's air vents.

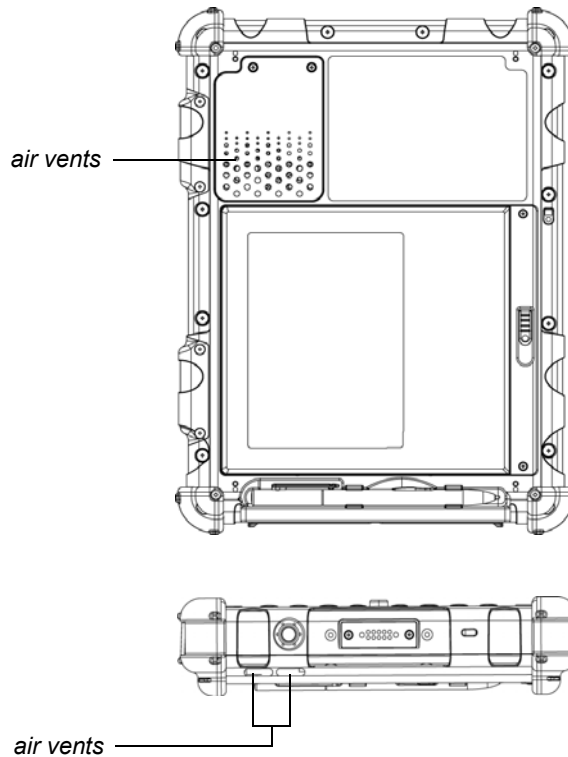

Storing the computer

You can store the computer in the Off state for about 30 days with a fully charged battery installed. After this period, recharge the battery or replace it with a charged battery.

If you intend to store the computer for more than 30 days, remove the battery pack and keep it in a cool place.

Caring for the display screen

To clean the display screen, dampen a soft cotton cloth with water or isopropyl alcohol and gently wipe the screen surface.


Protecting the display screen

The screen protector is a durable, replaceable writing surface that protects the display screen from abrasion.

To obtain additional screen protectors, check with your reseller, or go to the Xplore Web site at www.xplorettech.com for ordering information. Additional information about installation is included with the screen protectors.

Removing the screen protector

Slide your fingernail under the edge of the screen protector and pull the protector away from the screen.

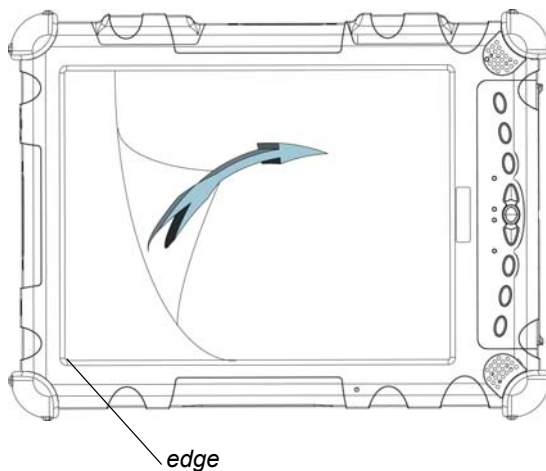

Installing a new screen protector

Follow the instructions included with your screen protector replacement kit.

Note

If a screen protector is already installed on the display screen, remove it before installing the new screen protector.

Calibrating the pen


Calibrating the pen adjusts the cursor position on the screen relative to the position of the pen tip. Calibrate the pen to adjust the distance error between where the pen is actually touching the screen and where the computer is registering the pen touch.

You may need to calibrate the pen in the following situations:


- You are using the pen for the first time.
- The previous user of the computer writes with the opposite hand or at a different pen angle.
- The computer has not been used for some time.
- The computer has been serviced.

Calibrating the pen for an iX104 touch screen

- 1. From the Start menu, select Control Panel.
The Control Panel opens.

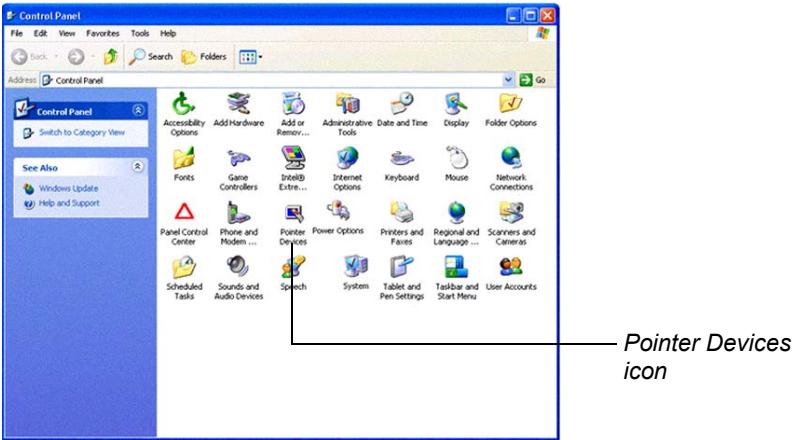


- 2. Click the Pointer Devices icon.
The Pointer Device Properties window opens.

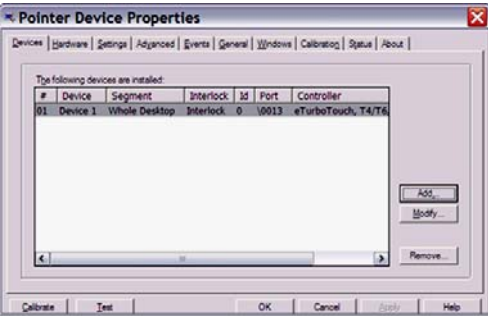

3. Click Calibrate.
The Calibration program starts.
4. Follow the instructions that appear on the screen.
5. When you finish, click OK.

Calibrating the pen for an iX104-TPC active screen

1. From the Start menu, select Control Panel.
The Control Panel opens.

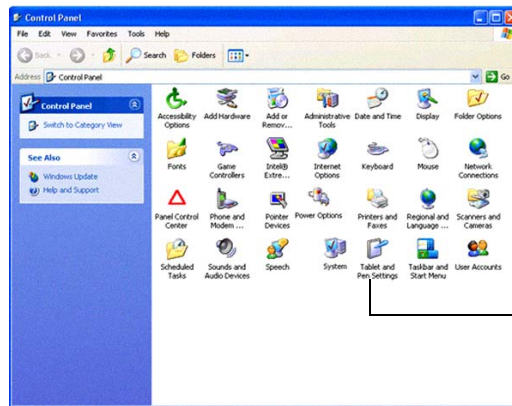


*Tablet and
Pen Settings
icon*

2. Click the Tablet and Pen Settings icon.

When to replace the pen

The Tablet and Pen Settings window opens.

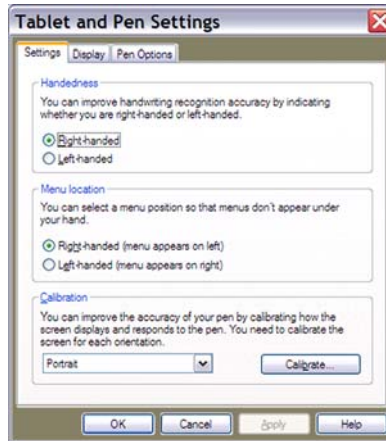

3. In the Calibration area drop-down list, select the mode for which you want to calibrate the pen: Landscape or Portrait; then click Calibrate.

The Calibration program starts.

4. Follow the instructions that appear on the screen.
5. When you finish, click OK.

When to replace the pen

With use, the pen tip may become worn and can scratch the screen. If your pen exhibits one of the following problems, replace the pen:

- The pen does not move freely across the screen.
- The pen does not perform as expected.

A Troubleshooting

Table 8 contains solutions to some problems. If you cannot solve the problem by taking the actions described, contact your local help desk or your reseller for further assistance.

Table 8 *Troubleshooting*

Problem	Possible cause and solution
Computer will not start.	• The battery may be defective or discharged to a critically low level. Connect an external power supply (such as the AC adapter) or install a charged battery. See “Using the battery” on page 53. • Internal components may be above or below the acceptable operating range (below -20° C or above 60° C). After the temperature returns to safe operating range the computer will start.
The computer will not resume operation after being suspended.	• The battery may be defective or discharged to a critically low level. When the battery reaches a critically low level, the computer is forced into Suspend- to-RAM mode to avoid a total system power failure. Connect an external power supply (such as the AC adapter) or install a charged battery. See “Using the pen” on page 39 and “Using the battery” on page 53. • The computer may be at the critical thermal limit. To avoid damage to heat-sensitive components, the computer enters Suspend-to-RAM mode when the computer operates above 60° C. Operation automatically resumes when the computer cools to below 60° C. Move the computer to a cooler location.

Table 8 *Troubleshooting (continued)*

Problem	Possible cause and solution
Display screen is blank or difficult to read.	• Confirm that the computer is on (the Power icon is displayed continuously in the Status area). • The brightness may be set too low, causing the screen to appear too dark. To change system brightness, press the Fn and Start keys to open the Xplore menu and adjust the brightness. (See page 30.) • An external monitor may be selected. Press the Fn and P1 keys to select the computer display screen. (See page 30.) • The video time-out may have expired. Tap the display screen to reactivate the display. Note: This is a normal, power-saving feature. • If the Status light is blinking red, the computer is in Suspend-to-RAM mode because the temperature is below -20° C or above 60° C. When the temperature returns to a safe operating range, the display screen automatically comes back on. If possible, move the computer to a warmer or cooler location. • If the Status light is continually yellow, the computer is in Suspend or Hibernate mode. Press the Power On/Off key to resume.
Cursor is not tracking the pen.	Calibrate the pen. See “Calibrating the pen” on page 77.
Computer is not responding to the pen.	Connect an external USB keyboard to the computer. If the computer does not respond to the external keyboard, the application or operating system may have been corrupted. Press the Reset key. (See page 35.) If the system responds to a keyboard but not to the pen, contact your local help desk or reseller for further assistance.

Table 8 *Troubleshooting (continued)*

Problem	Possible cause and solution
Headphone or speaker volume is too low.	• The volume may be in Mute mode or set too low. Follow the instructions in “Adjusting headphone or speaker volume” on page 50. • Make sure the volume control in your audio software is set to an audible level.
An external device is not working with the computer.	The device may need to be enabled in the computer’s configuration program (BIOS Setup). Contact your local help desk or reseller.
The Status LED is red, continuous.	• The computer is on, running under battery power, and the charge level in the battery has reached a critical level. Plug the computer into an AC/DC power source or install a charged battery. • The system has encountered a fault and is preventing normal operation. Contact your local help desk.
The Status LED is red, blinking.	The computer is powered on, running under battery power, and the charge level in the battery is at a minimum warning level. Plug the computer into an AC/DC power source or install a charged battery.

B Using BIOS and AOS Functions

This appendix explains how to use the application and navigation buttons with the Basic Input-Output System (BIOS) program and the Advanced Operating System (AOS) Options menu.

Note

These functions are typically for use only by your system administrator or by authorized service technicians.

Table 9 *Using BIOS and AOS functions*

Use this button...	To perform this function
	To start the BIOS program: When the computer is booting, press the P2 button and follow the instructions that appear on the screen.
 	Navigate. (You can also use the joystick to navigate, as described below.)
	Push the joystick control up, down, left or right to move a highlighted item accordingly (the same as pressing the arrow keys on a keyboard).
	Press the Enter button to perform the same functions as pressing Enter on a keyboard.

Table 9 *Using BIOS and AOS functions (continued)*

Use this button...	To perform this function
	When the system is displaying a BIOS error (such as an invalid checksum), press the P1 button to bypass the error message and attempt a normal boot sequence (the same as the F1 key on a keyboard).
	When the system is displaying the iX104 logo, press the P2 button to run the BIOS setup utility (the same as the F2 key on a keyboard).
	When the system is displaying the operating system boot screen, press the P3 button to open the Advanced Operation System Options menu (the same as the F8 key on a keyboard).


Enabling manual LCD backlight control

When the LCD backlight control is in manual mode, the ambient light sensor is disabled and the computer no longer automatically controls the screen brightness.


Follow these steps to disable the sensor and enable manual LCD backlight control:

1. When the computer is booting, press the Function and P2 buttons to start the BIOS Setup Utility.

The utility starts, displaying the Information Viewer tab.

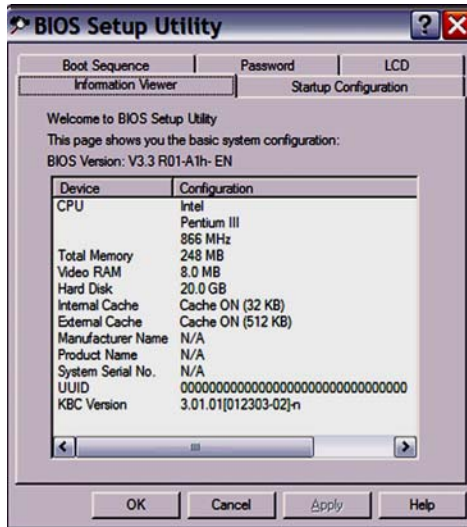

2. Select the LCD tab.

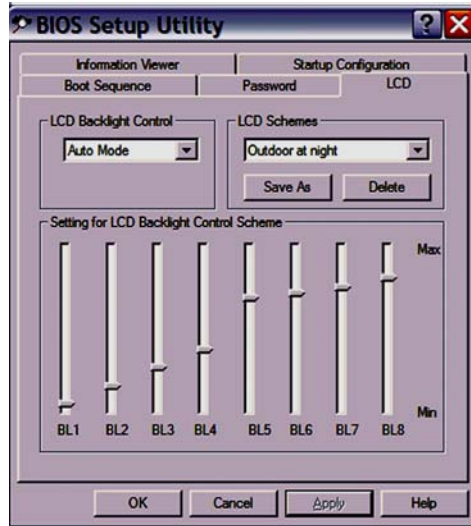

3. In the LCD Backlight Control drop-down list, select Manual.
4. Click OK.

C

Glossary

Adapter. A device that provides an interface between two dissimilar electronic devices. For example, the AC adapter modifies the power from a wall outlet for use by the computer.

Advanced Power Management (APM). A facility consisting of one or more layers of software that support power management. The APM software interface enables applications, operating systems, device drivers, and the APM BIOS to work together to reduce power consumption.

Alternating Current (AC). Electric current that reverses its direction of flow at regular intervals.

Analog signal. A signal with characteristics such as amplitude and frequency that vary in proportion to (are an analog of) the value to be transmitted. Voice communications are analog signals.

Application. A program that performs specific tasks on your computer, such as word processing or creating spreadsheets.

BIOS. Programs that contain such basic hardware operations as an interaction with diskette drives, hard disk drives, and the memory.

Board. A circuit board. An internal card containing electronic components called chips, which perform a specific function or increase the capabilities of the system.

Boot. To load a program or operating system into system memory.

Bits Per Second (BPS). In serial transmission, the instantaneous bit speed with which a device or channel transmits a character.

Card. Synonym for board; see *board*.

Compact Disk-Read Only Memory (CD-ROM). Stores data on metal-plated plastic discs.

Compatibility. 1.The ability of one computer to accept and process data in the same method as another computer without modifying the data or the media upon which it is being transferred. 2.The ability of one device to connect or communicate with another system or component.

Configuration. The specific combination of hardware components of the computer, and their operating status. The configuration of your computer includes pre-defined memory, type and speed of microprocessor, type of and size of hard disk drive, etc.

Default. The preset parameter value automatically selected by the computer when you or a program do not provide instructions.

Device driver. A program that controls communication between a specific peripheral device and the computer.

Disk drive. The physical device that enables the computer to read from, and write to, a disk.

Display. An image-producing device used to view computer output.

Double-click. To press and release the pen/stylus twice within a time frame you define, without moving the pointer off the choice.

Driver. Software that allows an application program to communicate with a particular piece of equipment, such as a printer or the pen/stylus.

Hard disk drive (HDD). A sealed mass storage device used for storage and fast retrieval of programs and data. The factory installs this disk and only a trained engineer can remove it for servicing.

Hardware. The physical electronic and mechanical components of a computer system. typically, the computer itself, CPU, memory, etc.

Hertz. A unit of wave frequency that equals one cycle per second.

Interface. 1. Hardware and/or software components used specifically to connect one computer or device to another. 2. To physically connect one system or device to another to exchange information. 3. The point of contact between user, the computer, and the program (for example, the pen/stylus or a menu).

Kilobyte (KB). A unit of 1024 bytes measuring storage space, typically in memory or on storage media such as a diskette or hard disk drive.

Local area network (LAN). Assembly of separate computers into an integrated network that connects the various computers together and to common devices such as printers and fax machines.

Light Emitting Diode (LED). A semiconductor device that emits light when a current is applied.

Liquid Crystal Display (LCD). liquid crystal sealed between two sheets of glass coated with transparent conducting material. Applying a voltage between the glass sheets darkens the liquid crystal to provide contrast to lighted portions of the display.

Megabyte (MB). A unit of data storage equal to 1024 kilobytes.

Megahertz (MHz). a unit of wave frequency that equals 1 million cycles per second.

Modem. A device that connects your computer to a telephone line, allowing it to communicate with another computer at another location.

PC Card. A plug-in accessory card that conforms to the PCMCIA standard.

Pen. See *stylus*.

Peripheral device. An input/output device that is external to the central processor and/or main memory such as a printer or scanner.

Pixel. Picture elements (tiny dots) that compose a screen image.

Port. The electrical connection through which the computer sends and receives data to and from devices or other computers.

Program. A set of instructions a computer can execute to tell the system what to do and how to do it.

Random Access Memory (RAM). A hardware component of your computer that temporarily stores active program code and data.

Reset. The act of reloading the operating system.

Resolution. The number of pixels displayed on the screen. A higher resolution provides greater clarity and allows more information to be displayed on the screen at once.

Restart. Resetting a computer without turning it off (also called warm boot or soft reset).

Resume. The act of returning the computer to an active, operational state.

Read Only Memory (ROM). The portion of your computer's memory that contains permanent instructions, and which cannot be modified.

Status Indicator (LED). a light above the LCD screen which indicates the current status of a particular device or hardware component.

Stylus. A writing instrument. For pen computers, the stylus is used to interface with the LCD and digitizer.

Suspend mode. A power conservation mode in which electrical current is removed from most components of the computer.

Universal Serial Bus. A serial interface that enables communication between devices and the computer.

D

Hardware Specifications

This appendix provides specifications for the iX104.

Physical specifications

Dimensions	11.20" x 8.25" x 1.6" (WxHxD) 283.9mm x 209.3mm x 40.8mm
Weight	4.45 lbs. (2.02kg)*

Processing specifications

CPU	Pentium III with SpeedStep technology*
Chip set	133MHz
Processor speed	866 MHz*

* Varies according to your computer's configuration.

Memory/storage specifications

Main RAM	• 256MB SDRAM (on-board/PC133) • 144-pin SODIMM modules 512MB module available. Special rugged memory modules: conformal coated and custom locking tabs to protect against moisture and vibration
L1 Cache (CPU)	32KB on-die
L2 Cache	512KB on-die
BIOS ROM	8Mbit (FWH)
Hard Disk Drive	2.5" HDD shock mounted Minimum 20GB IDE HDD* Ultra DMA 100
BIOS ROM	8Mbit (FWH)

* Varies according to your computer's configuration.

Display specifications

Display	• Color LCD • Active Digital Sensor and Pen • or • Passive Palm Rejection Touch Panel • 32-bit True color • 10.4" TFT XGA (1024x768), 16M colors • Brightness: 16 levels • Viewing Angle: • Horizontal: 30 degrees (min.) • Vertical: 10 degrees (min.) • Contrast Ratio: Typ. 250:1, Min 100:1
VRAM	Intel 830M chipset with 48 MB shared memory using Unified Memory Architecture (UMA) delivers low-power, high-performance 3D/2D graphics, video, and display capabilities. Dynamic Video Memory Technology (DVMT) dynamically responds to application requirements and efficiently allocates the proper amount of memory (48 MB maximum) for optimal graphics and system performance.

Interface specifications

Wireless Radio Bays	• One internal Type 1 or Type II PC Card slot (PCMCIA Cardbus version 3.0) • One Internal mini-PCI slot • One internal OEM radio bay for RIM 1902G and 1802G GSM/GPRS radios
Integrated Interfaces	• DC-in • USB (1) 2.0 • Microphone Jack • Headset Jack • Firewire (IEEE 1394) • LAN (RJ-45) • 15-pin D-SUB connector for external VGA monitor
KeyPad / User Controls	• Application buttons with primary and secondary functions • Power On/Off/Suspend/Resume button • Emergency Shutoff/Reset button • Integrated joystick slew control
Audio	• '97 Codec • On-board microphone with noise cancellation • On-board integrated stereo speakers (1W each)
Status Indicators	Power, Charge/DC-in, Warning

Power specifications

Main Battery	• 2 cell • Removable Lithium Ion Polymer • 10.8V @ 4500mAh • Warm-swappable • Recharge Time: • Suspend Life: Min. 5 days • Off State: Approximately 30 days
Optional Spare Battery	• 4 cell • Removable Lithium Ion Polymer • 10.8V @ 9000mAh • Warm-swappable • Recharge Time: • Suspend Life: Min. 5 days • Off State: Approximately 30 days
Bridge Battery	• 6-cell Li ION, 45mAh • Life: (with Suspend-to-RAM on bridge battery only): 3 to 5 minutes from full charge
AC Adapter	Auto-sensing 100-240V, supplying 19 VDC, with a current of 3.75 A

Environmental specifications

Temperature	- Operating: -4° to 140° F (-20° to 60° C) - Storage: -40° to 167° F (-40° to 75° C)
Humidity	0% to 95% non-condensing
Shock/Drop	Three-foot drop to concrete, all surfaces, edges and corners
Vibration	0.04g ² /Hz, 20 Hz - 1000 Hz -6dB/octive 1000 Hz - 2000 Hz
Enclosure Class	Blowing rain: 4"/hr, 40 mph wind and MIL-STD-810F Method 506.4 Procedure 1 Drip: 7 gal/ft²/hr MIL-STD-810F Method 506.4 Procedure III Sand and dust: Particle size < 149 µm, 10 ± 7 g/m³ particle density 1.5 m/s to 8.9 m/s wind speed MIL-STD-810F Method 510.4 Procedure 1 Salt Fog: 5% saline for 48 hr (12 hr wet, 12 hr dry, 2 cycles) MIL-STD-810F Method 509.4 Contamination by fluids: Detergents, brake fluid, aromatic hydrocarbons MIL-STD-810F Method 504 Solar radiation: 1120 W/m² (355 Btu/ft²/hr) UVB @ 50° C, 7x24 hr cycles MIL-STD-810F Method 505.4

Agency approvals

Emissions	• EN55022 (CISPR22) Class B • FCC 15, Class B • DOC Class B • CE MARK
Immunity	• EN55024 • FCC 15, Class B • DOC Class B
Safety	• UL and cUL Listed, UL 1950, 3rd Edition • TuV T-Mark, EN60950 • UL and cUL Listed, UL 1604*
RF exposure	• OET 65
Radio approvals	• 47 CFR Part 22, 24 • 47 CFR Part 15C

Operating systems

Operating Systems	• Microsoft Windows XP Tablet PC Edition • Microsoft Windows XP Professional • Microsoft Windows 2000 Professional
-------------------	--

E Agency Notices



FCC notices

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Modifications not expressly approved by Xplore Technologies could void this user's authority to operate the equipment.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
-


RF exposure

Tests for SAR are conducted using standard operating positions specified by the FCC with the tablet PC transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the tablet PC while operating can be well below the maximum value. This is because the tablet PC is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a tablet PC model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. (Body-worn measurements may differ among tablet PC models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various tablet PCs and at various positions, they all meet the government requirement for safe exposure.

This device was evaluated and shown to comply with FCC SAR guidelines. Avoid covering or holding antennas when transmitting. Antenna locations are shown in the following figure.

antenna locations

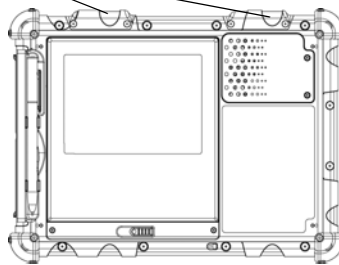

For body worn operation, to maintain compliance with FCC RF exposure guidelines, use only Xplore approved accessories. When carrying the tablet PC while it is on, use the specific Xplore-supplied or approved carrying case, holster, or other body-worn accessory.

Use of non-Xplore-approved accessories may violate FCC RF exposure guidelines and should be avoided.

Health and Safety Information

Exposure to Radio Frequency (RF) Signals

Your wireless tablet PC is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards previously set by both U.S. and international standards bodies:

- American National Standards Institute (ANSI) IEEE. C95.1-1992
- National Council on Radiation Protection and Measurement (NCRP). Report 86. 1986
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1996
- Ministry of Health (Canada), Safety Code 6. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile tablet PCs employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg .

Note

In the U.S. and Canada, the SAR limit for mobile tablet PCs used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in.

DOC (Industry Canada Notices)

Notice to Users of Radio and Television

This Class B digital apparatus meets all requirements of Canadian Interference-Causing Equipment Regulations

CET appareil numérique de la class B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Notice to Users of the Canadian Telephone Network

Notice

This equipment meets the applicable Industry Canada Terminal Equipment Technical Specifications. This is confirmed by the registration number. The abbreviation, IC, before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment.

Before connecting this equipment to a telephone line the user should ensure that it is permissible to connect this equipment to the local telecommunication facilities. The user should be aware that compliance with the certification standards does not prevent service degradation in some situations.

Repairs to telecommunication equipment should be made by a Canadian authorized maintenance facility. Any repairs or alterations not expressly approved by Xplore or any equipment failures may give the telecommunication company cause to request the user to disconnect the equipment from the telephone line.

Notice

The Ringer Equivalence Number (REN) for this terminal equipment is 0.0. The REN assigned to each terminal equipment provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed five.

Avis Aux Utilisateurs Du Réseau Téléphonique Canadien

- >'''Industrie Canada a approuvé le materiel.
- 'utilisateur est averti que même la conformité aux normes de certification ne peut dans certains cas empêcher la dégradation du service.
- '''équipement de la ligne téléphonique.
- >'''excède pas 5.

UL Notice

This unit requires an AC adapter to operate. Use only UL Listed Class 2 Adapters with an output rating of 19 VDC, with a current of 3.75 A. AC Adapter output polarity:



For authorized repair technicians only



WARNING

For continued protection against risk of fire, replace only with the same type and rating fuse.



WARNING

Danger of explosion if Lithium (clock) battery is incorrectly replaced. Replace only with the same equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instruction.

System disposal

In the event of system disposal, observe the following information regarding proper procedures in the State of Vermont.



The liquid crystal display (LCD) lamps used in this system contain mercury. In the event of system disposal, be sure to follow local guidelines.

Index

A

- air flow vents, location 22
- ambient light sensor
 - disabling 45
 - location 19
- antenna covers, location 20

B

- battery alarm settings, changing 59
- battery pack
 - charge time 54
 - charging 53
 - checking charge status 59
 - checking the charge 54
 - conserving power 61
 - discarding 57
 - installing 57
 - location 20
 - removing 55
- battery release latch, location 20
- BIOS Setup Utility, using 85

C

- CD-ROM drive, connecting 47
- convection air flow cover, location 20

D

- digital camera, connecting 47
- digital video camera, connecting 47

- docking 46

- double-click, performing with pen 40

- dragging and dropping, performing with pen 40

- DVD drive, connecting 47

E

- email, starting 29

F

- Firewire (IEEE 1394) connector, location 23

- Firewire devices, connecting 47

H

- headphone connector, location 23

- headphone volume, adjusting 50

- headphone, connecting 50

- Hibernation mode

- description 36

- enabling 60

- hot keys, programming, *see keys, programming hot keys*

I

- input device, selecting 30

- Internet Explorer, starting 29

- iX104

- accessories 16

- maintaining 73

- preventing overheating 74

- protecting from damage 73

- safety procedures 73
- storing 75

J

- joystick
 - using 43
 - using in landscape mode 32
 - using in portrait mode 31

K

- Kensington lock slot, location 22

- keys

- Alt-Tab
 - description 29
 - location 28

- Ctrl-Alt-Del 29
 - description 29

- Ctrl-Alt-Delete
 - location 28

- Ctrl-Esc
 - description 29
 - location 28

- descriptions 29

- Enter
 - description 29
 - location 28

- Esc, using 30

- Function
 - description 29
 - location 28

- Function mode hot key combinations
 - default functions 62
 - descriptions 30

- navigation, using 31

- P1

- default function 62
 - description 29
 - location 28

- P2

- default function 62
 - description 29
 - location 28

- P3

- default function 62
 - description 29
 - location 28

- Power On/Off/Suspend/Resume
 - location 22

- programming hot keys 62, 63
 - to perform other key functions 69
 - to perform pre-defined functions 67

- quick-start diagram 28

- Screen Rotation
 - description 29
 - location 28

- Secure Attention Sequence (SAS) 28

- Windows Start Menu
 - description 29
 - location 28

- Windows Toggle
 - description 29
 - location 28

L

- LAN connector, location 23

- LCD backlight

- decreasing brightness 30, 45
 - disabling automatic control 45
 - enabling manual control 87
 - increasing brightness 30, 45

LEDs 26

Brightness LED meanings 27

Status LED meanings 26

left button click, performing with pen 40

local area network (LAN), connecting to 48

logging on 29

M

microphone

connecting external 49

connector location 23

location 19

volume, adjusting 49

monitor

activating 51

connecting 51

sending video display to 30

monitor connector, location 23

N

navigating

in landscape mode 32

in portrait mode 31

Navigation 32

navigation control key, *see joystick* 43**O**

online help, opening 29

P

Page Down

performing in landscape mode 32

performing in portrait mode 31

Page Up

performing in landscape mode 32

performing in portrait mode 31

pen

calibrating 77

double-click speed, changing 41

dragging and dropping 40

holder, location 20

location 20

performing a double-click 40

performing a right-click 40

performing left button click 40

positioning in holder 42

replacing 80

tether, using 42

using 39, 40

pen calibration program

opening 30

using 77

power connector, location 23

Power On/Off/ Suspend/Resume key

location 22

Power Options Properties window

opening 58

power schemes, changing 58

power settings, changing 60

power use, managing 58

projection panel

activating 51

connecting 51

sending video display to 30

Q

quick-start guide 28

R

Reset switch

location 19

using 35

resuming operation 38

right-click, performing with pen 40

S

screen

landscape mode 29

portrait mode 29

protecting 75

screen orientation

changing 44

landscape 44

navigating 32

portrait 44

navigating 31

screen protector

installing 76

removing 76

replacing 76

screen, active

about 15

using pen with 39

screen, touch

about 15

using pen with 39

scrolling

performing in landscape mode 32

performing in Portrait mode 31

serial number, location 20

Shift+Tab

performing in landscape mode 32

performing in portrait mode 31

speaker volume, adjusting 50

speakers

connecting 50

location 19

storing the computer 75

support, contacting 18

Suspend mode

description 36

ending 38

starting 37

suspending operation 37

Suspend-to-RAM mode, description 36

T

Tab

performing in landscape mode 32

performing in portrait mode 31

troubleshooting 81

turning off the computer 34

turning on the computer 33

U

USB port, location 23

USB-compatible device, connecting 48

V

video output

changing from monitor to computer 51

changing to monitor 51

volume

- adjusting headphone 50
- adjusting microphone 49
- adjusting speaker 50

W

Windows Task Manager, launching 29

X

XPL expansion module, connecting 52

XPL expansion port, location 22, 24

Xplore Tablet Dock

- docking connector location 25
- using 46

Xplore Technologies, contacting 18

