



iX104C³ USER'S HANDBOOK





iX104C³ USER'S HANDBOOK

Xplore Technologies® has made every effort to ensure the accuracy and completeness of this document; however, because ongoing development efforts are made to continually improve the capabilities of our products, we cannot guarantee the accuracy of the contents of this document. We disclaim liability for errors, omissions, or future changes herein.


Xplore and the Xplore logo are registered trademarks of Xplore Technologies Corp.; iX104, iX104C³, iX104C³ Tablet PC, and iX104C³ Dual Mode are trademarks of Xplore Technologies Corp.

Kensington and MicroSaver are registered trademarks of the Kensington Technology Group. Microsoft is a registered trademark of Microsoft Corporation. Windows 2000 Professional, Windows XP Professional, and Windows XP Tablet PC Edition are trademarks of Microsoft Corporation. PCMCIA and CardBus are registered trademarks of the Personal Computer Memory Card International Association. Intel, Pentium, and SpeedStep are registered trademarks of Intel Corporation. Wi-Fi is a trademark of the Wireless Ethernet Compatibility Alliance (WECA). FireWire is a registered trademark of Apple Computer, Inc. ISODAMP is a registered trademark of Aeero Company.

All other brands, product names, company names, trademarks and service marks used herein are property of their respective companies.

Copyright © 2003-2004 Xplore Technologies Corp. All rights reserved. No part of this publication may be copied, reproduced, or translated, without the prior written consent of Xplore Technologies. No part of this publication may be stored or transmitted in any electronic form without the prior consent of Xplore Technologies. Any unauthorized use is a violation of copyright laws.

PN: 95-01050 Edition: First, June 2006



DECLARATION OF CONFORMITY according to FCC Part 15

Responsible Party Name: Xplore Technologies Corp.

Address: 14000 Summit Drive, Suite 900, Austin, Texas 78728

Telephone: 512.336.7797

Declares that product: Model Series: iX104C³ complies with Part 15 of the FCC Rules

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and, (2) This device must accept any interference received, including interference that may cause undesired operation.



WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance may void the user's authority to operate this equipment.

For more information about FCC rules and their applicability to the iX104, see Appendix E, "Agency Notices."

Warranty Information

The iX104C³ Tablet PC, and iX104C³ Dual Mode are backed by a standard 36-month International Limited Warranty. An extended International Limited Warranty is available. Check the service kit included with your computer for warranty terms and conditions.

Important safety information

Before you use the iX104C³ Tablet PC or iX104C³ Dual Mode (referred to as the *tablet*), read these safety instructions and the operation instructions in this handbook.

Failure to observe all these instructions voids the Limited Warranty and may lead to suspension or denial of services to the offender, or legal action, or both.

Follow any special regulations governing the use of the tablet and, if radio-enabled, always switch it off in areas where radio devices are forbidden or when the radio device can cause interference or danger.

Always follow any safety laws and regulations pertaining to the use of cell phones and two-way radios, because these laws and regulations typically apply to the use of the wireless-enabled tablet.

Observe all restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, and wherever blasting operations are in progress or in any area in which restrictions on radio transmissions are imposed.

Switch off the tablet when in an aircraft. The tablet is not FAA-approved for use on aircraft. The effect of the use of the tablet in aircraft is unknown. Using the tablet in an aircraft may affect aircraft instrumentation, communication, and performance; may disrupt the network; and may be illegal.

Operating the wireless-enabled tablet may interfere with the functioning of inadequately protected medical devices such as pacemakers. Consult a physician or the manufacturer of the medical device if you have any questions.

Radio signals from your tablet will not affect the operation of most modern equipment, but certain electronic equipment, including automotive systems, may not be shielded against radio signals from your tablet. Check with the manufacturer of your motor vehicle or the manufacturer's representative to determine whether using the tablet will present any safety issues.

Avoid using the tablet in any environment that requires your full attention, such as when driving a vehicle. If you need to use your tablet while driving, have a passenger use it for you or find a safe location to halt your vehicle.



WARNING

Use only battery types specified in this handbook. Using any other type of battery can be dangerous and can disable the tablet.



WARNING

Do not use any dock or any other accessory or attachment that is not manufactured or supplied by Xplore or an authorized Xplore accessories supplier. Use of any accessory or attachment that is not supplied or approved for use with the tablet by Xplore is not permitted because it may cause hazards.

Operate the tablet only from the type of power source indicated on the marking label. (See page 44 for more information about the battery and power supply.) Route power supply cords so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords at plugs and convenience receptacles, and at the point where cords exit from the tablet or its dock. Do not overload wall outlets, extension cords, or integral convenience receptacles because this can cause fire or electric shock.

Unplug the tablet and refer the tablet and dock for service to qualified service personnel if any of the following conditions occur:

- The power supply cord or plug is damaged.
- The tablet or dock does not operate normally when you follow the instructions in this book.
- The tablet or dock exhibits a distinct change in performance.

Adjust only controls for which there are instructions in this book. An improper adjustment of other controls can result in damage and may require extensive work by a qualified technician to restore the tablet or dock to normal operation.



CAUTION

Avoid prolonged physical contact with the exposed metal surfaces on the front and back of the tablet. While the tablet may not feel hot to the touch, if you maintain physical contact with the tablet for a long time (for example, if you rest the tablet on your lap for a long time), your skin may suffer low-heat injury. In addition, be careful when you remove a PC card that has been used for a long time, because the card may be hot.

Contents

Welcome	11
Who this handbook is for	11
About your computer	12
Package contents	13
Optional accessories.	13
Contacting Xplore	15
1 Getting Started	17
Getting to know your tablet.	17
Front view	17
Back view.	18
Top view	19
Bottom view.	20
Right side view.	21
Left side view.	21
LED indicators	22
Quick-start guide.	24
Application, Windows, and hot keys	24
2 Using the iX104C³	27
Turning on the computer.	27
Turning off the computer	28
Using the Reset switch.	28
Suspending and resuming operation	29
Suspending operation.	30
Resuming operation	31

Using the pen	32
Selecting Auto-Sense, Active, or Touch mode	33
Using the digitizer to perform mouse functions.	34
Changing the pen double-click speed	35
Positioning the pen and pen tether	36
Changing the screen orientation	38
Adjusting the screen brightness.	39
Enabling automatic backlight control	39
Docking the tablet	40
Connecting devices	40
Connecting to a local area network or telephone line	41
Connecting USB-compatible devices	41
Connecting an external microphone	41
Adjusting microphone volume	42
Connecting a headphone or speakers	42
Adjusting headphone or speaker volume	42
Connecting a monitor or projection panel	43
Activating the monitor or projection panel.	43
Connecting an XPL snap-on expansion module	43
Using the battery	44
Charging the battery pack	44
If you do not have an external battery charger	44
If you have an external battery charger	45
Removing and installing the battery	45
Removing the battery	45
Installing the battery	47
Discarding a battery	47
Using power options	48
Changing the computer's power schemes	48
Changing battery alarm settings	49

Checking battery power status	49
Selecting power settings	50
Enabling Hibernation mode	50
Tips for conserving battery power	51
Accessing the hard disk drive compartment	52
Re-installing the hard disk drive compartment cover	53
Accessing the PCMCIA compartment	54
Re-installing the PCMCIA compartment cover	55
Programming hot keys.	56
Programming hot keys to start applications, open documents, or go to a Web site.	57
Programming hot keys to perform pre-defined functions	61
Programming hot keys to perform other key functions	63

3	Maintaining the iX104C³	67
----------	---	-----------

Caring for the tablet.	67
Checking power cords and connectors.	67
Protecting the computer from damage.	67
Preventing the computer from overheating	68
Storing the computer	69
Caring for the display screen	69
Protecting the display screen	69
When to replace the pen	70
Calibrating the digitizer.	71
Calibrating the digitizer: iX104C ³ Tablet PC	71
Calibrating the digitizer: iX104C ³ Dual Mode	72
Calibrating the digitizer: Active mode	73
Calibrating the digitizer: Touch mode	74

A	Troubleshooting	75
B	Using BIOS and AOS Functions	77
	Disabling the Auto Power feature	78
	Enabling automatic LCD backlight control	78
C	Glossary	79
D	Hardware Specifications	83
E	Agency Notices	89
F	Configuring Dual Mode Tablet Digitizer Input Methods	93
	Using the BIOS Setup Utility to set input method defaults	93
	Starting the BIOS Setup Utility	93
	Selecting the digitizer input method	94
	Setting digitizer input method security	95
	Using the Panel Control Center to configure controls for temporary changes to the input method	96
	Summary: Dual Mode digitizer input method settings	98
	Sample implementations	103
	Sample 1	103
	Sample 2	104
	Index	105

Welcome


Welcome to the Xplore Technologies® iX104C³™ tablet PC, the rugged tablet designed, tested, and manufactured to meet the environmental and physical real-world challenges faced by today's mobile workers. The iX104C³ not only works the way you do, but can also take the abuses of everyday wear and tear. The iX104C³ design is based on years of experience in rugged mobile applications.

Advanced technology, innovative design, and a rugged case are just a few highlights of your iX104C³ system. Equally important is Xplore's commitment to ensuring that you are treated with the same respect and honesty you offer to your customers and peers every day.

Who this handbook is for

This handbook assumes that you have basic experience using computers and Microsoft® Windows®.

This handbook provides instructions for using Xplore Technologies iX104C³ tablet computers.

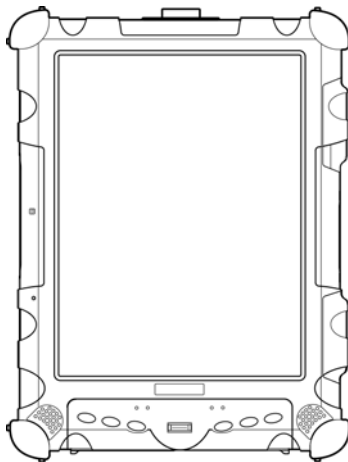

About your computer

The iX104C³ is a high-performance tablet PC that runs on the Microsoft Windows XP[®] Professional Tablet PC Edition operating system.

The method you use to control the tablet depends on the tablet model, as follows:

Tablet Model	Digitizer/Touchscreen	Control Method
iX104C ³ Tablet PC	Digitizer	Special, enhanced pen (included with the tablet)
iX104C ³ Dual Mode	Combined digitizer and touchscreen	• Special, enhanced pen (included with the tablet) • Your finger • Any suitable pointing device

Note: In this handbook, all information applies to all models unless otherwise noted.

All iX104C³ tablets have been engineered and tested to meet Military Standards for Environmental Extremes (MIL STD 810F). Your tablet includes the following features that make it exceptionally rugged and durable:

- Durable, long-lasting, dense magnesium enclosure
- Interior and exterior multi-layer magnesium frames and cavities
- ISODAMP[®] shock absorbing materials in patented bumpering system and gasket protection mechanisms
- Shock-isolated hard disk

- Integrated, protected wireless LAN and WAN antennas for dual mode operation
- Locked in place memory, cables, and connectors
- Proprietary thermal management system

Package contents

Check to make sure your package includes the following items:

- Quick Start Guide
- Battery pack
- Power cord
- AC adapter
- Pen
- Pen tether
- iX104C³ pen tablet
- Warranty information kit
- This handbook

Optional accessories

Your package also includes any optional accessories you ordered.

Docking options

- xStand Desktop Docking Station
- xDock Vehicle Docking Station

Carrying cases

- Ballistic nylon hands-free carry case
- Leather portfolio case

Storage options

- External USB floppy disk drive
- External USB CD-ROM drive

Memory

- 512 MB and 1 GB PC3200 SODIMM DDR RAM
- 80 GB 2.5-inch rugged hard disk

Power options

- AC adapter with U.S. cord
- Main battery pack (41 watt hours)
- Extended life battery pack (55 watt hours)
- Auto adapter (cigarette lighter adapter)

Additional accessories

- USB non-rugged mini keyboard (83-key)
- USB rugged, backlit mini keyboard (83-key)
- Screen protectors (2-pack)
- Active stylus
- Pen tether
- Slipcover case with hand straps

Contacting Xplore

If you purchased your tablet from an authorized Xplore dealer, contact the dealer for service and support.

If you purchased your tablet directly from Xplore, use any of the following methods to contact Xplore for service and support:

Toll free	1-866-296-8541, extension 222
Fax	1-512-336-7791
E-mail	customersupport@xploretech.com
Web site	http://www.xploretech.com

Before you contact Xplore, have the following information ready so that the customer support representative can quickly provide a solution:

Product name: iX104C ³
Product serial number
Purchase date
Conditions under which the problem occurred
Any error messages that were displayed
Type of device connected, if any

The serial number is on the back of the tablet. See page 18.

1

Getting Started


This chapter gives you an overview of your tablet and includes a quick-start guide to tablet keys.

Getting to know your tablet

For more information about each component, see Chapter 2.

This section shows the locations of some of your tablet's important components.

Front view

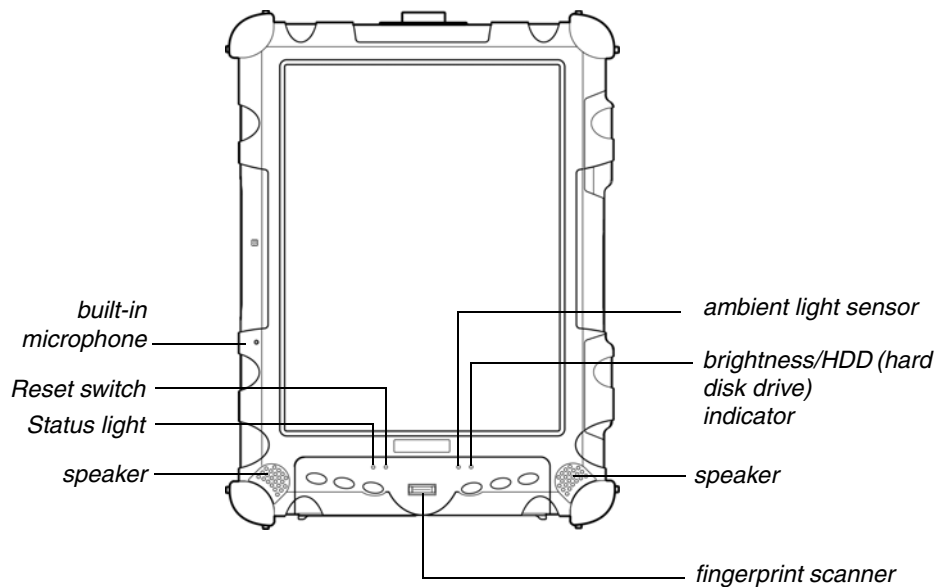

Built-in microphone – Enables you to input mono audio. Includes noise cancellation.


Reset switch – Enables you to turn off the computer when using the Power On/Off key is not effective. (See page 28.)

Speakers – Enable you to listen to stereo audio files. Sealed to provide protection from the environment.

Ambient light sensor – Automatically controls the amount of backlight sent to the screen. Provides optimum brightness for the lighting conditions in which you are working.

For information about controlling brightness, see page 39.

Back view

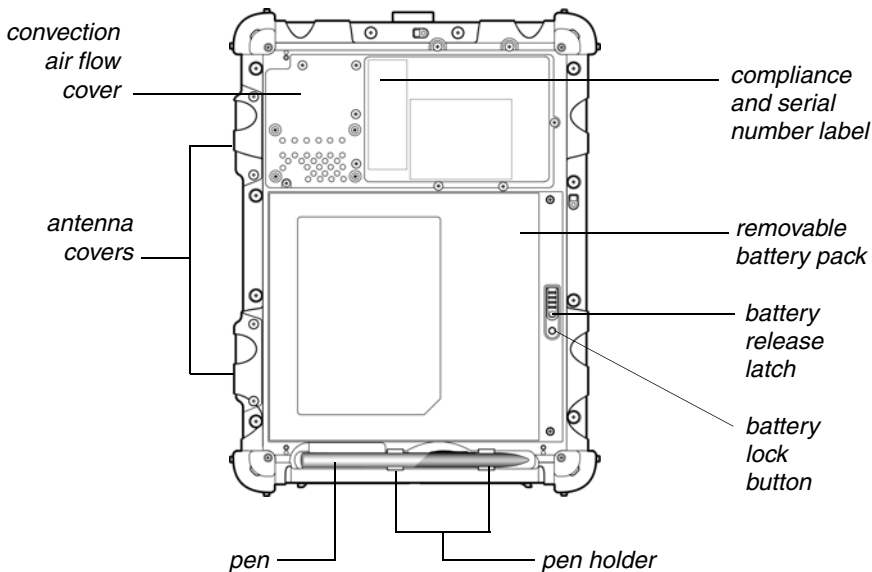

Convection air flow cover – Magnesium cover over the thermal transfer bay that manages heat movement out of the computer.

Antenna covers – For optional wireless LAN and WAN models, protect and secure the radio antennas (accessible by authorized service personnel only).

Pen – The main device you use to enter data and control applications (instead of a mouse or a keyboard). Also called the *stylus*. See “Using the pen” on page 32.

Pen holder – Provides a place to secure the pen when you are not using it.


Battery release latch – Provides access to the battery.

Battery lock button – Secures the battery inside the tablet.

Removable battery pack – Battery that runs the computer when battery power is required.

Compliance and serial number label – Includes regulatory compliance numbers and the computer’s unique serial number.

Top view

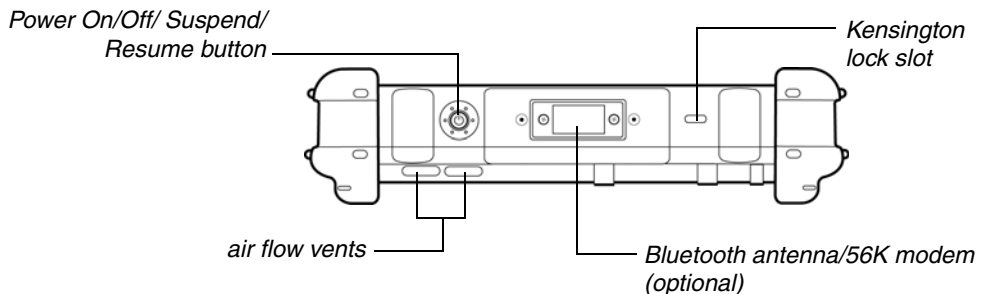


Power On/Off/Suspend/Resume key – Press the key to turn the computer on or off, or to suspend or resume operation.

Air flow vents – Helps prevent the computer from overheating by forcing heat away from the computer. (Do not block the vents.)

Bluetooth antenna – Optional Bluetooth antenna or 56K modem.

Kensington[™] lock slot – Connector for the optional Kensington MicroSaver[™]-compatible security cable.

Bottom view

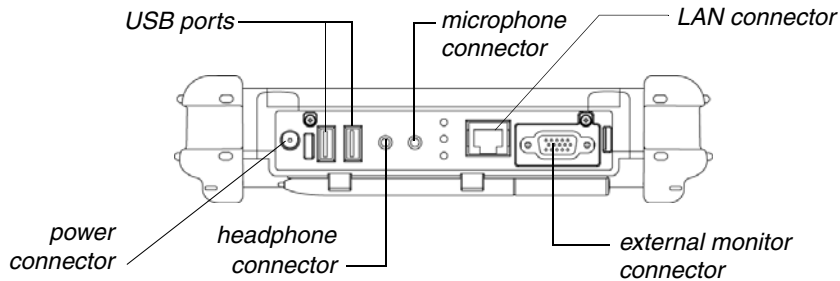

The connectors on the bottom of the computer are located behind the outer doors.

Power connector – For the optional AC adapter or auto adapter. (See “Optional accessories” on page 13.)

USB 2.0 ports – For Universal Serial Bus devices (compliant with USB Standard Revision 2.0).

Headphone connector – For stereo headphones or speakers.


Microphone connector – For an external microphone.

LAN connector – For connecting a standard RJ-45 connector to the tablet’s internal local area network (LAN) card

External monitor connector – For an external monitor or projection panel.

The optional Office and Vehicle Docks include additional USB ports. See “Optional accessories” on page 13.

Right side view

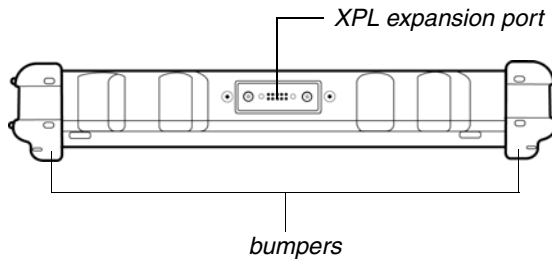


Bumpers – Fabricated from rugged material. Raised to help protect the computer from damage.

XPL expansion port – A USB port (compliant with USB Standard Revision 2.0) that enables you to connect an XPL snap-on expansion module for devices such as cameras, radios, and fingerprint scanners.

Contact your reseller for information about the XPL expansion module and the Kensington security cable.

Left side view

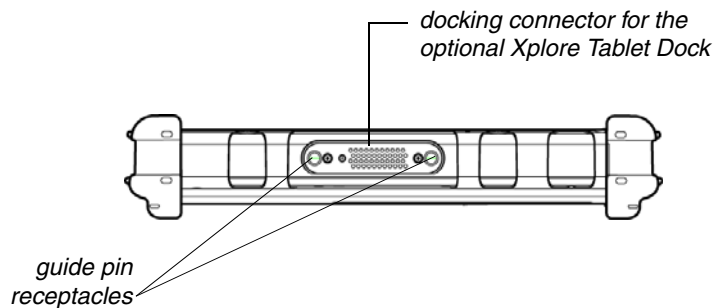


See "Optional accessories" on page 13.

Docking connector – Enables you to connect the optional xStand Desktop Docking Station or xDock Vehicle Docking Station.

Guide pin receptacles – Help assure secure connection of the optional xStand or xDock.

LED indicators

The LED indicator lights show the status of system functions such as power and battery levels.

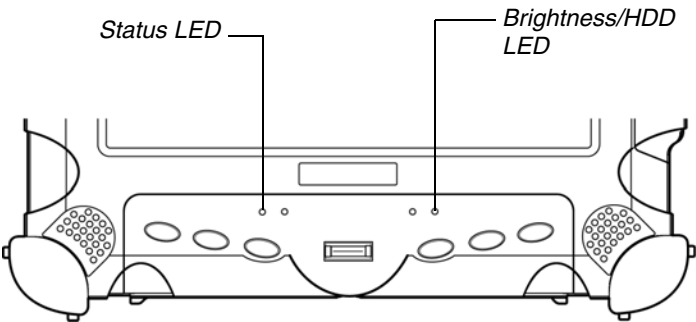

The following table defines the various LED states.

Table 1 Status LED indicator

Mode/State	LED State	Meaning
On state	green, continuous	The computer is on, ready for use, and functioning normally. The battery is fully charged.
Charging	green, blinking	The AC adapter is plugged in and the battery is charging.
Off state	off (no light)	The computer is off.
Suspend mode	yellow, continuous	The computer is on and is in Suspend or Hibernation mode.
Thermal control	yellow, blinking	The computer is on and is in Warm-up mode, with the LCD and backlight off. After the system has warmed to a safe level, the LCD and backlight turn on.

Table 1 Status LED indicator (continued)

Mode/State	LED State	Meaning
On	red, blinking	The computer is powered on, running under battery power, and the charge level in the battery is at a minimum warning level. Plug the computer into an AC/DC power source or install a charged battery.
On	red, continuous	• The computer is on, running under battery power, and the charge level in the battery has reached a critical level. Plug the computer into an AC/DC power source or install a charged battery. • The computer has encountered a fault and is preventing normal operation. (Contact your help desk.)

Table 2 Brightness/HDD Activity LED indicator

Mode/State	LED State	Meaning
On	green, not continuous	Manual backlight control is enabled. The backlight is under your manual control and the hard drive is active. Note: This is the computer's default state.
On	green, continuous	Automatic backlight control is active.

Quick-start guide

This section is a quick guide to using the main features of your tablet.
(See Chapter 2 for detailed information.)

Application, Windows, and hot keys

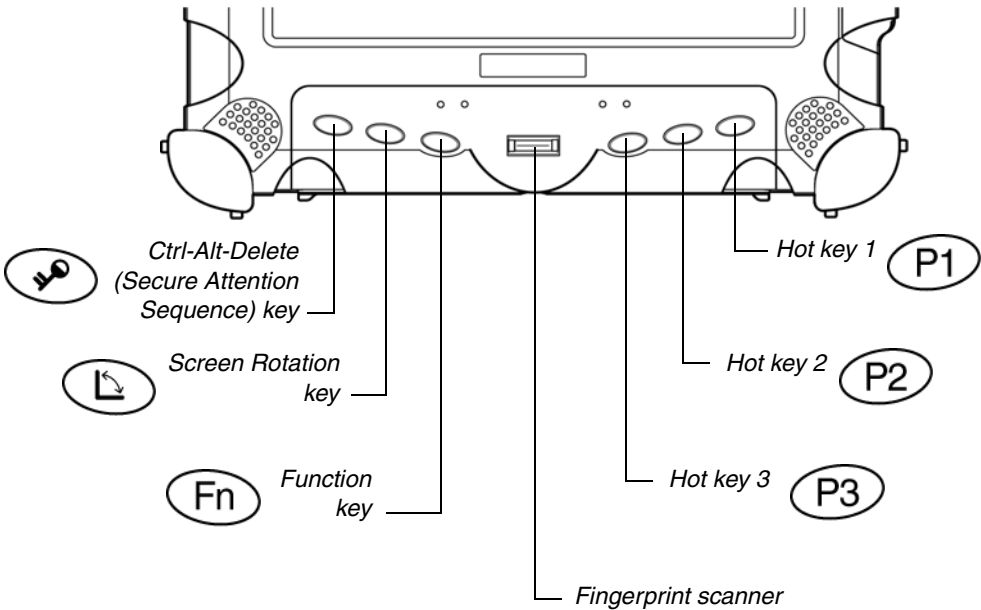


Table 3 Main keys

Press this key...	To perform this function
	- Log on after resuming operation from power management, powering on, or locking. - After logging on, launch Windows Task Manager.
	Rotate screen orientation between portrait (vertical) and landscape (horizontal).
	Use in combination with another key to perform various functions. (See page 26.)
	Fingerprint scanner.
	Open Help, or perform a different function that you program this key to perform.
	Open Internet Explorer, or perform a different function that you program this key to perform.
	Open your email application, or perform a different function that you program this key to perform.

Table 4 *Function mode keys*

Press these keys...	To perform this function
 	Default function: Send video display to a monitor or projection panel connected to the computer (and back to the computer again). You can program this key combination to perform a different function.
 	Default function: iX104C³ Tablet PC: Open a pre-defined program (see “Programming hot keys to start applications, open documents, or go to a Web site” on page 57). iX104C³ Dual Mode: Select Auto-Sense mode, Active mode, or Touch mode. This determines the input devices you can use. In Auto-Sense mode, you can use the pen, your finger, or another similar device interchangeably. In Active mode, you can use only the pen. In Touch mode, you can use your finger or another similar pointing device. You can program this key combination to perform a different function. (See “Programming hot keys to start applications, open documents, or go to a Web site” on page 57.)
 	Default function: Open the pen calibration program. You can program this key combination to perform a different function.

2


Using the iX104C³

This chapter contains detailed instructions for using your tablet.

Turning on the computer


1. Make sure the computer is off.

*When the computer is off,
the Status LED is off.*

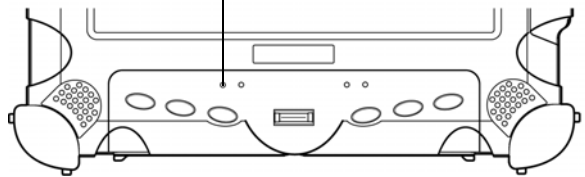

2. Make sure the battery is charged or that the computer is plugged in to an external power source.
3. Press the Power On/Off/Suspend/Resume button.


*Power On/Off/
Suspend/Resume
button*

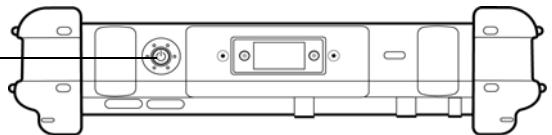

Turning off the computer

When the computer is in Suspend mode, the Status LED is continuously yellow.

1. If the computer is in Suspend mode, press the Power On/Off/Suspend/Resume button to resume operation. (See page 30 for information about Suspend mode.)

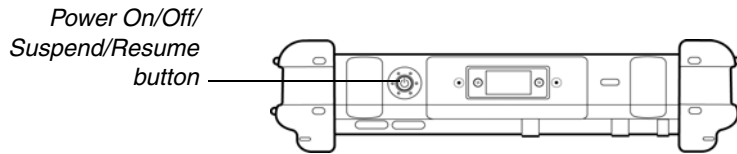


2. Make sure the battery is charged or that the computer is plugged in to an external power source.
3. Save your work and close all programs.
4. From the Windows Start menu, click Turn Off Computer.
5. The Turn off computer dialog box opens.
6. Click Turn Off.

Using the Reset switch

Use the Reset switch only if you cannot turn off the computer by any other means, because you may lose unsaved data.

If the computer does not seem to be accepting input and you cannot turn it off by using the method described in “Turning off the computer,” press the Reset switch. (Use the stylus or a similar instrument to press the switch).

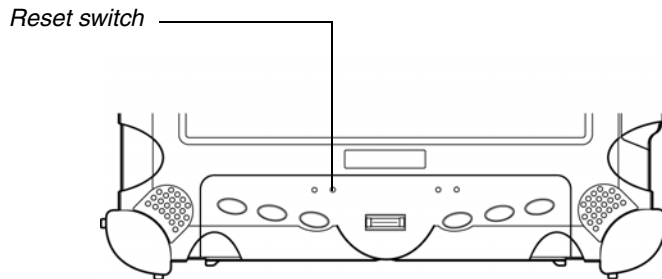

Suspending and resuming operation

To conserve battery power when you do not want to turn off the computer or when you need to install a charged battery pack, put the computer into Suspend mode. (You can suspend operation without closing any programs or Windows.)

When you suspend operation:

- Programs that are running stop (but do not close).
- Active data is saved.
- The system enters one of the following low-power modes:
 - Suspend-to-RAM mode – The Status LED light is continuously yellow. Active data is saved in RAM and most other components are turned off.

Although the computer uses very little power when in Suspend-to-RAM mode, eventually the battery's power does run out. If you will not be using the computer for an extended period of time, turn the computer off instead of using Suspend-to-RAM mode.

- Hibernation mode – Active data is saved on the hard disk and power usage is reduced to the same level as when the computer is turned off. In Hibernation mode, there is no danger of losing data if battery power is lost.

Note: For more information, see “Using power options” on page 48.

If you have set your computer to turn power off (in the Power Options utility in Windows Control Panel), you cannot suspend operation. To change power settings, see “Using power options” on page 48.

If the Suspend action of the Power On/Off/Suspend/Resume button has been disabled to prevent accidental interruption, pressing the button does not suspend the computer. You must use a software application to suspend the computer. For more information, contact your help desk or your iX104C³ dealer.


If your computer is connected to a network, the network may automatically log you off after a period of inactivity while system operation is suspended. Contact your help desk or system administrator to learn your log-off time limit.

Suspending operation

Use one of the following methods to suspend operation:

Method 1


Press and hold the Power On/Off/Suspend/Resume button for 4 seconds.

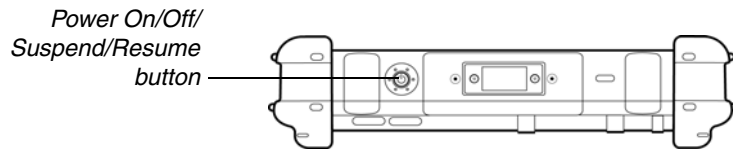

Method 2

1. From the Windows Start menu, press Turn Off Computer.
2. The Turn off computer dialog box opens.
3. Press Stand By.

When operation is suspended, the Status LED displays a continuous yellow light.

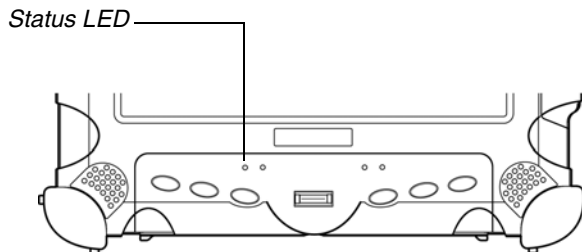


Resuming operation

To resume operation when the computer is in Suspend mode, press the Power On/Off/Suspend/Resume button.

Note: Press the button only *once*.

*Power On/Off/
Suspend/Resume
button*



After a minute or two, the computer resumes normal operation. When the Status LED displays a continuous green light, you can begin using the computer.

Note: Resuming operation from Hibernation mode takes a little longer than from Suspend-to-RAM mode.

Using the pen

You can use the pen to select items and to navigate through programs.

If your computer is an iX104C³ Tablet PC:

Use the special multi-function pen provided with the computer.

For more information about Dual Mode tablet input methods, see Appendix F, "Configuring Dual Mode Tablet Digitizer Input Methods."

If your computer is an iX104C³ Dual Mode:

You can use any of the following input methods:

Auto-Sense mode: Use either the multi-function pen or your finger interchangeably. The computer distinguishes between the two input modes and automatically adjusts accordingly.

This is the tablet's default state.

Active mode: Use only the special multi-function pen provided with the computer.

Touch mode: Use your finger or another similar pointing device.

For more information, see "Selecting Auto-Sense, Active, or Touch mode" on page 33.

WARNING

Do not use items such as a ball point pen or a screwdriver that can damage the tablet. Damage caused by using an item not provided with the tablet is not covered by the tablet warranty.

Note: Before you use the tablet the first time, or if the action you are trying to perform does not occur when you use the pen or your finger to touch the screen, calibrate the digitizer as described in "Calibrating the digitizer" on page 71.

Selecting Auto-Sense, Active, or Touch mode




If your computer is the iX104C³ Dual Mode model, use the **Fn-P2** key combination to select Auto-Sense mode (the default mode), Active-only mode, or Touch-only mode.

In **Auto-Sense** mode, you can use the multi-function pen provided with the tablet, your finger, or any other similar pointing device interchangeably, on the fly.

In **Active** mode, you can use only the special multi-function pen provided with the tablet.

In **Touch** mode, you can use your finger or another similar pointing device.

Note: The input methods available to you depend on the way your tablet has been configured. See Appendix F, "Configuring Dual Mode Tablet Digitizer Input Methods."

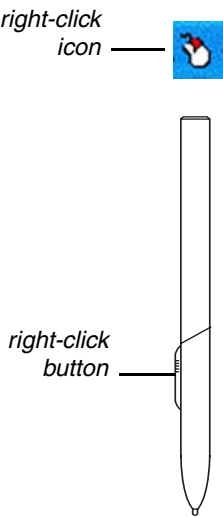

Using the digitizer to perform mouse functions

To perform this function...	Do this
Select an object (left button click).	Tap the pen tip once on the object.
Perform a double-click.	Quickly tap the pen tip twice on the object.
Perform a right-click.	If your computer is an iX104C³ Tablet PC: Hold the pen directly on the object for 1 second. The right-click icon appears. or Press the right-click button on the pen while you click the object. If your computer is an iX104C³ Dual Mode: Touch mode: In the Windows taskbar, press the right-click icon; then click the object. Active mode: Hold the pen directly on the object for 1 second. The right-click icon appears. or Press the right-click button on the pen while you click the object.
Move or drag an object.	Place the pen tip on the object; then continue to hold the pen tip against the screen as you move the pen.

Changing the pen double-click speed

The pen double-click speed is in sync with the mouse double-click speed. To change the speed:

1. Click the Windows Start button.
2. Click the Settings option.
3. Click the Control Panel option.
4. In the Control Panel window:

If your computer is an iX104C³ Tablet PC:

Click the Tablet and Pen Settings icon.

If your computer is an iX104C³ Dual Mode:

In **Active** mode: Click the Tablet and Pen Settings icon.

In **Touch** mode: Click the Pointer Devices icon.


5. Click the Windows tab.
6. Follow the instructions that appear in the Windows tab.

Positioning the pen and pen tether


The pen tether helps prevent the loss of your pen. The following illustrations show how to position the pen and pen tether.

Tether anchored at the top

Note: When the optional Bluetooth antenna or 56K modem module is installed, anchor the tether on the side instead of on the top (see page 37).

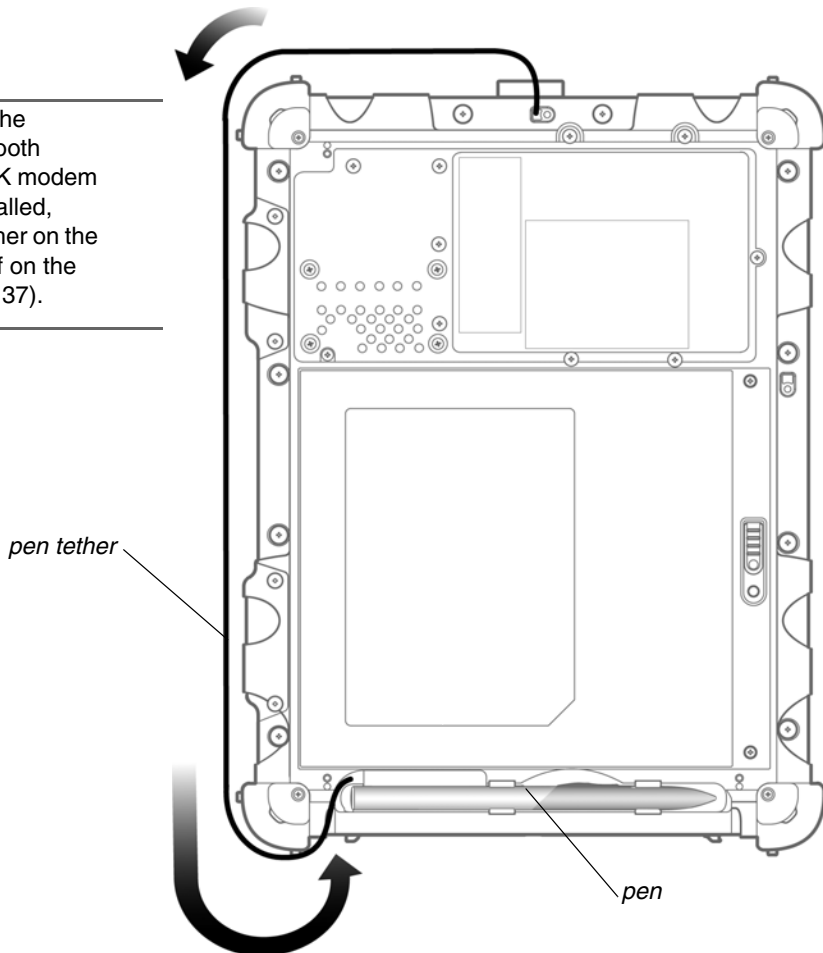


Tether anchored on the side

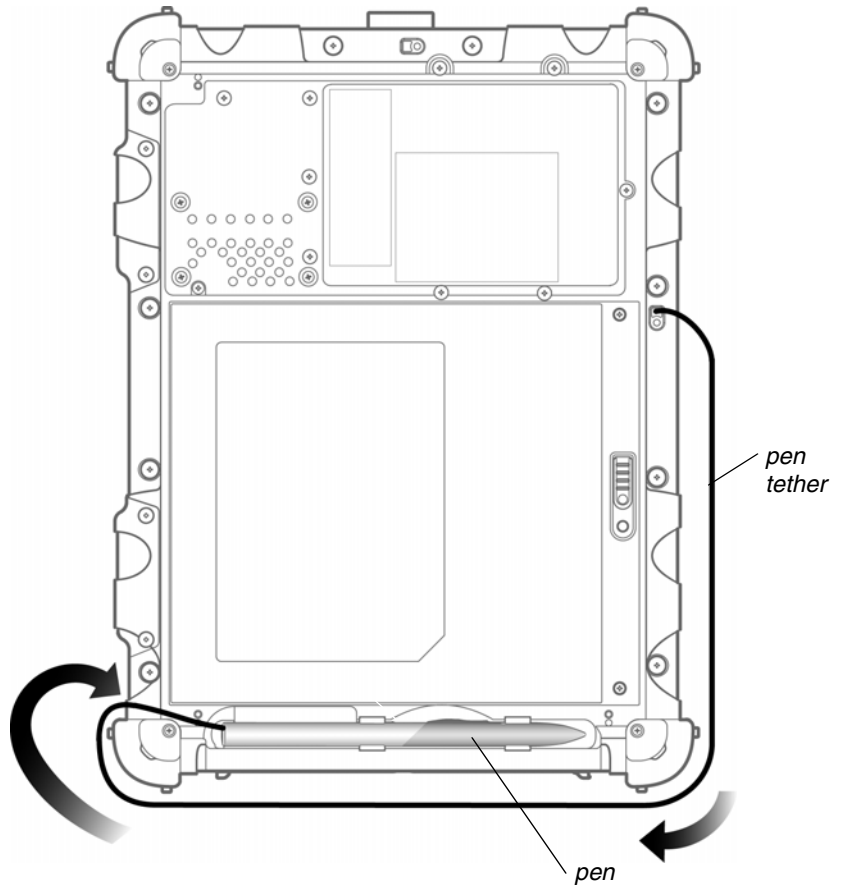

Changing the screen orientation



To rotate the screen orientation from portrait (vertical) to landscape (horizontal) mode or from landscape to portrait mode, press the screen rotation key.

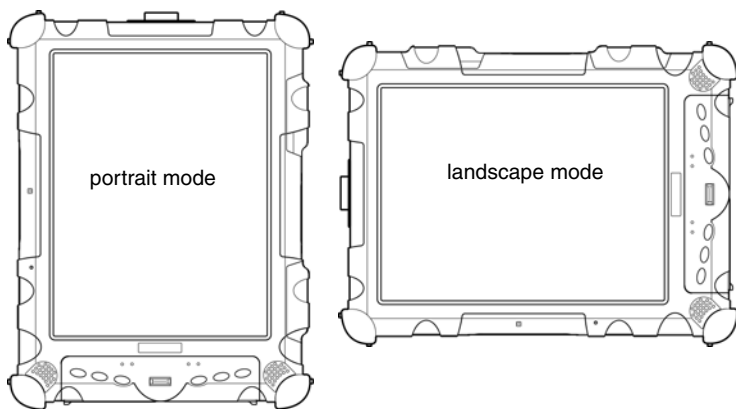

Adjusting the screen brightness


To adjust the screen brightness, click the brightness control icon on the Windows taskbar; then use the slider bar to make the adjustment.



Enabling automatic backlight control

When the ambient light sensor is enabled, the computer automatically controls the amount of backlight sent to the screen to provide optimum brightness for the lighting conditions in which you are working.


When the ambient light sensor is enabled, the Brightness LED glows continuously green. When the ambient light sensor is disabled and the backlight is under manual control, the Brightness/HDD LED indicates hard disk drive activity.

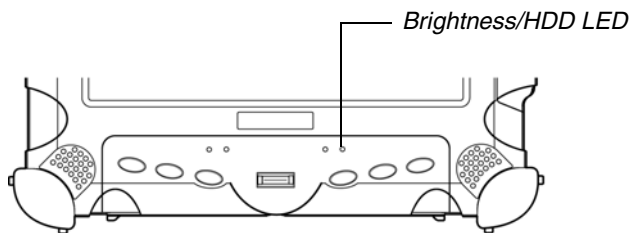

To enable automatic backlight control, see page 78.

Docking the tablet

If you have the optional xStand office dock or xDock vehicle dock, connect it to the tablet at the docking port. (See the *iX104 Docking Stations Handbook*.)

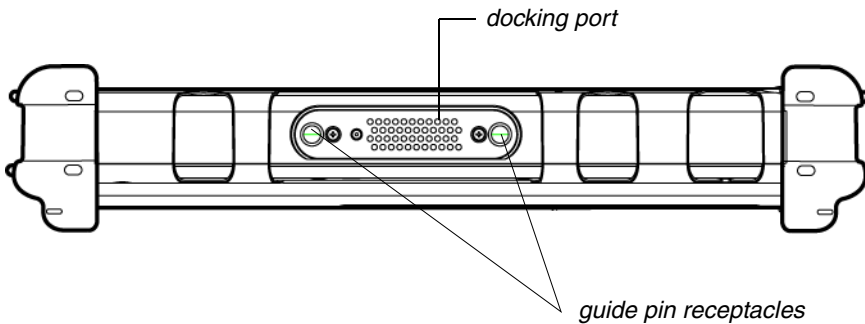


Connecting devices

Refer to the following subsections for information about connecting external devices to your computer.

Note: If the device you want to use does not appear to be working with your computer, the device may need to be enabled in the computer's configuration program. Contact your local help desk or Xplore reseller.

Connecting to a local area network or telephone line


Connect a local area network (LAN) cable's RJ-45 connector to the internal LAN interface card. (See your network system administrator for more information.)

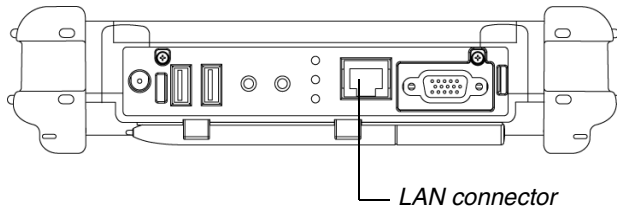


Connecting USB-compatible devices

Devices must be in compliance with USB Standard Revision 2.0.

Connect any USB-compatible devices to the computer's USB ports.

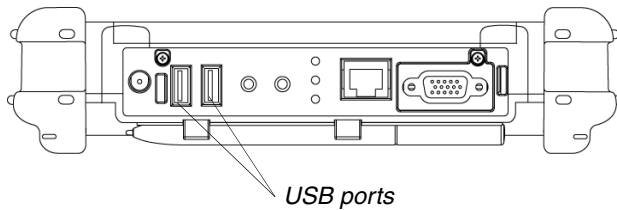

Connecting an external microphone

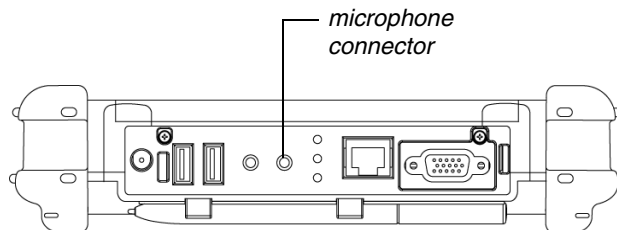


Adjusting microphone volume

If necessary, adjust the volume of the microphone as follows:

1. Press the Windows Start key.
2. Open the Windows Control Panel.
3. In the Control Panel window, double-click the Sounds and Audio Properties icon.
4. In the Sounds and Audio Properties window, click the Audio tab.
5. In the Sound recording area, click the Volume button.
6. Adjust the volume.
7. Click OK.

Connecting a headphone or speakers

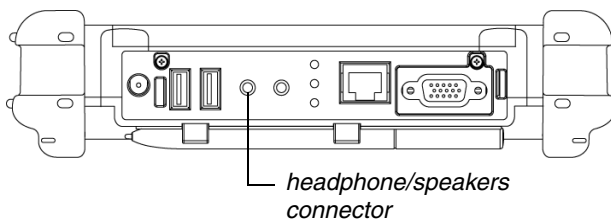

Adjusting headphone or speaker volume


1. Click the audio icon in the Status area of the Windows taskbar. 

The volume control area opens.



2. If the Mute check box is checked, uncheck it.
3. Move the slider bar up or down to increase or decrease the volume.

Connecting a monitor or projection panel

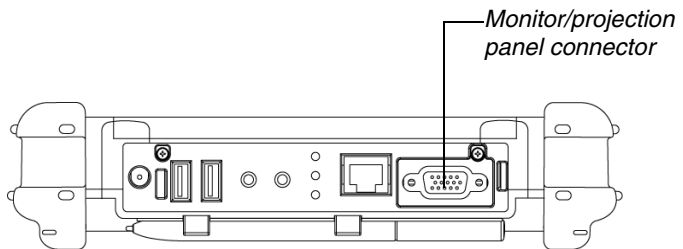

Activating the monitor or projection panel

To change the video output to the monitor or projection panel:


Press the Fn-P1 key combination.

To change the video output back to the computer:



Press the Fn-P1 key combination again.

Connecting an XPL snap-on expansion module

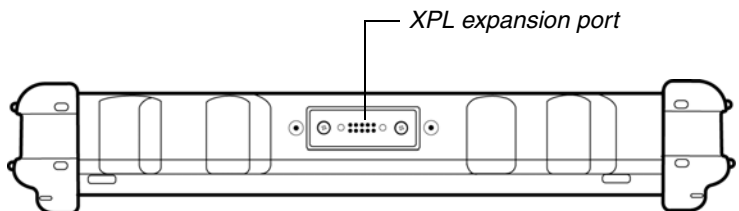

Using the battery


You can recharge, remove, and replace the battery pack.

Charging the battery pack

If you do not have an external battery charger

Follow these steps to charge the battery while it is installed in the computer:

1. Connect a power source, such as an AC adapter or cigarette lighter adapter, to the power connector on the computer.

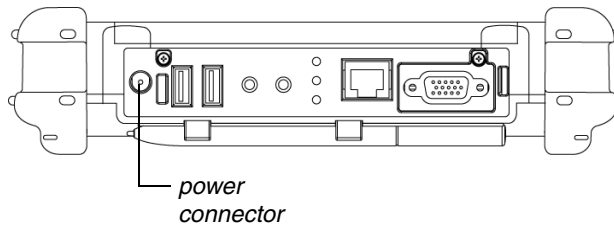

If the battery charge is below 90%, the battery begins charging and the Status LED flashes green. (If the battery charge is higher than 90%, the battery will not charge, preventing battery overcharge.)

2. Check the level of charge. (See “Checking battery power status” on page 49.)

The charging process continues until the battery charge reaches 100%.

Table 5 shows the approximate time required to charge the battery level to 100%.

Table 5 *Approximate battery charge time*

Battery pack capacity	Charge time
41 watt hours (5700 mAh)	2.5 hours
55 watt hours (7600 mAh)	3.5 hours

If you have an external battery charger

1. Remove the battery pack (see page 45).
2. Use the external battery charger to charge the battery.
3. Install the battery (see page 47).

Removing and installing the battery

You can remove the battery and use an (optional) external charger to charge it.

Removing the battery

1. To swap with a charged battery:

Use one of the methods described in “Suspending operation” on page 30 to suspend operation.


If a charged battery is not available:

Save your work and close all running programs; then shut down the computer or put the computer in Hibernation mode (see “Suspending operation” on page 30).

Note: To avoid losing unsaved data, wait until the computer has completed switching to Suspended mode before removing the battery.

2. Use the stylus or a pen to depress the battery lock button.
3. On the computer, slide the battery release latch toward the lock button.

The battery unlocks and slightly rises from the computer.

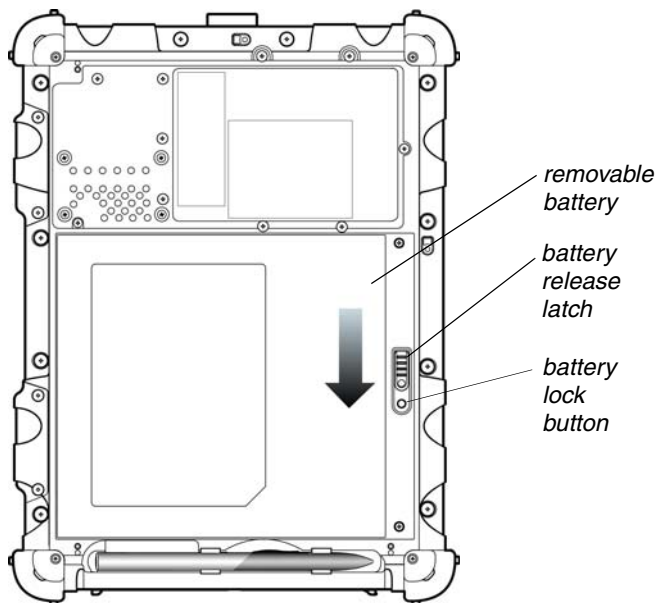


4. Pull the battery away from the computer and remove it.

Note: After removing the battery, you must replace the battery or connect the computer to an external power supply within **3 to 5 minutes** or the computer completely loses power.

Installing the battery

1. Orient the battery with the slides in the empty battery tray.

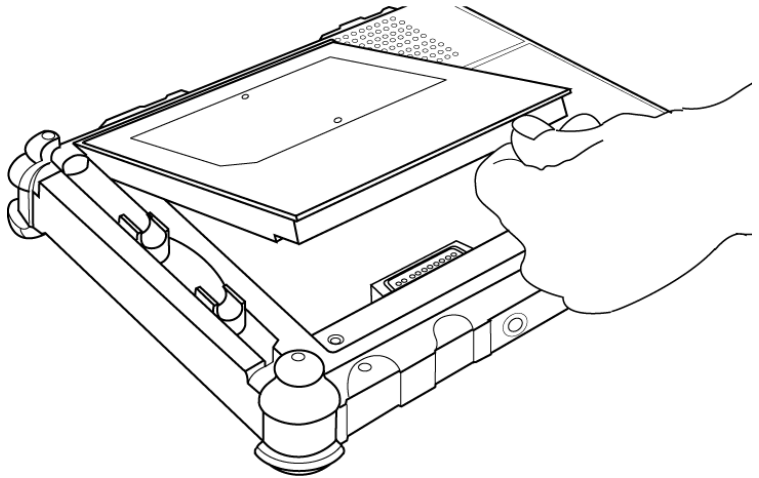

2. Slide the battery into the tray and press it firmly until it is seated.
3. Slide the battery release latch to its original position.

The lock button pops back into the locked position, securing the battery in place.

Discarding a battery

Dispose of a spent battery in accordance with your local government regulations. Under Federal, state, or local law, it may be illegal to put batteries in the trash. Contact your system administrator or your municipal solid waste disposal department or provider for information.


Using power options

This section explains how to use the Power Options Properties window to manage the computer's power use.



On the Windows taskbar, click the battery icon.

The Power Options Properties window opens.

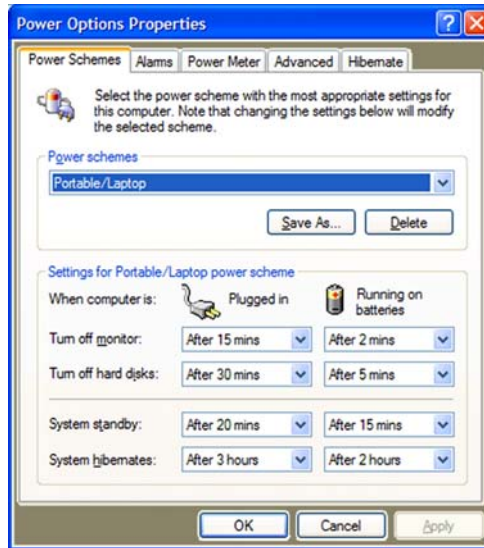


Changing the computer's power schemes

In the Power Options Properties window, select the Power Schemes tab; then select options from the drop-down lists.


Changing battery alarm settings

In the Power Options Properties window (page 48), select the Alarms tab; then use the slider bars to change the alarm settings.

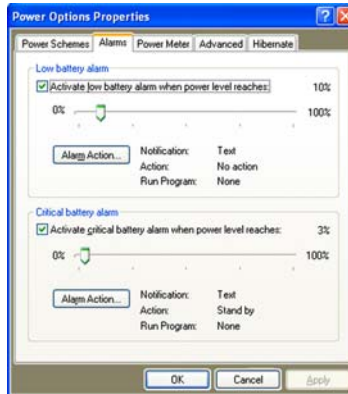


Checking battery power status

In the Power Options Properties window (page 48), select the Power Meter tab. The window shows the amount of power left in the battery.

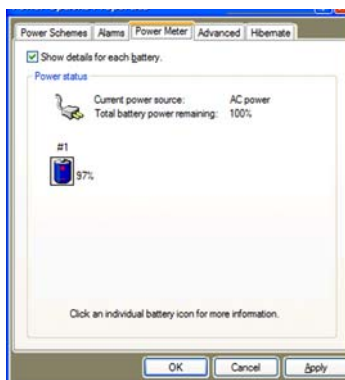


Selecting power settings

In the Power Options Properties window (page 48), select the Advanced tab; then select the power settings options you want to use.

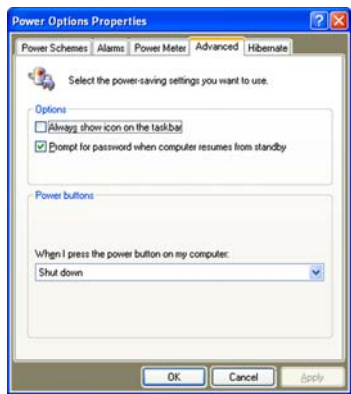

Enabling Hibernation mode

In the Power Options Properties window (page 48), select the Hibernate tab; then check the Enable Hibernation check box.

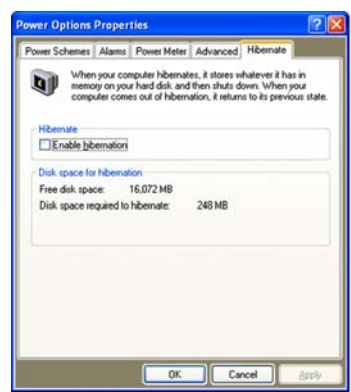

Tips for conserving battery power

The following tips help you extend the life of your battery by conserving battery power:


- Use an external power source such as the AC or auto adapter whenever available.
- Suspend operation if you know that you will not be using the system for a while. (See “Suspending operation” on page 30.)
- Turn off the computer if you will not be using it for an extended period of time.
- Adjust power options to automatically conserve power. (See “Using power options” on page 48.)

Accessing the hard disk drive compartment

When you install a new hard disk drive, follow the instructions in this section to access the hard disk drive compartment.

WARNING Failure to follow this procedure can result in damage to the case and the cover, which is not covered under the Xplore Technologies warranty.

1. Turn off the computer.
2. Remove all power from the unit, including batteries and other power sources such as power supplies, cigarette lighter adapters, and mobile power sources.
3. Use an M1 Philips screwdriver to remove the 10 screws from the compartment cover. (Do not use a power screwdriver.)

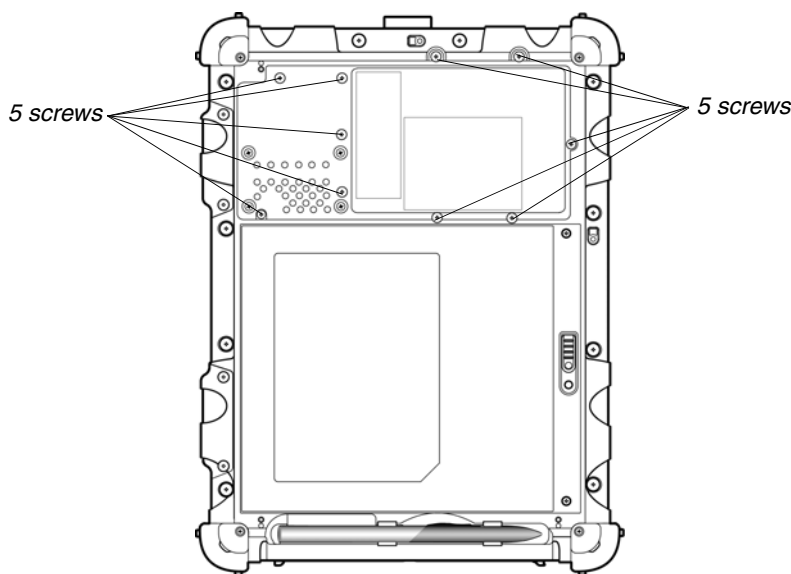

Re-installing the hard disk drive compartment cover

1. Make sure the sealing gasket is properly placed.
2. Reposition the cover on the compartment.
3. Use the M1 Philips screwdriver and a torque wrench to replace the 10 screws.

Notes: Use a maximum torque of 3 kg-cm (2.6 lb-in) for each screw.


Do not use power tools.

Accessing the PCMCIA compartment

When you install a PCMCIA card, follow the instructions in this section to access the PCMCIA compartment.

WARNING Failure to follow this procedure can result in damage to the case and the cover, which is not covered under the Xplore Technologies warranty.

1. Turn off the computer.
2. Remove all power from the unit, including batteries and other power sources such as power supplies, cigarette lighter adapters, and mobile power sources.
3. Remove the battery. (See “Removing and installing the battery” on page 45.)
4. Use an M1 Philips screwdriver to remove the 6 screws from the compartment cover. (Do not use a power screwdriver.)

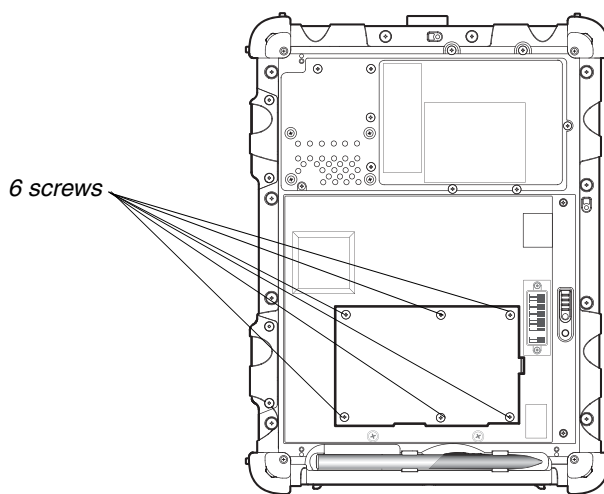

Re-installing the PCMCIA compartment cover

1. Make sure the sealing gasket is properly placed.
2. Reposition the cover on the compartment.
3. Use the M1 Philips screwdriver and a torque wrench to replace the 6 screws.

Notes: Use a maximum torque of 3 kg-cm (2.6 lb-in) for each screw.

Do not use power tools.

Programming hot keys

Xplore pre-programs the P1, P2, and P3 hot keys and Function mode hot key combinations to perform certain functions by default. However, you can program them to perform different functions, as described in this section.

Table 6 Programmable hot keys

Key	Default function
	Starts Help.
	Starts Internet Explorer.
	Starts your email application.

Table 7 Programmable Function mode hot key combinations


Key combination		Default function
		Sends video display to a monitor or projection panel.
		iX104C ³ Tablet PC: Opens a pre-defined program. iX104C ² Dual Mode: Selects the input device (see page 33).
		Starts the pen calibration program.

Programming hot keys to start applications, open documents, or go to a Web site




1. In the Status area of the Windows taskbar, click the iX104C³ Configuration icon.

The Launch Button QuickShow dialog box opens.

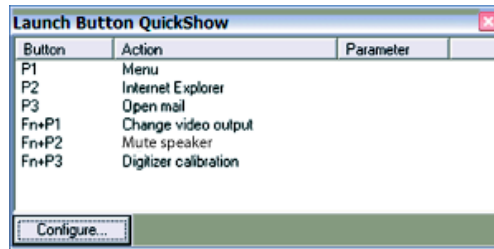

2. Click the Configure button.

The Panel Control Center window opens.

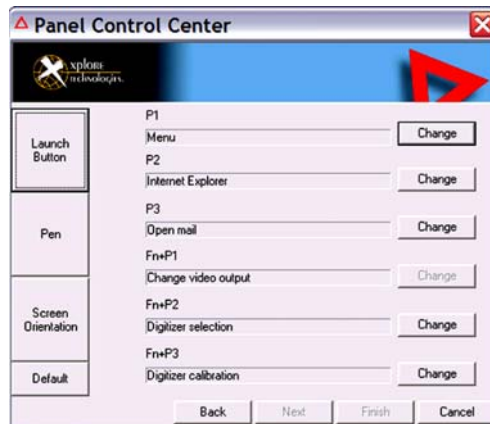

3. Click the Change button next to the key or key combination you want to program.

The following options appear:



4. Click Launch an Application, Document or Web site.

The following options appear:



5. To start an application:

- a. Click Launch an Application.
- b. In the File text box, type the name of the application you want the hot key or Function mode hot key combination to start.

Type the name of executable file that starts the application. For example: word.exe, notepad.exe, excel.exe.



- c. Click Change.

To open a document:

- a. Click Open a Document.
- b. In the File text box, type the name of the document you want the hot key or Function mode hot key combination to open. (For example: spreadsheet.xls, airports.doc, wiringdiagram.jpg)
- c. Click Change.

To open a multimedia file:

- a. Click Open a Multimedia file.
- b. In the File text box, type the name of the multimedia file you want the hot key or Function mode hot key combination to open. (For example: 911training.dir, demo.ppt)
- c. Click Change.

To open a Web page:


- a. Click Open a Web page.
 - b. In the File text box, type the URL of the Web page you want the hot key or Function mode hot key combination to open. (For example: <http://www.xplorettech.com>)
 - c. Click Change.
6. Program more hot keys, or click Finish to close the Panel Control Center window.

Programming hot keys to perform pre-defined functions




1. In the Status area of the Windows taskbar, click the iX104C³ Configuration icon.

The Launch Button QuickShow dialog box opens.

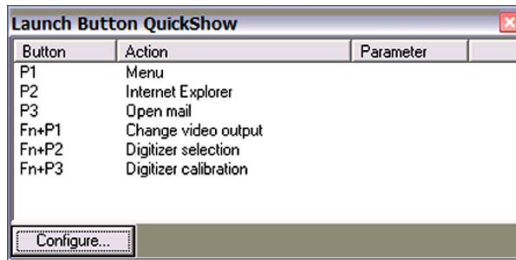

2. Click the Configure button.

The Panel Control Center window opens.

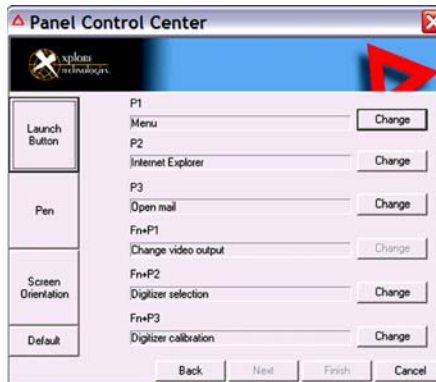

3. Next to the key or key combination you want to program, click the Change button.

The following options appear:



4. Click Start a pre-defined function.
5. In the Function selection drop-down list, select an option.




6. Program more hot keys, or click Finish to close the Panel Control Center window.

Programming hot keys to perform other key functions




1. In the Status area of the Windows taskbar, click the iX104C² Configuration icon.

The Launch Button QuickShow dialog box opens.

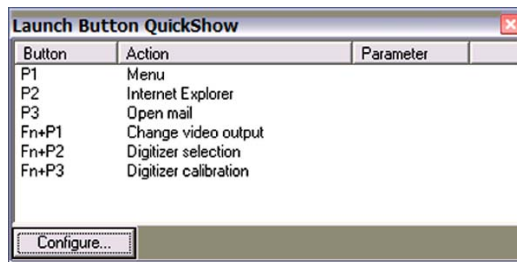

2. Click the Configure button.

The Panel Control Center window opens.

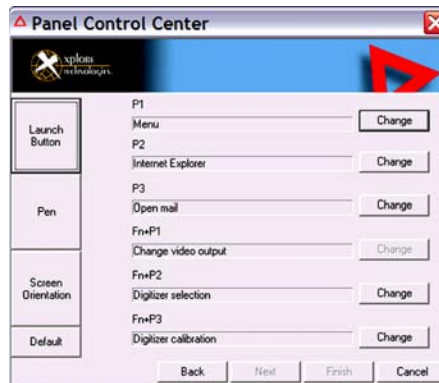


3. Next to the key or key combination you want to program, click the Change button.

The following options appear:



4. Click Press a key or key combination.

The following options appear:

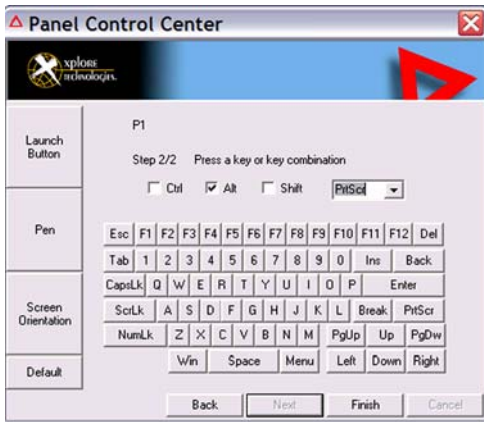

5. If you want the hot key or hot key combination to perform the function of a single key:

- a. If the Ctrl, Alt, or Shift boxes are checked, uncheck them.
- b. Click the key you want the hot key or hot key combination to perform. (For example: F6, G, or Caps Lock)

If you want the hot key or hot key combination to perform the function of a key combination:

- a. Check the Ctrl, Alt, or Shift box.
- b. From the drop-down list, select the additional key, or click the key on the keyboard.

Examples

To cause the hot key to perform the *print screen* function (Alt-Print Scrn): Check the Alt check box; then select PrtScr from the drop-down list.

To cause the hot key to perform the *paste* function (Ctrl-V): Check the Ctrl check box; then click the V key.

- 6. Program more hot keys, or click Finish to close the Panel Control Center window.

3

Maintaining the iX104C³

This chapter provides instructions for maintaining your tablet.

Caring for the tablet

This section provides information about how to keep your tablet in top working condition.

Checking power cords and connectors

Check AC and DC power cords and power connectors periodically for damage. Replace the power cord immediately if you find any damage.


Protecting the computer from damage

- Your computer is designed to sustain a multiple-axis drop to a non-yielding surface. Do not intentionally drop the computer, because the cumulative effects of multiple drops may damage the computer.
- Do not place heavy objects on the computer.
- Do not disassemble the computer.
- Keep the computer at least 5 inches (13 centimeters) away from any electrical appliance that generates a strong magnetic field, such as a motor, magnet, TV, refrigerator, or large audio speakers.

Preventing the computer from overheating

The computer monitors its internal temperature. As the internal temperature approaches the tolerable limits of heat-sensitive components, system functions are automatically limited or turned off to prevent damage.

To prevent the computer from overheating, do not obstruct the computer's air vents.

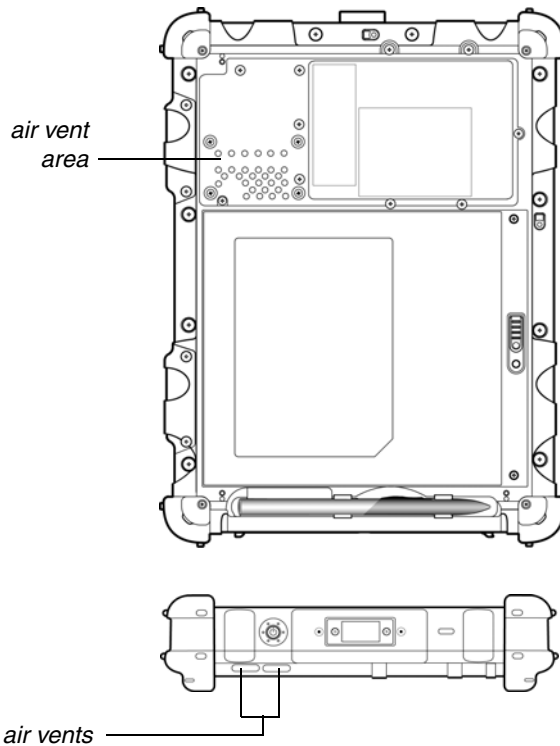

Storing the computer

You can store the computer in the Off state for about 30 days with a fully charged battery installed. After this period, recharge the battery or replace it with a charged battery.

If you intend to store the computer for more than 30 days, remove the battery pack and keep it in a cool place.

Caring for the display screen

To clean the display screen, dampen a soft cotton cloth with water and gently wipe the screen surface.

Note: Do not use isopropyl alcohol to clean the screen. Alcohol may damage the surface of the screen.

Protecting the display screen


The screen protector is a durable, replaceable writing surface that protects the display screen from abrasion.

To obtain additional screen protectors, check with your reseller, or go to the Xplore Web site at www.xplorettech.com for ordering information. Additional information about installation is included with the screen protectors.

When to replace the pen

Removing the screen protector

Slide your fingernail under the edge of the screen protector and pull the protector away from the screen.

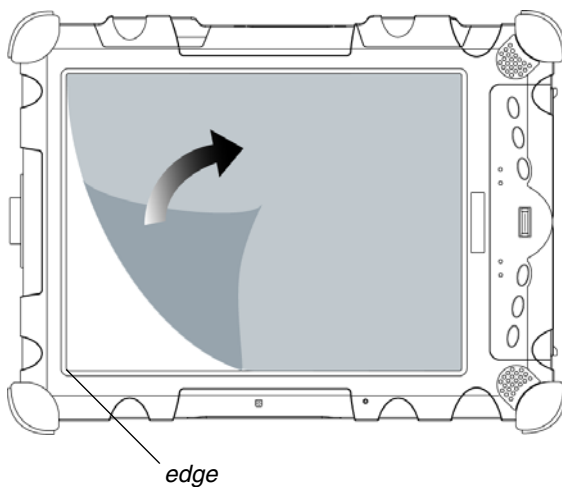

Installing a new screen protector

Follow the instructions included with your screen protector replacement kit.

Note: If a screen protector is already installed on the display screen, remove it before installing the new screen protector.

When to replace the pen

With use, the pen tip may become worn and can scratch the screen. If your pen exhibits one of the following problems, replace the pen:

- The pen does not move freely across the screen.
- The pen does not perform as expected.

Calibrating the digitizer

Calibrating the digitizer adjusts the cursor position on the screen relative to the position of the pen tip or finger. Calibrate the digitizer to adjust the distance error between where the pen or finger is actually touching the screen and where the computer is registering the pen or finger touch.


You may need to calibrate the digitizer in the following situations:

- You are using the computer for the first time.
- The previous user of the computer writes with the opposite hand or at a different pen angle.
- The computer has not been used for some time.
- The computer has been serviced.

Calibrating the digitizer: iX104C³ Tablet PC

1. From the Start menu, select Control Panel.

The Control Panel opens.

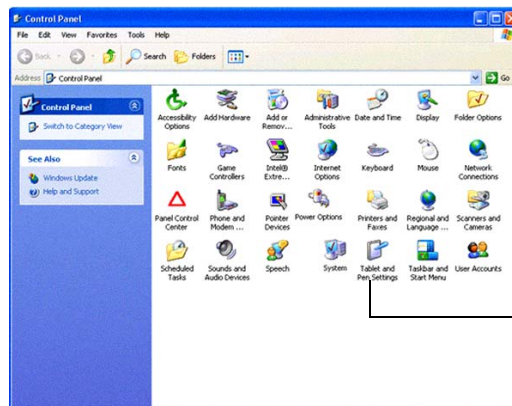

Tablet and
Pen Settings
icon

2. Click the Tablet and Pen Settings icon.

The Tablet and Pen Settings window opens.



3. In the Calibration area drop-down list, select the mode for which you want to calibrate the pen: Landscape or Portrait; then click Calibrate.

The Calibration program starts.

4. Follow the instructions that appear on the screen.
5. When you finish, click OK.

Calibrating the digitizer: iX104C3 Dual Mode

In Active mode, you can use only the stylus included with the computer as the pointing device.

In Touch mode, you can use the stylus, a similar pointing device, or your finger.


Follow the instructions in the sections below to calibrate the digitizer for each mode.

See “Selecting Auto-Sense, Active, or Touch mode” on page 33.

Calibrating the digitizer: Active mode

1. From the Start menu, select Control Panel.

The Control Panel opens.

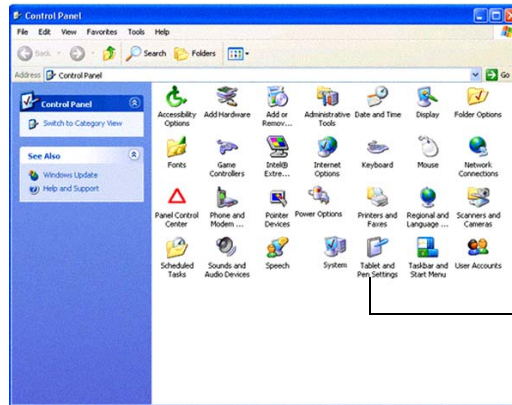

Tablet and
Pen Settings
icon

2. Click the Tablet and Pen Settings icon.

The Tablet and Pen Settings window opens.



3. In the Calibration area drop-down list, select the mode for which you want to calibrate the pen: Landscape or Portrait; then click Calibrate.


The Calibration program starts.

4. Follow the instructions that appear on the screen.
5. When you finish, click OK.

Calibrating the digitizer: Touch mode

1. From the Start menu, select All Programs > Touch Utility.

The Touch Utility window opens.

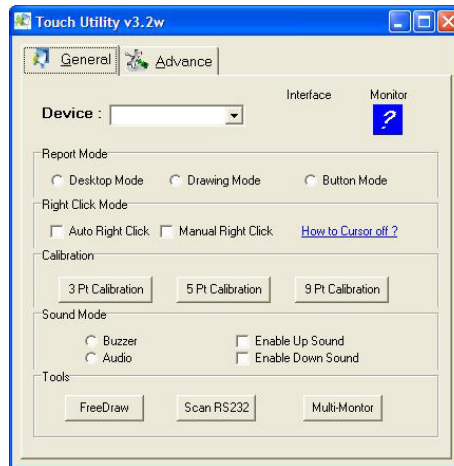

2. Click the appropriate Calibration button.

Note: Xplore Technologies recommends 5 Pt or 9 Pt calibration, for greater accuracy.

The Calibration program starts.

3. Follow the instructions that appear on the screen.
4. When you finish, click OK.

A

Troubleshooting

Table 8 contains solutions to some problems. If you cannot solve the problem by taking the actions described, contact your local help desk or your reseller for further assistance.

Table 8 *Troubleshooting*

Problem	Possible cause and solution
Computer will not start.	- The battery may be defective or discharged to a critically low level. Connect an external power supply (such as the AC adapter) or install a charged battery. See “Using the battery” on page 44. - Internal components may be above or below the acceptable operating range (below -20° C or above 60° C). After the temperature returns to safe operating range the computer will start.
The computer will not resume operation after being suspended.	- The battery may be defective or discharged to a critically low level. When the battery reaches a critically low level, the computer is forced into Suspend- to-RAM mode to avoid a total system power failure. Connect an external power supply (such as the AC adapter) or install a charged battery. See “Using the pen” on page 32 and “Using the battery” on page 44. - The computer may be at the critical thermal limit. To avoid damage to heat-sensitive components, the computer enters Suspend-to-RAM mode when the computer operates above 60° C. Operation automatically resumes when the computer cools to below 60° C. Move the computer to a cooler location.
The Status LED is red, continuous.	- The computer is on, running under battery power, and the charge level in the battery has reached a critical level. Plug the computer into an AC/DC power source or install a charged battery. - The system has encountered a fault and is preventing normal operation. Contact your local help desk.
The Status LED is red, blinking.	The computer is powered on, running under battery power, and the charge level in the battery is at a minimum warning level. Plug the computer into an AC/DC power source or install a charged battery.

Table 8 *Troubleshooting (continued)*

Problem	Possible cause and solution
Display screen is blank or difficult to read.	• Confirm that the computer is on (the Power icon is displayed continuously in the Status area). • The brightness may be set too low, causing the screen to appear too dark. To change system brightness, press the Fn and Start keys to open the Xplore menu and adjust the brightness. (See page 26.) • An external monitor may be selected. Press the Fn and P1 keys to select the computer display screen. (See page 26.) • The video time-out may have expired. Tap the display screen to reactivate the display. Note: This is a normal, power-saving feature. • If the Status light is blinking red, the computer is in Suspend-to-RAM mode because the temperature is below -20° C or above 60° C. When the temperature returns to a safe operating range, the display screen automatically comes back on. If possible, move the computer to a warmer or cooler location. • If the Status light is continually yellow, the computer is in Suspend or Hibernate mode. Press the Power On/Off key to resume.
Cursor is not tracking the pen.	Calibrate the pen. See “Calibrating the digitizer” on page 71.
Computer is not responding to the pen.	Connect an external USB keyboard to the computer. If the computer does not respond to the external keyboard, the application or operating system may have been corrupted. Press the Reset key. (See page 28.) If the system responds to a keyboard but not to the pen, contact your local help desk or reseller for further assistance.
Headphone or speaker volume is too low.	• The volume may be in Mute mode or set too low. Follow the instructions in “Adjusting headphone or speaker volume” on page 42. • Make sure the volume control in your audio software is set to an audible level.
An external device is not working with the computer.	The device may need to be enabled in the computer’s configuration program (BIOS Setup). Contact your local help desk or reseller.

B

Using BIOS and AOS Functions

Note: Each button has its own blue-light LED. No matter which button you press, every blue-light LED is on for about 3 seconds, then off. When in Shifted mode, all blue-light LEDs flicker.

This appendix explains how to use the application and navigation buttons with the Basic Input-Output System (BIOS) program and the Advanced Operating System (AOS) Options menu.

Note: These functions are typically for use only by your system administrator or by authorized service technicians.

Table 9 Using BIOS and AOS functions

			In Shifted Mode	
Button	BIOS Key	Function	BIOS Key	Function
	F1	F1 continues message.	Up Arrow	Navigate up through Multi Boot options and BIOS menus.
	F2	Start the BIOS program: When the computer is booting, press the P2 button and follow the instructions that appear on the screen.	Down Arrow	Navigate down through Multi Boot options and BIOS menus.
	F8	Prompt Windows to select Safe mode.	Right Arrow	Navigate to the right.
	F11 (Lock Fn)	- Press for less than one second for F11 function. - Press longer to enable Shifted mode.	Release Function	Press once to exit Shifted mode.
	F12	Enter Multi Boot mode.	F4	Change a BIOS setup value.
	Ctrl+Alt+Del	Reboot.	Enter	Enter.

Disabling the Auto Power feature

When Auto Power is enabled, the tablet automatically turns on if you dock it and the following conditions exist:

- The tablet is off or in Hibernation or Standby mode.
- The dock or the tablet is connected to an external power source (including power applied when a vehicle's ignition is started).

If you dock the tablet and the tablet is off and no power is present, the tablet turns on as soon as power is applied.

To disable the Auto Power feature:

1. When the computer is booting, press the P2 button to access the BIOS Setup Utility.
2. Select the Advanced tab.
3. Disable the Dock with Auto Power On option.

Note: When the tablet is in the docking station, it will shut down or go into Hibernation or Standby mode the same as it does when not in the docking station.

Enabling automatic LCD backlight control

When the LCD backlight control is in manual mode, the ambient light sensor is disabled and the computer does not automatically control the screen brightness.

Follow these steps to enable automatic LCD backlight control:

1. When the computer is booting, press the P2 button to start the BIOS Setup Utility.
2. Select the Main tab.
3. In the LCD Backlight Control drop-down list, select Automatic.
4. Click OK.

C

Glossary

Adapter. A device that provides an interface between two dissimilar electronic devices. For example, the AC adapter modifies the power from a wall outlet for use by the computer.

Advanced Power Management (APM). A facility consisting of one or more layers of software that support power management. The APM software interface enables applications, operating systems, device drivers, and the APM BIOS to work together to reduce power consumption.

Alternating Current (AC). Electric current that reverses its direction of flow at regular intervals.

Analog signal. A signal with characteristics such as amplitude and frequency that vary in proportion to (are an analog of) the value to be transmitted. Voice communications are analog signals.

Application. A program that performs specific tasks on your computer, such as word processing or creating spreadsheets.

BIOS. Programs that contain such basic hardware operations as an interaction with diskette drives, hard disk drives, and the memory.

Board. A circuit board. An internal card containing electronic components called chips, which perform a specific function or increase the capabilities of the system.

Boot. To load a program or operating system into system memory.

Bits Per Second (BPS). In serial transmission, the instantaneous bit speed with which a device or channel transmits a character.

Card. Synonym for board; see *board*.

Compact Disk-Read Only Memory (CD-ROM). Stores data on metal-plated plastic discs.

Compatibility. 1.The ability of one computer to accept and process data in the same method as another computer without modifying the data or the media upon which it is being transferred. 2.The ability of one device to connect or communicate with another system or component.

Configuration. The specific combination of hardware components of the computer, and their operating status. The configuration of your computer includes pre-defined memory, type and speed of microprocessor, type of and size of hard disk drive, etc.

Default. The preset parameter value automatically selected by the computer when you or a program do not provide instructions.

Device driver. A program that controls communication between a specific peripheral device and the computer.

Disk drive. The physical device that enables the computer to read from, and write to, a disk.

Display. An image-producing device used to view computer output.

Double-click. To press and release the pen/stylus twice within a time frame you define, without moving the pointer off the choice.

Driver. Software that allows an application program to communicate with a particular piece of equipment, such as a printer or the pen/stylus.

Hard disk drive (HDD). A sealed mass storage device used for storage and fast retrieval of programs and data. The factory installs this disk and only a trained engineer can remove it for servicing.

Hardware. The physical electronic and mechanical components of a computer system. typically, the computer itself, CPU, memory, etc.

Hertz. A unit of wave frequency that equals one cycle per second.

Interface. 1. Hardware and/or software components used specifically to connect one computer or device to another. 2. To physically connect one system or device to another to exchange information. 3.

The point of contact between user, the computer, and the program (for example, the pen/stylus or a menu).

Kilobyte (KB). A unit of 1024 bytes measuring storage space, typically in memory or on storage media such as a diskette or hard disk drive.

Local area network (LAN). Assembly of separate computers into an integrated network that connects the various computers together and to common devices such as printers and fax machines.

Light Emitting Diode (LED). A semiconductor device that emits light when a current is applied.

Liquid Crystal Display (LCD). liquid crystal sealed between two sheets of glass coated with transparent conducting material. Applying a voltage between the glass sheets darkens the liquid crystal to provide contrast to lighted portions of the display.

Megabyte (MB). A unit of data storage equal to 1024 kilobytes.

Megahertz (MHz). a unit of wave frequency that equals 1 million cycles per second.

Modem. A device that connects your computer to a telephone line, allowing it to communicate with another computer at another location.

PC Card. A plug-in accessory card that conforms to the PCMCIA standard.

Pen. See *stylus*.

Peripheral device. An input/output device that is external to the central processor and/or main memory such as a printer or scanner.

Pixel. Picture elements (tiny dots) that compose a screen image.

Port. The electrical connection through which the computer sends and receives data to and from devices or other computers.

Program. A set of instructions a computer can execute to tell the system what to do and how to do it.

Random Access Memory (RAM). A hardware component of your computer that temporarily stores active program code and data.

Reset. The act of reloading the operating system.

Resolution. The number of pixels displayed on the screen. A higher resolution provides greater clarity and allows more information to be displayed on the screen at once.

Restart. Resetting a computer without turning it off (also called warm boot or soft reset).

Resume. The act of returning the computer to an active, operational state.

Read Only Memory (ROM). The portion of your computer's memory that contains permanent instructions, and which cannot be modified.

Status Indicator (LED). a light above the LCD screen which indicates the current status of a particular device or hardware component.

Stylus. A writing instrument. For pen computers, the stylus is used to interface with the LCD and digitizer.

Subscriber Identity Module (SIM). A smart card inside a GSM (Global System for Mobile communications) cellular device that encrypts voice and data transmissions and stores data about the specific user so that the user can be identified and authenticated by the network supplying the phone service. A SIM can be moved from one device to another and/or different SIMS can be inserted into any GSM radio.

Suspend mode. A power conservation mode in which electrical current is removed from most components of the computer.

Universal Serial Bus. A serial interface that enables communication between devices and the computer.

D

Hardware Specifications

Physical

Dimensions	11.20" x 8.25" x 1.6" (WxHxD) 283.9mm x 209.3mm x 40.8mm
Weight	4.95 lbs. (2.50 kgs)*

Processing

CPU	Intel® Pentium® M 753 processor – Ultra Low Voltage (5 W)*
Chip set	Intel 855GME-400 MHz
Processor speed	1.2 GHz*

* Varies according to your computer's configuration.

Memory/storage

Main RAM	• 256MB DDR RAM (on-board/PC3200) • 144-pin SODIMM modules 512MB and 1GB modules available
L1 Cache (CPU)	32KB on-die
L2 Cache	2MB on-die
BIOS ROM	8Mbit (FWH)
Hard Disk Drive	2.5" HDD shock mounted Minimum 40GB IDE HDD* Ultra DMA 100, 5400 RPM 80GB 2.5" shock mounted HDD available
BIOS ROM	8Mbit (FWH)

* Varies according to your computer's configuration.

Display

Display	• Color LCD • Active Digital Sensor and Pen (iX104C³ Tablet PC) and Resistive Touch Panel (iX104C³ Dual Mode) • 32-bit True color • 10.4" TFT XGA (1024x768), 16M colors • Brightness: 16 levels • Viewing Angle: • Horizontal: 30 degrees (min.) • Vertical: 10 degrees (min.) • Contrast Ratio: Typ. 250:1, Min 100:1
VRAM	Intel 855GME chipset with 64 MB shared memory using Unified Memory Architecture (UMA) delivers low-power, high-performance 3D/2D graphics, video, and display capabilities. Dynamic Video Memory Technology (DVMT) dynamically responds to application requirements and efficiently allocates the proper amount of memory (64 MB maximum) for optimal graphics and system performance.

Interface

Wireless Radio Bays	• One user-accessible Type 1 or Type II PC Card slot (PCMCIA Cardbus version 3.0) • One Internal mini-PCI slot • One internal OEM radio bay
Integrated Interfaces	• DC-in • USB (2) 2.0 • Microphone Jack • Headset Jack • LAN (RJ-45) • 15-pin D-SUB connector for external VGA monitor
KeyPad / User Controls	• Application buttons with primary and secondary functions • Power On/Off/Suspend/Resume button • Emergency Shutoff/Reset button
Audio	• AC 97 Codec • On-board microphone with noise cancellation • On-board integrated stereo speakers (1W each)
Status Indicators	Power, Charge/DC-in, Warning

Power

Main Battery	• 6 cell • Removable Lithium Ion • 7.4V @ 5700mAh (41Whr) • Warm-swappable • Recharge Time: 2.5 hours (90%) • Life: Up to 4 hours. (Battery life is dependent on operating system, power management, and applications in use.) • Suspend Life: Min. 4 days
Optional Spare Battery	• 8 cell • Removable Lithium Ion • 7.4V @ 7600mAh (55Wh) • Warm-swappable • Recharge Time: 3.5 hours • Suspend Life: Min. 5 days • Off State: Approximately 30 days
Bridge Battery	• 6-cell Li Ion, 45mAh • Life: (with Suspend-to-RAM on bridge battery only): 3 to 5 minutes from full charge
AC Adapter	Auto-sensing 100-240V, supplying 19 VDC, with a current of 3.75 A

Environmental

Temperature	• Operating: -4° to 140° F (-20° to 60° C) • Storage: -40° to 167° F (-40° to 75° C)
Humidity	0% to 95% non-condensing

Environmental (continued)

Shock/Drop	Four-foot drop to concrete, all surfaces, edges and corners
Vibration	0.04g ² /Hz, 20 Hz - 1000 Hz -6dB/octive 1000 Hz - 2000 Hz
Enclosure Class	Blowing rain: 4"/hr, 40 mph wind and MIL-STD-810F Method 506.4 Procedure 1 Drip: 7 gal/ft²/hr MIL-STD-810F Method 506.4 Procedure III Sand and dust: Particle size < 149 µm, 10 ± 7 g/m³ particle density 1.5 m/s to 8.9 m/s wind speed MIL-STD-810F Method 510.4 Procedure 1 Salt Fog: 5% saline for 48 hr (12 hr wet, 12 hr dry, 2 cycles) MIL-STD-810F Method 509.4 Contamination by fluids: Detergents, brake fluid, aromatic hydrocarbons MIL-STD-810F Method 504 Solar radiation: 1120 W/m² (355 Btu/ft²/hr) UVB @ 50° C, 7x24 hr cycles MIL-STD-810F Method 505.4

Agency approvals

Emissions	• EN55022 (CISPR22) Class B • FCC 15, Class B • DOC Class B • CE MARK
Immunity	• EN55024 • FCC 15, Class B • DOC Class B
Safety	• UL and CUL Listed, UL 1950, 3rd Edition • TuV T-Mark, EN60950 • CSA and UL Listed, UL 1604

Operating system

Operating Systems	Microsoft Windows XP Professional Tablet PC 2005 Edition
-------------------	--

E

Agency Notices



FCC notices

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Modifications not expressly approved by Xplore Technologies could void this user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
-


RF exposure

Tests for SAR are conducted using standard operating positions specified by the FCC with the tablet PC transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the tablet PC while operating can be well below the maximum value. This is because the tablet PC is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a tablet PC model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., worn on the body) as required by the FCC for each model. (Body-worn measurements may differ among tablet PC models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various tablet PCs and at various positions, they all meet the government requirement for safe exposure.

This device was evaluated and shown to comply with FCC SAR guidelines. Avoid covering or holding antennas when transmitting. Antenna locations are shown in the following figure.

antenna locations

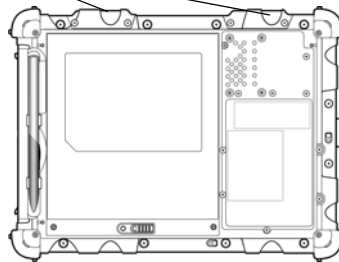

Health and Safety Information

Exposure to Radio Frequency (RF) Signals

Your wireless tablet PC is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards previously set by both U.S. and international standards bodies:

- American National Standards Institute (ANSI) IEEE. C95.1-1992
- National Council on Radiation Protection and Measurement (NCRP). Report 86. 1986

- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1996
- Ministry of Health (Canada), Safety Code 6. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile tablet PCs employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg .

Note: In the U.S. and Canada, the SAR limit for mobile tablet PCs used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in.

DOC (Industry Canada Notices)

Notice to Users of Radio and Television

This Class B digital apparatus meets all requirements of Canadian Interference-Causing Equipment Regulations

CET appareil numérique de la class B respecte toutes les exigence du Règlement sur le matériel brouilleur du Canada.

Notice to Users of the Canadian Telephone Network

Notice: This equipment meets the applicable Industry Canada Terminal Equipment Technical Specifications. This is confirmed by the registration number. The abbreviation, IC, before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment.

Before connecting this equipment to a telephone line the user should ensure that it is permissible to connect this equipment to the local telecommunication facilities. The user should be aware that compliance with the certification standards does not prevent service degradation in some situations.

Repairs to telecommunication equipment should be made by a Canadian authorized maintenance facility. Any repairs or alterations not expressly approved by Xplore or any equipment failures may give the telecommunication company cause to request the user to disconnect the equipment from the telephone line.

Notice: The Ringer Equivalence Number (REN) for this terminal equipment is 0.0. The REN assigned to each terminal equipment provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed five.

UL Notice

This unit requires an AC adapter to operate. Use only UL Listed Class 2 Adapters with an output rating of 19 VDC, with a current of 3.75 A. AC Adapter output polarity:



For authorized repair technicians only



WARNING

For continued protection against risk of fire, replace only with the same type and rating fuse.



WARNING

Danger of explosion if Lithium (clock) battery is incorrectly replaced. Replace only with the same equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instruction.

System disposal

In the event of system disposal, observe the following information regarding proper procedures in the State of Vermont.

The liquid crystal display (LCD) lamps used in this system contain mercury. In the event of system disposal, be sure to follow local guidelines.



F

Configuring Dual Mode Tablet Digitizer Input Methods

This appendix explains how to use the BIOS Setup Utility and the Panel Control Center to configure the iX104C³ Dual Mode tablet digitizer input settings.

- Use the **BIOS Setup Utility** to set the default input method.
- Use the **Panel Control Center** to set controls for temporary changes to input methods for single sessions.

The section “Summary: Dual Mode digitizer input method settings” on page 98 provides an overview of settings to make in the BIOS Setup Utility and the Panel Control Center to achieve various input method configurations.


The section “Sample implementations” on page 103 explains how to set up two sample configurations.

Using the BIOS Setup Utility to set input method defaults

Starting the BIOS Setup Utility

When the computer is starting up, press the P2 key.


The BIOS Setup Utility window opens.

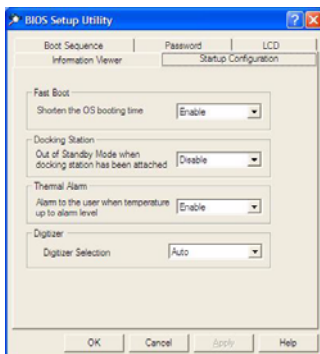

Using the BIOS Setup Utility to set input method defaults

Selecting the digitizer input method

1. Select the Startup Configuration tab.

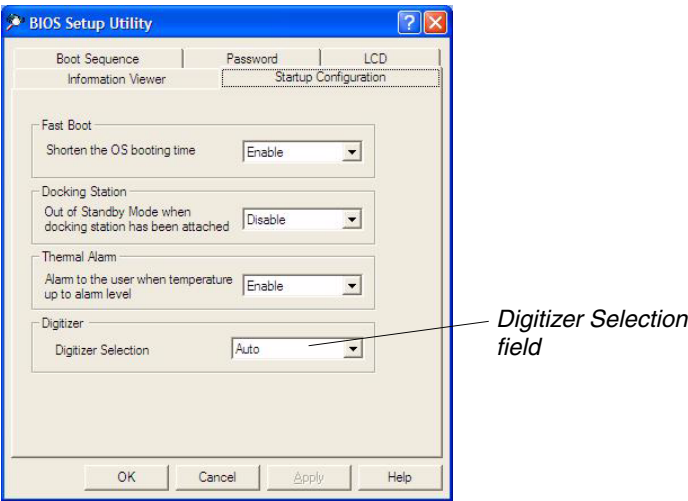

2. In the Digitizer Selection field, select the value from the drop-down list as follows:

Value	Description
Auto	Enables automatic sensing (Auto Sense) of inputs from touch and from the active pen. Note: This is the default setting.
Touch Only	Enables touch input only. Active digitizer, pen inputs, and Auto Sense are all disabled.
Digitizer Only	Enables inputs from the active pen only. Touch input and Auto Sense are disabled.

Setting digitizer input method security

Follow these steps to specify whether the tablet user can change the digitizer input method settings:

1. In the BIOS Setup Utility, select the Password tab.
2. In the Password Setting field, select a value from the drop-down list as follows:

Value	Description	Notes
No passwords set	Anyone can change the digitizer input settings.	This setting is not controlled by Windows User groups.
Supervisor password set only	A supervisor password must be entered in order to change the input settings.	The supervisor password must be entered before the BIOS Setup Utility will open.
User password set	The user cannot change the input settings.	Only the supervisor can change the input settings.

3. Click OK.
4. Reboot the computer.

Appendix F. Configuring Dual Mode Tablet Digitizer Input Methods

Using the Panel Control Center to configure controls for temporary changes to the input method

Using the Panel Control Center to configure controls for temporary changes to the input method


The Panel Control Center enables you to set controls for temporary, session-based changes to the Dual Mode tablet input method.

Notes:

Administrator rights are not required to make temporary settings.

When the tablet is restarted, the temporary settings are lost and the default values set in the BIOS Setup Utility are restored.


1. In the Windows taskbar, click the Panel Control Center icon.

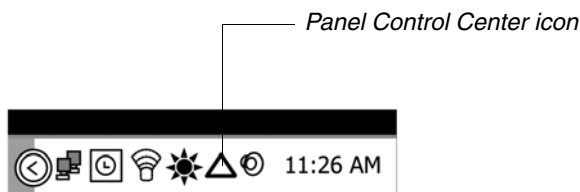

2. Click the Configure button.
3. Click the Change button next to the P key for the function you want to change.

Using the Panel Control Center to configure controls for temporary changes to the input method

4. From the drop-down list, select Digitizer Selection or Touch Panel Toggle.

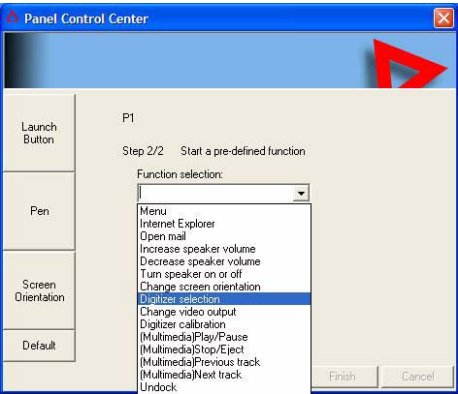

Value	Description
Digitizer Selection	If the digitizer input method is set to Auto in the BIOS Setup Utility, toggles from Auto to Digitizer Only to Touch Only .
Touch Panel Toggle	If the digitizer input method is set to Auto or Touch Only in the BIOS Setup Utility, temporarily disables touch only.

Summary: Dual Mode digitizer input method settings

Summary: Dual Mode digitizer input method settings

The following tables show the relationships of the BIOS Setup Utility and Panel Control Center settings.

Table 10 Settings: Digitizer Only

BIOS Setup Utility Digitizer Selection value	Panel Control Center Pre-defined Function value	On-screen description when key is pressed	Notes
Digitizer Only	Digitizer Selection	“Digitizer Only”	Because Digitizer Only is selected, no other input is possible. Digitizer is functional.



Table 11 Settings: Digitizer Only with Touch Screen disabled

BIOS Setup Utility Digitizer Selection value	Panel Control Center Pre-defined Function value	On-screen description when key is pressed	Notes
Digitizer Only	Touch Screen Toggle	"Digitizer Only"	Touch screen is disabled.



Appendix F. Configuring Dual Mode Tablet Digitizer Input Methods

Summary: Dual Mode digitizer input method settings

Table 12 Settings: Touch Panel only

BIOS Setup Utility Digitizer Selection value	Panel Control Center Pre-defined Function value	On-screen description when key is pressed	Notes
Touch Only	Digitizer Selection	“Touch Panel only”	Because Touch Only is selected, not other input is possible. Touch is functional.



Table 13 Settings: Touch Panel off/on toggle

BIOS Setup Utility Digitizer Selection value	Panel Control Center Pre-defined Function value	On-screen description when key is pressed	Notes
Touch Only	Touch Screen Toggle	"Touch Panel off" "Touch Panel on"	Turns the Touch Screen on or off. Note: If Touch Screen is off and the computer goes into standby or hibernate mode, Touch Screen automatically turns on when operating mode returns to normal.



Appendix F. Configuring Dual Mode Tablet Digitizer Input Methods

Summary: Dual Mode digitizer input method settings

Table 14 Settings: Auto/Digitizer Only/Touch Only settings

BIOS Setup Utility Digitizer Selection value	Panel Control Center Pre-defined Function value	On-screen description when key is pressed	Notes
Auto	Digitizer Selection	“Auto” “Digitizer only” “Touch only”	Rotates through each mode, displaying each mode in turn.



Sample implementations

This section provides settings for two sample configurations. See “Using the BIOS Setup Utility to set input method defaults” on page 93 and “Using the Panel Control Center to configure controls for temporary changes to the input method” on page 96 for information about how to make the settings.

Sample 1

To set the tablet to the following configuration:

- Default digitizer input control is **Touch only**.
- The user can turn off the touch screen.
- The user cannot change any digitizer input control settings.

Configure settings as follows:

1. Use the BIOS Setup Utility to set a Supervisor password. (This protects the digitizer selection and all other BIOS Setup Utility controls.)
2. In Windows Administrator mode, use the Panel Control Center to set one of the **P** keys to **Touch Panel Toggle**.
3. Use the **Add new user** function to create a user account.

Note: If the user already exists, the setting the administrator has set replicates to all the users of the computer.

Sample 2

To set the tablet to the following configuration:

- Default digitizer input control is **Auto Sense**.
- The user can temporarily change the digitizer input control settings.
- The user can change the default digitizer input control settings.

Configure settings as follows:

1. Do **not** use the BIOS Setup Utility to set a Supervisor password.
2. Use the Panel Control Center to set one of the **P** keys to **Digitizer Selection**.
3. Use the **Add new user** function to create a user account.

Note: If the user already exists, the setting the administrator has set replicates to all the users of the computer.

Index

A

- Active mode, selecting 33
- air flow vents, location 19
- ambient light sensor
 - disabling 39
 - location 17
- antenna covers, location 18
- Auto Power feature, disabling 78
- Auto-Sense mode, selecting 33

B

- battery alarm settings, changing 49
- battery pack
 - charge time 45
 - charging 44
 - checking charge status 49
 - checking the charge 44
 - conserving power 51
 - discarding 47
 - installing 47
 - location 18
 - removing 45
- battery release latch, location 18
- BIOS Setup Utility, using 77
- Bluetooth antenna 20

C

- convection air flow cover, location 18

D

- digitizer
 - calibrating 71
 - using to perform mouse functions 34
- double-click, performing with pen 34
- dragging and dropping, performing with pen 34

- Dual Mode tablet digitizer input method, setting up 93

E

- email, starting 25

H

- headphone connector, location 20
- headphone volume, adjusting 42
- headphone, connecting 42
- Hibernation mode
 - description 29
 - enabling 50
- hot keys, programming, *see keys, programming*
hot keys

I

- input device, selecting 26, 33, 93
- input method, Dual Mode tablet digitizer settings
 - changing 93
- Internet Explorer, starting 25
- iX104
 - accessories 13
 - maintaining 67
 - preventing overheating 68
 - protecting from damage 67
 - storing 69

K

- Kensington lock slot, location 19
- keys
 - Ctrl-Alt-Del 25
 - description 25
 - Ctrl-Alt-Delete
 - location 24
 - descriptions 25

Function

- description 25
- location 24

Function mode hot key combinations

- default functions 56
- descriptions 26

P1

- default function 56
- description 25
- location 24

P2

- default function 56
- description 25
- location 24

P3

- default function 56
- description 25
- location 24

Power On/Off/Suspend/Resume

- location 19

programming hot keys 56, 57

- to perform other key functions 63
- to perform pre-defined functions 61

quick-start diagram 24

Screen Rotation

- description 25
- location 24

Secure Attention Sequence (SAS) 24

L

LAN connector, location 20

LCD backlight

- disabling automatic control 39
- enabling manual control 78

LEDs 22

- Brightness LED meanings 23
- Status LED meanings 22

left button click, performing with pen 34

local area network (LAN), connecting to 41

logging on 25

M

microphone

- connecting external 41
- connector location 20
- location 17
- volume, adjusting 42

monitor

- activating 43
- connecting 43
- sending video display to 26

monitor connector, location 20

mouse functions, performing 34

O

online help, opening 25

P

pen

- double-click speed, changing 35
- dragging and dropping 34
- holder, location 18
- location 18
- performing a double-click 34
- performing a right-click 34
- performing left button click 34
- positioning in holder 36
- replacing 70
- tether, using 36
- using 32

pen calibration program, opening 26

power connector, location 20

Power On/Off/ Suspend/Resume key, location 19

Power Options Properties window, opening 48

- power schemes, changing 48
- power settings, changing 50
- power use, managing 48
- projection panel
 - activating 43
 - connecting 43
 - sending video display to 26

Q

- quick-start guide 24

R

- Reset switch
 - location 17
 - using 28
- resuming operation 31
- right-click, performing with pen 34
- RJ-45 connector 20

S

- screen
 - landscape mode 25
 - portrait mode 25
 - protecting 69
- screen orientation
 - changing 38
 - landscape 38
 - portrait 38
- screen protector
 - installing 70
 - removing 70
 - replacing 70
- serial number, location 18
- speaker volume, adjusting 42
- speakers
 - connecting 42
 - location 17
- storing the computer 69
- support, contacting 15

- Suspend mode
 - description 29
 - ending 31
 - starting 30
- suspending operation 30
- Suspend-to-RAM mode, description 29

T

- Touch mode, selecting 33
- troubleshooting 75
- turning off the computer 28
- turning on the computer 27

U

- USB port, location 20
- USB-compatible device, connecting 41

V

- video output
 - changing from monitor to computer 43
 - changing to monitor 43
- volume
 - adjusting headphone 42
 - adjusting microphone 42
 - adjusting speaker 42

W

- Windows Task Manager, launching 25

X

- XPL expansion module, connecting 43
- XPL expansion port, location 21
- Xplore Tablet Dock
 - docking connector location 21
- Xplore Technologies, contacting 15

