



---

# HERCULES (Alliance 5W Remote Unit)

## User Manual

---



SOLiD, Inc.

10,9th Floor, SOLiD Space220 Pangyoyeok-ro, Bundang-gu, Seongnam-si, Gyeonggi-do, Korea 393-400

Tel : +82-31-627-6290 Fax : +82-31-627-6209

## REVISION HISTORY

| Version | Issue Date          | No. of Pages | Initials | Details of Revision Changes  |
|---------|---------------------|--------------|----------|--|
| V 1.0   | September. 07, 2014 |              | Original |  |
| V1.1    | June 29, 2017       | all          | Update   | Change the model name from<br>AWS-1_M to AWS13_M<br>(Updated RDU CPU Firmware) |
| V1.2    | Sep 9, 2017         | 37,38        | Update   | Change name of Gain item<br>Gain[dB] to Gain[dB] (Only RU)                     |
| V1.3    | June 26, 2019       | all          | Update   | Add the new band module, 600LTE  |
| V1.4    | May 13, 2021        | all          | Update   | Add the new band module,<br>2500_FB_TDD  |
| V1.5    | Oct 12, 2022        | all          | Update   | Add the new band(Expansion) module,<br>1900P_E, AWS13_B66B70                   |
|         |                     |              |          |  |
|         |                     |              |          |  |
|         |                     |              |          |  |
|         |                     |              |          |  |
|         |                     |              |          |  |
|         |                     |              |          |  |

### Technical Support

SOLiD serial numbers must be available to authorize technical support and/or to establish a return authorization for defective units. The serial numbers are located on the back of the unit, as well as on the box in which they were delivered. Additional support information may be obtained by accessing the SOLiD Tehcnology, Inc. website at [www.solid.co.kr](http://www.solid.co.kr) or send emailat [kehan@solid.co.kr](mailto:kehan@solid.co.kr)

This manual is produced by Global Business Division Business Team 1. Printed in Korea.



---

## Contents

|          |   |    |
|----------|---|----|
| Section1 | Safety & Certification Notice .....               | 5  |
| Section2 | Introduction .....                                | 9  |
| 2.1      | Purpose .....                                     | 10 |
| 2.2      | HERCULES .....                                    | 11 |
| Section3 | Functional Description .....                      | 12 |
| 3.1      | General .....                                     | 13 |
| 3.2      | Component of HERCULES Remote Unit .....           | 14 |
| 3.3      | Dimension .....                                   | 16 |
| Section4 | System Installation .....                         | 17 |
| 4.1      | Remote Unit Installation .....                    | 19 |
| 4.1.1    | Remote Unit Enclosure installation .....          | 19 |
| 4.1.2    | How to expand ADD ON ROU at the Remote Unit ..... | 23 |
| 4.1.3    | Remote Unit Power Cabling .....                   | 25 |
| 4.1.4    | Remote Unit Ground cabling .....                  | 26 |
| 4.1.5    | Optical Cabling .....                             | 28 |
| 4.1.6    | Mounting of MRDU .....                            | 30 |
| Section5 | System Specifications .....                       | 35 |
| 5.1      | Physical Specifications .....                     | 36 |
| 5.2      | RF performance.....                               | 37 |
| 5.3      | Certification .....                               | 38 |

## Contents of Figure

|   |    |
|---|----|
| Figure 3.1 – Remote Unit Block Diagram.....   | 13 |
| Figure 3.2 – Inside of Remote Unit .....  | 14 |
| Figure 3.3 – Remote Unit Dimension.....   | 16 |
| Figure 4.1 – Exterior of Remote Unit.....   | 19 |
| Figure 4.2 – Dimension used to install REMOTE UNIT on the WALL.....                   | 20 |
| Figure 4.3 – Procedures of installation .....   | 21 |
| Figure 4.5 – Connection diagram between Remote Unit and ADD ON ROU (DC type)<br>..... | 24 |
| Figure 4.6 – Location of Ground Terminal .....  | 26 |
| Figure 4.7 – Information of Terminal.....   | 26 |
| Figure 4.8 – How to install Ground Terminal.....                                      | 27 |
| Figure 4.9 – Location of Optical Connector.....                                       | 28 |
| Figure 4.10 – Information of Optical Connector.....                                   | 28 |
| Figure 4.11 – How to install Optical Cabling.....                                     | 29 |
| Figure 4.12 – Location of MRDU .....  | 30 |
| Figure 4.13 – How to mount MRDU .....   | 31 |
| Figure 4.14 – How to mount FAN Unit .....   | 32 |
| Figure 4.15 – How to mount FAN Unit .....   | 33 |



---

# Section1

## Safety & Certification Notice

---



---

“Only qualified personnel should handle the DAS equipment. Any person involved in installation or service of the DAS should understand and follow these safety guidelines.”

- Obey all general and regional safety regulations relating to work on high voltage installations, as well as regulations covering correct use of tools and personal protective equipment.
- The power supply unit in repeaters contains dangerous voltage level, which can cause electric shock. Switch the mains off prior to any work in such a repeater. Any local regulations are to be followed when servicing repeaters.
- To prevent electrical shock, switch the main power supply off prior to working with the DAS System or Fiber BDA. Never install or use electrical equipment in a wet location or during a lightning storm.
- When working with units outdoors, make sure to securely fasten the door or cover in an open position to prevent the door from slamming shut in windy conditions.
- Use this unit only for the purpose specified by the manufacturer. Do not modify or fit any spare parts that are not sold or recommended by the manufacturer. This could cause fires, electric shock or other injuries.
- Any DAS system or Fiber BDA will generate radio (RF) signals and continuously emit RF energy. Avoid prolonged exposure to the antennas. SOLiD recommends maintaining a 400cm minimum clearance from the antenna while the system is operating.
- Do not operate this unit on or close to flammable materials, as the unit may reach high temperatures due to power dissipation.
- Do not use any solvents, chemicals, or cleaning solutions containing alcohol, ammonia, or abrasives on the DAS equipment. Alcohol may be used to clean fiber optic cabling ends and connectors.
- Do not look into the ends of any optical fiber or directly into the optical transceiver of any digital unit. Use an optical spectrum analyzer to verify active fibers. Place a protective cap over any radiating transceiver or optical fiber connector to avoid the potential of radiation exposure.
- Allow sufficient fiber length to permit routing without severe bends.
- For pluggable equipment, make sure to install the socket outlet near the equipment so that it is easily accessible.
- Certification
  - FCC: This equipment complies with the applicable sections of Title 47 CFR Parts 15,22,24 and 90
  - UL/CUL: This equipment complies with UL and CUL 1950-1 Standard for safety for information technology equipment,including electrical business equipment
  - FDA/CDRH: This equipment uses a Class 1 LASER according to FDA/CDRH Rules.This product conforms to all applicable standards of 21 CFR Chapter 1, Subchapter J, Part 1040




- 
- A readily accessible disconnect device shall be incorporated external to the equipment.
  - This power of this system shall be supplied through wiring installed in a normal building.  
If powered directly from the mains distribution system, it shall be used additional protection, such as overvoltage protection device
  - Only 50 ohm rated antennas, cables and passive equipment shall be used with this remote. Any equipment attached to this device not meeting this standard may cause degradation and unwanted signals in the bi-directional system. All components connected to this device must operate in the frequency range of this device.
  - Only 50 ohm rated antennas, cables and passive components operating from 150 - 3 GHz shall be used with this device.
  - The head end unit must always be connected to the Base Station using a direct cabled connection. This system has not been approved for use with a wireless connection via server antenna to the base station.
  - Round terminals located on the side of a 1 mm<sup>2</sup> (16 AWG) or more wires Using permanently connected to earth.(green/yellow color)
  - The following notice: "The Manufacturer's rated output power of this equipment is for single carrier operation. For situations when multiple carrier signals are present, the rating would have to be reduced by 3.5 dB, especially where the output signal is re-radiated and can cause interference to adjacent band users. This power reduction is to be by means of input power or gain reduction and not by an attenuator at the output of the device."
  - Antenna installation  
Antennas must be installed in accordance with FCC 27.50, 24, and SRSP 518, SRSP 516, SRSP 510 and SRSP 517. With 17dBi gain antennas the height of the antenna above average terrain (HAAT) must not exceed 375m. For different gain antennas refer to the relevant rules.
  - Prior to equipment use the service must be registered with the FCC. This can be done through the FCC's website at <https://signalboosters.fcc.gov/signal-boosters/>.
  - Access can only be gained by SERVICE PERSONS or by USERS who have been instructed about the reasons for the restrictions applied to the location and about any precautions that shall be taken; and
-

- Access is through the use of a TOOL or lock and key, or other means of security, and is controlled by the authority responsible for the location.
- Maximum antenna gain for downlink antenna after accounting for any cable losses should be less than 2 dBi.
- Notice! Be careful not to touch the Heat-sink part due to high temperature.
- Use of unauthorized antennas, cables, and/or coupling devices not conforming with ERP/EIRP and/or indoor-only restrictions is prohibited.
- 
- Home/ personal use are prohibited.



- Signal booster warning label message

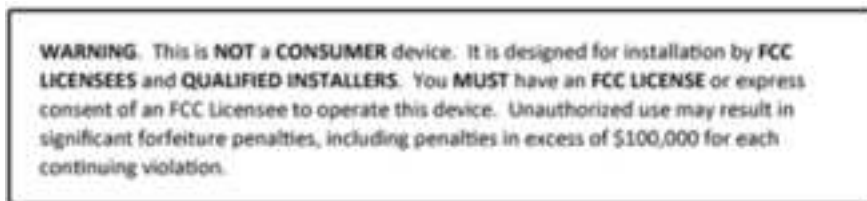

WARNING: This is NOT a CONSUMER device. It is designed for installation by an installer approved by an ISED licensee. You MUST have an ISED LICENCE or the express consent of an ISED licensee to operate this device.



CAUTION

DOUBLE POLE/NEUTRAL FUSING

---



Part90 and Part 20 Signal Boosters **THIS IS A 90.219 CLASS B DEVICE**

**WARNING.** This is **NOT** a **CONSUMER** device. It is designed for installation by **FCC LICENSEES** and **QUALIFIED INSTALLERS**. You **MUST** have an **FCC LICENSE** or express consent of an FCC Licensee to operate this device. You **MUST** register Part 90 Class B signal boosters (as defined in 47 CFR 90.219) online at [www.fcc.gov/signal-boosters/registration](http://www.fcc.gov/signal-boosters/registration). Unauthorized use may result in significant forfeiture penalties, including penalties in excess of \$100,000 for each continuing violation.

# ***Section2***

## Introduction

---

2.1 Purpose

2.2 HERCULES



---

## 2.1 Purpose

HERCULES is a coverage system for in-building services delivering voice and data in high quality and for seamlessly.

As a distributed antenna system, it provides analog and digital phone systems that are served in multiple bands through one antenna.

The system covers general public institutions and private facilities.

- Shopping malls

- Hotels

- Campus areas

- Airports Clinics

- Subways

- Multi-use stadiums, convention centers, etc.

The system helps improve in-building radio environments in poor condition and make better poor RSSI and Ec/Io. By providing communication services at every corner of buildings, the system enables users to make a call at any site of buildings.

The system uses both analog (AMPS) and digital (TDMA, CDMA and WCDMA) methods.

The HERCULES system supports communication standards and public interface protocols in worldwide use.

- Frequencies: 600MHZ, 700MHz , 700MHz\_MIMO , 850MHz , 1900MHz , 2100MHz , 2100MHz\_MIMO, 2500MHz etc. ,

- Voice protocols: AMPS, TDMA, CDMA, GSM, IDEN, LTE, 5G NR etc.

- Data protocols: EDGE, GPRS, WCDMA, CDMA2000, Paging, LTE, 5G NR etc.

HERCULES is in modular structure per frequency. To provide desired frequency in a building, all you need to do is to insert a corresponding frequency module into each unit. As it delivers multiple signals with one optical cable, the system, in one-body type, does not require additional facilities whenever new frequency is added.

The system is featured with the following:

- Flexibility & Scalability

  - Support fiber-optic ports up to 60

  - Clustering multiple-buildings (campus) as one coverage

- Modular structures

  - Modular frequency upgrade

  - Plug-in type module

- Multi-Band, Multi Operator



---

Signals with a plurality of service provider transmit simultaneously

Support multi-operator in a band

Low OPEX /CAPEX

Compact design

Upgradable design

Easy installation and maintenance

## 2.2 HERCULES

Hercules is one of series of Alliance DAS and has 5W composite output power every band.

RDU that is integrated on package with Duplexer, Power amplifier and RF unit can be mounted up to 6 in the enclosure.

Hercules transports signals that multiple operators and multiple technologies are moved at a same time from Base station to a remote location over the same fiber.

It is available in single and multi-band configuration supporting 600M, 700M, 700M MIMO , 850M , 800I , 900I , 700P , 800P , 1700/2100M, 1700/2100MHz MIMO , 1900M, 2500M in parallel.

It has been specifically tested under a various air interfaces such as iDEN, GSM, CDMA2000, EV-DO, WCDMA, LTE , 5G NR etc.

Furthermore, there is reserved RDU slot to support 2500LTE in the future

And RDU slot is also possible to replace the desired frequency Band.



---

# Section3

## Functional Description

- 
- 3.1 General
  - 3.2 Component of HERCULES Remote Unit
  - 3.3 Dimension

### 3.1 General

The following figure shows the block diagram of HERCULES Remote Unit.

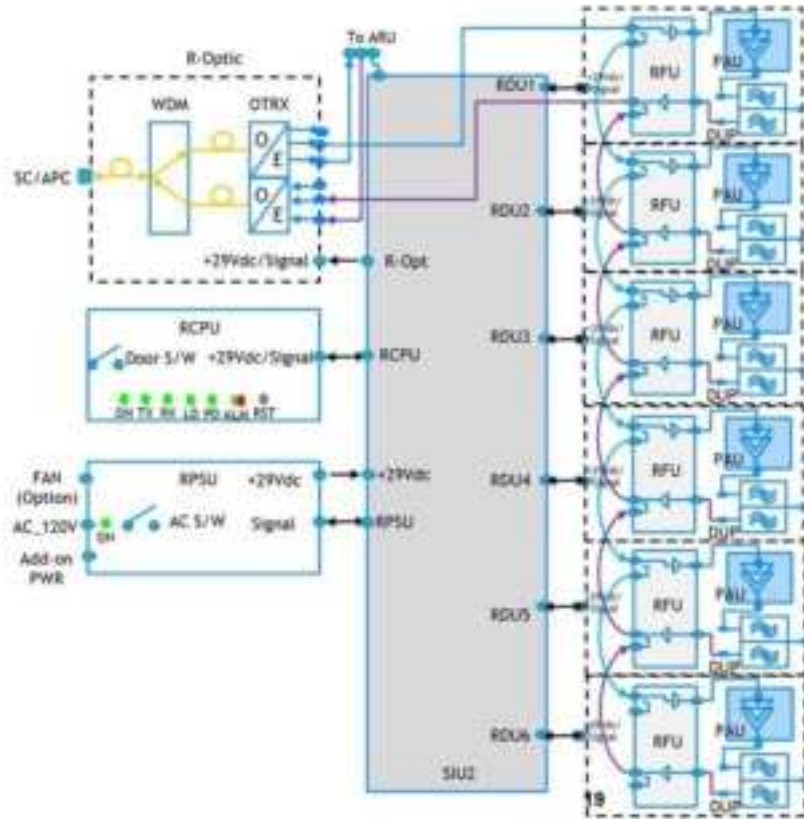


Figure 3.1 – Remote Unit Block Diagram

There are many components;

R-Optic : Remote Optical Unit

RCPU : Remote Central Processor Unit

RPSU(AC) : Remote AC Power Supply Unit(When using the AC input power)

RPSU(DC) : Remote DC Power Supply Unit(When using the DC input power)

RDU1-6 : Remote Drive Unit

CU1: CombiningUnit

CU2: CombiningUnit

CU9: CombiningUnit

### 3.2 Component of HERCULES Remote Unit

The following figure shows internal configuration of Remote Unit with fully RF equipped.

Figure 3.2 – Inside of Remote Unit

Remote Unit receives TX optical signals from Head-End and converts them into RF signals. The converted RF signals are amplified through High Power Amp in a corresponding RDU, combined with Multiplexer module and then radiated to the antenna port.

When receiving RX signals through the antenna port, this unit filters out-of-band signals in a corresponding RDU and sends the results to Remote Optic Module to make electronic-optical conversion of them. After converted, the signals are sent to a upper device of ODU. ROU can be equipped with up to six RDUs (Remote Drive Unit)



The following table describes components on Remote Unit

| Unit             | Description  |
|------------------|--|
| RDU+BPF x6       | Remote Drive Unit  |
|                  | Filter and amplify TX signals  |
|                  | Filter and amplify RX signals  |
|                  | Remove other signals through BPF                                     |
| RPSU(AC)         | Remote AC Power Supply Unit  |
|                  | Input power: 120 VAC +/- 10%   |
|                  | Output power: +29 VDC  |
| RPSU(DC)         | Remote DC Power Supply Unit  |
|                  | Input power: -48 VDC +/- 10%   |
|                  | Output power: +29 VDC  |
| R-OPTIC          | Remote Optic   |
|                  | Make RF conversion of TX optical signals;                            |
|                  | Convert RX RF signals into optical signals; Compensates optical loss |
|                  | Communicates with BIU/OEU through the FSK modem                      |
|                  | 5dBo optical link between ODU(OM4) and ROU                           |
|                  | 10dBo optical link between ODU(OM1) and ROU                          |
|                  | Fiber Connector: SC/APC Connector                                    |
|                  | Fiber Type: Single Mode Fiber  |
|                  | Optical Wavelength: 1310/1550 WDM                                    |
| RCPU             | Remote Central Processor Unit  |
|                  | Controls signal of each unit   |
|                  | Monitors BIU/ODU/OEU through FSK communication                       |
| CU1(Multiplexer) | Combine TX signals from 7 RDUs; Distribute RX signals to 7 RDUs      |
|                  | Furthermore, there is reserved RDU slot to support 2600LTE           |
| CU9(Multiplexer) | Enable you to use a single antenna port                              |
|                  | Combine TX signals from 6 RDUs; Distribute RX signals to 6 RDUs      |
|                  | Furthermore, there is reserved RDU slot to support 2500_FB_TDD       |
| ROU Enclosure    | Enable you to use a single antenna port                              |
|                  | Enclosure to satisfy IP66  |
|                  | Vertical Mount   |
| Input SIU        | Wall Mount   |
|                  | Input System Interface Unit  |
| Output SIU       | Distributes power and signals to each module                         |
|                  | Output System Interface Unit   |
|                  | Interfacing with multiplexer   |



### 3.3 Dimension

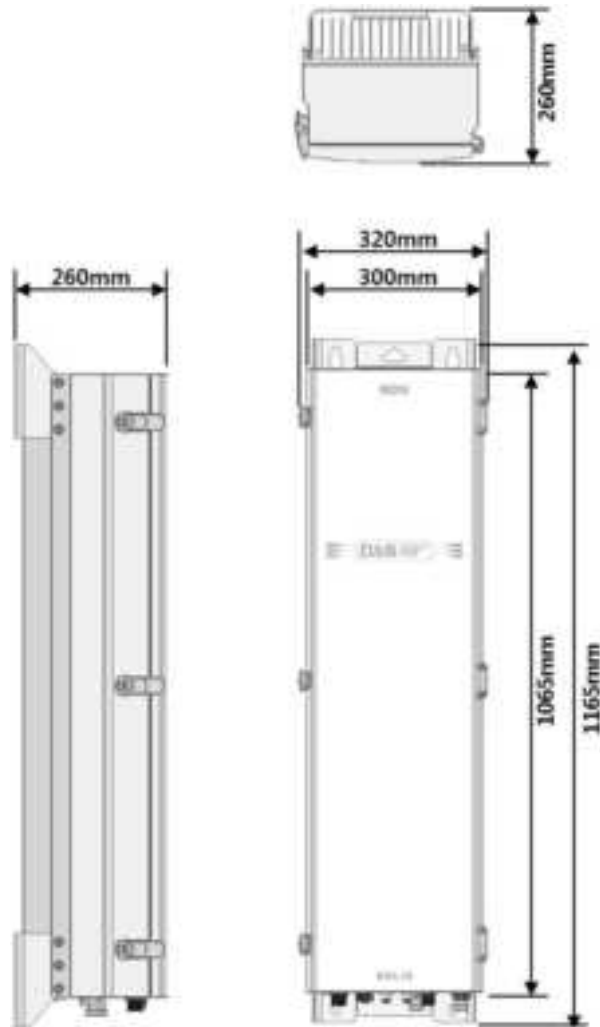


Figure 3.3 – Remote Unit Dimension

| ITEM                       | SPECIFICATION               | REMARK              |
|----------------------------|-----------------------------|---------------------|
| Size(Width, Height, Depth) | 320 x 1165 x 260mm          | Including Bracket   |
| Weight                     | 62kg / 137lb                | Fully loaded        |
| Power Consumption          | 510W                        | Fully loaded        |
| Operating Temperature      | -25 to +55°C / -13 to 131°F | Ambient Temperature |
| Operating Humidity         | 0 to 90%, non-condensing    |                     |



# Section4

## Installation

## System

### 5.1 Remote Unit Installation

This chapter describes how to install each unit and optical cables, along with power cabling method. In detail, the chapter describes how to install shelves or enclosures of each unit, Power Cabling method and Optic Cabling and RF Interface.

The needed accessories and tools are list up in the below table.

| Steps for installation        | Accessories  | Included | Tool          | Remark            |
|-------------------------------|--|----------|---------------|-------------------|
| Remote Enclosure Installation | M12 Bolt (4EA)   | X        | Spanner(19mm) | -                 |
| Power Connection_AC           | AC 120V power cable (1EA)<br>[2 meter, with MIL-5015 type Connector (MS-3106A- 18-10S) at one end, AC Plug at another end]           | ○        | -             | -                 |
| Power Connection_DC           | DC -48V power cable (1EA)<br>[2 meter, with MIL-5015 type Connector (MS-3106A- 18-10S) at one end, 4.5 ø square lugs at another end] | ○        | -             | -                 |
| Optical Connection            | Optical Cable Assembly Connector (1EA)<br>[SOLI-FIBER-ASS'Y, by LTW]   | ○        | -             | For more details, |

|                            |  |   |                       |                                   |
|----------------------------|--|---|-----------------------|-----------------------------------|
|                            | OPTIC SC/APC Cable (1EA)   | X | -                     | refer to 4.1.5                    |
| Ground Connection          | M6 Screw (1EA)   | ○ | No.2 Screw driver (+) | For more details, refer to 4.1.4  |
|                            | Lug (1EA)  | ○ | Crimping Tool         |                                   |
|                            | Max. AWG #6 Cable  | X |                       |                                   |
| Antennal Connection        | RF Cable (1 or 2EA)  | X | Spanner (33mm)        | 2 EA is required in case of MIMO. |
| MRDU Installation          | -  | - | No.1 Screw driver (+) | For more details, refer to 4.1.6  |
| Connection with ADD ON ROU | AC power cable (1 EA)<br>[1.5 meter, with MIL-5015 type Connector (MS-3106A-16-10S) and Circular Connector (C016_20H003_100_12, by LTW)] | ○ | -                     | -                                 |
|                            | Data Interface cable (1 EA)<br>[1.5 meter, with MIL-5015 type Connector (MS-3106A-14S-5S) at both ends]                                  | ○ | -                     | -                                 |
|                            | RF interface cable (2EA)<br>[1.5 meter, with N male connector at both ends]  | ○ | -                     | -                                 |
| FAN Unit (Option)          | Inner Fan Cable  | ○ | Spanner (10mm)-       | For more details, refer to 4.1.7  |
|                            | Fan Unit   | ○ | -                     |                                   |
|                            | M6 Screw (1EA)   | X | No.2 Screw driver (+) |                                   |

## 4.1 Remote Unit Installation

### 4.1.1 Remote Unit Enclosure installation

Remote Unit is designed to be water- and dirt-proof. The unit has the structure of one-Body enclosure. It satisfies water-proof and quake-proof standards equivalent of NEMA4(IP66). Basically Remote Unit is attached with wall mountable bracket. Remote Unit can be mounted into either of wall or on a pole.



Figure 4.1 – Exterior of Remote Unit

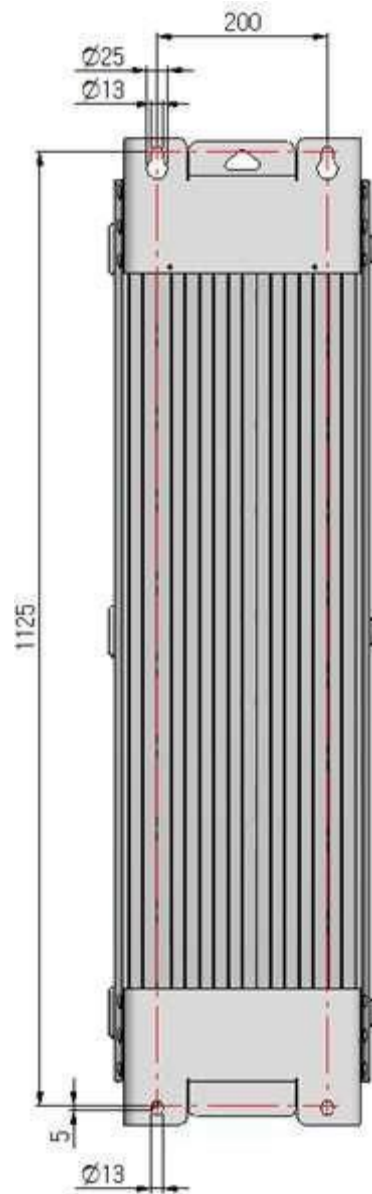


Figure 4.2 – Dimension used to install REMOTE UNIT on the WALL

## Remote Unit Wall Mount Installation

Remote Unit's installation bracket is attached on Enclosure when is delivered. It doesn't need to remove bracket to install enclosure. simply after installing 4 of M12 mounting bolts, secure 4 mounting bolts tightly. First, install 2 of M12 mounting bolts roughly half way on the enclosure and install enclosure over the bolts and secure tightly.

Second, install 2 of M12 mounting bolts under the enclosure and secure tightly.

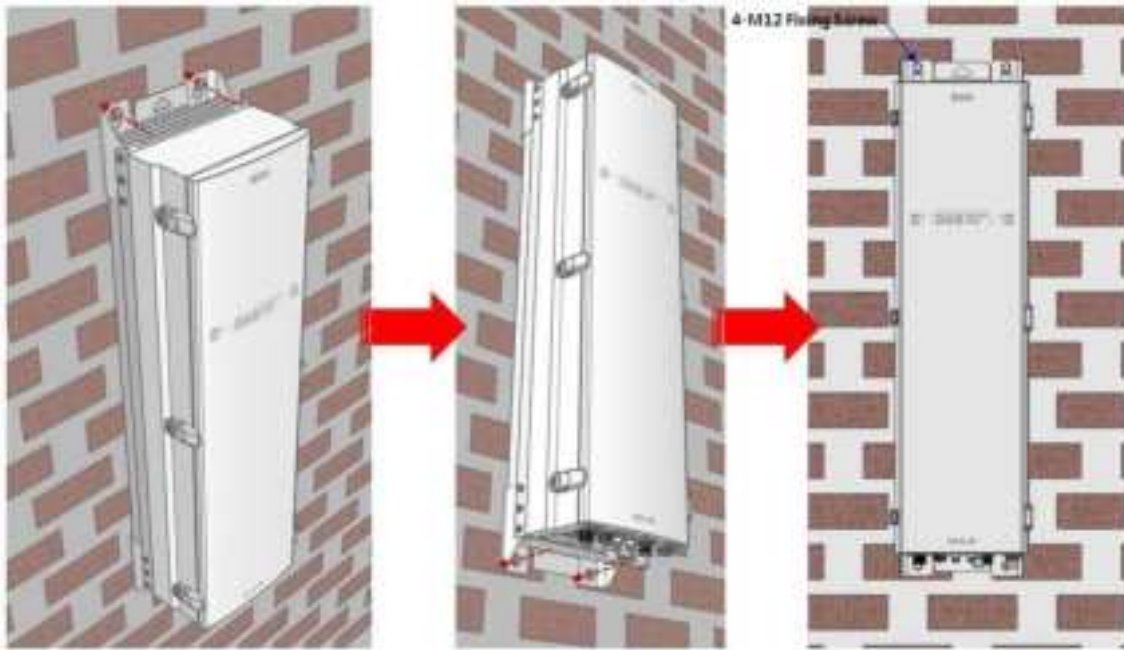


Figure 4.3 – Procedures of installation

## Remote Unit Components

Remote Unit has the following components:





| No.         | Unit        | Description  | Remark       |
|-------------|-------------|--|--------------|
| Common Part | Enclosure   | Including Wall mounting bracket  | 1EA          |
|             | RCPU        | -  | 1EA          |
|             | R_OPTIC     | With SC/ACP adaptor(only Remote Unit)  | 1EA,optional |
|             | RPSU        | AC 120V or DC-48V  | 1EA          |
|             | Power Cable | MS Connector with 4 hole   | 1EA          |
|             | MRDU        | MRDU-850CEL<br>MRDU-1900PCS<br>MRDU-1900P_E<br>MRDU-AWS13<br>MRDU-AWS13_B66B70<br>MRDU-2500LTE(Reserved)<br>MRDU-600_700LTE_FN<br>MRDU-2300WCS<br>MRDU-2500_FB_TDD | ANT1         |
|             | CU1         | Internal Combiner unit for 600, 700, 850, 1900, 2100, 2300 and 2500  | ANT1         |
|             | CU9         | Internal Combiner unit for 700, 850, 1900(Expansion), 2100(Expansion),2300 and 2500  | ANT1         |

Basically, the common part of Remote Unit should have an enclosure and it is equipped with RCPU to inquire and control state of each module, R\_OPTIC to make both of electronic-optical and optical-electronic conversions, RPSU to supply power for Remote Unit. It should have Power Cable for external rectifier or to supply required power.

In addition, MRDU can be mounted and removed to provide service for desired band.

#### 4.1.2 How to expand ADD ON ROU at the Remote Unit

Remote Unit can expand ARU up to 1. The three item is needed for connection between Remote Unit and ADD ON ROU. ADD ON ROU's components additively have 3 item except for enclosure like below

| Accessories | Description                   | Qty | Specification  | Remark  |
|-------------|-------------------------------|-----|--|---|
| 1           | TX RF Cable                   | 1   | N(M)STto SMA(M)<br>ST_1.5M   |    |
| 2           | RX RF Cable                   | 1   | N(M)STto SMA(M)<br>ST_1.5M   |   |
| 3           | I/O Cable                     | 1   | IEC 61076-2-<br>101(8pin_F)<br>ST_1.5m                             |  |
| 4           | Power Cable<br>(AC type only) | 1   | MIL-5015(16-10_F)<br>ST to Circular(eco<br>mate 3+PE_M)<br>ST_1.5m |  |

The following picture shows the connection diagram between Remote Unit and ADD ON ROUs



For expanding ADD ON ROU at the Remote Unit within the proper cable length provided. The cables between Remote Unit and ADD ON ROU have each 1.5m length.

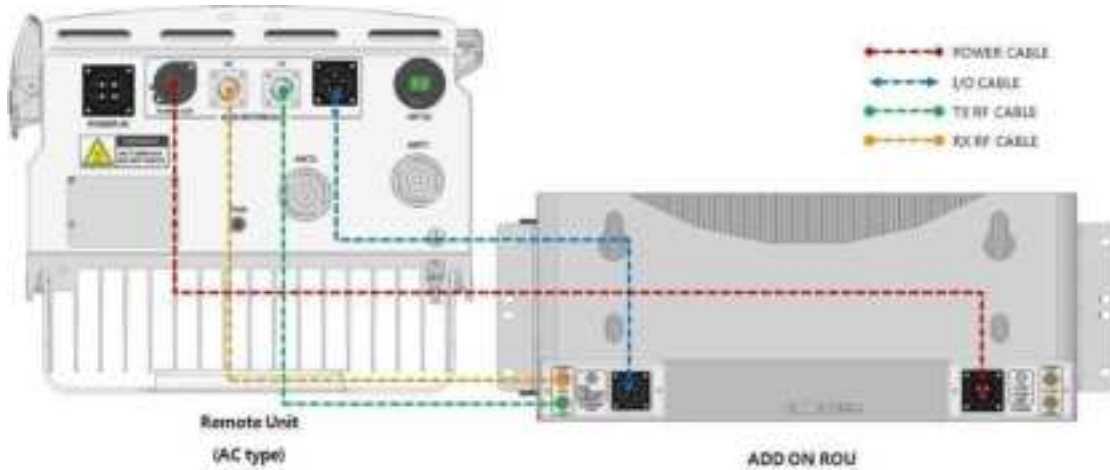


Figure 4.4 – Connection diagram between Remote Unit and ADD ON ROU (AC type)

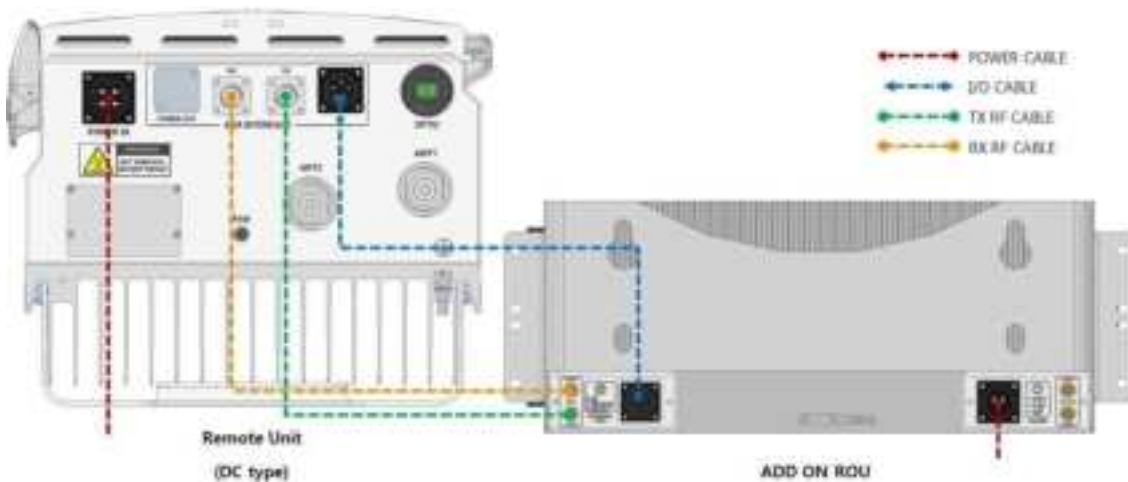



Figure 4.5 – Connection diagram between Remote Unit and ADD ON ROU (DC type)

### 4.1.3 Remote Unit Power Cabling

#### AC Power

Remote Unit supports only AC120V of input power. Provided outside power cable is only one type.

The pin discription of AC port is below. You should connect exact polarity of AC.

| Port outlook  | MS Connector numbering | Name | Description   |
|---|------------------------|------|---------------|
|  | A                      | AC_H | AC Hot        |
|   | B                      | AC_N | AC Neutral    |
|   | C                      | N.C  | Not Connected |
|   | D                      | F.G  | Frame Ground  |

Check if the connection is the same as one seen in the table above and make sure to turn the power ON.


Provided AC power cable's outlook is below



#### DC Power


Remote Unit supports only DC48V of input power. Provided outside power cable is only one type.

The pin discription of DC port is below. You should connect exact polarity of DC.

| Port outlook  | MS Connector numbering | Name | Description   |
|---|------------------------|------|---------------|
|  | A                      | N.C  | Not Connected |
|   | B                      | N.C  | Not Connected |
|   | C                      | +V   | +48V          |
|   | D                      | -V   | -48V          |

Check if the connection is the same as one seen in the table above and make sure to turn the power ON.

Provided DC power cable's outlook is below

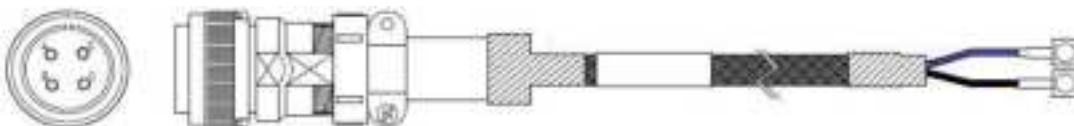

#### 4.1.4 Remote Unit Ground cabling

The Grounding terminal is located at the bottom of Remote Unit enclosure fixed by M6 screw. Compression terminal is attached already when is delivered. The recommended thickness of cable is AWG#6 copper grounding wire

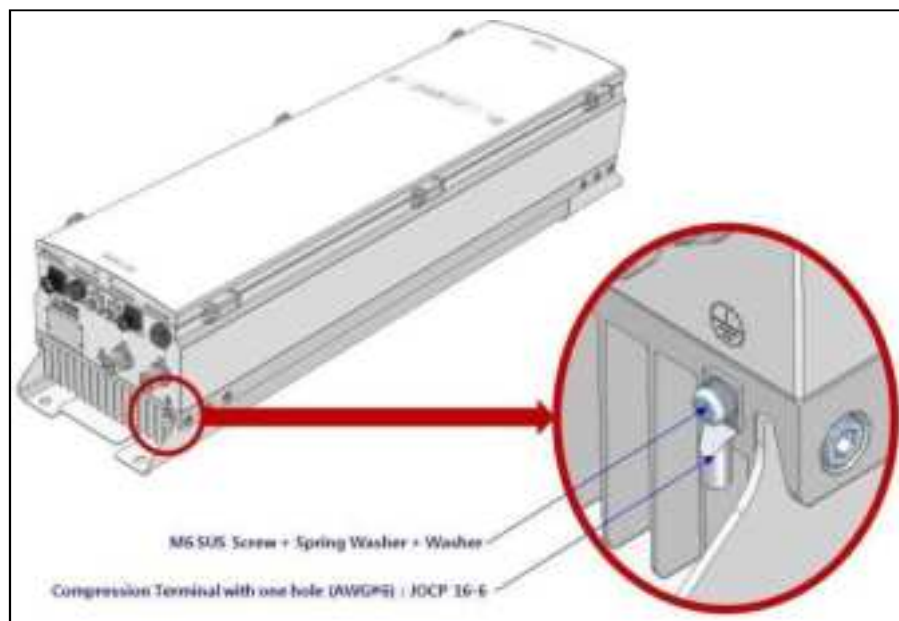


Figure 4.6 – Location of Ground Terminal

The specification of compression terminal is like below

**TUBULAR CABLE LUGS, ONE-HOLE, ROUND COMPRESSED TYPE-CP**

- Material : Electrolytic Copper (TPC)
- Surface : Tin Plated
- With Inspection Hole to visually assure full Conductor insertion.
- Color Coded to Show Proper Die Number and Color 10-44-70-44
- To IEC 60228 Class 2 and Class 5
- UL Listed 486A-486B up to 35KV

| Part Number      | Wire Range |     |      |     | Stud Size | Dimension (mm) |    |    |     | Die Cable Die Color & No. | Qty/Bag |
|------------------|------------|-----|------|-----|-----------|----------------|----|----|-----|---------------------------|---------|
|                  | CODE       |     | FLEX |     |           | W              | E  | L  | d   |                           |         |
|                  | AWG        | mm² | AWG  | mm² |           |                |    |    |     |                           |         |
| JOCP 16-5        |            |     |      |     | M5        | 12             | 13 | 29 | 5.8 | Bus 14                    | 300     |
| <b>JOCP 16-6</b> | 6          | 11  | 6    | 11  | M6        |                |    |    |     |                           |         |
| JOCP 16-8        |            |     |      |     | M8        | 14             |    | 33 |     |                           |         |
| JOCP 16-10       |            |     |      |     | M10       | 16             |    | 34 |     |                           |         |

Figure 4.7 – Information of Terminal

The required part number is JOCT 16-6 supporting AWG 6. The way to install the grounding cable comply with below procedures

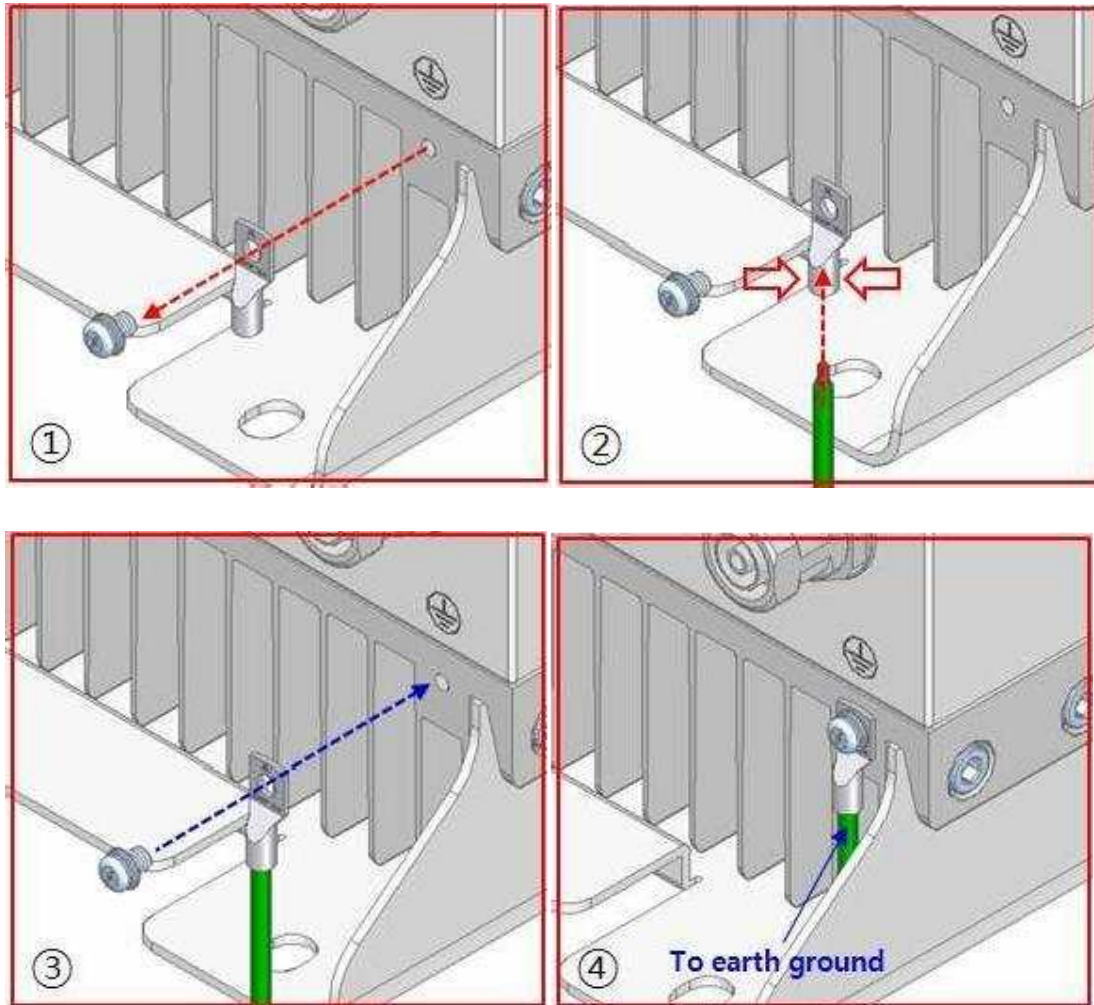


Figure 4.8 – How to install Ground Terminal

The procedures are

1. Loosen a two M6 screws and then take compression terminal off
2. Insert AWG#6 Grounding Wire into terminal and then compress a terminal using tool
3. Assemble the terminal which made in step “2” using 2xM6 screws
4. Cut the ground wire to proper length and connect it to the earth ground source

### 4.1.5 Optical Cabling

The Optical Connector is located at the bottom of Remote Unit enclosure fixed. Optical Cable can be connected by using connectors.

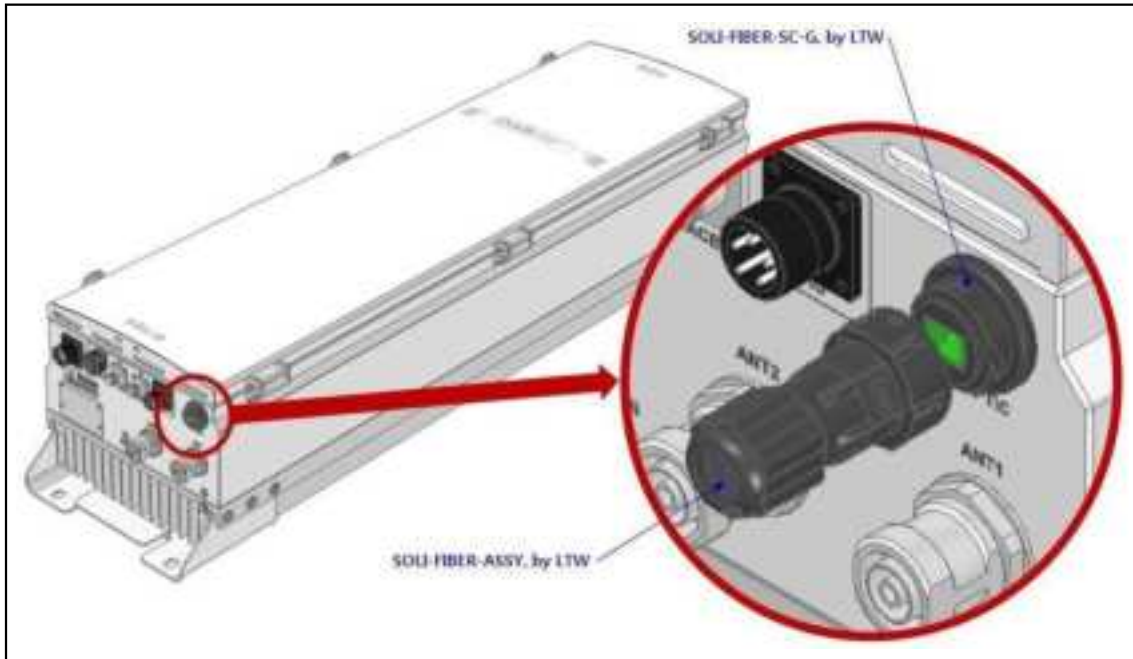


Figure 4.9 – Location of Optical Connector

The specification of compression Optic Connector is like below

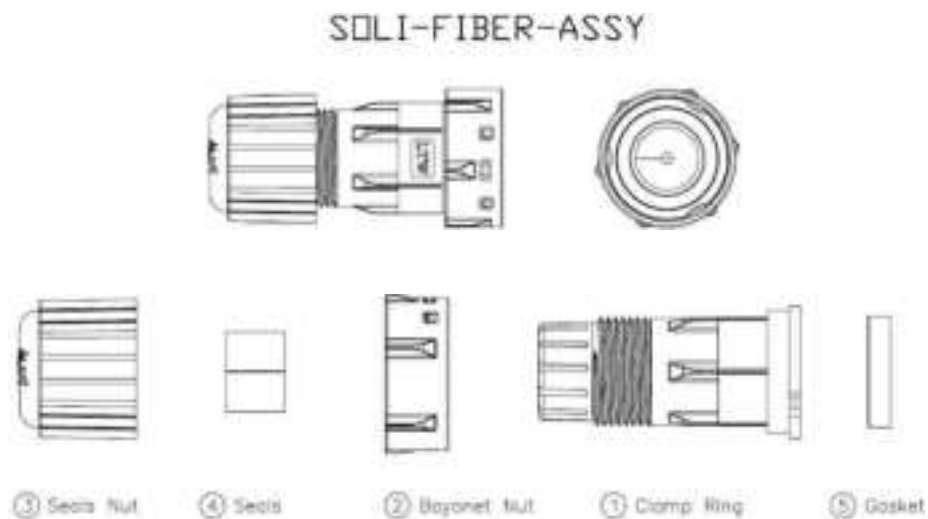


Figure 4.10 – Information of Optical Connector

The way to install the Optical cable comply with below procedures

The procedures are

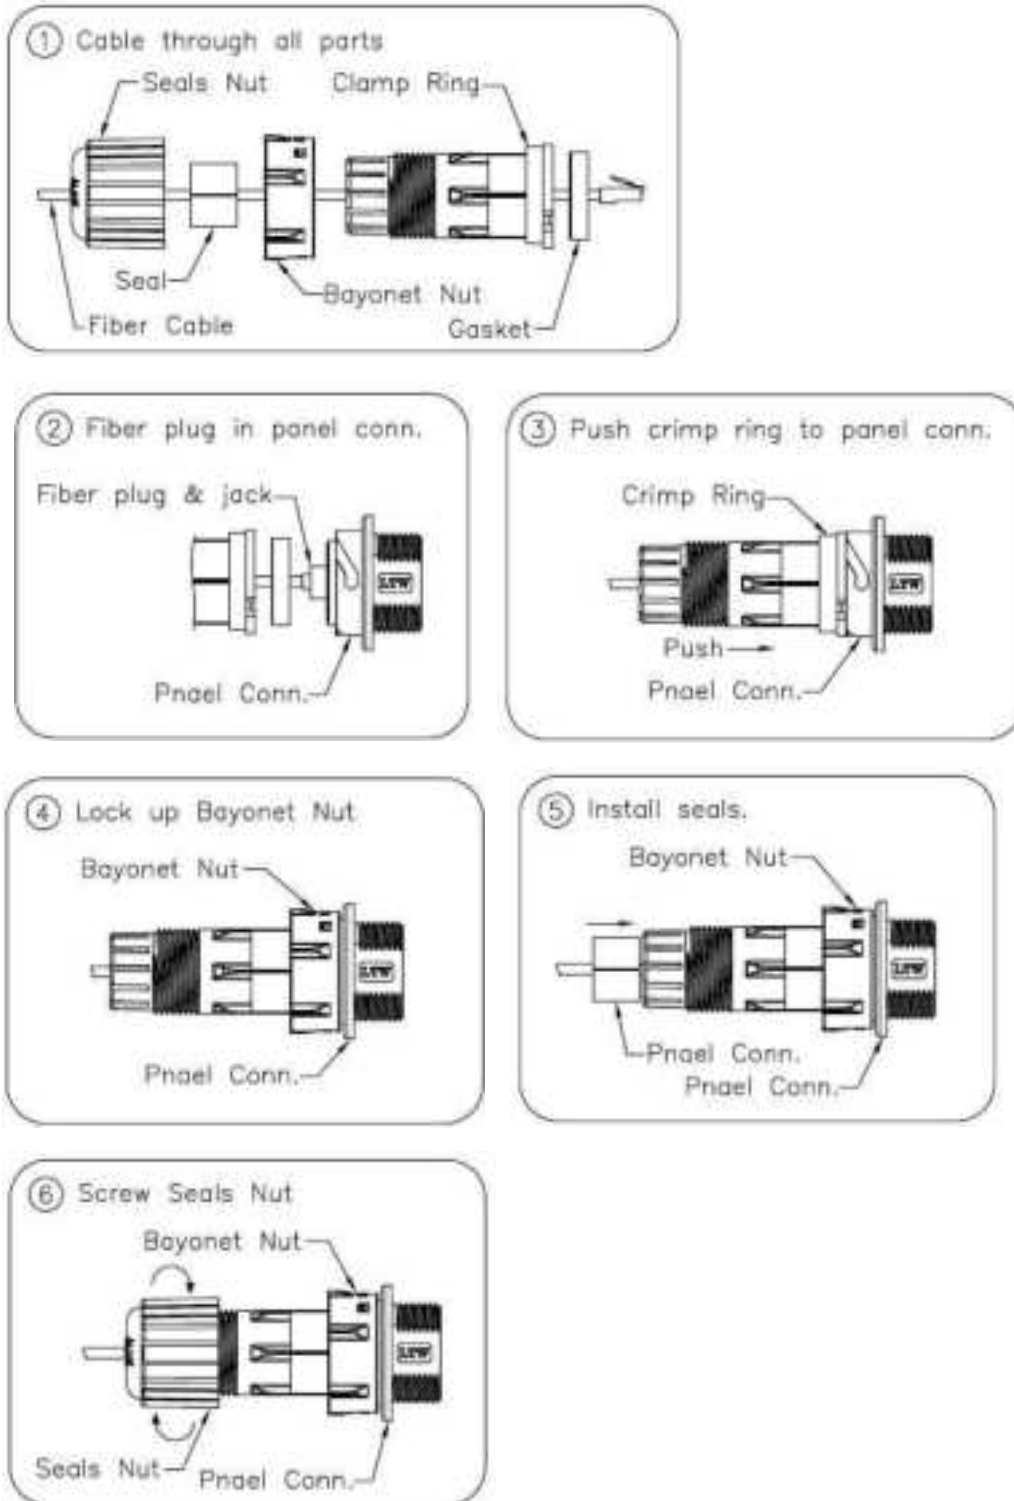


Figure 4.11 – How to install Optical Cabling



#### 4.1.6 Mounting of MRDU

Remote Unit has slots to enable up to six MRDU modules to be mounted in it.

You can mount a MRDU into designated slot surely. It is not possible to provide services with a MRDU module alone; you need to connect MRDU cavity duplexer antenna port with CU's designated port.

##### Installation Diagram for MROU Module Assembly

- 1) Install each MRDU into its designated location as shown in the graphic.
- 2) If MRDUs are inserted in slot #5 or #6, install the optional combiner unit (CU) according to these guidelines:

Option 1: CU\_607085IC19AWS132325

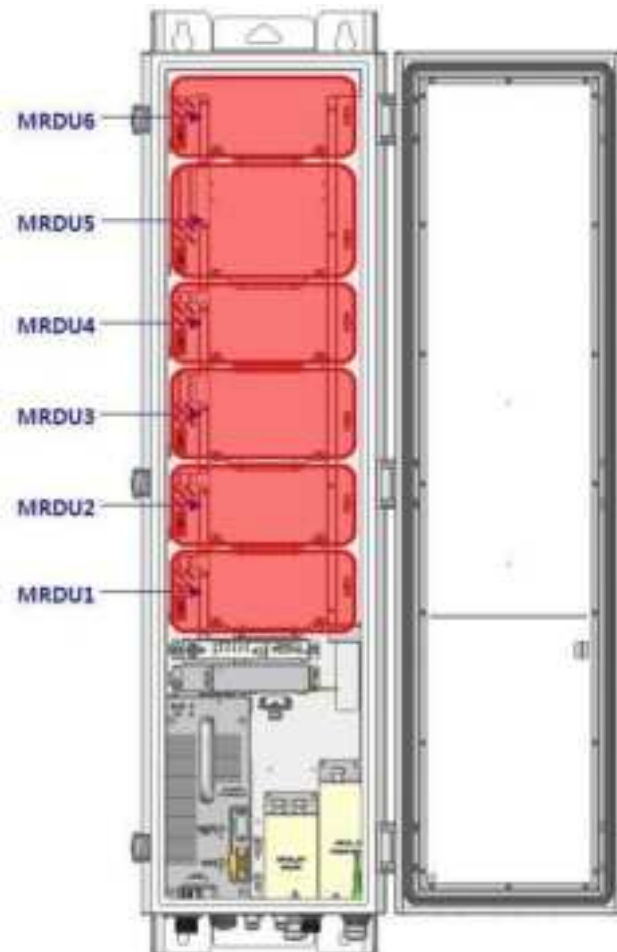


Figure 4.12 Location of MRDU

The Remote Unit holds a maximum of 6 MRDUs. Guide brackets on the bottom of each MRDU slot simplify installation as described below. MRDU installation requires a +No.1 tip size screwdriver.

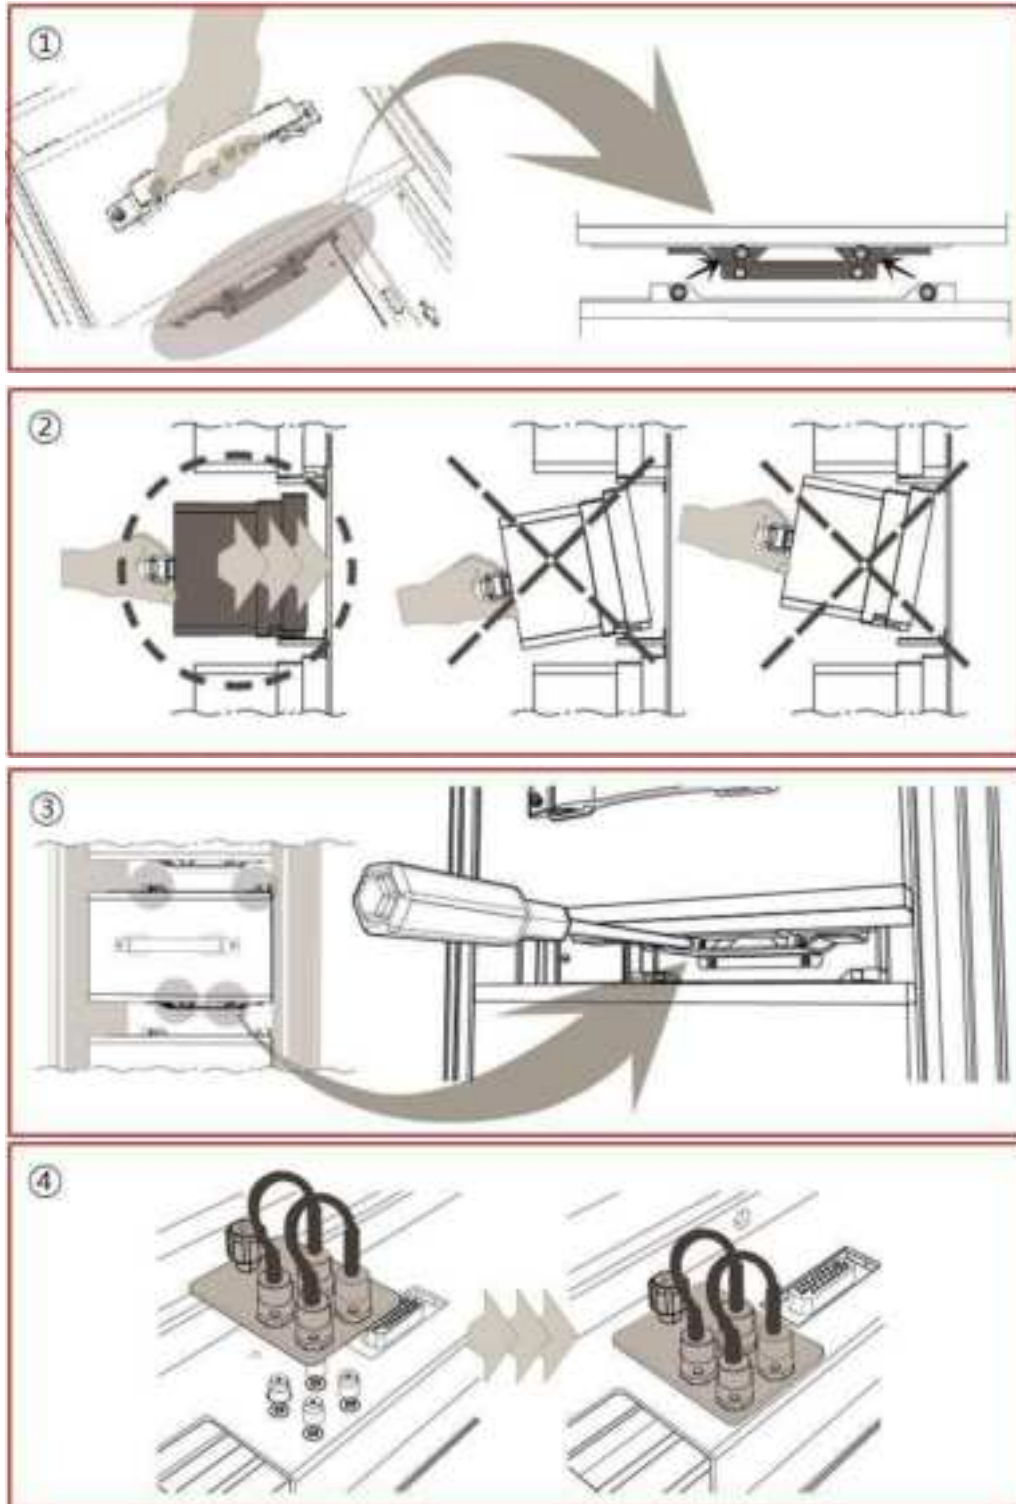


Figure 4.13 – How to mount MRDU



The procedures are

1. Lift the MRDU onto the guide bracket and ensure the MRDU is level left to right
2. Push the MRDU into the corresponding slot in the direction of the heat sink while levelling the MRDU to guide bracket
3. Make sure the MRDU is firmly inserted into the corresponding slot. Tighten the 4 corner screws to secure the unit
4. Install MRDU blank cards in all unused slots in the remote. First insert the blank card into the corresponding slot, then tighten the captive screw to secure it

#### 4.1.7 How to mount FAN Unit

FAN unit is required to be installed on the bottom of the 5W remote as shown in the below figure.

In the case that MROU temperature on GUI exceeds 70°C (1580F), the fan unit is required to be installed on the bottom of the remote unit.

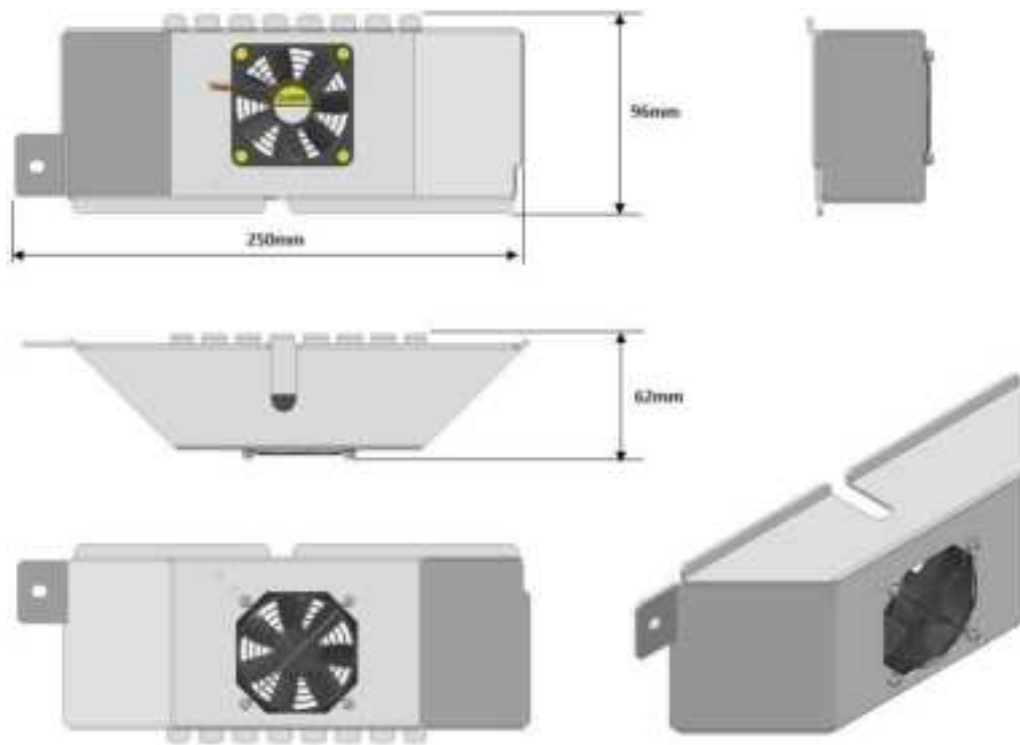


Figure 4.14 – How to mount FAN Unit

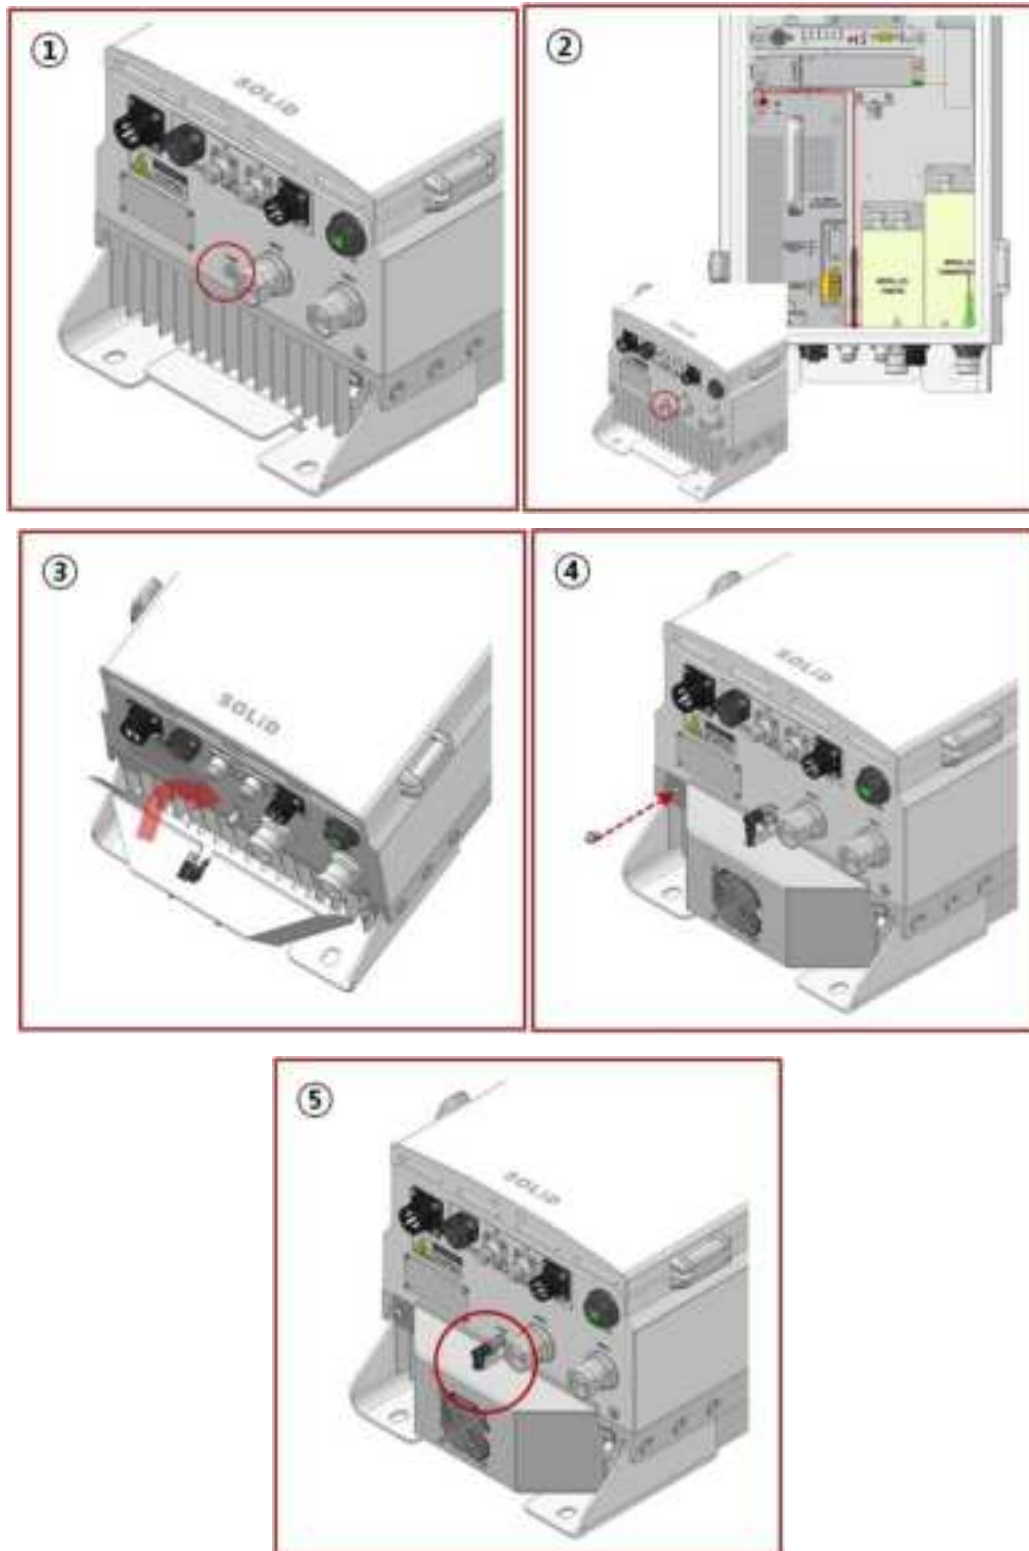


Figure 4.15 – How to mount FAN Unit

The procedures are

1. Remove dummy bolt attached at FAN Port
2. Connect internal FAN cable to the FAN Port, and connect with the connector located on the top of PSU.
3. Install fan unit to the bottom of 5W remote with aligning heatsink pin to the guided groove.
4. Secure the fan unit by tightening M6 screw located on the left corner.
5. After securing the FAN Unit, connect the cable from FAN unit to FAN port.

# Section5

## System Specifications

---

- 6.1 Physical Specifications
- 6.2 RF Performance
- 6.3 Certification

## 5.1 Physical Specifications

| Parameter                           | ROU                  |
|-------------------------------------|----------------------|
| Nominal Impedance(input and output) | 50 ohm               |
| RF Connectors                       | DIN Female (7/16)    |
| Mounting Type                       | Wall Mounting        |
| Serial Interface connector          | (1) RS-232 9-pin     |
|                                     | D-sub, male          |
| Fiber connector                     | (1) SC/APC for ODU   |
| LED Alarm and Status Indicator      | Power LED            |
|                                     | TX LED               |
|                                     | RX LED               |
|                                     | LD LED               |
|                                     | PD LED               |
|                                     | ALARM LED            |
|                                     | RESET Button         |
| AC Power                            | 108~132V AC, 50/60Hz |
| DC Power                            | -40.8 ~ -57.6V DC    |
| Environmental Condition & IP Rating | IP66                 |
| Maximum Power Consumption           | 510W at full load    |
| Enclosure Dimensions (mm)           | 320 x 1165 x 260mm   |
| Weight (Full Load)                  | 62kg                 |
| Optical Data                        |                      |
| Wavelength TX/RX                    | 1310/1550nm          |
| Maximum Optical Loss                | 10dBo                |
| Fiber Optic Connector               | SC/APC               |

## 5.2 RF performance

### MRDU Specifications Per band

#### Downlink

| Unit naming                 | Description | Gain(dB)<br>[Only RU] | Bandwidth(MHz) | output<br>power(dBm) | Frequency range        |
|-----------------------------|-------------|-----------------------|----------------|----------------------|------------------------|
| MRDU 600_700LTE_FN          | Dual        | 49                    | 35             | +39                  | 617 – 652MHz           |
|                             |             | 49                    | 39             | +39                  | 729 – 768MHz           |
| MRDU 850C                   | Single,     | 49                    | 25             | +39                  | 869 - 894MHz           |
| MRDU 850IC                  | Dual,       | 49                    | 7              | +37                  | 862 - 869MHz           |
|                             |             | 49                    | 25             | +37                  | 869 - 894MHz           |
| MRDU 1900P                  | Single,     | 53                    | 65             | +37                  | 1930 - 1995MHz         |
| MRDU 700LTE                 | Single,     | 49                    | 28             | +37                  | 728 - 756MHz           |
| MRDU AWS13                  | Single,     | 54.2                  | 70             | +38.2                | 2110 - 2180MHz         |
| MRDU 700LTE_MIMO            | Single,     | 53                    | 28             | +37                  | 728 - 756MHz           |
| MRDU_AWS13_M                | Single,     | 53                    | 70             | +37                  | 2110 - 2180MHz         |
| MRDU 900I                   | Single,     | 49                    | 12             | +37                  | 929 - 941MHz           |
| MRDU 700P+800               | Dual,       | 49                    | 17             | +37                  | 758 - 775MHz           |
|                             |             | 49                    | 10             | +37                  | 851 - 861MHz           |
| MRDU 2300_WCS               | Single      | 53                    | 10             | +37                  | 2350 – 2360MHz         |
| MRDU 2.5TDD                 | Single      | 53                    | 193.2          | +37                  | 2496.8 - 2690MHz (FCC) |
|                             |             |                       |                |                      | 2500 – 2690MHz (IC)    |
| MRDU 2600_FDD               | Single      | 53                    | 70             | +37                  | 2620 – 2690MHz         |
| MRDU_1900P_M                | Single,     | 53                    | 65             | +37                  | 1930 - 1995MHz         |
| MRDU_2500_60TDD_M           | Single      | 53                    | 193.2          | +37                  | 2496.8 - 2690MHz (FCC) |
|                             |             |                       |                |                      | 2500 – 2690MHz (IC)    |
| MRDU_700LTE_FN              | Single,     | 49                    | 40             | +37                  | 728 - 768MHz           |
| MRDU_700LTE_FN<br>+FirstNet | Single,     | 57                    | 40             | +37                  | 728 - 768MHz           |
| MRDU_800I_850C              | Single,     | 57                    | 25             | +37                  | 869 - 894MHz           |
| MRDU 1900P                  | Single,     | 57                    | 65             | +37                  | 1930 - 1995MHz         |
| MRDU_AWS13                  | Single      | 57                    | 70             | +37                  | 2110 - 2180MHz         |
| MRDU_2500_100TDD            | Single      | 48.5                  | 194            | +37                  | 2496.8 - 2690MHz (FCC) |
|                             |             |                       |                |                      | 2500 – 2690MHz (IC)    |
| MRDU_2500_FB_TDD            | Single      | 48.5                  | 194            | +37                  | 2496 - 2690MHz         |
| MRDU_1900P_E                | Single,     | 57                    | 90             | +37                  | 1930 - 2020MHz         |
| MRDU AWS13_B66B70           | Single,     | 57                    | 90             | +37                  | 2110 - 2200MHz         |



## Uplink

| Unit naming                 | Description | Gain(dB)<br>[Only RU] | Bandwidth(MHz<br>) | output<br>power(dBm) | Frequency range        |
|-----------------------------|-------------|-----------------------|--------------------|----------------------|------------------------|
| MRDU 600_700LTE_FN          | Dual        | 47                    | 53                 | -5                   | 663 – 716MHz           |
|                             |             | 48                    | 21                 | -4                   | 777 – 798MHz           |
| MRDU 850C                   | Single,     | 47                    | 25                 | -5                   | 824 - 849MHz           |
| MRDU 850IC                  | Dual,       | 47                    | 7                  | -5                   | 817 - 824MHz           |
|                             |             | 47                    | 25                 | -5                   | 824 - 849MHz           |
| MRDU 1900P                  | Single,     | 47                    | 65                 | -5                   | 1850 - 1915MHz         |
| MRDU 700LTE                 | Single,     | 47                    | 17                 | -5                   | 699 - 716MHz           |
|                             |             | 47                    | 10                 | -5                   | 777 – 787MHz           |
| MRDU AWS13                  | Single,     | 47                    | 70                 | -5                   | 1710 – 1780MHz         |
| MRDU 700LTE_MIMO            | Single,     | 47                    | 17                 | -5                   | 699 - 716MHz           |
|                             |             | 47                    | 10                 | -5                   | 777 – 787MHz           |
| MRDU_AWS13_M                | Single,     | 47                    | 70                 | -5                   | 1710 – 1780MHz         |
| MRDU 900I                   | Single,     | 47                    | 6                  | -5                   | 896 - 902MHz           |
| MRDU 700P+800               | Dual,       | 47                    | 17                 | -5                   | 788 - 805MHz           |
|                             |             | 47                    | 10                 | -5                   | 806 - 816MHz           |
| MRDU 2300_WCS               | Single      | 47                    | 10                 | -5                   | 2305 – 2315MHz         |
| MRDU 2.5TDD                 | Single      | 47                    | 189.6              | -5                   | 2496.8 - 2690MHz (FCC) |
|                             |             |                       |                    |                      | 2500 – 2690MHz (IC)    |
| MRDU 2600_FDD               | Single      | 47                    | 70                 | -5                   | 2500 – 2570MHz         |
| MRDU_1900P_M                | Single,     | 47                    | 65                 | -5                   | 1850 - 1915MHz         |
| MRDU_2500_60TDD_M           | Single      | 47                    | 193.2              | -5                   | 2496.8 - 2690MHz (FCC) |
|                             |             |                       |                    |                      | 2500 – 2690MHz (IC)    |
| MRDU_700LTE_FN              | Single,     | 47                    | 40                 | -5                   | 698 - 716MHz           |
|                             |             |                       |                    |                      | 777 – 798MHz           |
| MRDU_700LTE_FN<br>+FirstNet | Single,     | 47                    | 40                 | -5                   | 698 - 716MHz           |
|                             |             |                       |                    |                      | 777 – 798MHz           |
| MRDU_2500_100TDD            | Single,     | 47                    | 194                | -5                   | 2496 - 2690MHz (FCC)   |
|                             |             |                       |                    |                      | 2500 – 2690MHz (IC)    |
| MRDU_2500_FB_TDD            | Single,     | 47                    | 194                | -5                   | 2496 - 2690MHz (FCC)   |
| MRDU_1900P_E                | Single,     | 47                    | 65                 | -3                   | 1850 - 1915MHz         |
| MRDU AWS13_B66B70           | Single,     | 47                    | 85                 | -3                   | 1695 – 1780MHz         |

### 5.3 Certification

| Title                 | Standards                    | Remarks             |
|-----------------------|------------------------------|---------------------|
| Environmental         |                              |                     |
| Temperature range     | -25°C to +55°C/ -13 to 131°F | Ambient Temperature |
| Humidity Range        | 0% ~ 90%                     | Non-condensing      |
| Sealing (Remote Unit) | IEC 60 529 EN 60 529         | IP66 Complaint      |



#### RSS-GEN, Sec. 7.1.2 – (transmitters)

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

#### RSS-GEN, Sec. 7.1.2 – (detachable antennas)

This radio transmitter (identify the device by certification number, or model number if Category II) has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Le présent émetteur radio (identifier le dispositif par son numéro de certification ou son numéro de modèle s'il fait partie du matériel de catégorie I) a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

#### RF Radiation Exposure

This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 170 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. RF exposure will be addressed at time of installation and the use of higher gain antennas may require larger separation distances.



---

### RSS-102 RF Exposure

L'antenne (ou les antennes) doit être installée de façon à maintenir à tout instant une distance minimum de au moins 400 cm entre la source de radiation (l'antenne) et toute personne physique. Cet appareil ne doit pas être installé ou utilisé en conjonction avec une autre antenne ou émetteur.