# Leica DISTO™ D5 The original laser distance meter



User Manual Version 1.0 English





# Introduction



This manual contains important safety directions as well as instructions for setting up the product and operating it. Refer to 1 Safety Directions for further information.

Read carefully through the User Manual before you switch on the product.



The content of this document is subject to change without prior notice. Ensure that the product is used in accordance with the latest version of this document.

Updated versions are available for download at the following Internet address:

https://www.disto.com/manuals



Keep for future reference!

#### **Trademarks**

• Bluetooth® is a registered trademark of Bluetooth SIG, Inc.

All other trademarks are the property of their respective owners.

# Validity of this manual

This manual applies to the Leica DISTO™ D5. Where there are differences between the standard setups they are clearly described.

#### Leica Geosystems address book

On the last page of this manual, you can find the address of Leica Geosystems headquarters. For a list of regional contacts, please visit http://leica-geosystems.com/contact-us/sales\_support.

# **Table of Contents**

1	Safety Directions	4
	1.1 General Introduction	4
	1.2 Definition of Use	5
	1.3 Limits of Use	7
	1.4 Responsibilities	7
	1.5 Hazards of Use	8
	1.6 Laser Classification	11
2	Overview	13
3	Instrument Setup	16
4	Operation	22
5	Settings	27
6	Functions	48
7	Message Codes	67
8	Care	69
9	Technical Data	70
	9.1 Conformity to National Regulations	73
10	International Limited Warranty	77

# Safety Directions

#### 1.1 General Introduction

### Description

The following directions enable the person responsible for the product, and the person who actually uses the equipment, to anticipate and avoid operational hazards.

The person responsible for the product must ensure that all users understand these directions and adhere to them.

# About warning messages

Warning messages are an essential part of the safety concept of the instrument. They appear wherever hazards or hazardous situations can occur.

#### Warning messages...

- make the user alert about direct and indirect hazards concerning the use of the product.
- · contain general rules of behaviour.

For the users' safety, all safety instructions and safety messages shall be strictly observed and followed! Therefore, the manual must always be available to all persons performing any tasks described here.

**DANGER**, **WARNING**, **CAUTION** and **NOTICE** are standardised signal words for identifying levels of hazards and risks related to personal injury and property damage. For your safety, it is important to read and fully understand the following table with the different signal words and their definitions! Supplementary safety information symbols may be placed within a warning message as well as supplementary text.

Туре	Description
<b>▲</b> DANGER	Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

Туре	Description
<b>≜</b> WARNING	Indicates a potentially hazardous situation or an unintended use which, if not avoided, could result in death or serious injury.
<b> CAUTION</b>	Indicates a potentially hazardous situation or an unintended use which, if not avoided, may result in minor or moderate injury.
NOTICE	Indicates a potentially hazardous situation or an unintended use which, if not avoided, may result in appreciable material, financial and environmental damage.
	Important paragraphs which must be adhered to in practice as they enable the product to be used in a technically correct and efficient manner.

## 1.2 Definition of Use

#### Intended Use

- Measuring distances in interior as well as exterior condition
- Tilt measurement
- Data transfer with Bluetooth®

#### Foreseeable misuse

- Use of the product without instructions
- Use outside of the intended use and limits
- Disabling of safety systems
- · Removal of hazard notices
- Opening the product using tools, for example a screwdriver, unless this is permitted for certain functions
- Use with accessories from other manufacturers without the prior written explicit approval of Leica Geosystems AG
- Modification or conversion of the product
- Deliberate dazzling of third parties; also in the dark
- Inadequate safeguards at the working site
- Deliberate or irresponsible behaviour on scaffold, when using ladders, when measuring near machines which are running or near parts of machines or installations which are unprotected
- Aiming directly into the sun
- Optics are fogged up or wet. Before measurements, condensation moisture and splash water must be removed from directly accessible parts such as the output optics using a suitable cloth
- Moving the device during measurements. Try to hold it still when measuring
- Dusty atmosphere. Make sure that the lenses of the instrument are free of dust when measuring. If necessary, clean with a brush
- Measurements in rain, snow, fog or other atmospheric conditions between the device and the target point
- Measurements in strong electrical and magnetic fields, which cannot be completely ruled out in the vicinity of transformers, strong magnets, power supply systems, and so on
- Measurements with the laser beam in the immediate vicinity of highly reflective surfaces

#### 1.3 Limits of Use



Refer to section 9 Technical Data.

#### **Environment**

Suitable for use in an atmosphere appropriate for permanent human habitation. Not suitable for use in aggressive or explosive environments.

# 1.4 Responsibilities

# Manufacturer of the product

Leica Geosystems AG, CH-9435 Heerbrugg, hereinafter referred to as Leica Geosystems, is responsible for supplying the product, including the User Manual and original accessories, in a safe condition.

The company above is not responsible for third-party accessories.

# Person responsible for the product

The person responsible for the product has the following duties:

- To understand the safety instructions on the product and the instructions in the User Manual
- To be familiar with local safety regulations relating to accident prevention
- Always prevent access to the product by unauthorised personnel
- To ensure that the product is used in accordance with the instructions



The product is permitted to use for skilled persons only.

#### 1.5

### Radios, digital cellular phones or products with Bluetooth

# Hazards of Use

# **MWARNING**

### Use of product with radio or digital cellular phone devices

Electromagnetic fields can cause disturbances in other equipment, installations, medical devices, for example pacemakers or hearing aids, and aircrafts. Electromagnetic fields can also affect humans and animals.

#### **Precautions:**

- Although the product meets the strict regulations and standards which are in force in this respect, Leica Geosystems AG cannot completely exclude the possibility that other equipment can be disturbed or that humans or animals can be affected.
- Do not operate the product with radio or digital cellular phone devices in the vicinity of filling stations or chemical installations, or in other areas where an explosion hazard exists.
- Do not operate the product with radio or digital cellular phone devices near medical equipment.
- Do not operate the product with radio or digital cellular phone devices in aircrafts.
- Do not operate the product with radio or digital cellular phone devices for long periods with the product immediately next to your body.



This warning also applies when using products with Bluetooth.

# **AWARNING**

#### Improper disposal

If the product is improperly disposed of, the following can happen:

- If polymer parts are burnt, poisonous gases are produced which may impair health.
- If batteries are damaged or are heated strongly, they can explode and cause poisoning, burning, corrosion or environmental contamination.
- By disposing of the product irresponsibly you may enable unauthorised persons to use it in contravention of the regulations, exposing themselves and third parties to the risk of severe injury and rendering the environment liable to contamination.

#### **Precautions:**





The product must not be disposed with household waste. Dispose of the product appropriately in accordance with the national regulations in force in your country.

Always prevent access to the product by unauthorised personnel.

Product-specific treatment and waste management information can be downloaded from <u>Get Disto Support</u>, section **Recycling Passports**.

# **△** CAUTION

#### **Electromagnetic radiation**

Electromagnetic radiation can cause disturbances in other equipment.

#### **Precautions:**

- Although the product meets the strict regulations and standards which are in force in this respect, Leica Geosystems cannot completely exclude the possibility that other equipment may be disturbed.
- ► The product is a class A product when operated with the internal batteries. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

#### **NOTICE**

Dropping, misusing, modifying, storing the product for long periods or transporting the product

Watch out for erroneous measurement results.

#### **Precautions:**

Periodically carry out test measurements, particularly after the product has been subjected to abnormal use and before and after important measurements.

#### **NOTICE**

#### **Target surfaces**

Measuring errors and increase of measuring time can occur.

#### **Precautions:**


- Keep in mind that measuring errors can occur when measuring to colourless liquids, glass, styrofoam or permeable surfaces or when aiming at high gloss surfaces.
- ▶ Against dark surfaces the measuring time increases.

#### 1.6

#### **Laser Classification**

#### General

The laser LED built into the product produces a visible laser beam which emerges from the front side.



The laser product described in this section is classified as laser class 2 in accordance with:

• IEC 60825-1 (2014-05): "Safety of laser products"

These products are safe for momentary exposures but can be hazardous for deliberate staring into the beam. The beam may cause dazzle, flash-blindness and after-images, particularly under low ambient light conditions.

# **ACAUTION**

#### Class 2 laser product

From a safety perspective, class 2 laser products are not inherently safe for the eyes.

#### **Precautions:**


- Avoid staring into the beam or viewing it through optical instruments.
- Avoid pointing the beam at other people or at animals.
- Pay particular attention to the direction of the laser beam when remotely operating the product by an app or software. A measurement could be triggered at any time.

Description	Value
Wavelength	620-690 nm
Maximum average radiant power	< 1 mW
Pulse duration	> 400 ps.
Pulse repetition frequency (PRF)	320 MHz
Beam divergence	0.16 mrad × 0.6 mrad

# Overview

#### Components


The Leica DISTO™ is a laser distance meter operating with a class 2 laser. See chapter 9 Technical Data for scope of use.

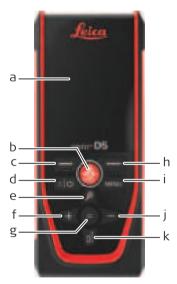


- a Display
- b ON/DIST, ON/Measure
- c Left selection key linked to symbols above
- d Clear/OFF
- e Zoom/Navigate upwards/Pointfinder
- f Add/Navigate left
- g Enter/Equal
- h Right selection key linked to symbols above
- Menu Function/Settings
- j Subtract/Navigate right
- k Measuring reference/Navigate downwards

## Basic measuring screen

#### Pointfinder on

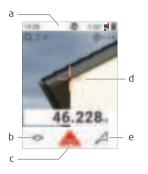


#### Pointfinder off

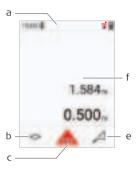

- a Status bar
- b Favourite, left key
- c Active function
- d Cross hair
- e Favourite, right key
- f Measuring results

#### Selection screen

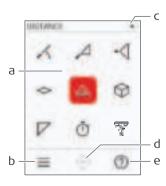




# Red icons represent **Functions** Black icons represent **Settings**

- a Function/Settings menu
- Press the left selection key to switch between Function/Settings menu. Option: Press MENU key twice
- c Page indicator. Press left/right on navigator key
- Selects the indicated icon. Press the = key or ON/DIST key
- e Help function. Press the right selection key to see available help

#### Basic result screen

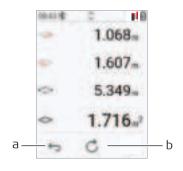

- a Back step-by-step.
  - For example: Repeat measurement
- b Repeat function
  - For example: Repeat whole measurement

#### Icons on status bar

12:03 Time



Bluetooth is switched on



Bluetooth connection established



Device is measuring



Gesture control



Scroll up/down for further results



Measuring reference



Offset is activated and adds/substracts the defined value from measuring distance



Battery power



Zoom

### 3

# Charging the Li-Ion battery by USB

# **Instrument Setup**


Charge the battery before using it for the first time.



Use the original charging cable only.

Plug the small end of the cable into the port of the device, and plug the end of the charger into an electrical socket. Select the appropriate connector for your country. The device can be used while charging.

Using the computer for charging the device is possible if the USB port is providing sufficient power. We therefore recommend the use of a USB charging device with 5 V/1 A.

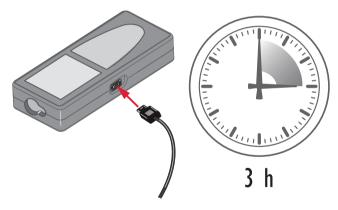

- The battery must be charged before using it the first time, because it is delivered with an energy content as low as possible.
- The permissible temperature range for charging is from 5 °C to +40 °C/+41 °F to +104 °F. For optimal charging, we recommend charging the batteries at a low ambient temperature of +10 °C to +20 °C/+50 °F to +68 °F if possible
- It is normal for the battery to become warm during charging. Using the chargers recommended by Leica Geosystems, it is not possible to charge the battery once the temperature is too high
- For new batteries or batteries that have been stored for a long time (> three months), it is effectual to make a discharge/charge cycle
- For Li-Ion batteries, a single discharge/charge cycle is sufficient. We recommend
  carrying out the process when the battery capacity indicated on the charger or on
  a Leica Geosystems product deviates significantly from the actual battery capacity
  available.

# 

### The device shows the message code 298


Internal diagnostics indicate a possible swell of the Li-lon battery.

#### **Precautions:**

- Switch off and stop using the device.
- Replace the battery before using the device again.

#### **Switching ON/OFF**



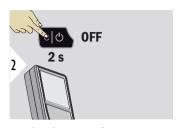

Device is turned ON.


Device is turned OFF.



If the device does not react anymore or cannot be switched off, press and hold the C/Off key for about 10 s. After releasing the button, the device restarts.


# Start-up wizard

This wizard starts automatically when switching the device ON the very first time or after a Reset. The user is asked to set **LANGUAGE**, **DISTANCE UNITS** and **TIME**. Follow these steps.

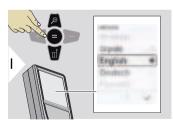






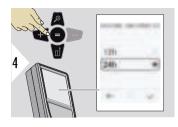



#### Clear

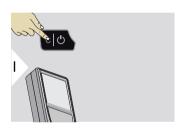

Leave current function, go to default operation mode.

# Message codes

# NOTICE

If the message "i" appears with a number, observe the instructions in 7 Message Codes section.

# Example:





# Multifunctional endpiece



When measuring with 90° flipped-out endpiece, make sure that it lies plane against the edge you measure from.

# Example:

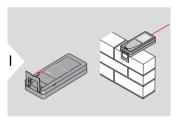







The orientation of the endpiece is automatically detected and the zero point is adjusted accordingly.

# Adjusting measuring reference





Adjusting the measuring reference only works in pointing mode. Make sure that the laser is switched on.

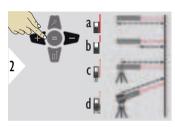

- a Distance is measured from the rear of the device (standard setting)
- b Distance is measured from the front of the device
- c Distance is measured from the tripod thread
- d Distance is measured from a Leica FTA 360



Confirm setting.



If device is switched off, reference goes back to standard setting (rear of the device).


### 4

# **Operation**

# **Single DISTANCE**







Aim active laser at target.






a Measured distance

# Permanent/minimummaximum measuring





Used to measure room diagonals (maximum values) or horizontal distance (minimum values).



## Live view

- a The minimum distance measured
- b The maximum distance measured
- c Main line: The current value measured



Stops permanent/minimum-maximum measuring. The measuring results are displayed.






Use the **Down** navigation key to take over values in the main line for sending by Bluetooth.




Exit

#### Add/subtract




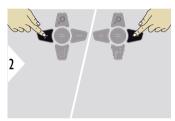

- + The next measurement is **added** to the previous one
- The next measurement is **subtracted** from the previous one

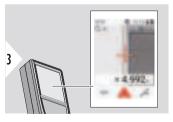







Push the **Enter/Equal** key to stop adding/substracting values.



This process can be repeated as required. The same process can be used for adding or subtracting areas or volumes.

#### Bluetooth data transfer



DISTO™ Plan. Use App for Bluetooth data transfer. Your device can also be updated through this App.



Bluetooth is active when the device is switched on. Connect the device with your smartphone, tablet, laptop... If **Autosend** is activated, measurement values are transferred automatically right after a measurement. To transfer a result, press the **Enter/Equal** key:



Refer to **BLUETOOTH SETTINGS** for details.

When connected to an iOS device, press + or – key for 1 second to let the keyboard appear on the display of your mobile device. Pressing one of those keys again closes the keyboard.

Bluetooth switches off as soon as the laser distance meter is switched off.

The Leica DISTO™ is compatible to smartphone, tablet or laptop devices using Bluetooth 4.0 or higher. The number of possible measurements with only one battery charge is hardly affected due to the Low Energy technology.

Following software and app are available from Leica Geosystems. They extend the possibilities arising with the use of Leica DISTO™:



DISTO™ Transfer for use with Windows 10 or higher. It is free of charge and can be downloaded from https://www.disto.com.



The DISTO™ Plan app is available for iOS and Android tablets and smart-phones. Download the app from the corresponding app stores. The app is basically free but includes in-App purchases to extend its functionality as well.



We provide no warranty for free Leica DISTO™ software and offer no support for it. We accept no liability whatsoever arising from the use of the free software and we are not obliged to provide corrections nor to develop upgrades. A wide range of commercial software can be found on our homepage. Apps for Android® or iOS can be found in special internet shops. Refer to <a href="https://www.disto.com">https://www.disto.com</a> for more details.

# 5

# **Settings**

#### Overview





Press the MENU key twice to enter the settings menu.

# Settings





Activate/deactivate **KEY LOCK** 



**GESTURE** ON/OFF



**BEEP** ON/OFF



**ANGLE UNITS** 



**BLUETOOTH** ON/OFF



DISTANCE UNITS



**FAVORITES** 



**BLUETOOTH SETTINGS** 

# DISTANCE OFFSET



TIME

LANGUAGE

(i) RESET DEVICE

- ') DISPLAY ILLUMINATION

**i** INFORMATION

SCREEN ROTATION

**TILT CALIBRATION** 

SHUTDOWN TIME

**POINTFINDER** 

#### Activate/deactivate KEY LOCK





Toggle ON/OFF

An activated key lock stays active even if the device is switched off.



Exit settings.



If **KEY LOCK** is activated: Press the **=** key after device is switched on to access device.

## **GESTURE ON/OFF**

This feature allows triggering measurements without touching the device. To do so, wipe through laser beam with hand or other object within 5 to 25 cm.







Toggle ON/OFF


Exit settings.

#### **BEEP ON/OFF**










Exit settings.

#### **ANGLE UNITS**







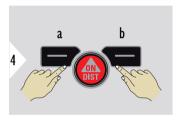




a Refuseb Confirm


Exit settings.

# **BLUETOOTH ON/OFF**







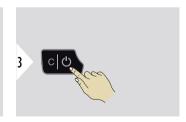

Exit settings.



When Bluetooth is switched on, a black Bluetooth icon is displayed in status bar. Once connection is established, the colour of the icon changes to blue.

#### **DISTANCE UNITS**








Toggle between the units.











Exit settings.

#### **FAVORITES**







Select favourite function.



Press the left or right selection key. Function is set as favourite above the corresponding selection key.



Exit settings.

#### **BLUETOOTH SETTINGS**









## BT SETTINGS -KEYBOARD MODE

Select ON or OFF. Enables measurements to be transmitted as entered on an external keyboard to a computer, tablet or smartphone.

#### BT SETTINGS -BT NAVIGATION


If activated, it is possible to send measurements manually by using the right favourite key. The left favourite key allows switching on/off the arrow keys for navigation. 1)



Confirm setting.



Confirm setting.

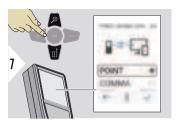

#### BT SETTINGS -DECIMAL SEPARATOR

Select kind of decimal point for transmitted value.



Confirm setting.



# BT SETTINGS - UNITS TRANSFER

Select if unit is transmitted or not.



Confirm setting.

<sup>1)</sup> For example, move between cells when working with Microsoft Excel. A long press/hold of the corresponding favourite key, starts the function as shown on the display (grey colour).




## BT SETTINGS -TERMINATION AFTER VALUE

Select termination of transmission.



Confirm setting.

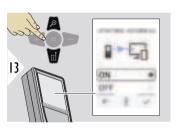


### BT SETTINGS -AUTOSEND

Select if value is transmitted automatically or manually.



Confirm setting.

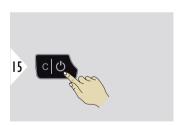

Exit settings.



Depending on the chosen settings for Keyboard mode and Autosend, some selection points might be skipped.

#### **DISTANCE OFFSET**

An offset adds or subtracts a specified value automatically to or from all measurements. This function allows tolerances to be taken into account. The offset icon is displayed.












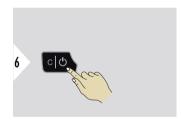


Adjust digit.


Approve value а Reset setting Ь

Exit settings.


### TIME



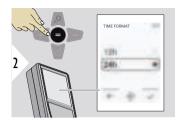

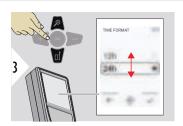







Confirm setting.

Confirm setting.

### LANGUAGE











Confirm setting.


Exit settings.

### **RESET DEVICE**

Reset returns the instrument to the factory settings. All customised settings and memories are lost.









- a Refuse
- Confirm

### **DISPLAY ILLUMINATION**



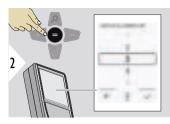


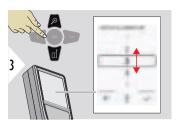


Select brightness.





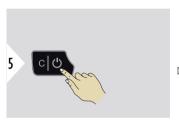

Exit settings.



### INFORMATION /E-Label



Click 2x Menu Key to access settings and 3x - Key to move to Information/E-Label



Click = Key to access Information/E-Label



Click - Key to show E-Label content






Exit information screen.

Exit settings.

### **SCREEN ROTATION**







Toggle ON/OFF

Exit settings.

## Example









### **TILT CALIBRATION**



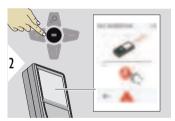


Follow the instructions on the screen.

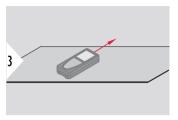

Place device on absolutely flat surface.




Once finished, press the **ON/DIST** key. Follow the instructions on the screen.

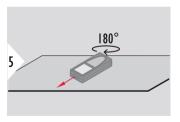

Turn the device horizontally by 180° and place it again on absolutely flat surface.




Once finished, press the **ON/DIST** key. Follow the instructions on the screen.

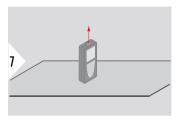

Place device on absolutely flat surface.



Once finished, press the **ON/DIST** key. Follow the instructions on the screen.



Turn the device horizontally by 180° and place it again on absolutely flat surface.



Once finished, press the **ON/DIST** key.



After 2 s, the device goes back to the basic mode.


#### **SHUTDOWN TIME**

Define time when device shall switch off automatically.







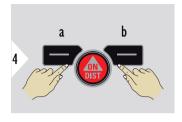



- a Refuse
- b Confirm

Exit settings.

#### **POINTFINDER**

This feature is a great help for outdoor measuring. The integrated pointfinder (view screen) shows the target on the display. The device measures in the middle of the crosshair, even if the laser dot is not visible.



Parallax errors occur when the pointfinder camera is used on close targets, with the effect that the laser appears displaced in the crosshair. In this case, the error is automatically corrected with a shift of the crosshair.

#### Option 1:



Press and hold the zoom key for 2 s to switch the pointfinder on/off. The status is saved and remains the same, even device is switched off and on again.



The pointfinder can only be switched on/off once the laser beam is on.

### Option 2:








Toggle ON/OFF

Exit settings.

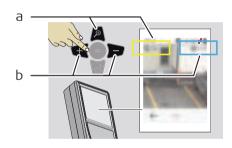

- a Adjust zoom while toggling the zoom key. The zoom stage is shown.
- b Adjust illumination with navigation keys left and right. The **DISPLAY ILLUMINA-TION** value is shown.

## 6 Functions

### Overview



- LEVELLING
- SMART HORIZONTAL
- -< HEIGHT TRACKING
- AREA
- Single **DISTANCE**
- **VOLUME**
- TRIANGLE AREA
- (T) TIMER
- **₩** PYTHAGORAS 3-POINT



- **HEIGHT PROFILE**
- *∧* SLOPE
- **STACK**
- †1 STAKE OUT

### Close/exit all functions described in this chapter as follows:





Leave menu.

Exit.

#### **LEVELLING**







Displays inclinations of 360°. Instrument beeps at 0°. Ideal for horizontal or vertical adjustments.

#### **SMART HORIZONTAL**



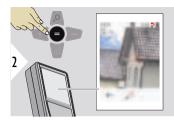



Aim laser at target.

Up to 360° and a transverse tilt of ±10°.




- a Measured distance, x
- b Angle,  $\alpha$
- c Height difference from measuring point, y
- d Horizontal distance, z

#### **HEIGHT TRACKING**

Heights of buildings or trees without suitable reflective points can be determined. At the bottom point, distance and tilt are measured - which needs a reflective laser target. The upper point can be targeted with the pointfinder/crosshair and does not need a reflective laser target as only the inclination is measured.






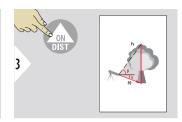

Aim laser at lower point.




Aim laser at upper points and angle/height tracking starts automatically.

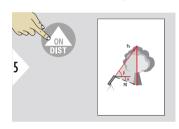



- a Distance PO
- b Angle  $\alpha$
- Angle β
- d Tracking height y if device is turned on tripod





a Distance z




Use the  ${\bf Down}$  navigation key to take over values in the main line for sending by Bluetooth.


### **AREA**





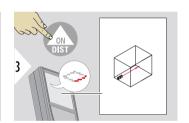

Aim laser at first target point.

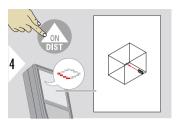



- a First distance
- Second distance Circumference
- d Area

Aim laser at second target point.




The main result is the area of this rectangle. The individual measured values are shown above the main line.

Partial measurements/painter function: Press + or – before starting the first measurement. Measure and add or subtract distances. Finish with =. Measure second length.

### **Single DISTANCE**







Aim active laser at target.






### a Measured distance


### **VOLUME**






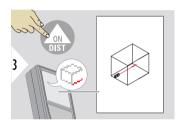

Aim laser at first target point.

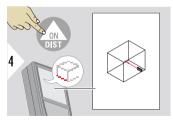

Aim laser at second target point.



Aim laser at third target point.





- a Circumference
- ceiling/floor area
- c Wall areas
- d Volume
- 7 a b c d
- More results.

- a Volume
- b First distance
- c Second distance
- d Third distance


### TRIANGLE AREA






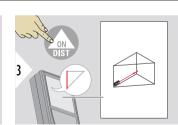

Aim laser at first target point.

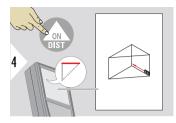

Aim laser at second target point.

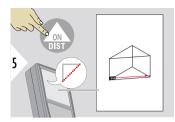

Aim laser at third target point.



- a Third distance
  - b Angle between first and second measurement
  - c Circumference
  - d Triangular area



More results.


- a First distance
- b Second distance



The main result is the area of this triangle. With + or – several triangle can be added or subtracted. Refer to Add/subtract.


#### **TIMER**



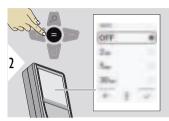



Select release time.

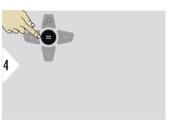






The timer starts once the **ON/DIST** key is pressed.

- The countdown is displayed on the screen
- An interval beep sounds during the countdown


### **PYTHAGORAS 3-POINT**








Aim laser at first target-point.

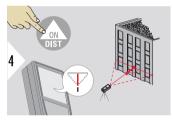

Aim laser in a rectangle against the second target-point.

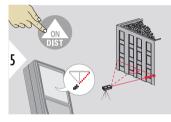

Aim laser at third target-point.



- a First distance
- b Second distance
- c Third distance
- d Distance between first and third targetpoint



The result is shown in the main line. Pressing the measuring key for 2 seconds in the function activates automatically minimum/maximum measurement.


We recommend using the Pythagoras only for indirect horizontal measuring. For height measuring (vertical), it is more precise to use a function with inclination measurement.




Use the **Down** navigation key to take over values in the main line for sending by Bluetooth.

#### **HEIGHT PROFILE**




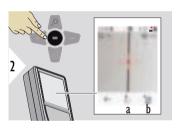


- Start measuring.
   First measurement
   is the reference
   point
- b Set absolute height of reference point. Example: Height above sea level

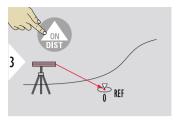



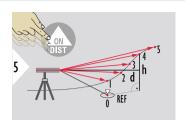


Aim at reference point (REF).

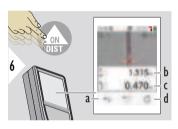

- Step back to read out previous measuring points
- b Horizontal distance to device = d
- Height difference to reference point (REF) = h

d

Start new height profile measurement



Exit function.



Push the **ON/DIST** key for > 2 s for continuous height profile measuring.




Ideal for measuring of height differences to a reference point. Can be also used to measure profiles and terrain sections. After measuring the reference point, the horizontal distance and height is displayed for each following point.

### Option: Set absolute height of reference point

It is possible to set the height for the measured reference point. For example: Set level of the measured reference point to 400 m above sea level. A measured point 2 m above the reference point would be 402 m then.



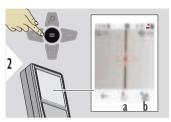

- Start measuring.
  First measurement
  is the reference
  point
- b Set absolute height of reference point







### **SLOPE**







Aim laser at upper target point.





Aim laser at lower target point.



- Horizontal distance between both points
- b Vertical height between both points
- c Included angle between both points
- d Distance between both points



- P1 angle
- P1 distance
- c P2 angle
- d P2 distance



Indirect distance measuring between two points with additional results. Ideal for applications such as length and slope of roof, height of chimneys,... It is important, that the instrument is positioned in the same vertical plane as the two measured points. The plane is defined of the line between the two points. This means, that the device on the tripod is only moved vertically and not turned horizontally to reach both points.

#### **STACK**

### Memory - show last 50 results






a Delete memory




Use Down navigation key to show more detailed results of the specific measurement.

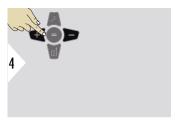


Use Left/Right navigation keys to switch between measurements.

#### **STAKE OUT**

Two different distances, **STAKE-OUT - "a"** and **STAKE-OUT - "b"**, can be entered to mark off defined measured lengths.

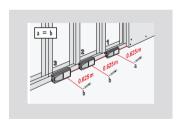








Adjust distance a. Press = to approve **STAKE-OUT - "a"**.



Adjust distance b. Press = to approve **STAKE-OUT - "b"**.




Start measuring. Move device slowly along the stake out line. The distance to the previous/next stake out point is displayed.



When approaching a stake out point to less than 18 mm the value of the stake out point is frozen and arrows appear on the side of the display for marking purposes.

- a # of previous stake out
- b Distance to previous stake out
- c Total distance
- d # of next stake out
- e Distance to next stake out

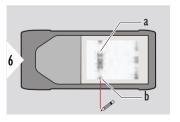

- a Value of the current stake out point
- b Stake out point position indicated with arrows

# 7 Message Codes

### Overview

Code	Cause	Correction
156	Transverse tilt greater than 10°	Hold the instrument without any transverse tilt.
162	Calibration error	Make sure the device is placed on an absolutely horizontal and flat surface. Repeat the calibration procedure. If the error still occurs contact your dealer.
204	Calculation error	Perform measurement again.
240-245	Data transfer error	Connect device and repeat procedure.
252	Temperature too high	Allow device cool down.
253	Temperature too low	Warm device up.
254	Battery error	Charge batteries.
255	Received signal too weak, meas- uring time too long	Change target surface (for example white paper).
256	Received signal too high	Change target surface (for example white paper).
257	Too much background light	Shadow target area.
260	Laser beam interrupted	Repeat measurement.

### 68 Message Codes

Code	Cause	Correction
298	Battery status poor	Replace battery to avoid severe damage on the device.
299	Hardware error	If this message continuously appears, the device must be serviced. Ask dealer for help.

8

## Care

- Clean the device with a damp, soft cloth
- Never immerse the device in water
- Never use aggressive cleaning agents or solvents

## 9 Technical Data

#### General

Accuracy with favourable conditions <sup>2)</sup> Accuracy with unfavourable conditions <sup>3)</sup>	1 mm/0.04" <sup>4)</sup> 2 mm/0.08" <sup>5)</sup>
Range with favourable conditions <sup>2)</sup> Range with unfavourable conditions <sup>3)</sup>	0.02-200 m/0.07-650 ft <sup>4)</sup> 0.05-120 m/0.16-390 ft <sup>5)</sup>
Smallest unit displayed	0.1 mm/ 1/32"
X-Range Power Technology	Yes
Laser class	2
Laser type	635 nm, < 1 mW
Ø laser point   at distances	6/30/60 mm   10/50/100 m
Tilt measuring tolerance to laser beam <sup>6)</sup>	±0.2°
Tilt measuring tolerance to housing 6)	±0.2°

<sup>&</sup>lt;sup>2)</sup> Favourable conditions are: white and diffuse reflecting target (white painted wall), low background illumination and moderate temperatures.

<sup>&</sup>lt;sup>3)</sup> Unfavourable conditions are: targets with lower or higher reflectivity or high background illumination or temperatures at the upper or lower end of the specified temperature range.

<sup>&</sup>lt;sup>4)</sup> Tolerances apply from 0.05 m to 10 m with a confidence level of 95%. With favourable conditions, the tolerance may deteriorate by 0.10 mm/m for distances above 10 m.

<sup>&</sup>lt;sup>5)</sup> Tolerances apply from 0.05 m to 10 m with a confidence level of 95%. With unfavourable conditions, the tolerance may deteriorate by 0.15 mm/m for distances above 10 m.

Tilt measuring range <sup>6)</sup>	360°
Protection class	IP54 (dust- and splash water protected)
Automatic laser switch off	after 90 s
Automatic power switch off	Configurable in <b>SHUTDOWN TIME</b>
Bluetooth Bluetooth power Bluetooth frequency Bluetooth range	Bluetooth v5.0 ≤ 2.5 mW 2400-2483.5 MHz 10 m
Relative humidity	Max. 95% non-condensing
Operation height	Max. 3000 m/9840 ft
Battery Battery durability	3.7 V/2000 mAh up to 5000 measurements
Dimension (H × D × W)	144 × 60 × 24 mm   5.67 × 2.2 × 0.94"
Weight (with batteries)	180 g/6.35 oz
Temperature range storage Temperature range operation	−25 to 70 °C/−13 to 158 °F −10 to 55 °C/14 to 131 °F
Charging time Charging temperature Charging power	3 h 5 to 40 °C 5 V/1 A

 $<sup>^{6)}</sup>$  After user calibration. Additional angle-related deviation of  $\pm 0.01^{\circ}$  per degree up to  $\pm 45^{\circ}$  in each quadrant.

Applies at room temperature. For the whole operating temperature range, the maximum deviation increases by  $\pm 0.1^{\circ}$ .

### **Functions**

Distance measuring	yes
Min/Max measuring	yes
Permanent measuring	yes
Stake out	yes
Addition/Subtraction	yes
Area	yes
Triangle area	yes
Volume	yes
Painter function (area with partial measurement)	yes
Pythagoras	3-point
Smart Horizontal Mode/Indirect height	yes
Levelling	yes
Memory (STACK)	yes
Веер	yes
Illuminated colour display	yes
Bluetooth	yes
Personalised Favourites	yes
Timer	yes
Height tracking	yes
Height profile	yes
Sloped objects	yes
<u> </u>	·

Profile Measurement	yes
Gesture Control	yes

### 9.1

### **Conformity to National Regulations**

### Labelling Leica DISTO™ D5





Refer to INFORMATION/E-Label on page 40 to call up other legally relevant symbols and certifications.

#### EU



Hereby, Leica Geosystems AG declares that the radio equipment type Leica DISTO™ D5 is in compliance with Directive 2014/53/EU and other applicable European Directives.

The full text of the EU declaration of conformity is available at the following Internet address: <a href="http://www.disto.com/ce">http://www.disto.com/ce</a>.

#### **UKCA**

Hereby, Leica Geosystems AG declares that the radio equipment type Leica DISTO™ D5 is following the provisions of the applicable relevant statutory requirement S.I. 2017 No. 1206 Radio Equipment Regulations 2017.

		_
74	Technica	al Nata

The full text of the UK declaration of conformity is available at the following Internet address: <a href="http://www.disto.com/ukca">http://www.disto.com/ukca</a>.

#### **USA**

### FCC Part 15

This equipment has been tested and found to comply with the limits for a Class B digital instrument, pursuant to part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subjected to the following two conditions:

- This device may not cause harmful interference, and
- this device must accept any interference received, including interference that may cause undesired operation.

### **FCC Radiation Exposure Statement**

The radiated rf output power of the instrument is below the FCC radio frequency exposure limits for portable devices according to KDB 447498.

Changes or modifications not expressly approved by Leica Geosystems for compliance could void the user's authority to operate the equipment.

### Canada

CAN ICES-003 B/NMB-003 B

### ISED Statement, applicable in Canada

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- This device may not cause interference; and
- This device must accept any interference, including interference that may cause undesired operation of the device.

### Radio Frequency (RF) Exposure Compliance Statement

The radiated RF output power of the instrument is below the Health Canada's Safety Code 6 exclusion limit for portable devices (radiated element separation distance between the radiating element and user and/or bystander is below 20 cm).

	76	Technical Data
Japan		<ul> <li>This device is granted pursuant to the Japanese Radio Law (電波法).</li> <li>This device should not be modified (otherwise the granted designation number will become invalid).</li> </ul>
Others	-	The conformity for countries with other national regulations has to be approved prior to use and operation.

## **International Limited Warranty**

### Description



### **International Limited Warranty**

The Leica DISTO™ D5 comes with a two year warranty from Leica Geosystems AG. To receive an additional year warranty, the product must be registered on our website at Leica Disto Warranty within eight weeks of the purchase date. If the product is not registered, our two year warranty applies.

More detailed information about the International Limited Warranty can be found on the internet at Leica Warranty

#### 979589-1.0.1en

Original text (979589-1.0.1en) Published in Switzerland, © 2024 Leica Geosystems AG

### Leica Geosystems AG

Heinrich-Wild-Strasse 9435 Heerbrugg Switzerland

www.leica-geosystems.com















