

ALCATEL

ONE TOUCH 757



English

Introduction

TCL & Alcatel Mobile Phones would like to thank you for purchasing this mobile.

Your camera: photo and video clip

Record a video clip with sound with your mobile. Save it in your multimedia album and use it to personalise the idle screen. You can also associate a video to a contact so when your contact calls you, the video is played. Capture and share your favourite moments thanks to the embedded camera. You can zoom and record sound while taking your photos, or add funny frames and stamps. It is easy and a lot of fun!

Say it with colours using MMS

Your phone includes the Multimedia Message Service enabling you to send video clips, colour pictures and sounds in your text messages. You can create expressive messages to match your mood thanks to the embedded and downloaded multimedia content.

Your MP3 melody

Choose an MP3 melody as your incoming call ring. When you receive a call, your MP3 melody will be played.

A style of your very own

Personalise your handset giving it a personal touch. Either choose the colour and texture of your interface from the embedded skins, or pick a video clip, a wallpaper or melodie from the rich multimedia content.

Your game companion

Get ready for a new intense gaming experience with a large choice of downloadable games and applications.

Table of contents

Introduction	1
Safety and Use	5
General Information	9
1. Your mobile	10
1.1 Keys	11
1.2 Main screen icons	12
2. Getting started	14
2.1 Set-up	14
2.2 Switching on your telephone.....	16
2.3 Switching off your telephone.....	16
3. Calls	17
3.1 Making a call	18
3.2 Calling your voicemail	18
3.3 Receiving a call	18
3.4 During the call	19
3.5 Conference calls	20
3.6 Double line (ALS)	20
4. Call log	21
4.1 Call memory	21
4.2 My Numbers	22
4.3 Billing	22
4.4 Call settings	24
5. Menu	26

6. Directory	28
6.1 Consulting your directory	28
6.2 Creating a file	29
6.3 Available options	30
6.4 Creating a new directory	31
6.5 Using voice tag	31
6.6 Assigning a ringtone to a directory	32
6.7 Assigning an image, an animation or a video to a file	32
6.8 Privacy	32
7. Messages.....	33
7.1 Receiving and reading messages	34
7.2 Creating and sending messages	37
7.3 Speed writing system.....	40
7.4 Parameters	42
7.5 Delete messages	44
8. My Settings	45
8.1 Ringtones	45
8.2 Display	46
8.3 Clock	49
8.4 Set my shortcuts.....	50
8.5 Customising the keys.....	50
8.6 More settings.....	51
9. Tools	55
9.1 Diary	55
9.2 Alarms	58
9.3 Converter.....	58
9.4 Calculator	59
9.5 Memory.....	59
9.6 Voice memo	60
9.7 Infrared (IrDA)	60
9.8 Alarms list.....	61
9.9 Tone composer	61
9.10 Voice tag	62

10. Tips & Tricks.....	63
11. Services	64
11.1 Access WAP menu	64
11.2 Programming your access.....	64
11.3 Direct access/profile access	66
11.4 GPRS function	66
11.5 WAP browser options.....	67
12. Media Album	68
12.1 Album menu	68
12.2 My Images.....	68
12.3 My Sounds	70
12.4 My Videos	70
12.5 Managing sounds, images and videos	71
12.6 Download new video clips, photos, sounds,	72
12.7 Formats and compatibility	72
13. Photo/Video	73
13.1 Photo applications	73
13.2 Video applications.....	79
14. Games & Applications.....	84
14.1 Launch an application	84
14.2 Available options.....	85
14.3 Download an application	85
14.4 Java™ Push.....	86
14.5 Settings	86
15. Making the most of your mobile	88
15.1 "My One Touch" services by TCL & Alcatel Mobile Phones	88
15.2 Alcatel One Touch PC suite.....	88
16. Characters and symbols table	89
17. Telephone warranty	90
18. Accessories.....	92
19. Troubleshooting.....	93

Safety and Use

We recommend that you read this chapter carefully before using your phone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained in this manual.

• TRAFFIC SAFETY:

Given studies, which show that using a mobile phone while driving a vehicle constitutes a real risk, even when the handsfree kit is used (car kit, headset...), drivers are requested to refrain from using their mobile when the vehicle is not parked.

When switched on, your phone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

- do not place your phone on top of the dashboard or within an airbag deployment area.
- check with your dealer or car manufacturer to make sure that the car electronics is well insulated.

• CONDITIONS OF USE:

Switch the phone off before boarding an aircraft to avoid prosecution.

Switch the phone off when you are in health care facilities, except in designated areas. As with many other types of equipment now in regular use, mobile telephones can interfere with other electrical or electronic devices, or equipment using radio frequency.

Switch the phone off when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, gas station, or chemical plant, or in any potentially explosive atmosphere.

When the phone is switched on, it should be kept at least 15 cm from any medical device such as a pacemaker, a hearing aid or insulin pump. When using the phone you should hold it against the ear on the opposite side to the device, if any.

To avoid hearing impairment, pick up the call before holding your phone to your ear. Also move the handset away from your ear while using the "hands-free" option because the amplified volume might cause hearing damage.

Do not let small children use the phone without supervision.

When exchanging the cover please note that your phone may contain substances that could create an allergic reaction.

Always handle your phone with care and keep it in a clean and dust-free place.

Do not allow your phone to be exposed to unfavourable environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc). The manufacturer's recommended operating temperature range is -20°C to +55°C. Over 55°C the legibility of the phone's display may be impaired, though this is temporary and not serious.

Do not open or attempt to repair your mobile phone yourself.

Do not drop, throw or try to bend your mobile phone.

Do not paint it.

Use only Alcatel batteries, battery chargers, and accessories that are compatible with your phone model. (See Accessories List, chapter 18). TCL & Alcatel Mobile Phones Limited or its affiliates disclaim any liability for damage caused by the use of other batteries.

Your phone should not be placed in municipal waste. Please check local regulations for disposal of electronic products.

Remember to make back-up copies or keep a written record of all important information stored in your phone.

Some people suffer epileptic seizures or blackouts when exposed to flashing lights, or when playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone. Parents should monitor their children's use of video games or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15 minute-break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum of 15 minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after playing, stop the game and see a doctor.

• PRIVACY:

Please note that you must respect the laws and regulations in force in your country regarding taking photographs and recording sounds using your mobile telephone. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and reproduce or distribute them, as this may be considered to be an invasion of privacy. It is the user's sole responsibility to ensure that prior authorisation be obtained, if necessary, in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or reseller of your mobile phone (including the operator) disclaim any liability which may result from the improper use of the mobile phone.

• BATTERY:

Before removing the battery from your phone, please make sure that the phone is switched off.

Take precautions with the battery and do not attempt to open the battery (chemical substances may cause burns).

Do not pierce, disassemble nor cause a short-circuit in a battery.

Do not burn or dispose of a used battery in household waste or store it at temperatures above 60 °C.

Batteries must be disposed of in accordance with locally applicable environmental legislation.

Batteries should not be used for any other purpose than the one intended.

Never use damaged batteries or not recommended by TCL & Alcatel Mobile Phone Limited and/or its affiliates.

• CHARGERS

Mains powered chargers will operate within the temperature range: 0°C to 40°C.

The chargers designed for your mobile phone meet with the standard for safety of information technology equipment and office equipment use. They should be used for this purpose only.

Electrical characteristic of power supply (depending on the country):

110 V charger (used in Mexico):

Input: 100-127 V, 50/60 Hz, 0.30 A

Output: 4.5 V, 350 mA

220 V charger:

Input: 220-240 V, 50/60 Hz, 0.30 A

Output: 4.5 V, 350 mA

Travel charger:

Input: 100-240 V, 50/60 Hz, 0.15 A

Output: 6.5 V, 350 mA

Battery: Lithium 950 mAh

• RADIO WAVES:

THIS MOBILE PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio-frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. These guidelines include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by public authorities such as the Federal Communications Commission of the US Government (FCC), the Australian Communications Authority (ACA) or by Industry Canada, is 1.6 W/kg averaged over 1 gram of body tissue. Tests for SAR are conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands.

Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output of the phone. Before a phone model is available for sale to the public, compliance with national regulations and standards must be shown.

The highest SAR value for this model phone when tested for use at the ear is 0.38 W/Kg and for use close to the body is 0.91 W/Kg. While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for RF exposure. For body-worn operation, the phone meets FCC RF exposure guidelines provided that it is used with a non-metallic accessory with the handset at least 2 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The World Health Organization (WHO) considers that present scientific information does not indicate the need for any special precautions for use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep mobile phones away from the head and body. (fact sheet n°193). Additional WHO information about electromagnetic fields and public health are available on the following website: <http://www.who.int/peh-emf>.

Your telephone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it (see page 15).

General Information

- **Website:** www.alcatel.com
- **Wap address:** wap.alcatel.com
- **Hot Line Number:** see the "TCL & Alcatel Mobile Phones Services" leaflet (calls charged at applicable local rates in your country)

An electronic version of this user guide is available in English and other languages according to availability on our server: www.alcatel.com

Your telephone is a transceiver that operates on GSM networks with 900, 1800 and 1900 MHz bands.


The **CE** marking indicates that your telephone complies with "1999/5/EC (R&TTE)" directive and that the accessories concerned comply with current EC directives. The entire copy of the Declaration of Conformity for your telephone can be obtained through website: www.alcatel.com.

Protection against theft

Your mobile phone has an identification number called IMEI (phone serial number) shown on the packaging label and in the product's memory. We recommend that you note this number the first time you use your telephone by entering , , , ,  and keep it safely. It may be requested by the police or your operator if your telephone is stolen. This number allows your mobile telephone to be blocked, preventing a third person from using it, even with a different SIM card.

January 2004

Your mobile

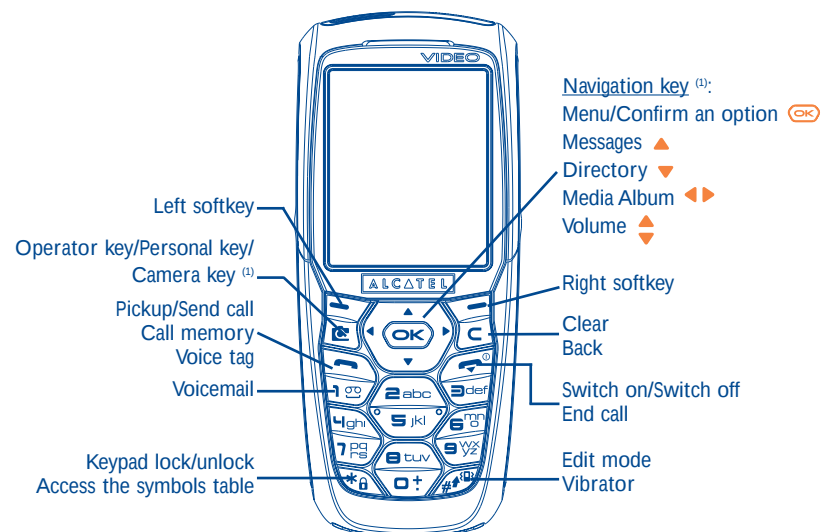

⁽¹⁾ Depending on your network operator.

1.1 Keys

- 

Navigation key
Confirm an option (central keypress)
- 

Delete (short keypress)
Return to the previous screen (short keypress)
Return to the main screen (long keypress)
- 

Pick up
Send a call
Access call memory (Redial) (short keypress)
Use voice tag features (long keypress)
- 

Switch on/Switch off the telephone (long keypress)
End call
Return to the main screen
- 

Operator key/Personal key/Camera key ⁽¹⁾
- 

Left softkey
- 

Right softkey
- 

Consult your voicemail (long keypress)
- 

Keypad lock/unlock
Access the symbols table
- 

In Edit mode:
- Short keypress: upper case, lower case, digits
- Long keypress: switch from normal to predictive mode
In standby screen:
- Short keypress: dial #
- Long keypress: activate/deactivate the vibrator.

⁽¹⁾ Depending on your network operator.

1.2 Main screen icons ⁽¹⁾

- 

Battery charge level
- 

Vibrator mode: your phone vibrates but neither rings nor beeps except for the alarms (see page 46).
- 

Silence mode: your phone neither rings, beeps nor vibrates except for the alarms (see page 46).
- 

Message unread
- 

Message list is full (SMS): your terminal cannot accept any new SMS. You must access the message list and delete at least one message on your SIM card (see page 44).
- 

Voicemail message arrived.
- 

Missed calls.
- 

WAP alert.
- 

Call forwarding activated: your calls are forwarded (see page 24).
- 

Timer or alarm clock programmed (see page 58).
- 

Level of network reception.
- 

Preferred tariff areas ⁽²⁾.

⁽¹⁾ The icons and illustrations in this guide are provided for informational purposes only.
⁽²⁾ Contact your network operator to check service availability.


-  **Keypad locked.**
-  **Roaming within your country of subscription.**
-  **Infrared:** infrared link activated.
-  **Double line** ⁽¹⁾; indicates the selected line.
-  **GPRS context activated.**
-  **Reception of an MMS in progress.**
-  **Sending an MMS.**

2 Getting started

2.1 Set-up


Inserting and removing the SIM card ⁽¹⁾

You must insert your SIM card in order to use your phone.

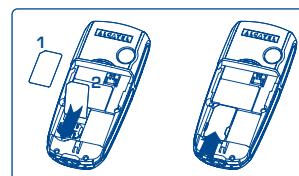


Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted.

Installing and removing the battery

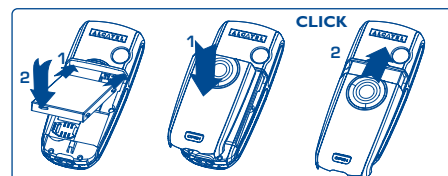

Insert and engage the battery, then close the telephone cover.

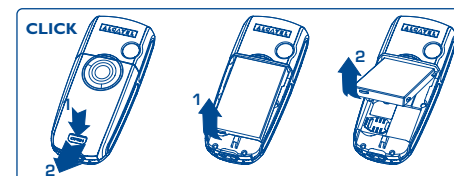


Unclip the cover, then the battery and remove it.

⁽¹⁾ Contact your network operator to check service availability.

⁽¹⁾ Check with your network operator to make sure that your SIM card is 3V compatible. The old 5 Volt cards can no longer be used. Please contact your operator.

Charging the battery

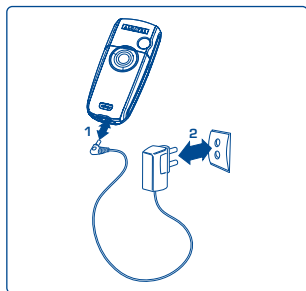


Connect the battery charger

- A short beep will sound when charging begins.
- The animation may take several minutes to start and may emit a slight whistling sound if the battery is flat.
- Be careful not to force the plug into the socket.
- The battery icon will take 2 minutes to indicate the correct charge level.
- Make sure the battery is correctly inserted before connecting the charger.
- The mains socket must be near to the phone and easily accessible (avoid electric extension cables).



The charge is complete when the animation stops. Only use Alcatel chargers.

Precautions during use

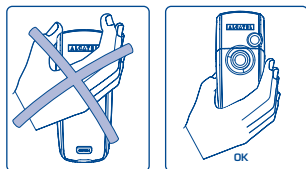

Do not place your hand on the upper part of the mobile phone.

Your telephone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it.

For better radio reception and optimum operation, do not touch the upper part of your telephone.

2.2 Switching on your telephone

Make a long keypress on the key until the telephone comes on, type in your PIN code if necessary and then confirm with the key. The main screen is displayed.



If you don't know your PIN code or if you have forgotten it, contact your network operator. Do not leave your PIN code near your telephone and store your card in a safe place when not in use.

If cell broadcast messages are displayed, use the key to browse through them in full or press the key to return to the main screen.

While the phone is searching for a network, the <<<->>> symbol is displayed (???-??? is displayed if your SIM card is rejected by the network, in this case please contact your operator).

In the switch on screen, you also have access to "Video" demo function: select the left icon with the navigation key . Even if no SIM card inside, you will have a quick view of the different options of the video function.

2.3 Switching off your telephone

Press the key from the main screen (long keypress).

3 Calls

3.1 Making a call

Dial the desired number then press the  key to place the call. To hang up, press the  key. If you make a mistake, you can delete the incorrect digits by pressing the  key.

 To enter characters “+” or “P” (pause), make a long keypress on the  key (the following characters will scroll by: 0, +, P, •).

Making an emergency call

If your phone is covered by the network, dial **112** and press the  key to make an emergency call (or any other number provided by your operator). This works even without a SIM card and without typing the PIN code or unblocking the keypad.

Making a call with a prefix

To access the various prefixes, make a long keypress on , stop at “+” sign and use the  key.

- To make an international call, go to , confirm the country, finish dialling the number and send the call.
- If you already know the prefix you want, go directly to the  icon and enter the prefix directly followed by the number of the person you are calling.
- In some companies, telephone numbers all begin with the same digits. By using the “**Prefix**” feature , you can save the shared digits, but you will need to enter the variable part. You must create the prefixes yourself.

Automatic redial

If this feature is activated and supported by the network (see page 25), the person you called will be called back automatically until they can be reached.

3.2 Calling your voicemail ⁽¹⁾

Your voicemail is provided by your network to avoid missing calls. It works like an answering machine and you can consult it at any time. To access your voicemail, make a long keypress on the  key, then send the call using the  key.

If the access number for your operator's voicemail service does not appear, dial the number that you were given. To change this number at a later date, refer to “**My Numbers**” (see page 22).

 To use your voicemail service from abroad, contact your network operator before leaving.

3.3 Receiving a call

When you receive an incoming call, press the  key to talk and then hang up using the  key.

When you have an incoming call, your telephone rings quietly at first and then gets louder. If the  icon is displayed, the vibrator is activated and there is no ringtone. If the  icon is displayed, the phone neither rings nor vibrates.

 The caller's number is displayed if it is transmitted by the network (contact your network operator to check service availability).

⁽¹⁾ Contact your network operator to check service availability.

Muting the ringtone

Press the  key once while the telephone is ringing. Answer the call by pressing the  key, or select “Options”.

Rejecting a call

Press the  key once or the  key twice, or select “Options”.

3.4 During the call

Available functions

During a call, you can use your directory, your diary, short messages, etc. without losing your correspondent by pressing the  key.

- | | |
|---|--|
|  Call on hold |  Directory |
|  Ongoing call |  Messages |
|  Handsfree |  Diary |
| WARNING: move the handset away from your ear while using the “handsfree” option because the amplified volume might cause hearing damage. |  Services ⁽¹⁾ |
| |  Voice memo (record your current call). |
| |  Display notes |

Adjusting the volume

You can adjust the sound level during a call using the navigation key .

⁽¹⁾ Contact your network operator to check service availability.

Handling two calls

- **Call waiting** ⁽¹⁾
If a second call comes in while you are already on line, you will be notified by a tone. You can then accept the call by pressing the  key.
Your current call will be automatically put on hold. You can then switch between your two correspondents using the  key and then .
- **Making a second call**
To call a second party during a call, dial directly the number.

3.5 Conference calls ⁽¹⁾

Your phone allows you to talk to several people at the same time (up to 5). Once you are on a double call, press , select “Conference” then confirm with the  key. If a third call comes in, answer it by pressing the  key and speak with your new correspondent.

This correspondent becomes a member of the conference if you press , select “Add conf.”, and then confirm by pressing . Pressing  disconnects the current call.

To end the conference call, press  and select “End conf.”.

3.6 Double line (ALS) ⁽¹⁾

Your SIM card can contain two distinct telephone numbers. Under “Call log”, choose “Double line” and then select a default line; all your outgoing calls will be made from this number. Incoming calls, however, will continue to use the two lines.

 The services programmed on the default line do not impact those selected on the other line.

⁽¹⁾ Contact your network operator to check service availability.

4 Call log

4.1 Call memory

You can access your call memory by pressing the  key from the main screen. You must first choose the appropriate icon:



Outgoing calls (Redial)



Unanswered calls



Answered calls



The icons that may be displayed to the left of the person's name show the type of telephone number recorded in the directory (Home, Office, Mobile Phone).

Available options

From the stored number, you can access the following options using the right softkey:

View	Consult call details (number, date, time, etc.).	Delete number	Delete the selected number.
To directory	Store the selected number in one of your directories.	Clear list	Clear the entire list.

4.2 My Numbers

My Number

Save your telephone number (usually written on your SIM card), type in the number and confirm by pressing .

Voicemail

Modify the number to access your voicemail.

4.3 Billing

Amount ⁽¹⁾	Management of call charges.
Total cost	Total cost of charged calls.
Available credit ⁽¹⁾	Remaining credit as compared with “ Maximum credit ” amount.
Maximum credit ⁽¹⁾	Credit limit beyond which any billable call is barred (enter credit, then confirm by  .
Reset	Reset total cost of charged calls.
Cost unit	Cost of a Telecom Unit in the currency of your choice (Select the “ Other? ” option for a new currency and use the  key to enter a decimal point).
Duration	Call duration management.
Total duration	Total duration of all outgoing calls.
Avail. duration	Time credit still available in relation to the duration provided by the “ Set duration ” (amount provided for informational purposes only).

⁽¹⁾ Contact your network operator to check service availability.

Set duration	Contract duration (enter the duration then confirm by  .
Reset	Reset to zero (immediately or periodically) the cumulative duration for outgoing calls.
GPRS counters	Management of the volume of data communications charged for (in kilobytes).
Global counter	Total charges for data volume exchanged.
Access point	Charges for data volume exchanged per access point.
• Access point 1-2	Charges for data volume exchanged through access point 1 or 2.
Cumulated	Charges for data volume exchanged through all access points 1 or 2.
Last counter	Charges for data volume exchanged through last access point 1 or 2.
Reset	Reset to zero data volume exchanged through all access points 1 or 2.
• Other	Charges for data volume exchanged through other access points.
Cumulated	Charges for data volume exchanged through all access points.
Last counter	Charges for data volume exchanged through the last access point.
Reset	Reset to zero data volume exchanged through all access points.
Reset	Reset all counters to zero.
Cost summary	
Last call	Duration and cost of the last call.
Total cost	Duration and cost of all calls.
Beep duration	Activate (or cancel) the beep emitted during a call with a specified frequency (enter the frequency and confirm by  .

4.4 Call settings

Call forward ⁽¹⁾

Voice	Activate/cancel call forwarding to a specified number (type in the number, confirm by pressing ). The following configurations are possible:
• Unconditional	Systematic forwarding of all your calls. The  icon is displayed.
• Conditional	If your line is busy, if you don't answer or if you are outside the network range.
• If busy	Only if your line is busy.
• If no reply	Only if you don't answer.
• If unreachable	Only if you are outside the range of the network.
Data	Your data reception calls are systematically forwarded to a specified number.
Fax	Your fax reception calls are systematically forwarded to a specified number.
Status	List of call forwarding options activated on this telephone.
Cancel all	Cancellation of all activated call forwarding options.

Call barring

Outgoing calls	Activate/deactivate the call barring. This option is applied as follows:
• Except SIM Dir.	Outgoing calls to numbers not included in your directory are barred.
• All ⁽¹⁾	All outgoing calls are barred.
• International ⁽¹⁾	Outgoing international calls are barred.
• Except->Home	Outgoing international calls except those to your country of subscription are barred.
• Except FDN Dir. ⁽¹⁾	Barring of outgoing calls in accordance with a specific "FDN" directory contained in the SIM card.
Activate/Deactivate	All calls not beginning with one of the numbers recorded in the "FDN" directory are barred.

⁽¹⁾ Contact your network operator to check service availability.

Change	If the "Except FDN dir" feature has been activated, after entering PIN2, you can update the "FDN" directory (update "FDN" directory by pressing  .
Incoming calls	Activate/deactivate the barring of incoming calls. The following configurations are possible:
• Except SIM Dir.	All incoming calls not corresponding to one of the numbers in your directory are barred.
• All ⁽¹⁾	All incoming calls are barred.
• If abroad ⁽¹⁾	Incoming calls are barred when you are abroad.
Status	List of incoming call barring options activated on this phone.
Calls	
Call waiting ⁽¹⁾	Activate/deactivate the notification of a second incoming call by a beep.
Conceal ID ⁽¹⁾ (CLIR)	Activate/deactivate the option making your calls anonymous (your number is no longer transmitted by the network to the party you are calling).
Caller ID ⁽¹⁾ (CLIP)	Activate/deactivate the display of your caller's number (or name if found in the directory) for each call.
Network auto redial ⁽¹⁾	Enables automatic callback by the network of the last dialled busy number.
Automatic redial ⁽²⁾	
Activate/ deactivate	Activate/deactivate automatic callback of your party if the first call did not go through.
See list	List of numbers for which automatic callback was not successful (10 unsuccessful attempts).
Clear list	Delete the list.
Double line (ALS)	
See page 20.	

⁽¹⁾ Contact your network operator to check service availability.

⁽²⁾ Depending on your country or your operator.

5 Menu ⁽¹⁾

- **GAMES & APPS**
- **MEDIA ALBUM**
 - My Images
 - My Videos
 - My Sounds
 - Games & Apps
 - Memory
- **TOOLS**
 - Diary
 - Alarms
 - Calculator
 - Converter
 - Memory
 - Tone composer
 - Voice memo
 - Voice tag
 - Infrared
 - Alarms list
- **PHOTO/VIDEO**
 - Take a picture
 - Record video
 - My Images
 - My Videos
 - Tips&tricks
- **DIRECTORY**
- **MESSAGES**
 - Create message
 - Inbox
 - Outbox
 - Voicemail
 - Templates
 - Parameters
 - Memory
 - Delete
 - Tips&tricks

⁽¹⁾ Depending on your network operator.

- **CALL LOG**

- Call memory
- My Numbers
- Billing
- Call settings

- **MY SETTINGS**

- Ringtones
- Display
- Clock
- Set My shortcuts
- Personal key
- More settings...
- Tips&tricks

- **MY SHORTCUTS**

- **SERVICES**

- WAP
- Services ⁽¹⁾
- My One Touch
- Tips&tricks

- **DISPLAY**

- Colours
- Main screen
- Atmospheres
- Switch on / off
- Zoom
- Contrast
- Menu display
- Battery saver

- **TIPS&TRICKS**

⁽¹⁾ Contact your network operator to check service availability.

6 Directory

6.1 Consulting your directory

To access the **directory** from the main screen, press the  key ⁽¹⁾ downwards or press the  key and select the  icon from the menu.

You have 4 directories:



SIM directory:

The SIM card's capacity depends on your operator. It is not possible to assign more than one number to a name.



General directory:

Contains all files created. The SIM card files are not created automatically in the general directory, but they can be copied to it.



Personal directory:

You can store your personal contacts in this directory (relatives, friends, etc.).



Professional directory:

You can store your professional contacts in this directory (companies, etc.).

In addition to the directories already provided, you can create your own directories (see page 31).

Searching for a name by its first letter

You can search for the person's name by pressing the key associated with the first letter of his/her name.



For some languages that have a specific entry mode, you should use the **"Search name"** option.

⁽¹⁾ Depending on your network operator.

Read a contact file

Select a name from your directory, choose the “Options” softkey and select “View”.

Making the call

Press the  key when the name is selected. If several numbers are associated with the name to be called, you must first choose the number from the list (Mobile, Home, Office, etc.) using the  key. Press the  key to make the call.

 Information in the directory and the diary may be sent to and received from a computer using the Alcatel One Touch PC suite (see page 88).

6.2 Creating a file

Select the directory in which you wish to create a file, press the right softkey, select “Create contact” then . You can save the data you have entered at any time by pressing the right softkey and choosing “Save & quit”. Go to the following field by pressing the  key or by using the navigation key .

When you create a new contact in the product directory, at least one of the following fields must be filled in:  Identity card,  Birthday,  Nickname,  URL Address,  Numbers,  Image,  E-mail,  Address,  Notes,  Perso. Info. 1...4. You can move from one field to another using the  key.

When the field “Birthday” is filled in, an alarm is automatically created in the Diary.

 If you use your phone abroad, store the numbers in your directories in international format “+” followed by the country code (see page 17).

6.3 Available options

From the list of names in your directories, you can access the following options via the right softkey:

View	• View a complete file: name, address, e-mail, etc.	Create dir.	• Create your own directory.
Create contact	• Create a file (name, numbers, address, e-mail, etc.) in the desired directory.	Empty dir.	• Empty the contents of a directory.
Write message	• Send an SMS or MMS to a contact from the directory.	Delete dir.	• This directory and its files will disappear completely (created directory only).
Modify Image	• Modify the contents of a file. • Select a video/photo/image in the Album and assign it to the current file (not valid for the SIM directory).	CopyAll-> phone/SIM	• Copy the whole directory to the SIM or telephone directory in one go if there is sufficient memory.
Delete	• Delete the selected file.	Voice tag	• Record a voice tag command except in the SIM.
Classify file	• Move a file from one directory to another.	Send	• Exchange data via infrared (see page 60) or Multimedia/MMS.
Dir. ringtone	• Assign a melody to the current directory.	Tips&tricks	• Get information and tricks about the current menu function.

6.4 Creating a new directory

From the product directory, press the right softkey and select **“Create dir.”**, confirm using the  key, then name your new directory. You can create up to 13 new directories. You can delete only those directories that you created, by selecting **“Delete dir.”**

6.5 Using voice tag

voice tag allows you to place your call by pronouncing the party's name without using your directory.

Select a file from the product directory and confirm with the right softkey. Then select **“Voice tag”** and confirm once again. Three different beeps will signal the start of recording, its failure or its success. After recording, you can **“Listen to”**, **“Replace”** or **“Delete”** a recorded voice tag command.



The files for which a voice tag command has been recorded are indicated by the  icon. The number of names accessible through voice tag is limited. This feature can be used in all directories except the SIM card directory.

Activate voice tag by a long keypress on the  key from the main screen, then follow the instructions on the screen.

6.6 Assigning a ringtone to a directory

Select a file from the product directory, press the right softkey and select **“Dir. ringtone”**.

When you receive a call from a contact classified in the product directory, the ringtone will be the one assigned to that directory.

6.7 Assigning an image, an animation or a video to a file

Select a file from the product directory, press the right softkey and select **“Image”**.

When you receive a call, the picture, animation or video clip that you have chosen will be displayed on the screen. It is possible to assign either an image or a video but not both for the same contact.

6.8 Privacy

The data of your directory can be protected (see option **“Privacy”** page 52).

7 Messages

From your telephone, you can read, write, send and receive short “**Text/SMS**” messages and “**Multimedia/MMS**” and share them with other mobiles ⁽¹⁾.

Multimedia messages are messages whereby you can send video clips, images, photos, animations, sounds, voice messages (or Vox MMS: simplified MMS that allows you to send a voice memo as a message), appointments (V.CAL) or directory files (V.CARD) to other compatible mobiles and e-mail addresses.

 The multimedia MMS function can only be used if the service is proposed by your operator, if your contract includes the MMS option and if all the parameters for sending MMS have been entered (see page 43).

To access the messages from the main screen, press the top of the  key ⁽²⁾ or press the  key, select “**Messages**” with the navigation key and confirm with the  key.

This menu is composed of the following items:

- Create message
- Inbox
- Outbox
- Voicemail
- Templates
- Parameters
- Memory
- Delete
- Tips&tricks

⁽¹⁾ Check with your network operator for the availability of the MMS service.

⁽²⁾ Depending on your network operator.

When **viewing** your messages, you will find the following status icons, depending on:

- the type of message:  SMS message,  MMS message,  MMS notification,  MMS sending in progress,  MMS message with a sound,  MMS with video clip,  MMS with copyright elements which cannot be forwarded.
- Storage:  messages stored on your SIM card (SMS only),  messages stored in the phone's memory (MMS notifications).

7.1 Receiving and reading messages

7.1.1 SMS

When a new SMS arrives, the following message is displayed: “**You received a new message!**”, a beep sounds, the  icon shows up, a line with the number of messages appears on the screen. Select this line and press  to read it directly from the main screen. To modify or deactivate the audible signal, see page 45.

7.1.2 MMS

You have two ways of managing the reception of MMS: immediate or deferred reception. From “**Parameters/MMS Parameters**”, confirm your choice in the “**Mode**” option.

- “**Immediate**”: when in idle mode, the  icon will indicate that a new MMS is being downloaded. The message “**You received a new message!**” appears, a beep sounds, the  icon shows up, a line with the number of messages appears on the screen. Select this line and press  to select and open the MMS.
- “**Deferred**”: you will receive a notification with the name and number of the sender and the title of the message if it has been saved. You can download the MMS at any time in order to read it. You can also delete it without reading it; in this case the sender of the MMS will be informed that it has been rejected (deferred reception may be useful for instance when you are abroad and you do not want to pay a high cost for MMS reception ; you can then read them when you're back in your country).

You can receive video clips, photos, images, or sounds by MMS. These MMS are automatically stored in the memory of your telephone. If you select “Options/Save Items” you can save the video clips, images or sounds or all of them (in this case, save the first item displayed, then select the “Next” option to save the second item, and so on). They are all saved in the multimedia album.

7.1.3 Options while receiving or viewing messages in Inbox/Outbox

Generally, the common following options are proposed:

Delete	• Delete the message.	Forward	• Forward the message to other people.
Reply	• Reply by SMS, MMS or by Vox MMS.	Sort by date/Sort by size	• Sort the read messages by date or by size: by date is the default sorting.
Archive message	• Save your message in the “Archive” folder (product memory).		

The following options depend on the context (receiving a message, reading in the Inbox or Outbox an MMS or an SMS):

SMS additional options:

Save picture	• Save a picture contained in the message.	Save template	• Save the message as a predefined message.
Save animation	• Save an animation contained in the message.	Save number	• Save a number or e-mail address contained in the message.
Save melody	• Save a melody contained in the message.	Launch WAP	• Go to the WAP address contained in the message.

MMS additional options:

- when selecting an MMS in the inbox/outbox list ⁽¹⁾:
 - Open/Retrieve** • Read the selected message (“Retrieve” if the deferred mode has been selected).
 - Information** • Go to MMS details: local date, title, size, class, priority, mailing list, ack. of receipt.
 - Reply all** • Reply to all MMS recipients.
 - Save no./e-mail** • Save the senders’ number or e-mail address in your directory.
- when reading an MMS:
 - Restart** • View the message again.
 - With sound** • View your MMS with or without sound.
 - Without sound** • View your MMS with or without sound.
 - Save items** ⁽²⁾ • Save video clips, images, sounds received in MMS current page.

In addition:

- If the MMS includes a wap address, an e-mail address, or a telephone number, you have the 2 possibilities: select the “Options”, to save and/or access the link displayed (launch wap link, send e-mail, or call number displayed).
- If the MMS contains several pages, it will scroll automatically. To launch the viewing again, select the option “Restart” or use the navigation key ⬆.

⁽¹⁾ Options available according to the reception mode chosen.
⁽²⁾ - For one object press **OK** to save.
- For several objects press “Options”, choose the objects one by one using the option “Next”, and press **OK** to save.

7.2 Creating and sending messages

7.2.1 Creating SMS

From the main menu, select **"Messages/Create message"**, select **"Text/SMS"** and press . You can also modify a predefined message selecting **"Templates"**.

Customise your messages adding pictures, sounds or mood icons proposed in your telephone: while writing a message select the following options using the  key:

Send to	• Send the message.	Symbols	• Go to the symbols table.
Add mood	• Add a mood icon to your message.	Predictive	• Switch to the predictive mode.
Add picture	• Add an icon to your message.	Preview	• View your message.
Add melody	• Add a sound to your message.	Save	• Save the message ("Inbox/Unsent") and send it later.

Select **"Preview"** to see the whole message: the icons, sounds and mood icons are represented by the  or  symbol. You can also download new sounds and images over WAP (see page 88).



A message of more than 160 characters, or a message containing icons, sounds, or mood icons may be billed as more than one message. Check with your operator.
The person receiving the message must be equipped with an EMS, compatible mobile phone in order to display the objects or listen to the sounds in your message.

Options for sending your message

->Directory	• To a person or e-mail address whose contact is stored in one of your directories).	Send ->several	• To different people by manually entering the numbers or selecting them from the directory.
My favourite	• To your favourite contact.		
Send to one	• Manually by entering the number or the mail address of the recipient.	Group	• To a group of people that you have pre-set in the sending parameters ("Distribution list" option).

If the acknowledgement of receipt (**"Rpt"**) is activated in **"Parameters/SMS Parameters"**, (see page 42), when you consult your sent messages, the following symbols will show the following:



Msg.received: message sent and acknowledgment received.



Not received: message sent and waiting for **delivery report**, or message not received: you should send the message again.

Other options are available if you choose the predictive entry mode (see page 40).

7.2.2 Creating MMS

From the main menu, select **"Messages/Create message/Multimedia/MMS"** and press . By default, you are in edit mode.

Your MMS may contain several pages (maximum memory allocated: usually 50 KB or 100 KB depending on the model and the operator) ; as you create the MMS you will be informed of the memory used (for all pages).

If the acknowledgment of receipt (**"Rpt"**) is activated in **"Parameters/MMS Parameters"**, you can consult it in the option **"Information"** when selecting a message (see page 36).

You may also attach special files to your MMS such as: a contact from your directory (Vcard), or an appointment from your diary (Vcal). They will be displayed in a separate page (select option “Attachments”).

Depending on whether your MMS is empty or not, with no file or at least one file attached, you will be given the following options:

- | | | | |
|-------------------------|---|----------------------|--|
| Send to one | <ul style="list-style-type: none">• Send to one recipient from your “Directory” or “Dial” the number or e-mail or select “My favourite”. | Add bookmark | <ul style="list-style-type: none">• Insert a bookmark (URL) from the list of your favourite sites (see page 64). |
| Send->several | <ul style="list-style-type: none">• Send to several persons by dialling the numbers (“Dial”), or selecting the numbers, or the group (“Add group”) from the “Directory”. | Replace | <ul style="list-style-type: none">• Change an item in your MMS. |
| Add image | <ul style="list-style-type: none">• Add a picture or an animation from the “Album” function, or create it directly from the “Camera” function. | Remove | <ul style="list-style-type: none">• Remove an item in your MMS. |
| Add video | <ul style="list-style-type: none">• Add a video from the “Album” function. | Add page | <ul style="list-style-type: none">• Add a page to your MMS. |
| Add sound | <ul style="list-style-type: none">• Add a sound from the “Album” function, or a voice message. | Previous page | <ul style="list-style-type: none">• Go to the previous page of your MMS. |
| Add text | <ul style="list-style-type: none">• Write your text. | Next page | <ul style="list-style-type: none">• Go to the next page of your MMS. |
| Add title | <ul style="list-style-type: none">• Give a title to your MMS. | Delete page | <ul style="list-style-type: none">• Delete the current page. |
| | | Attachments | <ul style="list-style-type: none">• Add a Vcard or Vcal (see page 39). |
| | | Preview | <ul style="list-style-type: none">• Preview the MMS you created. |
| | | Save | <ul style="list-style-type: none">• Save your message if you do not want to send it immediately. |

Reply to an MMS by sending an MMS, an SMS or a Vox MMS message. To send text only, it is advisable to use an SMS.

To send your MMS later on (to add other items or photos for instance) save your MMS (“**Archive message**”) as a draft stored in your “**Outbox/Unsent**” folder. Then select it and use the function “**Forward**” to replace or remove items before sending it.

If the message is not send, the mobile will try to re-send it automatically ⁽¹⁾. The  icon is displayed on the screen and in the “**Outbox/Unsent**” folder, indicating the automatic sending procedure is activated. If it fails completely, you will be notified by a message and the  icon in your “**Unsent**” folder indicates that the MMS could not be sent. Select it and press  to send it again, modify it or delete it.

7.2.3 Creating Vox MMS (Voice memo)

From the main menu, select “**Messages/Create message/Voice/Vox MMS**”. This function allows you to send a message quickly without having to write. The recipient is not disturbed and simply receives a normal MMS ⁽²⁾. You can reply to any message using a “**Voice/Vox MMS**”.

7.3 Speed writing system

The “**Predictive**” mode allows to speed the writing of your SMS or MMS. When you want to write a message, press the “**Options**” softkey, select “**Predictive**” for SMS, or select “**Text options**”, then “**Predictive**” for MMS and begin to type ; for instance for “**hello**” type on the following keys , , , ,  once. The letter or word displayed may not always correspond to the desired one but do not pay attention, continue typing and the system will make better suggestions as you continue to input letters.

⁽¹⁾ Contact your network operator to check service availability.
⁽²⁾ This Vox MMS being a normal MMS which contains an AMR type sound, you can only listen to it with an AMR IETF compatible phone or a computer equipped with an adequate sound decoder.

When in predictive mode, type the first letter:
- if it corresponds to a single word (for instance a), the letter will be displayed,
- if it does not exist as a single word (for instance h), the symbol “*” will be displayed.

The cursor shape varies depending on the input mode selected: ▀ in predictive input mode, | in normal mode.

To confirm a word and insert a space, press the ◀▶ key to the right or press the ⬇ key downwards or press the  key.

Specific keys Normal mode / Predictive mode

-  **Normal:** Display the symbols table.
Predictive: View words proposed by the dictionary that include a sign or punctuation mark such as an apostrophe, @, dash, etc.
-  **Normal:** Insert a “+”, “0” or “•”.
Predictive: View other words in the dictionary.
-  **Short keypress:** Move between automatic capitals , upper case , lower case , digits .
- Long keypress:** Switch between the normal and predictive mode.

Available options

In addition to the available options in the normal entry mode, you will also find the following choices:

- Confirm word** • Confirm the selected word.
- Other words** • View other possible words.
- Add word** • Add a word to your personal dictionary.
- Add numbers** • Go to the digital mode.
- Normal** • Switch to the normal mode.
- Languages** • Use the dictionary in another language.
- Save** • Save the message.

You have a personal dictionary which allows you to add ⁽¹⁾, modify or delete words. While writing a message, you can add a word by pressing the  key and by selecting “Add word”.

7.4 Parameters

From the main menu, select “Messages” and using the navigation key to the right, select the  icon.

7.4.1 SMS Parameters

- **Service centre (“SC”)** ⁽²⁾: phone number of your operator’s service centre (it may be provided automatically).
- **E-mail centre (“EC”)** ⁽²⁾: the number of the server for sending e-mails (it may be provided automatically).
- **Ack. receipt (“Rpt”)**: request for acknowledgement of receipt for each message sent.
- **Message validity (“Val”)**: the time period during which attempts to send the message to the recipient will be repeated in case of failure.
- **Format (“Typ”)**: format to be used for delivery of message to recipient (SMS, fax, etc.).
- **Memory (“Mem.”)**: product or SIM (see page 43).

⁽¹⁾ Contact your network operator.
⁽²⁾ Contact your operator for details to fill in these fields.

7.4.2 MMS Parameters

- **MMS profiles (“Profile”)**⁽¹⁾: To set your MMS profile, follow the same procedure as for setting your WAP connection (see page 64).
- **Mode**: choose between immediate or deferred reception for national and international network coverage (see page 34).
- **Acknowledgment of receipt (“Rpt”)**: request for acknowledgement of receipt for each message sent.
- **Message validity (“Val”)**: the time period during which attempts to send the message to the recipient will be repeated in case of failure.
- **Memory (“Mem.”)**: to store or automatically delete your sent messages.
- **Timer**: sets the speed at which the pages scroll through: the recipient will see the message at this speed.
- **Filters**: Anonymous MMS filtering: to receive or not anonymous messages
- **Layout**: choose between display: image first then text or text then image.

7.4.3 Saving parameters

You can change the save parameters for your messages:

- Sent SMS are stored by default in the product:
Select **“SMS parameters”** and **“Mem.”** to choose **“SIM memory”** or **“Phone memory”**, or **“Not saved”**.
- Sent MMS are stored by default on the product:
Select **“MMS parameters”** and **“Mem.”** to choose **“Phone memory”** or **“Not saved”**.

⁽¹⁾ Contact your operator for details to fill in these fields.

For information:

- Received SMS are always in the SIM card,
- Received MMS are always in the product.

You can always save your messages in the **“Archived”**. They will then be stored in the product.

7.4.4 Create a distribution file

In the **“Parameters”** folder, select **“Distribution list”**, confirm with  key, then name the group. You can now enter the phone numbers for the members of your new distribution list.

7.4.5 My favourite

Enter the number or email of your favourite contact. Then, when you want to send a message, select **“Send”** and **“My favourite”** directly without searching in the directory.

7.5 Delete messages

To delete all messages on your SIM card or in the product, select the  icon and select the following options:

- **“Delete SIM msg”**: delete all messages received and sent from the SIM.
- **“Delete phone msg”**: delete all messages stored in the phone's memory.



Your SIM card's capacity depends on your operator. The  icon appears when the card is full. To receive new SMS, delete some old ones.

8 My Settings

From the main screen, select the icon menu  and select the function of your choice in order to customise your telephone.

8.1 Ringtones

Available functions

To modify the sound settings, select the different options using the   key:

-  Select a melody using the  key then confirm by pressing .
-  Mode (normal, discreet, vibrator...).
-  Adjust the volume using the  key.
-  Select the type of key beep.
-  Select a melody for a new incoming message.
-  Select a melody for a new incoming appointment.
-  Select a melody for a new incoming alarm.

Mode

- | | | | |
|-----------------|---|--------------------------|--|
| Normal | <ul style="list-style-type: none">• Normal ringtone (increasing volume). | Vibrate and ring | <ul style="list-style-type: none">• Vibrator and the normal ringtone at the same time. |
| Discreet | <ul style="list-style-type: none">• Normal ringtone (increasing volume) preceded by beeps. | Vibrate then ring | <ul style="list-style-type: none">• Vibrator followed by beeps then the normal ringtone (increasing volume). |
| Vibrate | <ul style="list-style-type: none">• Activate the vibrator and mute all sounds (ringtone, message beep, appointment alarm, low battery alert). The  icon will be displayed. | Beep and vibrate | <ul style="list-style-type: none">• Warning beep followed by the vibrator. |
| | | Silence | <ul style="list-style-type: none">• No sound nor beep except for alarms. The  icon will be displayed. |

 Some of these modes may be deactivated when using certain accessories (full duplex handsfree car kit, ...).

8.2 Display

8.2.1 Colours

This function enables you to customise the graphic style and the colours of your telephone (menu screens, entry screens etc.)

8.2.2 Main screen

The main screen is displayed after your telephone has been switched on and/or when no functions have been used for a short time (calls, sending of short messages...).

You can lock and unlock the keypad by making a long keypress on the  key.

You can access the main functions directly from the main screen either with the navigation key or selecting the icons displayed on the screen ⁽¹⁾.

By selecting the “**Main screen/My Images**” you can customise it by replacing the default image or animation displayed on your telephone. If you receive an event (incoming call, SMS/MMS, notifications, etc.) the icon, type and quantity of events will be displayed on your main screen allowing you to consult them directly.

Extra screen

You have the possibility to customise your main screen each time the telephone returns in idle screen by adding a video clip or a slideshow:

Select “**Main screen/Extra screen**”. If you choose a video, when you return to idle mode, the video will be displayed for a few seconds, then the image chosen as main screen will be displayed.

If you choose the slide show, the phone will display the slideshow for a few seconds, then the image chosen as main screen will be displayed.



Note that this extra screen will not be displayed if an event (incoming call, SMS/MMS, voice message, wap notification, ...) has not been consulted.

8.2.3 Atmospheres

The “**Atmospheres**” menu allows you to customise your telephone to suit your own taste. You can modify 7 customisable items at the same time. An Atmosphere comprises:

4 visual items:

- ON screen image/animation
- OFF screen image/animation
- Main screen image/animation
- Skins and colours

3 sound items:

- 1 melody for incoming calls
- 1 melody when the telephone is switched on
- 1 melody for notification of incoming messages

When using the mobile phone for the first time, a default Atmosphere is activated.

Even if you choose an Atmosphere, you can still modify the elements in it one by one. You can reactivate an Atmosphere at any time.

When changing an Atmosphere, an installation screen appears until the 7 elements are installed.



The installation of the Atmosphere can be stopped and cancelled if you receive an incoming call or if you press the  key ; the previous choice of Atmosphere is kept.

8.2.4 ON/OFF screens ⁽¹⁾

You can customise your welcome message, animation, melody or image that appears when you switch on your telephone.

You can also customise your OFF screen with an image or animation.

8.2.5 Zoom ⁽²⁾

Two character sizes are available for your telephone screen. Large characters is selected by default. If you wish to display more information select “**Zoom**”.

⁽¹⁾ Depending on the operator.

⁽¹⁾ Depending on the model.

⁽²⁾ Depending on the language.

8.2.6 Menu display

Select a menu display by choosing from the three options proposed:

- **"Icons"**: one icon per screen, with a little part of the previous and next icon.
- **"Image"**: one icon on all the screen
- **"Mosaic"**: all the menu icons displayed on the screen.

8.2.7 Battery saver



You can choose whether to activate this function or not:

- Deactivated: the main screen remains displayed.
- Activated: a new screen appears after a few seconds displaying the following information: clock, battery charge, signal strength.

By default, the economy mode is activated.



We advise you to stay in economy mode to maximise your telephone's autonomy.

8.3 Clock

You can display two clocks (local and remote) at the same time.

Go first to the **"Clock type"** icon  and select the **"2 clocks"** option. Then go back to the **"Clock set up"**, select **"Local clock"**, choose a city and confirm. The automatic transition to daylight saving time is activated. Repeat the same operation for the **"Remote clock"**.

Display format

You can display your clock in analogue or digital format and the date in the following formats: day/month/year, month/date/year or year/month/day in digits or using the first three letters for the day and month.

8.4 Set my shortcuts

You can customize your menu by selecting the function, or telephone number, or URL, in the order you want. You will find your new customized menu under the item **"My Shortcuts"** from the main screen.

8.5 Customising the keys ⁽¹⁾

8.5.1 Operator/Personal key and softkeys ⁽¹⁾

These keys have predefined functions, which vary from one model to another (operator services, games access, or Games & Applications, ...). You can customise ⁽¹⁾ them for long and short keypresses, giving them the functions that you wish. For example, they can be used as a shortcut to access the Diary, to write a message,...

8.5.2 Keypad

By customising your keys, you can call someone or access a function directly from the main screen pressing on one key. Choose the first key you wish to programme, then select one of following options :

- **"Numbers"** if you wish to programme a direct call,
- **"Function"** if you wish to assign a specific function to the selected key,
- **"URL"** if you wish to programme an Internet address.

Repeat this operation key by key.

⁽¹⁾ Depending on your network operator.

8.6 More settings

8.6.1 Keypad lock

Activate/deactivate the automatic keypad lock.

 If the telephone is plugged in using a car kit accessory or the charger, it will be unlocked automatically.

8.6.2 Languages ⁽¹⁾

Display language for messages (select using ). The “Automatic” option selects the language according to the subscription network (if available).

8.6.3 Dictionary

You have a dictionary to which you can add your own words in addition to those suggested by the predictive input system. When you consult your dictionary, you can add, modify or erase words by using “Options”.

⁽¹⁾ Contact your network operator to check service availability.

8.6.4 Input mode ⁽¹⁾

In addition to the specific character table for Arabic, Cyrillic, Chinese, other data input modes are also available in your telephone. This feature allows you to write short messages and enter names into your directory.

8.6.5 Extensions

This function allows you to choose whether to display the extensions of your photos, videos, sounds, files of your Album.

8.6.6 Wap access features

(See page 66).

8.6.7 Privacy

Select “Activate” in this option in order to protect your diary or directory data. This option is useful if you use PC synchronisation.

8.6.8 Security

PIN code ⁽²⁾ The SIM card protection code is requested each time the phone is switched on if this code is activated.

Activate/deactivate Activate/deactivate this code.

Change Update code (between 4 and 8 digits).

PIN 2 code ⁽²⁾ Protection code for certain SIM card features (Billing/Cost/FDN, etc.) requested during their use when this code is activated.

Change Update code (between 4 and 8 digits).

⁽¹⁾ Depending on the language.

⁽²⁾ Contact your network operator.

Network code ⁽¹⁾	Password requested for network “ Call barring ” options.
Menu code	A protection code for certain MENU options (services, settings, language) will be requested if accessed while the code is activated.
Activate/deactivate	Activate (or cancel) this code.
Change	Update code (between 4 and 8 digits).
Telephone code	A telephone protection code will be requested each time the phone is switched on, if this code is activated.
Activate/deactivate	Activate (or cancel) this code.
Change	Update code (between 4 and 8 digits).

8.6.9 Network

SMS CB ⁽²⁾	Messages broadcast over the network (weather forecast, traffic conditions, etc.) are automatically displayed on the main screen.
• CB list	List of codes for messages to be displayed.
• Reception	Depending on the option selected, the phone displays messages broadcast over the network.

⁽¹⁾ Contact your network operator.
⁽²⁾ Contact your network operator to check service availability.

Partial	The phone receives messages intermittently and displays them according to your list (see “ CB list ” option).
Complete	The phone continually receives messages and displays them according to your list (see “ CB list ” option).
None	The phone does not receive any messages.
Search	Search for a network connection.
• Available	List of networks available in your radio environment.
• Mode	Depending on the option selected, the network search mode is: Automatic The first network searched for is the network you used last. Manual The choice of the connection network is left up to the user.
• Preferred list	List of networks to which you wish to be connected in order of priority (update this list using ).

8.6.10 Connectivity

Headset pickup	
Key 	Only by pressing the  key.
Automatic	Automatically without any keypress, after approximately 2 ringtones (this option is operational only if your mobile phone is connected to an audio kit or handsfree kit).
Any key	By pressing any key from the keypad (keys 1 to #).
Audio mode	Choose to ring in headset, or both on telephone and headset.

Car kit
Choose the pick up mode:  key, automatic or any key.

9 Tools



9.1 Diary

Your phone has a sophisticated diary that will help you to manage your daily schedule. You can also save “to do” lists.

Consulting your diary

Three views are possible. You must first choose the appropriate icon:

- Daily view
- Weekly view
- Monthly view
- “To Do” list.
- Parameters

You can scroll through the dates by pressing the key.

According to the view you can read, create, modify or send an item.

Information in the directory and the diary may be shared with a computer using the Alcatel One Touch PC suite (see page 88).

Creating an appointment and programming an alarm

When you create an appointment (“**Create**” option), you can also activate an alarm. You can set the desired alarm activation time to coincide with your appointment time.

Creating a task

Scroll to the icon using the key, and confirm using the key. Select “**Select type**”, then confirm once again using the key and enter the type of task to be performed (“to do” or call appointment), then enter the purpose.

This list can be arranged by deadline or by priority. To do this, scroll to the icon using the key, then confirm using the key.

You can set an alarm for a task for which you have set a due date. This alarm will sound on the chosen day at the time that you entered.

Configure the diary

Scroll to the icon using the key, to access the following options:

- | | | | |
|--------------|--|----------------|--|
| Alarm | <ul style="list-style-type: none">• Set a default time for the alarm to sound before the scheduled appointment. | “To Do” | <ul style="list-style-type: none">• Sort your tasks by priority or by due date. |
| Diary | <ul style="list-style-type: none">• Programme the start time for your day, your first day of the week and your first week of the year. | Delete | <ul style="list-style-type: none">• Delete all tasks or diary items or only those items that have expired. |

Privacy:
The data of your diary can be protected (see option “**Privacy**” page 52).


Activate or deactivate a setting by pressing . Exit the configuration function by pressing .

More about your diary

Graphic view



Daily view

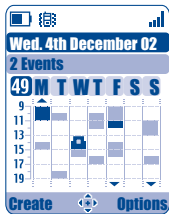

Weekly view



Monthly view

-  A single appointment recorded.
-  Two or more appointments recorded during this time slot.
-  Week number.
-  An appointment was recorded prior to this time slot.
-  An appointment was recorded after this time slot.

Monthly view

- Blue background Meeting scheduled
- White background No meeting scheduled

In the various views, the current day, week and month flash.

9.2 Alarms

Alarm clock

First set the alarm frequency (daily or only once), then enter the time and date and confirm by pressing the  key. You can also enter the purpose of the alarm and then confirm with the  key.

Timer

Set the amount of time desired before the alarm is to sound and confirm with the  key.

Options

When the alarm has been activated, the  icon is displayed on the main screen. The alarm will sound whether the handset is switched on or off and can be shut off by pressing the  key.

If you have chosen the “Snooze” option, the alarm will sound at regular 10 minute intervals.

9.3 Converter

The currency converter allows you to:

- Convert a currency directly into euros and vice versa ⁽¹⁾.
- Convert a sum of money into another currency (e.g. dollars to pounds).

For a conversion into euros, you can modify the default currency by selecting “Set up”.


⁽¹⁾ For the former european national currencies, the currency converter uses the final Euro conversion rates set on 31/12/1998, which are used in accordance with official conversion rules.

If converting between international currencies, both currencies must be selected. You must also enter the appropriate exchange rate.

An exchange rate value is pre-set for each currency. You can change this value by selecting “**Set up**”.

 From the main screen, enter the amount in euros to be converted into the programmed currency, then press the  key and select “**Converter**”.

9.4 Calculator

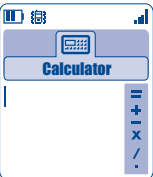

Enter a number and confirm with the  key, then select the type of operation to be performed using the  key and confirm again.

Enter the second number and press .

Select the “=” sign to display the result.

To return to the main screen, press the  key (long keypress).

9.5 Memory

View available memory space.

Your telephone’s memory is shared between several functions: directory, diary, messages, voice messages, voice tag, images and melodies, games and applications, video clips. For example, if you use a lot of memory for your voice memos, you will have less memory available for the directory.

 Do not forget to delete large items such as voice memos, MMS, images, photos, recorded sounds, applications, video clips..., in order to free up memory space. You can also delete certain items included in your telephone when you bought it.

9.6 Voice memo

The voice memo feature acts as a Dictaphone and enables you to record personal messages. To record a voice memo, select “**Voice memo**”, then “**Save**”, and begin speaking after the beep. Once the voice memo has been created, you can access the following options:

Listen to	• Listen to a recorded voice memo.	Title	• Modify the name of the memo.
Send	• Send your memo.	Memo->Album	• Copy the memo to your sound album (to send it by MMS or use it as a ringtone).
Handsfree	• Switch between handsfree and discreet mode.	Delete	• Delete the selected memo.

9.7 Infrared (IrDA)

Your phone’s infrared feature allows you to exchange contacts, diary data, images, videos, melodies via an infrared link with an other mobile or a PC. The infrared port is located on the top of your telephone.

Sending data

To send data, select the directory file, then select the “**Data transfer**” option. It is not necessary to activate the infrared feature before sending.

Receiving data

To receive data, you must activate the infrared feature. A message will advise you of the arrival of data; you then save the data by pressing the  key or reject it using the  key.

Once you have selected the option, the  icon appears on your screen. Infrared will be deactivated automatically after a short while ⁽¹⁾. The connection will cut off if you have an incoming call. You can receive up to three calling cards (V.Card) or appointments (V.Cal) at the same time.


9.8 Alarms list

You can view all the alarms that you have set. The  icon will appear on your main screen if the alarm clock or the timer have been set, or if the alarm is set for the current day or the following day.

9.9 Tone composer

9.9.1 Compose

Select “Compose” then use the keypad as shown below:

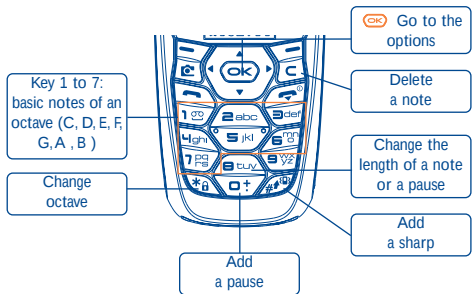

⁽¹⁾ If you use infrared often, we advise that you set a quick access to it from the keypad (see page 51).

9.9.2 Record

Select “Record” to record a sound of your own. If you want to listen it, select it and press the “Options” softkey.

9.10 Voice tag

Voice tags allow you to access one of the menu functions by pronouncing the name of that function.

Recording a voice tag

In order to record a voice tag for one of the menu functions, select “Voice tag” and the desired function and then follow the instructions.

The functions for which a voice tag has been recorded are indicated by the  icon. There are 10 functions accessible through voice tag.

Using a voice tag

You activate “voice tag” by a long keypress on the  key from the main screen. To use a voice tag, follow the instructions on the screen.

After recording, you can “Listen to”, “Replace” or “Delete” a recorded voice tag command.

10 Tips & Tricks.....

This feature gives you a quick description of your phone's main functions and provides handy hints to optimize the way you will use it.

From the main screen, press the  key to access the menu then select the  icon ;you access the tips and tricks menu.

You can also find this feature inside of each main function (select "**Options**").

Scroll the text. Aside the explanations, a small animation is displayed to show you how to use the function.

After reading the current explanations, you can either go back to the tips & tricks home page, or select "**Options**" in order to connect to the WAP options (see page 67).

11 Services

11.1 Access WAP menu ⁽¹⁾

WAP (Wireless Application Protocol) is a service that allows you to access the mobile Internet, where you can obtain information such as weather conditions, stock market information, traffic information, etc.

- "**Homepage**" launches the WAP browser on the homepage of the default profile.
- "**Bookmarks**" gives access the list of your favourite sites or add new sites to them.
- "**Profiles**" lists the Wap profiles.
- "**Enter address**" allows you to directly access the WAP page for which you enter the URL address.

11.2 Programming your access ⁽²⁾

Select a profile from the "**Profiles**" list and access the following options by pressing the  key:

Launch	• Launch WAP with this profile even if another one is selected as default one.	Create	• Enter the parameters of a new profile.
Activate	• Select the current profile as default one (this option is not displayed if it is already selected).	Modify	• Modify the parameters of a profile.
		Delete	• Delete the selected profile.

⁽¹⁾ Contact your network operator to check service availability.

⁽²⁾ Enter the information supplied by your access provider.

To “**Create**” or “**Modify**” a profile, you are required to replace the following parameters ⁽¹⁾:

- Profile name
- Homepage
- IP address
- Security
- Bearer choice
- Validate

In the “**Bearer choice**” item you can choose the transmission mode: **GPRS/GSM**, **GPRS** or **GSM**.



When you select the GPRS/ GSM transmission mode, GSM mode is activated if GPRS mode is not available.

If you select the **GPRS** transmission mode, select a GPRS bearer and then fill in the following parameters ⁽¹⁾:

- Authentication (user name and password)
- APN

If you select the **GSM** transmission mode, select a GSM bearer and then fill in the following parameters ⁽¹⁾:

- User name
- Password
- Telephone number
- Access type

If you select the **GPRS/GSM** transmission mode, select a GPRS bearer and then a GSM bearer; fill in the required parameters for each one ⁽¹⁾.

⁽¹⁾ Enter the information supplied by your access provider.

11.3 Direct access/profile access

From the main screen, select “**My Settings/More settings/WAP access**”, to change the launch access:

- **Direct access:** when you launch WAP from the main menu, you go directly to the homepage of your default Wap profile
- **Profile access:** when you launch WAP from the main menu, you will have the following items: Homepage, Bookmarks, Profiles, Enter address.

11.4 GPRS function ⁽¹⁾

Your mobile phone has an efficient high-speed modem based on GPRS technology ⁽¹⁾. With this modem you will be able to surf faster on the WAP and send your MMS more quickly. This service may be billed at a different rate (contact your operator for more information).

You can use the **GPRS** function if:

- the service is supplied by your operator,
- your subscription includes the GPRS option,
- the profiles have been configured and the corresponding bearer selected is GPRS or GPRS/GSM (see page 65); the  icon appears when the GPRS context is active.

⁽¹⁾ Contact your network operator to check service availability.

11.5 WAP browser options

Once you have launched the Wap browser, while reading a page, you can access to the options by selecting the  icon on the top left of the screen, or press the right softkey “Options”, or press  (long keypress).

Home	• Access the homepage directly.	Go To URL	• Access the WAP site directly by entering the address.
Bookmarks	• Access your favourite sites (bookmarked sites).	Show URL	• Display the URL address of the current page.
Alert Inbox	• View information sent over WAP.	Reload	• Refresh the current page.
Snapshot	• Save the whole of your screen.	Settings	• Customise your WAP access.
Save Items	• Save images or sounds.	About...	• Display the browser version.
Send Link	• Send an SMS with the URL address of the visited page.	History	• Display the list of the last visited URL.
		Exit	• End your WAP session and return to the main screen.

 At any time during your navigation, a long keypress on the  key allows you to exit the WAP mode.

12 Media Album

12.1 Album menu

To access the Album from the main screen, press the navigation key to the left or to the right . The Album is a function that groups together all visual and sound items in your telephone, regardless of whether they are embedded, downloaded, recorded or composed.

- This function comprises 3 menus:
- the images album, containing images, icons, photos etc...
 - the sounds album, containing sounds and melodies.
 - the video album, containing videos.

In each of these 3 menus, you have the possibility to create new folders with the option “Create folder”.

12.2 My Images

You can select an image or a photo and use it as the main screen or the ON/OFF screen. You may change it, send it by MMS or assign it to a contact in the directory using the “Image” option (see page 30).

The Images album is made up of the following folders ⁽¹⁾:

-  **General**: list of all images (built-in or created) from all album folders.
-  **Photos**: default folder for pictures taken with the camera.
-  **Images**: contains all images not belonging in one of the other folders.
-  **Icons**: contains EMS, stamps...
-  **Frames**: contains frames for enhancing your images.

For easier searching, the images/photos are displayed on the screen in reduced size. To view one image at a time, select an image, press  and click on **“View”**.

Then, from this view you can scroll through the images by making a short keypress on . A long keypress will start the slide show (or press  then **“Slideshow”**).

⁽¹⁾ The embedded folder names cannot be modified. However, in certain cases, you can modify, delete and add items included in these folders.

12.3 My Sounds

Choose a sound for the ON/OFF screen, for an incoming call, a message alert or an alarm (see page 45).

The **“My Sounds”** Album is made up of the following folders ⁽¹⁾:

-  **General**, contains all sound items (built-in or created) from all album folders,
-  **Melodies**,
-  **Crazy sounds**,
-  **Recorded** sounds (only contains recordings made with the **“Record”** function and the **“Memo >Album”** function),
-  **Composed** sounds (only contains compositions made using **“Compose”**).

12.4 My Videos

The **“My Videos”** Album is made up of the following folders ⁽¹⁾:

-  **General**, contains all the items from all the folders (created and embedded)
-  **Recorded**, contains the video clips you have recorded
-  **Crazy clips**,
-  **Video trailers**.

 You can search any Image, Sound or Video files by pressing the key bearing the first character of the filename.

⁽¹⁾ The embedded folder names cannot be modified. However, in certain cases, you can modify, delete and add items included in these folders.

12.5 Managing sounds, images and videos

According to the item chosen, by selecting “**Options**”, you can access some of the functions below:

View	• View the image selected.	Slideshow	• View images in your current folder as a slideshow.
Listen to	• Listen the sound selected.	Rename	• Rename sound/image/video.
Play	• Play the video selected.	Classify	• Classify an image from a folder to another.
Send ⁽¹⁾	• Send sound/image/video.	Create folder	• Create folders grouping together a series of images or sounds (for example: “ Holidays ” or “ Birthday ”).
Delete	• Delete image/sound/video selected (Not for built-in items).	Delete folder	• Delete a folder.
Set as	• Image->main screen, switch ON/OFF, assign it to a contact. • Sound->ringtone, switch ON/OFF, assign it to a contact. • Video->extra screen or assign it to a contact.	Rename folder	• Rename a folder that you created.
Ringtones	• Choose a melody for an incoming call ringtone.	Empty folder	• Empty the contents of a folder.
Modify	• Modify sound/image/video ⁽²⁾ .	Sort by size/ Sort by name	• Sort the images by size or by alphabetical order.
Download	• Access to your bookmark sites to download new items.	Capture	• Access the “ Shoot ” or “ Record ” function directly.

⁽¹⁾ Files marked with  cannot be forwarded.

⁽²⁾ Only applies to composed sounds, images and videos that can be cleared.

12.6 Download new video clips, photos, sounds, ...

With the “**Download**” option, you can access your favourite sites saved in your bookmarks list, and download new items that you will be able to save in your Album.

12.7 Formats and compatibility

List of audio, image and video formats compatible with your telephone:

- Audio: AMR ⁽¹⁾, Midi, iMelody, MP3
- Image: JPEG ⁽²⁾, GIF, PNG, BMP
- Video: 3GP (H263 ⁽³⁾ + AMR ⁽¹⁾ or MPEG-4 ⁽⁴⁾) MP4 (MPEG-4 ⁽⁴⁾)
- You can convert large image and sound files using the PC software suite so that they are compatible with your terminal.

⁽¹⁾ AMR-NB.

⁽²⁾ Except for progressive jpeg. The telephone uses the “Independent jpeg Group” code.

⁽³⁾ H263 profile 0, level 10.

⁽⁴⁾ MPEG-4 simple visual profile, level 0.

13 Photo/Video.....



Your telephone is fitted with a camera allowing you to take photos, short animations, and video clips (about 10 seconds) that you can use in different ways :

- store them in your “**Media Album**”,
- send them in a multimedia message (MMS) to a mobile phone or an e-mail address (see page 39),
- customise your main screen (see page 46),
- assign them to a contact in your directory (see page 32),
- transfer them by IRDA to your computer using Alcatel One Touch PC Suite,
- modify your photos adding frames, stamps, etc (see page 78).

13.1 Photo applications

To access this function from the main screen, press the right softkey, then using the navigation key select “**Take a picture**”. You then go straight to the photo shot screen.

13.1.1 Taking a picture

Your phone must be switched on to take a photo. The screen acts as viewfinder. Position the object or landscape in the viewfinder and press **OK** to take the picture. The lens is situated on the back of the phone. Please do not touch it. To the left of the lens there is a mirror to make sure you are well placed in order to take a photo of yourself.

Taking a picture with sound

You can record a background sound, while you are taking a picture. To do so, keep your finger pressed down on the **OK** key when taking the photo. A screen will ask you to record your sound. If you release your finger, the recording will stop. Press **C** to return to the photo shot screen.

Just after taking the photo, you can rotate the image with the **◀▶** key or reduce the image size with the **◆** key (for certain formats).



Please use your camera sensibly. Respect others and observe current regulations in your country.

13.1.2 Photo settings

Before taking the photo, you can adjust a number of settings.

Selected options bar:

- std** photo quality
- ⚙** white balance
- 📷** capture mode
- 1** Exposure (over/under)
- 2/4** number of photos taken (for animation and mosaic)
- ⌚** Timer

Left softkey: Shoot

Quality:

- high** : High - **125** key
- std** : Standard - **125** key
- eco** : Economy - **125** key

Key **125 Colour settings**

Key **125 Capture mode**

- 📷** : Single
- 📷** : Animation x 4
- 📷** : Mosaic

Right softkey: Options

Key **OK :**

- Short keypress: take photo
- Long keypress: take a photo with sound
- Exposure:
 - Left: underexposure
 - Right: overexposure
- Zoom:
 - Up: zoom in
 - Down: zoom out

Key **125 : White balance**

Key **125 Image size:**

- Panoramic
- VGA
- XL/L/M/S

IFA BILDERTEAM/Agenceimages.com

Access the settings from the MENU: From the photo shot screen, press the right softkey to access the following options:

Image size

Select “Image size” in the list of options or press the  key until you reach the size you require: VGA (640x480), and Panoramic (512x288) optimised to be sent to a PC, XL (128x160), L (128x128) for local use or MMS, M (64x64) to assign it to a directory file for instance, S (32x32) to create your very own stamps (see page 78).

Capture mode

Select “Capture mode” in the options list or keep pressing the  key to choose from one of the following modes:

-  **Single:** a single photo; this is the default mode.
-  **Animation x 4:** in this mode, you can take 4 consecutive photos like a small slide show. The number at the top right of the screen shows you which photo you are on: 1/4, 2/4,4/4. When you have taken the 4th photo, the animation will start automatically.
-  **Mosaic:** in this mode, you will get an image made up of 4 thumbnails. To do this, proceed as for the animation, once the “Mosaic” has been selected (see above).

Frame

Choose a frame from the list offered and press . The frame will be placed in your photo shot screen; if the image is to your liking, press  to take the photo. You will also find this option in the “Modify” function (see page 78).

Quality

Select “Quality” in the list of options or access it directly by pressing the , ,  keys:

- high** : High quality: excellent quality to be sent to a PC,
- std** : Standard quality: compromise between size and quality,
- eco** : Economy quality: memory space is optimized.



Warning: the higher the quality, the more memory is required. For example, if you have 1 MB of free memory, you may store the following number of photos:

Format	High quality	Economic quality
VGA	10 photos*	20 photos*
128 x 160	146 photos*	340 photos*

Timer

The photo will be taken 10 seconds after pressing . A sound will be emitted when you take a photo (if your telephone is in Sound mode).

White balance

By pressing the “Options” function key, you can choose from 5 settings:

Auto: the settings adjust automatically (no icon will be displayed on your screen),

-  sunny,
-  cloudy,
-  night time,
-  indoors/artificial light.



In a dark atmosphere, select “Night” to improve the picture quality.

* These estimations are only given as an indication.

Colour

You can choose the colour effects. You can access this option directly from the photo shot screen by pressing the  key.

Direct access to the album

With the option “Image album”, you access the “Media Album/My Images” menu directly.

Default folder

You can change the folder where your photos will be stored automatically.

 You can create your own folders using the “Media Album/My Images” option: “Create folder” (see page 71).

Other direct access options from the photo shot screen

Exposure: adjust the contrast of your photo with the navigation key: to the left = underexposure, to the right = overexposure.

Zoom: activate the zoom with the up/down navigation key: up: zoom in, down: zoom out. If you keep the key pressed in, the zoom will be gradual.

13.1.3 Options available after taking the photo

Once you have taken a photo or an animation, you can access the following options:

- | | | | |
|----------------------|---|---------------------|---|
| Send | • Send your photo without saving it in the Album. | Attach sound | • Save a sound and assign it to the photo. |
| Save and send | • Save your photo and send it. | Image album | • Access your Images Album directly. |
| Save | • Save your photo. | Rotate | • Rotate by 90°. |
| Delete | • Delete the photo you have just taken. | Set as | • Select what you want to do with your picture. |
| Modify | • Reduce size, add stamps, frames. | | |

13.1.4 Modifying images

This option enables you to **reduce** image size, or to add **stamps** or **frames**. You have two possibilities for accessing images in order to modify them:

- Via the “Media Album” menu:
Choose an image, select “Options” then “Modify”.
- Via the “Camera” menu ⁽¹⁾:
After taking the photo, select the “Options” softkey, then select “Modify”.

⁽¹⁾ The multimedia content (melodies, images, drawings, etc.) in this camera is for private use only, and may not be used for commercial purposes. Any illegal use is liable to prosecution against the perpetrator.


13.2 Video applications

To access this function from the main screen, press the right softkey then, using the navigation key, select “Video”. You can also configure a key for a direct access to this feature (see page 51).

Then, you can choose between:

- MMS video (to record a video clip of 10 seconds that you can send by MMS),
- Long video (to record a video clip of 30 seconds that you can transfer by IrDA).

Video settings (direct access):

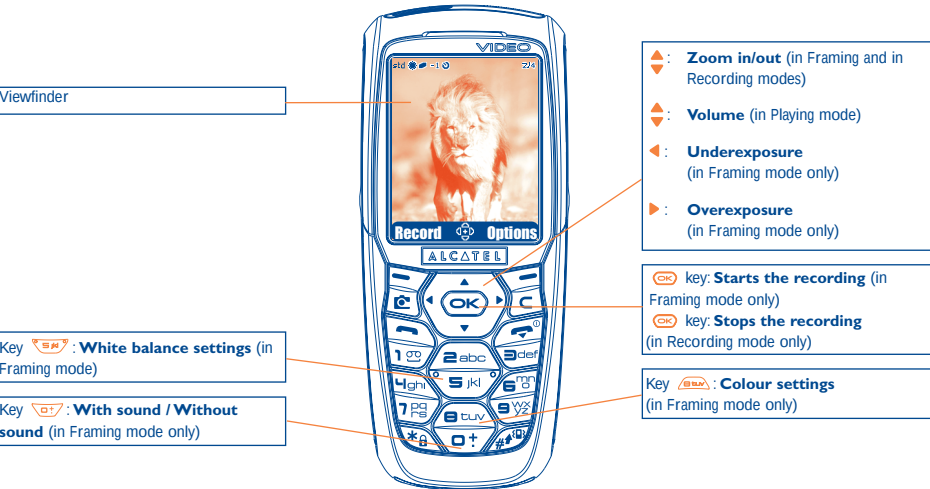

IFA BILDERTEAM/Agenceimages.com

13.2.1 Framing mode

When you enter the “Video” function, you are in Framing mode. Use the telephone screen as a viewfinder and press the softkey “Options” to access the various settings before recording:

- White balance** • Choose the lighting setting: auto/shiny/cloudy/night/indoor.
- Without / With sound** • Activate or deactivate the recording of sounds.
- Colour** • Choose the colour effect of your clip: Colour or Black and White.
- Video album** • Access the Video Album.
- Access camera** • Exit the “Video” function and move to the “Camera” function.
- Default folder** • You can change the default folder where videos will be stored when saved.

Memory space

A video clip takes about 100 kB memory space. Therefore, if you have 1 MB free memory in your telephone, you can still record about 10 clips (this estimation is given as an indication only).

13.2.2 Recording mode

Once you have chosen your settings, you can launch the recording of your video-clip by pressing the "Record" softkey or the  key ; a short beep is emitted.



During the recording, you can use the  and  keys to zoom in or out.

-  In Recording mode with sound, you cannot receive any call nor message.
- In Recording mode without sound, if you receive a call, the recording is stopped and lost.

13.2.3 Playing mode

After recording the video sequence, press the left softkey to play the video and decide what to do with it. If you press the right softkey, you will access the following options:

- | | | | |
|-------------|--|-----------------------|---|
| Save | <ul style="list-style-type: none">Save the video in the Video album in the product memory and returns to Framing mode. A name is automatically given. Then, you can modify it in the "Video Album"). | Save and send | <ul style="list-style-type: none">Same as "Send" but the video clip will be saved in the Album. |
| Play | <ul style="list-style-type: none">Play the video sequence. Adjust the volume with the  keys. | Cancel | <ul style="list-style-type: none">Cancel the video sequence and return to Framing mode. |
| Send | <ul style="list-style-type: none">You can send your video clip either by IrDA (Infrared) or with an MMS without saving it. | Set as | <ul style="list-style-type: none">Allows you to use the video clip either to associate it to a contact (in phone directory only) or as an Extra screen (see page 46). |
| | | Default folder | <ul style="list-style-type: none">Change the default folder where videos will be stored when saved. |

13.2.4 Direct access to the video function, photo capture, or album from MMS composition

With the options **"Add image"** or **"Add video"**, you can also access the photo or video function or album directly while you are writing a Multimedia Message (MMS) (see page 39).

You have two ways to insert a video in an MMS:

- Either by adding an existing video-clip to your MMS taken from the video album: when you are in the **"Messages"** menu, select **"Create message/Multimedia/MMS"**, select the **"Options"** softkey, then **"Add video/Video album"**: then select a video: the first image of the video is displayed in the MMS slide to notify that the video is correctly attached to the message.
- Either by recording directly a new video clip: choose **"Add video"**, press the  key and then select **"Record video"**. When included in an MMS slide, the video is automatically saved in the default folder of the Video Album.



If a video is inserted in a page, you can add text only ; it is not possible to add another image, or a sound to the same slide. A new page will be automatically created if you select **"Add image"**, **"Add sound"** ...

4 Games & Applications

Your Alcatel phone may include ⁽¹⁾ some Java™ applications and games. You can also download new applications and games to your phone from other service providers ⁽²⁾.

Access the **"Games & Apps"** menu:

- with a long keypress on the  key from the main screen, or
- via **"Games & Apps"** menu

The **"Games & Apps"** menu allows you to manage the Java™ applications installed in your phone. It includes three directories and one configuration folder:



General: contains all applications and games,



Games: contains the games,



Applications: contains the other applications,



Settings: contains your sound, backlighting and network settings.

14.1 Launch an application

Select the application. Press the **"Launch"** softkey or  then **"Launch"**.

⁽¹⁾ Depending on your country or your operator.

⁽²⁾ Requires access to WAP services (see page 64).

14.2 Available options

- Launch**
 - Launch the application.
- Information**
 - This option gives information on the application.
- Download**
 - Download an application.
- Delete**
 - Deletes the application. If you delete a pre-installed application in your phone, you may, depending on the application:
 - download it again from the My One Touch server, www.alcatel.com
 - download it again from your operator's Website. Contact your operator for further information.
 However, some applications cannot be re-downloaded.
- Classify**
 - Classify in "**Games**" or "**Applications**".

14.3 Download an application

You can download new Java™ applications in 2 ways:

- Either, in the "**Games & Apps**" menu by selecting the "**Download**" softkey. The list of available WAP bookmarks dedicated to the application download will then be displayed. Select the appropriate bookmark to go to the desired WAP page.



You can download a Java™ application only if the Wap profile is activated ⁽¹⁾ (see page 64).

⁽¹⁾ For the availability of different WAP services, pricing and tariffs, contact your network operator and /or the WAP service provider.

- Or, from the main screen by selecting "**WAP**" then "**Bookmarks**" and choosing "**My One Touch**".

The downloaded applications can be saved either in the Games folder or Application folder. By default, applications saved in Games folder are in landscape mode.

14.4 Java™ Push

Depending on your server/operator, you may receive Java™ Push messages inviting you to launch new applications they propose.

14.5 Settings

- **Sound on** Switch sound ON/OFF for all applications.
Sound off
- **Backlight** Activate or deactivate the backlight.
- **Networks** List of network profiles available for Games & Applications. This list comprises the current WAP profiles and specific profiles for Games & Applications. To select a profile, go to the list, press  and select "**Confirm**". To modify a specific profile for Games & Applications, go to the list, press  and select "**Modify**". To create a profile, go to the list, press  and select "**Create**". For the options available, see page 65.
- **Memory** View memory available. Applications use shared memory (see page 59).

While an application is running

- Short keypress on : pause
- Long keypress on : exit the application

Authorisation for network access: some applications require network access or the sending of an SMS. In this case, select the authorisation profile required with the navigation key , press  then validate the selection then press "**Confirm**" to validate everything.

Disclaimer

Downloading or running applications will not damage or alter any software already in your mobile telephone designed to support Java™ technology.

TCL & Alcatel Mobile Phones Limited and its affiliates waive any responsibility and refuse to guarantee applications that are subsequently used, as well as for all applications not embedded in the handset upon purchase.

The purchaser alone bears the risk of loss, damage or defect of the handset, or of applications/software, and generally of any damage or consequence resulting from the use of the said applications/software. In the event the said applications/software, or the later setup of any function are lost due to technical reasons if the handset has been replaced/repared, the mobile phone owner should repeat the operation and download or set up again. TCL & Alcatel Mobile Phones Limited and its affiliates grant no guarantee and waive any responsibility if the operation cannot be repeated or cannot be performed without incurring some cost.



Java™ and all Java™ based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.



Powered by JBlend™ - Copyright 1997-2003 - Aplix Corporation. All rights reserved. JBlend™ and all JBlend™-based trademarks and logos are trademarks or registered trademarks of Aplix Corporation in Japan and other countries.

15 Making the most of your mobile.....

15.1 “My One Touch” services by TCL & Alcatel Mobile Phones

On the website you will find all the services available to make the most of your mobile telephone.

Go to “www.alcatel.com” or simply choose the “**My One Touch**” option in your mobile telephone. Access this by selecting “**Services**” or “**My Settings/Ringtones**” or “**Media Album/My Images/Download**” from the main menu.

15.2 Alcatel One Touch PC suite

Depending on your model, your packaging box may contain a PC suite. Otherwise, you can download it for free from the website. The PC suite includes:

- Multimedia Studio:
 - customise your mobile with sounds, melodies, images, animations and videos.
 - transfer to your PC the photos and videos taken with your camera.
- One Touch Sync:
 - synchronise your mobile phone with: MS Outlook 98 / 2000 / 2002 / 2003, Outlook Express 5.0 / 6.0, Lotus Notes 4.6 / 5.0 / 6.0 / 6.5, Lotus Organiser 5.0 / 6.0
- Data Connection Wizard:
 - use your mobile phone to connect your PC to the internet.

Supported Operating Systems


- Windows 2000 with Service Pack 4 (SP4) or later
- Windows XP with Service Pack 1 (SP1) or later

16 Characters and symbols table.....

To enter a word in normal mode, press the key corresponding to the desired letter several times until the letter appears.

	1	2	3	4	5	6	7	8
	1	2	3	4	5	6	7	8
	A	B	C	2	Ä	Å	Æ	Ç
	D	E	F	3	É	Δ	Φ	
	G	H	I	4	Γ			
	J	K	L	5	Λ			
	M	N	O	6	Ñ	Ø	Ö	Ω
	P	Q	R	S	7	β	Π	Σ
	T	U	V	8	ü	Θ		
	W	X	Y	Z	9	Ξ	Ψ	
	.	0	+					
	Displays the symbols table							
	⌂, ⌂, ⌂, ⌂ (see p. 41)							

Press the key to display the symbols table; the cursor is positioned in the centre. Use the navigation key to move it.

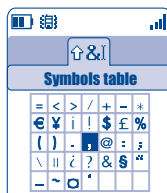

17 Telephone warranty

Congratulations on choosing this mobile phone - we hope that you will be totally satisfied with it.

Notwithstanding any other applicable statutory warranties, this mobile phone is guaranteed against any manufacturing defect for a period of ONE (1) year from the date of purchase shown on your invoice. Nevertheless if the statutory warranty in force in your country exceeds one (1) year, the statutory warranty is not affected by the manufacturer's warranty. The present warranty terms also apply to the battery and accessories but for a period of SIX (6) months from the date of purchase shown on your invoice.

Under the terms of this warranty, you must inform your dealer or any maintenance centre (see list of maintenance centres on our website - www.alcatel.com) without delay, of any defect and present the invoice given to you at the time of purchase. The dealer or maintenance centre will decide whether to replace or repair, as appropriate, all or any part of the equipment (telephone or accessory) found to be defective. This warranty covers the cost of parts and labour but excludes any other costs. Repair or replacement may be carried out using reconditioned components offering equivalent functionality. Servicing under the terms of this warranty, especially repair, modification or replacement of parts shall entitle to a three (3) month warranty unless there are statutory provisions to the contrary.


This warranty shall not apply to damage or defects (to your telephone and/or accessory) caused by:

- 1) use not conforming with the instructions for use or installation,
- 2) non observation of the technical and safety standards applicable in the country where the equipment is used,
- 3) improper maintenance of batteries and other sources of energy, and of the overall electric installation,
- 4) accidents or the consequences of theft, (of the vehicle), acts of vandalism, lightning, fire, humidity, infiltration of liquids, atmospheric influences,
- 5) combination or integration of the equipment in hardware not supplied or not recommended by TCL & Alcatel Mobile Phones Limited or its affiliates, without express written consent for such,


- 6) modifications, alterations, or repairs carried out by parties not authorised by TCL & Alcatel Mobile Phones Limited or its affiliates, the dealer or the approved maintenance centre,
 - 7) use of the equipment for a purpose other than that for which it was designed,
 - 8) normal wear,
 - 9) deterioration caused by external causes (RF interference produced by other equipment, fluctuations in mains voltage and/or voltages on telephone lines, etc),
 - 10) modifications made to the equipment even if they are unavoidable due to changes in regulations and/or modification of network parameters,
 - 11) connection faults resulting from unsatisfactory radio transmission or caused by the absence of radio relay coverage.
- Equipment on which markings or serial numbers have been removed or altered, and handsets on which labels have been removed or deteriorated shall be excluded from the warranty. The above provisions constitute the only claims which can be made against the manufacturer and dealer on the grounds of equipment defects, this warranty excludes any other explicit or implied warranty except the statutory warranty in force in the user's country.
- There are no express warranties, whether written or oral, other than this printed limited warranty. All implied warranties, including without limitation the implied warranties of merchantability or fitness for a particular purpose, are limited to the duration of this limited warranty. In no event shall TCL & Alcatel Mobile Phones Limited or its affiliates be liable for incidental or consequential damages of any nature whatsoever, including but not limited to loss of profits, commercial loss, to the full extent those damages can be disclaimed by law. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

8 Accessories ⁽¹⁾.....


The latest generation of Alcatel GSM mobile phones offers a built-in handsfree feature that allows you to use the telephone from a distance, placed on a table for example. For those who prefer to keep their conversations somewhat confidential, an earpiece is also available known as the headset.

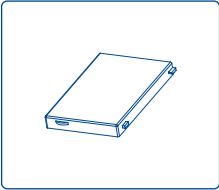


Battery
BB-09499

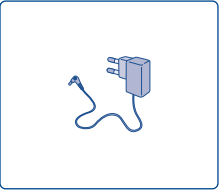


Travel charger
C57

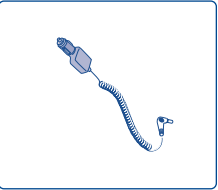


Cigar lighter charger
C56

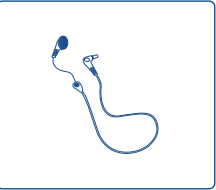

Headset
M13

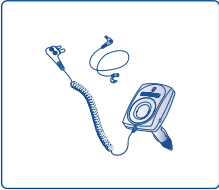

Basic car kit
MP79

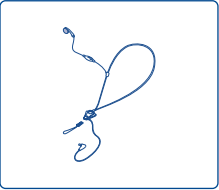

Comfort headset
M16



Only use your telephone with Alcatel batteries, chargers and accessories compatible with your model.

⁽¹⁾ Depending on availability.

9 Troubleshooting

Before contacting the after-sales service, we advise you to perform the following checks:

My mobile phone does not switch on

- Press  until the screen comes on
- Check the battery charge level
- Check the battery contacts, remove and reinstall your battery, then turn your telephone back on

My phone does not respond since several minutes

- Press the  key
- Remove the battery and re-insert it, then switch the phone back on

My screen is difficult to read

- Clean your screen
- Activate the backlighting
- Use your mobile phone in accordance with the recommended conditions of use

My mobile phone turns off by itself

- Check that your keypad is locked when you are not using your mobile phone
- Check the battery charge level
- Make sure the backlighting is not permanently activated

My mobile phone has a low level of autonomy

- Make sure that the battery saver mode is activated
- Make sure you respected the complete charge timing (minimum 3 hours)
- After a partial charge, the battery level indicator may not be exact. Wait for 20 minutes minimum after you remove the charger to obtain an exact indication

My mobile phone does not charge properly

- Make sure that your battery is not completely discharged; the battery charge indicator can take several minutes and may be accompanied by a quiet whistling sound
- Make sure charging is carried out under normal conditions (0°C +40°C)
- Make sure your battery is inserted. It must be inserted before plugging in the charger
- Make sure you are using an Alcatel battery and charger
- When abroad, check that the electrical current is compatible

My mobile phone does not connect to a network

- Try connecting in another location
- Verify the network coverage with your operator
- Check with your operator that your SIM card is valid
- Try selecting the available network(s) manually (see page 54)
- Try connecting at a later time if the network is overloaded

SIM card error

- Make sure the SIM card was correctly inserted (see page 14)
- Verify with your operator that your SIM card is 3V compatible; the old 5V SIM cards cannot be used
- Make sure the chip on your SIM card is not damaged or scratched

Unable to make outgoing calls

- Make sure you have dialled a valid number and press the  key
- For international calls, check the country and area codes
- Make sure your mobile phone is connected to a network, and that the network is not overloaded or unavailable
- Check your subscription with your operator (credit, SIM card valid, etc.)
- Make sure you have not barred outgoing calls (see page 24)

Unable to receive incoming calls

- Make sure your mobile phone is switched on and connected to a network (check for overloaded or unavailable network)
- Check your subscription with your operator (credit, SIM card valid, etc.)
- Make sure you have not forwarded incoming calls (see page 24)
- Make sure that you have not barred certain calls

The caller's name does not appear when a call is received

- Check that you have subscribed to this service with your operator
- Your caller has concealed his/her number

The sound quality of the calls is not optimal

- You can adjust the volume during a call by means of the  key
- Check the radio reception icon level 

I am unable to use the features described in the manual

- Check with your operator to make sure that your subscription includes this service
- Check to be sure this feature does not require an Alcatel accessory.

When I select a number from my directory, the number is not dialled

- Make sure that you have correctly recorded the number in your file
- Make sure that you have selected the country prefix when calling a foreign country

I am unable to create a file in my directory

- Make sure that your SIM card directory is not full; delete some files or save the files in the product directory (i.e. your professional or personal directories)
- Check the **"Call barring"** option for **"Incoming calls"** to be sure that the **"Incoming calls except directory"** feature is not activated

My callers are unable to leave messages on my voicemail

- Contact your network operator to check service availability

I can't access my voicemail

- Make sure your operator's voicemail number is correctly entered in **"My numbers"**
- Try later if the network is busy

I am unable to send and receive messages MMS, Vox MMS

- Check your phone memory available as it might be full (see page 59)
- Contact your network operator to check service availability and check MMS parameters (see pages 42-43)
- Verify the server centre number or your MMS profile with your operator
- The server centre may be saturated; try again later

The icon is displayed on my standby screen

- You have saved too many short messages on your SIM card; delete some of them or archive them in the product memory

The << - >> icon is displayed

- You are outside of the network coverage area

I have already entered 3 incorrect PIN codes

- Contact your network operator to obtain the PUK code (Personal Unblocking Key)

I am unable to connect my telephone to my computer

- Install first of all Alcatel's PC suite
- Use "Install the connection" and perform the installation
- If you use the infrared port, check that it is correctly activated (see page 60)
- If you use infrared often, we advise that you set a quick access to it from the keypad (see page 51).
- Check that your computer meets the requirements for Alcatel's PC Suite installation

Alcatel logo and Alcatel name are trademarks of Alcatel
and used under license by TCL & Alcatel Mobile Phones Limited

All rights reserved © Copyright 2004 TCL & Alcatel Mobile Phones Limited.
TCL & Alcatel Mobile Phones Limited reserves the right, in customer's interest,
to alter material or technical specifications without prior notice.