SOLUM NEWTON S-Label User Manual

NEWTON S-Label (Electronic Shelf Label System) REV1.1

(PMN: NEWTON S-Label)

(FVIN: 1.1)

2020-03-12



Digital solution modules provider.

Summary

This datasheet presents the general performance and specifications of NEWTON S-LabelforESL (Electronic Shelf Label) System.

© SOLUM. All rights reserved

The names of actual companies and products mentioned herein may be the trademarks of their respective owners.

No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means without the express written consent of SOLUM

This document is subject to change without notice.



Table of Contents

1	GENERAL DESCRIPTION	4
1.1	FEATURES	5
1.2	TYPICAL APPLICATIONS	5
1.3	Appearance	5
2	SPECIFICATION	6
2.1	PRODUCT SPECIFICATION	6
2.2	RADIO (RF) SPECIFICATION	7
2.3	NFC Specification	7
2.4	MECHANICAL DRAWING	8
2.5	Label Marking	18
3	PACKAGING	20
4	CAUTIONS FOR TREATMENT	21
4.1	USAGE ENVIRONMENT	21
4.2	STORAGE AND USE	21
4.3	BATTERY REPLACEMENT	22
4.4	FCC	24



Document History

Rev.	Date	Revision History	Page
1.0	25FEB2020	Initial release	-
1.1	12 MAR 2020	2.7", 4.3" Model info update and Layout update	All



1 General Description

NEWTON S-Labelproduct is part of SoluM S-Label (Electronic Shelf Label) System, also consisting of NEWTON S-LabelGateway (S-Gate), and Remote Controller (S-RC). The S-Label System electronically displays price, product, and promotion information on S-Labels, which has been traditionally printed or written on paper in places such as retail markets.

NEWTON S-Labelwirelessly receives data from S-Gate and updatesthe display with the new information provided.

NEWTON S-Labelis based BLE for low power wireless communication applications. It consists of RF transceiver, RF circuitry and ARM Cortex M3 MCU offering BLE based network protocol, and MAC protocol and other peripheral devices.

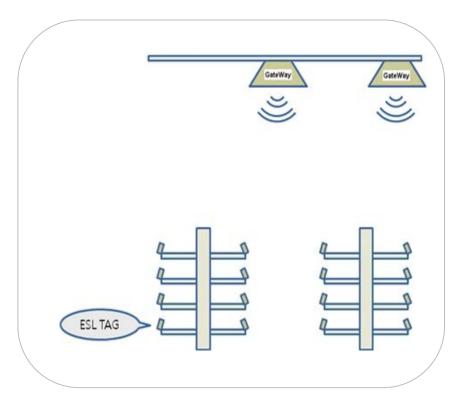


Figure 1.ESL System



1.1 Features

- Display: E-Paper Display (EPD)Active Type
 (1.6",2.2",2.6", 2.7", 2.9", 4.2", 4.3", 6.0",7.5",11.6.")
- Display Color: BW(Black, White) / BWR(Black, White, Red) / BWY(Black, White, Yellow)
- Communication: Wireless communication based on BLE
- Operating on 2.4GHz Unlicensed ISM band for BLE
- Low Power Consumption
- Working Condition: Indoor where wireless communication is available.
- RoHS compliant
- NFC (13.56MHz): Felica ® NFC Forum Type 3

1.2 Typical Applications

- Retail industry with electronic displays, platforms, solutions and services.
- Intelligently communicating, managing, and optimizing price and product informations.

1.3 Appearance



Figure 2.NEWTON S-Label



2 Specification

2.1 Product Specification

Item	Description						
Size	1.6 Inch: 36.7 x 45.0x 13.1 2.2 Inch: 67.1 x 37.4x 13.1 2.6 Inch: 79.3 x 42.4 x 13.1 2.7 Inch: 76.0 x 49.5 x 13.1 2.9 Inch:86.0 x 41.3 x 13.1 4.2 Inch: 98.1 x 83.8x 14.5 4.3 Inch: 130.3 x 42.4 x 13.9 6.0 Inch: 133.0 x 109.0 x 14.7 7.5 Inch: 125.0 x 183.0 x 15.2 11.6 Inch: 192.0 x 269.4 x 21.9						
Battery	CR2450 Lithium Battery (3V, 1~4PCS) 2.4 ~ 3.3Vdc(condition: In active status) - CR2450 1pcs: 1.6" - CR2450 2pcs: 2.2", 2.6", 2.7",2.9",4.2", 4.3" - CR2450 4pcs: 6.0" 7.5" - AA 4pcs: 11.6" ** Note: Battery capacity depends on temperature(especially in low temp environment) and number of update count.						
Display	BW(Black, White) / BWR(Black, White, Red) / BWY(Black, White, Yellow) 1.6 Inch: 200 x 200 Pixel (184dpi) / 27.0 x 27.0mm 2.2 Inch: 296 x 160 Pixel (156dpi) / 48.1 x 26.0mm 2.6 Inch: 360 x 184 Pixel (152dpi) / 60.1 x 30.7mm 2.7 Inch: 300 x 200 Pixel (133dpi) / 57.3 x 38.1mm 2.9 Inch: 384 x 168 Pixel (144dpi) / 67.6 x 29.6 mm 4.2 Inch: 400 x 300 Pixel (120dpi) / 84.8 x 63.6mm 4.3 Inch: 522 x 152 Pixel (125dpi) / 105.4 x 30.7mm 6.0 Inch: 600 x 448 Pixel (132dpi) / 114.9 x 85.8 mm 7.5 Inch: 800x480 Pixel (126dpi) / 163.2 x 97.9 mm 11.6 Inch: 640 x 960 Pixel (100dpi) / 163.0 x 244.5 mm						
Housing Color	White (Optional: Black)						
Information display	Price, Unit, Symbol etc.						
Communication	Wireless communication based on 2.4GHz Unlicensed ISM band for BLE						
Communication Distance	Radius30m						
Operation Temperature	Normal Temperature TAG 0 ~ 40°C (@35~60% RH) FREEZER Temperature TAG :-25 ~ 0°C (Freezer tag)						



Storage Temp.	-20°C ~ 40°C					

2.2 Radio(RF) Specification

ltom	Parameter	SPEC			l lmi4	Condition	
Item	Parameter	Min	Тур	Max	Unit	Condition	
	Transmit Power	-3	0	4	dBm		
TX	[Carrier Frequency Offset and Drift]	-75	0	75	kHz		
	Tx Current		-	8	mA	Total current at max Tx Power	
RX	Receiver Sensitivity	-85	-	-	dBm	PER < 5%	

2.3 NFC Specification

Itam	Doromotor		SPEC		l lmi4	Condition
Item	Parameter	Min	Тур	Max	Unit	Condition
NFC	Read Distance	-	20	-	mm	TAG status



2.4 Mechanical Drawing

2.4.1 Case Dimension

• 1.6" Model

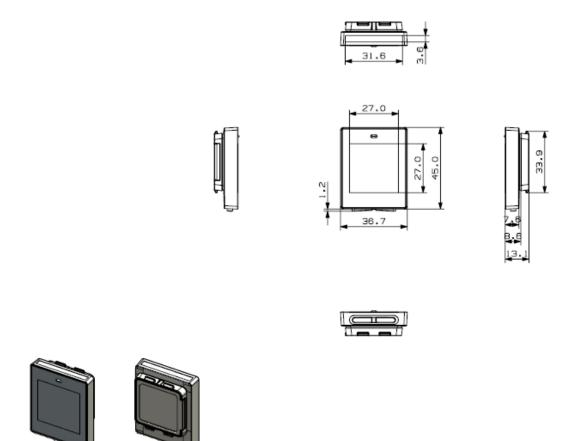


Figure 3. 1.6" Mechanical Dimension



• 2.2" Model

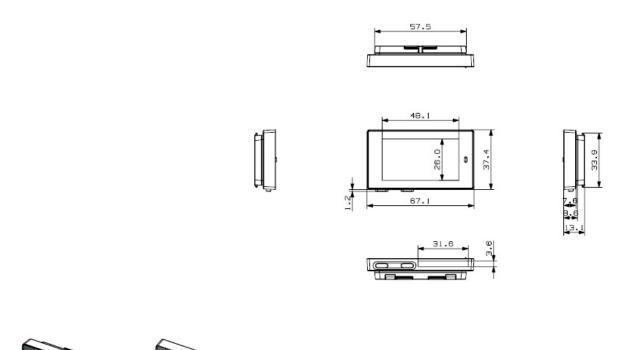


Figure 4.2.2" Mechanical Dimension



• 2.6" Model

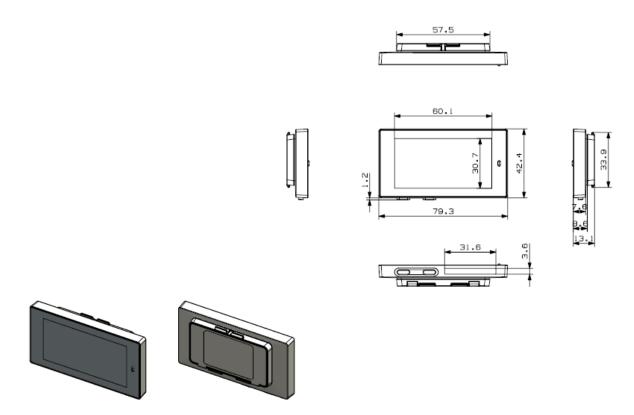


Figure 5. 2.6" Mechanical Dimension



• 2.7" Model

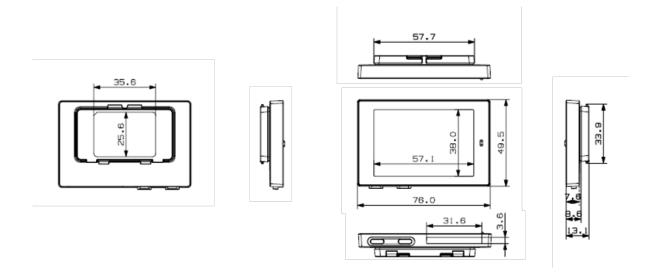


Figure 6. 2.7" Mechanical Dimension



• 2.9" Model

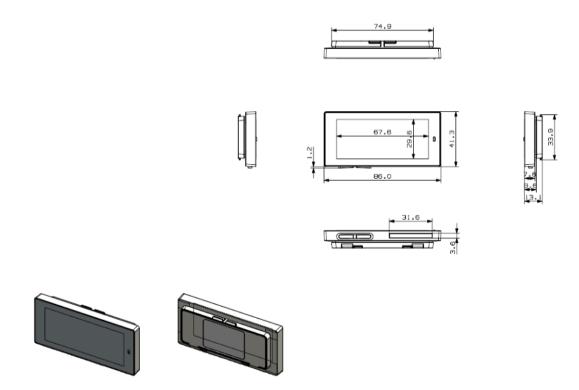


Figure 7. 2.9" Mechanical Dimension



• 4.2" Model

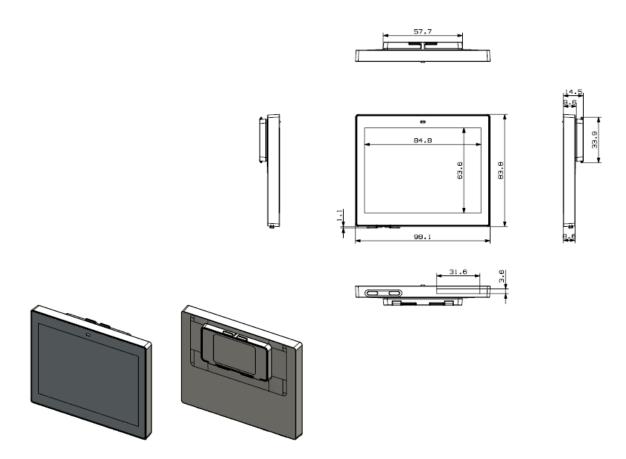


Figure 8. 4.2" Mechanical Dimension



• 4.3" Model

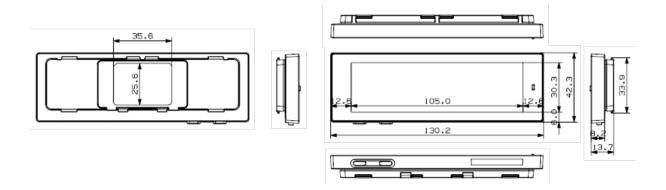


Figure 9. 4.3" Mechanical Dimension



• 6.0" Model

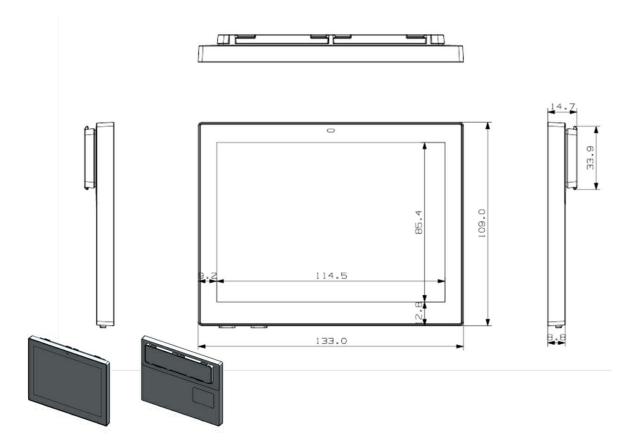


Figure 10. 6.0" Mechanical Dimension



• 7.5" Model

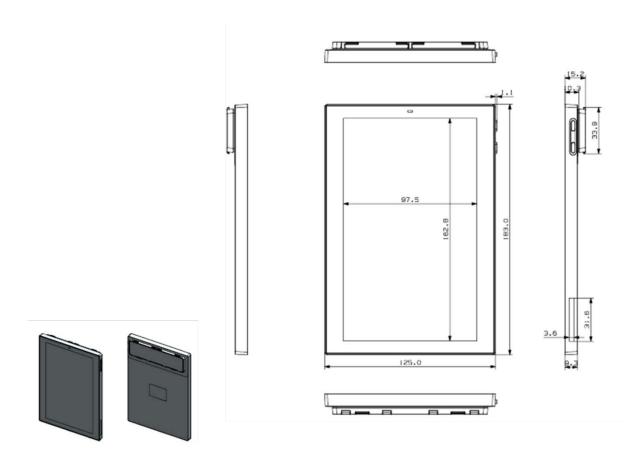


Figure 11. 7.5" Mechanical Dimension



• 11.6" Model


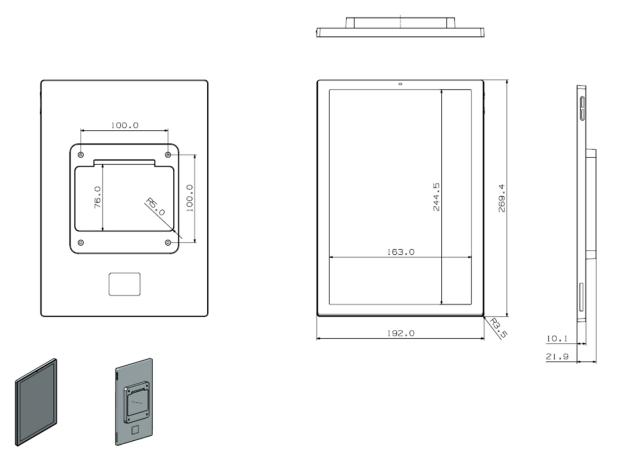


Figure 12. 11.6" Mechanical Dimension



2.5 Label Marking

2.5.1 Product Info and MAC Display in S-Label

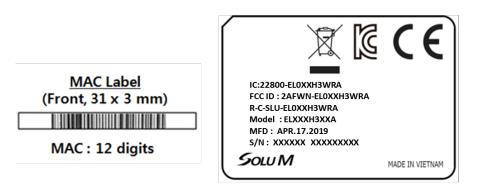

Back: 33 X 23 mm

Figure 13.Product and MAC Labels

Product information is indicated on the sticker label of the S-Labels. The information is consisted of MODEL (model name), MFD (manufacturing date), S/N (serial number), MAC (MAC address), CE certification mark, FCC ID and Manufacturer (SoluM).



	Red Col (BV	or Label VR)	Yellow Color Label (BWY)				
	WHITE BLACK		WHITE	BLACK			
1.6"	EL016H3WRA	EL016H3BRA	EL016H3WYA	EL016H3BYA			
2.2"	EL022H3WRA	EL022H3BRA	EL022H3WYA	EL022H3BYA			
2.6"	2.6" EL026H3WRA EL02		EL026H3WYA	EL026H3BYA			
2.7"	2.7" EL027H3WRA EL027H		EL027H3WYA	EL027H3BYA			
2.9"	2.9" EL029H3WRA EL029H3BRA		EL029H3WYA	EL029H3BYA			
4.2"	EL042H3WRA EL042H3BRA		EL042H3WYA	EL042H3BYA			
4.3"	4.3" EL043H3WRA EL043H3BRA		EL043H3WYA	EL043H3BYA			
6.0"	EL060H3WRA EL060H3BRA		EL060H3WYA	EL060H3BYA			
7.5"	EL075H3WRA EL075H3BRA		`-	`-			
11.6"	EL116H3WRA EL116H3BRA		`-	`-			

2) MFD: (Month).(Date).(Year) i.e.JAN.26.2020

3) S/N: Serial Number Information (See Section 2.5.1)



3 Packaging

		PALLET INFORMATION							
PRODUCT BOX_QUANT	PRODUCT BOX_QUANTITY	CARTONs	Number of CARTONs		PALLET	DIMENSIO	WEIGHT	TAGs / PALLET	
		/ LAYER	LAYER	/ PALLET	w	L	Н	(kg)	/ FALLEI
1.6"	480	8	4	32	1200.0	1000.0	130.0	362	15,360
2.2"	240	9	5	45	1200.0	1000.0	130.0	405	10,800
2.6"	240	9	4	36	1200.0	1000.0	130.0	353	8,640
2.7"	240	9	4	36	1200.0	1000.0	130.0	378	8,640
2.9"	240	8	4	32	1200.0	1000.0	130.0	368	7,680
4.2"	40	8	7	56	1200.0	1000.0	130.0	314	2,240
4.3"	90	8	4	32	1200.0	1000.0	130.0	218	2,880
6.0"	40	8	4	32	1200.0	1000.0	130.0	278	1,280
7.5"	40	8	4	32	1200.0	1000.0	130.0	362	1,280
11.6"	15	8	4	32	1200.0	1000.0	130.0	237	480

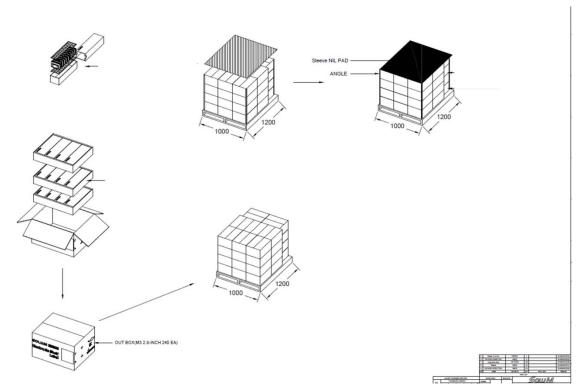


Figure 14."Package



4 Cautions for Treatment

Provisions should be made to protect against any damage to the product caused by improper handling. The purchaser assumes any responsibility for damage to the product caused by improper handling.

It is highly recommended that the product should be installed within 3 months from the date of arrival in the logistics hub. Recommended storage condition is -20~40 Celsius degree, 35-60% RH environment.

4.1 Usage Environment

Take extra cautions when using this RF device in the vicinity of other electronic devices and appliances. Most electronic devices and appliances use electromagnetic waves. Electromagnetic waves emitted by this RF device can affect other electronic devices and appliances.

If using the device in an explosion hazard area, follow all safety regulations, instructions, and signals.

4.2 Storage and Use

- Moisture and liquids can damage internal parts and circuit boards if allowed to enter into the device itself.
- Do not place or store the product on a sloped surface. The product may slide and fall off the surface and damaged.
- Use the product in temperatures ranging from 0°C to +30°C. Parts and circuits may be damaged if operating or stored in extreme temperature.
- The display panel needs extra care when handling.
 - Do not apply any impacts on the e-Paper display as it is fragile.
 - Continuous exposure to excessive moisture (over 60% RH) or UV shortens display lifetime.
 - Ghosting image may appear in temperature conditions of less than 15 Celsius degree.
 - Avoid areas with strong magnetism or subject to magnetism.
 - Contact between the device and a magnetic object can lead to malfunctions.
- Do not place the product near heat-producing kitchen appliances like a stove or a microwave or in the vicinity of highly pressurized containers.
- External impact to the product, such as from being dropped, can damage the product.
- Twisting and bending the product can damage the exterior casing and the internal components.
- · If this product operates abnormally while removing battery or replacing battery, the product



should be discharged by contacting the battery terminals (+) and (-) in the product.

- This product uses 2.4GHz frequency band for wireless communication network. Radio communications can be limited or affected by other applications that share the same frequency band, such as WiFi, Bluetooth, Zigbee, etc.
- Frequent communications, updates and screen renewals may reduce battery life time.
- Low temperature environments may reduce battery life.

4.3 Battery Replacement

Audience

- Authorized persons with the following knowledge are allowed to replace the battery:
 Battery / Electronic assemblies like circuit board / Compliance of the instruction
- Note: Warranty is voided if battery is replacement by unauthorized personnel.
 (When replacing batteries, please contact authorized person)

Instructions

- Risk of short circuit if battery is incorrectly installed/stored.
- Check that your hands are dry before and at all times during the replacement process.
- Keep batteries away from children and infants.
- Do not heat, charge, bend, drop, short-circuit and/or disassemble battery.
- Do not mix used and new battery together or different battery types.
- X Note: Battery rarely has minor stain or leak.

Steps

- Open the battery cover.
- 2 Take out the batteries.
- 3 Put in the new batteries.
- 4 Check the batteries direction.
- ⑤ Put the battery cover back.



Battery Directional

Top: (+) Positive

Bottom: (-) Negative




Figure 15. Battery Directional



WARNING: This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

[RF exposure]

This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment.

It should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications, However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



5 4.5 IC Information to User

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device. Le présentappareilestconforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitationestautorisée aux deux conditions suivantes :
- (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareildoit accepter tout brouillageradioélectriquesubi, meme si le brouillageest susceptible d'encompromettre le fonctionnement.