

# IDW20 Smart Watch

## Operation Manual



Thanks for purchasing this product.  
Please read this Manual carefully before use.

|                                     |              |                   |                            |
|-------------------------------------|--------------|-------------------|----------------------------|
| Model                               | IDW20        | Screen Type       | 1.91"-inch<br>color screen |
| Battery capacity                    | 3.8V/300mAh  | Charging Voltage  | 5V±0.2v                    |
| Charging Time                       | 2.5hours     | Battery Life      | 5-7 Day                    |
| Operating Temperature               | -20°C-60°C   | Weight of Product | 37.6g                      |
| Product Frequency                   | 2402-2480MHz | Bluetooth Version | BLE5.3                     |
| Max. transmission Power Consumption | 35±0.8m      |                   |                            |




Scan the QR code  
for more function information



## Quick start guide (EN)

### 1. Product overview



#### Physical button operation

##### Short press

- To return.
- To wake the screen when it is off.


##### Long press

- To turn on the watch.
- Under the power on state, long press for 8s to restart.

### 2. Turning on/off


#### Turning on

Whilst the watch is off, it automatically turns on when you put it on charge.

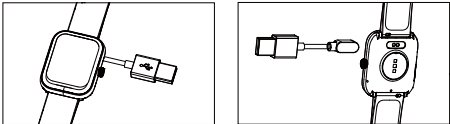

Note: Charge the watch to activate it before first use. The original power adapter must be used for charging.

Long press the button to turn on the watch.

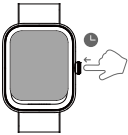

#### Turning off

To turn off the watch: go to Settings -> Turning off menu.

## App downloads and pairing

### 1. App downloads

Download and install the "Fastrack Reflex World" app on the App Store, Google Play or by scanning the QR code below.

### 2. Pairing

Turn on Fastrack Reflex World app -> Activate Bluetooth connection on your phone -> Search on the app for the device to pair with (or scan the QR code on the device) -> Finish binding on the app (or on the device).

## Screen operation

#### Swipe up/down

- To toggle through menu.
- To view long text/details.

#### Swipe left/right

- To toggle through menu.


#### CAUTION

The device has been evaluated to meet general RF exposure statement. The device can be used in portable exposure condition without restriction - Risk of explosion if the battery is replaced by an incorrect type; - disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion; - leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; - a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort, you contribute to recycle valuable raw materials and the treatment of toxic substances.

#### Tap the screen

- To enter the menu.
- To operate according to the prompts.

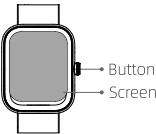

#### Tap and hold on the screen

- To switch between watch faces.

## Features

IDW20 has features such as IP68 water resistance, ultra-long battery life, full-screen touch control, low latency, 100 workout modes and multiple cloud watch faces. It supports heart rate monitoring and stress detection throughout the day, blood oxygen detection and sleep monitoring, etc. For operating instructions and FAQs on these features, please turn on the app and go to "User Guide" section.

## Care and maintenance

Three suggestions for use and maintenance:

- Keep the product clean;

If you experience discomfort or skin irritation when wearing your smart watch, then we recommend you try cleaning your device. Sometimes residue or foreign materials build up around your device and may aggravate your skin. It's also possible that you are not wearing the watch correctly. We recommend making sure to clean and adjust your watch regularly for a more comfortable fit. Caution: • If you experience skin irritation when wearing your watch, please refrain from wearing, and wait two to three days to see if your symptoms ease. If symptoms persist or worsen, please consult a physician. • If you have eczema, allergies or asthma, you may be more likely to experience a skin irritation or allergy from a wearable device.

#### Wear and Care

Some users may experience skin irritation when using this product. To reduce the potential for irritation, please follow four simple wear and care tips: (1) keep it clean; (2) keep it dry; (3) do not wear it too tightly, and keep the wearing gap as one finger; (4) after long-term wearing, remove the device in time to relax the wrist; (5) after exercise, if your wrists sweat, please clean and dry your wrists and watches before wearing again. The residual sweat components will corrode the watch. It is recommended to regularly use soap or hand sanitizer to clean the watch. In case of skin allergy, please take off your watch and Seek medical advice in time.

- Keep the product dry;
- Do not wear the product too tight;

- Do not use household cleansers when cleaning the product. Use soap-free cleansers instead.
- For stubborn stains, it is recommended to remove by scrubbing with alcohol.

Waterproof: Not suitable for use while diving, swimming in the sea, or in a sauna. Suitable for use in swimming pools, showers (cold water) and shallows.

## Safety instructions

- Do not place the product and its accessories at extreme temperatures, otherwise it may cause hazards such as product failure, fire or explosion.
- Protect the product from strong impacts or jolts, so as not to damage the product and its accessories, thus avoiding product failures.
- Do not disassemble or modify the product and its accessories by yourself. Contact us for after-sales service when the product fails.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device. L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : 1) L'appareil ne doit pas produire de brouillage; 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

- Do not attach the magnetic part of the charging cable to other metals to avoid short-circuiting the contacts of the charging cable.

Responsible Party  
Company name: Cleveland International Trade Agency  
Address: 4033 ST Clair Ave, Cleveland, OH 44103, USA  
Tel: 216-600-0606  
E-mail: Georgewu7012@gmail.com



|                                                                                   |     |                                 |      |       |
|-----------------------------------------------------------------------------------|-----|---------------------------------|------|-------|
|  | 名称  | IDW20说明书                        | 材质   | 80G哑粉 |
|                                                                                   | 尺寸  | 展开尺寸：420X200mm<br>成品尺寸：70X100mm | 装订方式 | 6折页   |
|                                                                                   | 颜色  | 四色印刷                            |      |       |
|                                                                                   | 版本号 | V2-更新说明书二维码                     |      |       |