Antenna Gain test report

FCC ID: 2AUYFRMX5061

Equipment: Mobile Phone

Brand Name: realme

Model Name:

Manufacturer:

Realme Chongqing Mobile Telecommunications Corp.,

Ltd.

No.178 Yulong Avenue, Yufengshan, Yubei


District, Chongqing, China

Issue Date: Jan 23, 2025


Project Engineer: Zhengkun Chen Date:2025/1/23

Antenna Location&dimension:



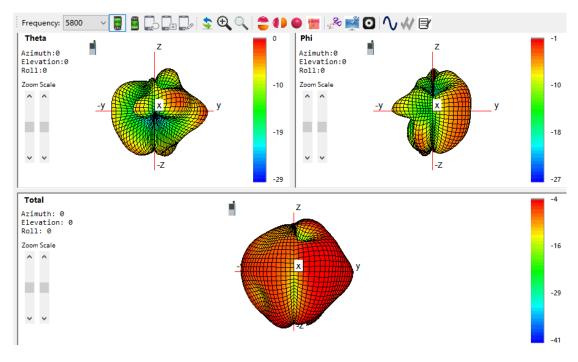

Wifi5G

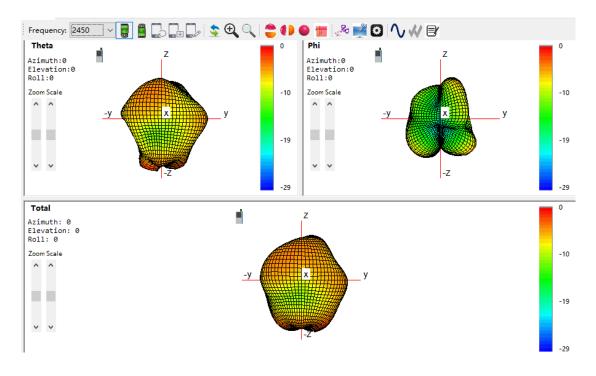

WIFI2.4G

Antenna Gain and Antenna Type specification:

Antenna Gain (dBi)	Ant 8	Ant 13	Antenna Type	

Test Report

2.4G WiFi	2400~2483.5MHz	-1.9	-0.05	PIFA(Planar Inverted F Antenna)
Antenna Gain (dBi)		Ant 12	Ant 14	Antenna Type
	5150~5250 MHz	-0.66	-1.88	PIFA(Planar Inverted F Antenna)
5G Wifi	5250~5350 MHz	-1.21	-1.6	PIFA(Planar Inverted F Antenna)
	5470~5725 MHz	-0.43	1.71	PIFA(Planar Inverted F Antenna)
	5725~5850 MHz	0.17	1.66	PIFA(Planar Inverted F Antenna)
Antenna Gain (dBi)		Ant 8	Ant 11	Antenna Type
ВТ	2400~2483.5MHz	-1.9	-0.05	PIFA(Planar Inverted F Antenna)

Table 1 Antenna Gain and Antenna Type specification

Note: Antenna gain was measured in the anechoic chamber, 3D scan was exercised, and the highest numbers are reported in this document.

Accoring to Test standard: IEEE Std 149-2021, we measure antenna gain .

Test Report

List of Test and Measurement Instruments

TEST EQUIPMENT

NO.	Equipment	Manufacturer	Model No.
1	AMS-8923	ETS-Lingen	SN1702
2	Network Analyzer E5071C	Kesight	MY4690575



Fig 2 dipole model 3126-2500 frequency 2500 MHz



Fig 3 model 3126-5500 frequency 5500 MHz

I. Measurement Setup:

A. Reflection Coefficient Measurement:

Instrument: Network Analyzer (Kesight E5071C).

Setup:

- 1. Calibrate the Network Analyzer by one port calibration using Kesight 85093C Electronic calibration module .
- 2. Connect the antenna under test to the Network Analyzer.
- 3. Measure the S11(reflection coefficient), Return Loss....

B. Pattern Measurement:

A Fully Anechoic Chamber is used to simulate free-space conditions.

A Fully Anechoic Chamber is a shielded room lined with RF/microwave absorber on all walls, ceiling, and floor.

RF/microwave absorber reduces reflections from the inner walls of the shield.

Absorber performance depends on the depth and design of the absorber and the angle of incidence of the field.

Normal incidence is best, shallower angles are worse.

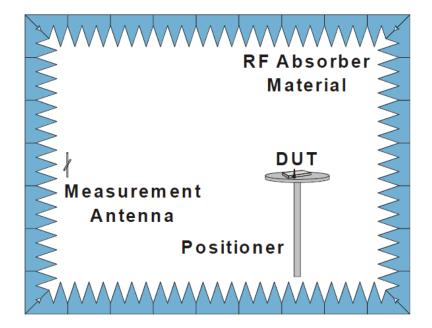


Fig. 4. The fully anechoic chamber



Fig.5. The DUT in the fully anechoic chamber