


物料名称:	E25手表快速指南 (Letsfit App)	成品尺寸:	70 x 105mm	V2	
时 间:	2023-08-22	材 质:	128g哑粉纸, 风琴折	V3	
设 计:		工 艺:	四色 双面印刷	V3	
料 号:	202-02-SH-E25-V1	备 注:		V4	

E25 Smart Watch

Quick Start Guide

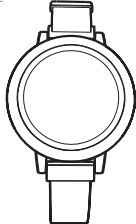

All pictures in this guide are for illustration purposes only. Actual product may vary due to product firmware and app upgrades.

This quick start guide will support you getting started using your smart watch.

If you're looking for a more detailed user manual, please open the Letsfit App, go to the "more" page and tap "help".

PACKAGE CONTENTS



Smart watch with bands x 1



Charging cable x 1




Quick start guide x 1

USING YOUR WATCH

Charging 1

Please fully charge your watch before initial use.

- Insert the USB plug of the charging cable into a USB charger.
- Attach the other end to the charging contacts on the back of the watch.

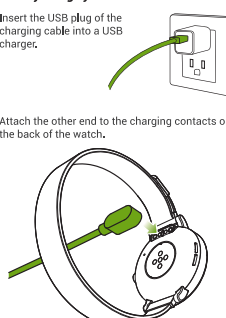

Install the Letsfit App 2

You can download Letsfit App from Apple Store / Google Play or scan the QR codes below to download.





Note: The App is only compatible with smartphones, not tablets or PCs.


Pair the Watch with Your Phone 3



- Turn on the Bluetooth of your phone.

Pairing Process

- Open the Letsfit App. Go to the "Device" page and tap "Pair device".
- Tap "E25" to search the device for pairing.
- Tap "E25" and scan the QR code on the watch to pair.
- Tap "Is it bound?" on your watch to confirm the connection.

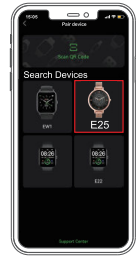
Controls 4

Function Button

Press:

- Wake the screen.
- Return to the previous interface.
- Go to the Function List.
- Pause / resume the sport.

Hold:

- Power on / off the watch.

Touch Screen

- Swipe to go to different interfaces
- Tap to enter the function
- Swipe the screen to the right to return to the previous interface




Watch Interfaces 5


Quick Settings




Daily Data



Heart Rate




Blood Oxygen




Sleep



Weather




Music



Bluetooth Calling



Notifications



Tips:

Quick Settings



Do Not Disturb (DND) mode:

- When the DND mode is enabled, the watch won't ring or vibrate when it receives incoming call alerts, SMS, app notifications. And Raise to Wake function will be disabled.
- DND mode does not affect Alarms.

Turn on Bluetooth Calling:

- DND mode must be disabled before using Bluetooth Calling.
- On your phone, tap "Switch" --> "Bluetooth" to turn it on.
- On your phone, go to "Settings" --> "Bluetooth", tap "E25(00-xxxx)" to connect.

Notes:

- To use the Bluetooth Calling feature in the watch, please keep your phone connected to the watch with Bluetooth.
- Ringing or vibration switching can be modified in "Setting" --> "Sounds".
- This feature will reduce the watch's battery life.

Weather:

- On the "Device" page of Letsfit app, you can turn on/off the "Weather" function, and the default is off.
- Weather forecast for the next few days. Weather data is obtained through your phone's network. Connect the watch to your phone to timely update weather data.

Health Warnings

- If you have a pacemaker or other internal electronic device, consult your physician before using a heart rate monitor.
- The optical wrist heart rate monitor emits green light and flashes occasionally. Consult your physician if you have epilepsy or are sensitive to flashing lights.
- Always consult your physician before beginning or modifying any exercise program.
- The device, accessories, heart rate monitor, blood oxygen level measurement and related data are intended to be used only for recreational purposes and not for medical purposes and are not intended to diagnose, monitor, treat, cure or prevent any disease or condition.

Battery Warnings

- Aluminum-ion battery is used in this device. If these guidelines are not followed, batteries may experience a shortened life span or may cause fire, chemical burn, electrolyte leakage, and/or injury.
- Do NOT disassemble, modify, manufacture, puncture or damage the device or batteries.
- Do NOT remove or attempt to remove the non-replaceable battery.
- Do NOT expose the device or batteries to fire, explosion, or other hazards.

Important Safety Instructions

The device contains electrical equipment that may cause injury if not used properly. For example, unplugged contact may contribute to skin allergies for some users. To reduce irritation, please read the safety guidelines on the following pages to ensure proper use and care.

- Do not expose your device to liquid, moisture, humidity or rain while charging.
- Do not charge your device when it is wet, as this may result in electrical shock and injury.
- Consult your doctor before use if you have any preexisting conditions that might be affected by using the device.
- Do not expose your watch to extremely high or low temperatures.
- Do not leave your watch near open flames such as cooking stoves, candles, or fireplaces.
- This product is NOT a toy - never allow children or pets to play with this product. Always store the product out of the reach of children. The devices themselves or the many small parts they contain may cause choking if ingested.
- Never try to abuse, crush, open, repair or disassemble this device. Doing so will void the warranty and can result in a safety hazard.
- If any parts of your product require replacement for any reason, including normal wear and tear or breakage, please contact us.
- Do not use your device in a sauna or steam room.
- Dispose of this device, the device's battery and its package in accordance with local regulations.
- Do not check any notifications, or any information on your device's display while driving or in other situations where distractions could cause injury or hazard. Always be aware of your surroundings while operating.

FCC ID: 2BAS2-E25

NOTE: This equipment has been tested and found to comply with the limits for Class B digital devices, in accordance with section 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Charger or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

202402-SH-E25-V1

Important Safety Guide

Some people with allergic skin may react when their skin is exposed to materials used in watches for a long time. This may be caused by allergies, environmental factors, prolonged exposure to irritants such as sweat and soap, or other factors. If you have known skin allergies, please pay special attention when wearing the watch.

- Please do not wear your watch too tight.
- If your watch gets wet (for example after sweating or showering), clean and dry it thoroughly before putting it back on your wrist.
- Make sure your skin is dry before you put your watch back on.
- Prolonged rubbing and pressure may irritate the skin, so give your wrist a break by removing the watch regularly.

