

Smart Watch


User's Manual



TB39, T386A, TB49

Design By Desertcat Team

Use the Touch Screen

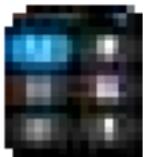

Control Center

Swipe Down/ UP



Swipe Left/ Right



push button



spin button
change watch face

Swipe Down/ UP



Messages



Swipe Left/ Right

Heart Rate/ pedometer/ blood pressure/ blood/
oxygen/ sleep/ monitoring/ weather

Downloading the APP

Scan the following QR Code, download and install the APP



Android/ IOS

Scan QR Code and Download

System requirements: Android 5.0 and above;
IOS 9.0 and above; support Bluetooth 4.0


Preparation before use

For the first time, please make sure the Smart Watch has enough power. If the Smart Watch cannot be turned on, please charge the Smart Watch first.

PS: Time Synchronization requires connection to Bluetooth.

Binding Use

1. **Connection APP:** Open Lefun Health APP, Click "Equipment" , "+" , "add" , "Start Search" search for the watch Name (Watch 8) and check the Bluetooth address (bluetooth address show on watch "About") same as your watch to connection the Watch.

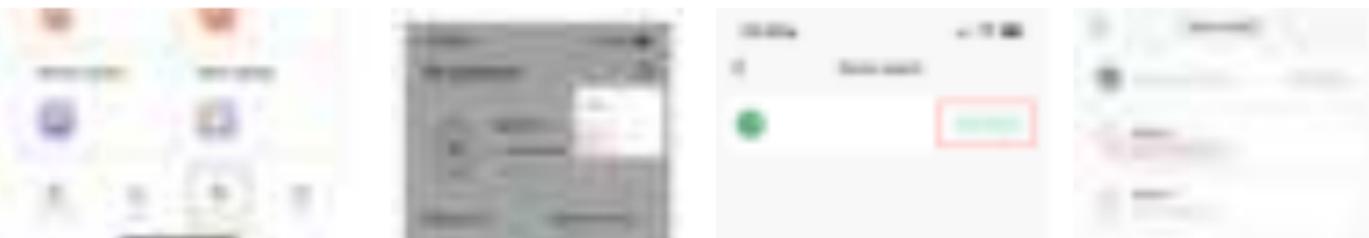

2. **Connection Bluetooth Call:** Open Phone Bluetooth Connection Bluetooth 3.0 (The Bluetooth name is Watch 8_Audio) , Note you should check your watch the bluetooth 3.0 turned on. that you can Call and Play Music. Bluetooth 3.0 supports Shared contacts, media audio and communication Audio.



How to Check Bluetooth Address on watch?

1. Check Bluetooth Address on watch
2. Choose SET and choose "About" it show BT address



HOW to turn on Bluetooth 3.0 on watch?

Swipe Down/ UP
Open Control Center



Click on the "first icon with a
bluetooth phone"

What should I do if the Bluetooth cannot be connected?

1. Please confirm whether the mobile phone supports it (IOS 9.0 or Android 4.0 system or above).
2. Due to the problem of signal interference in the Bluetooth wireless connection, the connection time may vary each time. If you cannot connect for a long time, please make sure to connect in a place without magnetic field or interference from too many Bluetooth devices.
3. Turn off the Bluetooth of the mobile phone and turn it on again.
4. Clear the background application of the mobile phone or restart the mobile phone
5. Do not connect the mobile phone to other products of the same type at the same time.
6. Whether the application is still running in the background, if it is not running in the Background, the connection cannot be made.

APP Can't find the Watch?

If the Bluetooth broadcast of the Watch is not searched by the mobile phone, please make sure that the Watch is powered and activated, and is not connected to other mobile phones. Put the bracelet close to the mobile phone to search again. If it still does not work, turn off the Bluetooth of the mobile phone for 20 seconds and try again. Turn on Bluetooth and search again.

Should the Bluetooth connection be turned on all the time? If it is closed, will there still be data?

Before the data is synchronized, the exercise and sleep data will be kept on the watch host. When the mobile phone and the watch are successfully connected via Bluetooth, the watch will automatically upload the data to the mobile phone, but the data stored in the watch is limited and can only be stored for about a week Bluetooth data, when the space is full, it will automatically overwrite the earliest data to generate the latest data, so please synchronize the watch to the mobile phone in time.

Remarks: If you turn on the call and SMS reminder function, you need to keep the Bluetooth connected, and the alarm clock reminder supports offline. and the Time synchronize need connection be turned on bluetooth.

Will wearing the bracelet for a long time cause harm to the human body?

The radiation of the equipment is far lower than the FCC/CE standard of the United States, which is basically negligible, and long-term wearing will not cause radiation damage to the human body.

How to Increase the volume of Watch?

When connected to the Bluetooth of the mobile phone, you can adjust the volume of the watch, through the volume keys of the mobile phone.

Why the watch cannot receive push notifications and make Call / Answer ?

To make calls and receive messages via Bluetooth, you need to connect the APP with Bluetooth 3.0. Please check whether the APP is connected and Bluetooth 3.0, and whether the watch has turned off Bluetooth 3.0.

Why can't the correct time be displayed ?

Time synchronization needs to keep the Bluetooth connection, please check whether the Bluetooth connection is normal.

Can use the watch to reply to messages?

The watch only supports message reception, not message reply.

How to set the language of your watch?

Open the watch settings center, select "Language", and select the desired language from the drop-down list.

The Watch is waterproof ?

The smart watch supports life waterproof, please do not soak the watch in water.

Why my iphone can't I receive messages, but I can make or receive calls?

To receive information, you need to connect to the APP, please check whether the APP is connected normally. If the APP is not connected normally, please go to Settings-Bluetooth, find the name "watch 8" and choose to ignore. Re-open the APP to connect to the watch.

What should I do if the bracelet cannot be charged?

1. Please confirm whether the direction of the charging stand is correct, and whether the charging is in good contact with the watch.
2. When the power of the bracelet is lower than 3.6V, there will be a period of battery pre-charging time. Remarks: After plugging in the charger, it will enter the charging state immediately. If there is no display, it will take 3-5 minutes to enter the charging state.

Precautions

- It should not be worn when taking a bath or swimming.
- When synchronizing data, please connect the Hand.
- Use the built-in charging cable to charge.
- Do not expose the handle ring to a place with high moisture or extremely high or low temperature for a longtime.
- The wristband restarts unexpectedly. Please check the memory information of the phone to clear it and try again, or exit the APP and reopen it.

Watch maintenance

- Do not scratch the sensor, protect it from damage
- Wipe the surface of the Hand with a damp cloth and use mild soapy water to remove oil or dust
- Do not expose the Hand to the environment with strong chemicals, such as gasoline, cleaning solvents, propanol, alcohol or insect repellent. The chemicals will damage the sealability of the Hand and the surface of the casing
- Prevent your Hand from being subjected to strong impact and extreme high temperature exposure
- When the lens and casing are intact, it is waterproof. Violent disassembly will affect the waterproofness.

Function Introduction



Sleep



Smart Phone



Heart Rate Monitoring



Blood Oxygen



Stepcounter



BT Code



Sport




BT Camera



BT Music



Dual Style

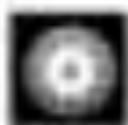

Settings



Weather



Dial



Call records



Mental Monitoring



Blood Pressure



Message

PS: BT Function required connection Bluetooth 3.0

Control Center



Bluetooth call 3.0 on/ off



Find Phone



APP QR Code



Dial Style



Dimming



AI Voice

Smart Watch Features



When Bluetooth 3.0 is connected , you can make a call by dialing the number. At this time, the phone will automatically dial, and the phone can set the call device as a Watch.



keep the information pushed by the mobile phone: you can view the last 10 pushed message.



Remote camera: need to be connected to the APP, open the remote camera phone will open the camera, shake the Hand phone to take a picture, the Hand to exit the remote camera phone will also exit the camera.



Bluetooth music: It can be used only when connected to phone Bluetooth 3.0. The guide page jumped out of the APP for the first time is connected to 3.0 Bluetooth. You can control the play / pause of the music model being played on the mobile phone through Bluetooth music.



AI voice, need mobile phone to connect to Bluetooth 3.0

Reloj Inteligente

Manual de instrucciones



T386A/ TB36/ TB39S/ TB49

Diseño por el equipo

Usar la pantalla táctil



Centro de control

Deslizar hacia abajo/ ARRIBA

Deslizar hacia la izquierda / derecha



deslizar hacia abajo/ arriba

Mensajes



presionar el botón



botón de girar
cambiar la esfera del reloj



Deslizar hacia la izquierda/
derecha

Ritmo cardíaco/ pedómetro/ tensión arterial/
sangre/ oxígeno/ sueño/ monitorización/ clima

Descargando la APLICACIÓN

Escanee el siguiente código QR, descargue e instale la aplicación



Android/ iOS

**Escanea el código QR y
descarga**

Requisitos del sistema: Android 5.0 y superior; IOS 9.0 y superior; compatible con bluetooth 4.0


Preparación antes de usar

Por primera vez, asegúrese de que el reloj inteligente tenga suficiente potencia. Si el reloj inteligente no se puede encender, cárguelo primero.

PD: la sincronización de tiempo requiere conexión a Bluetooth.

Uso Vinculante

1. **Aplicación de conexión:** abra la aplicación Lefun Health, haga clic en "Equipo", "+", "agregar", "Iniciar búsqueda", busque el nombre del reloj (Reloj 8) y verifique la dirección de Bluetooth (la dirección de Bluetooth se muestra en el reloj "Acerca de") igual que su reloj para conectar el reloj.

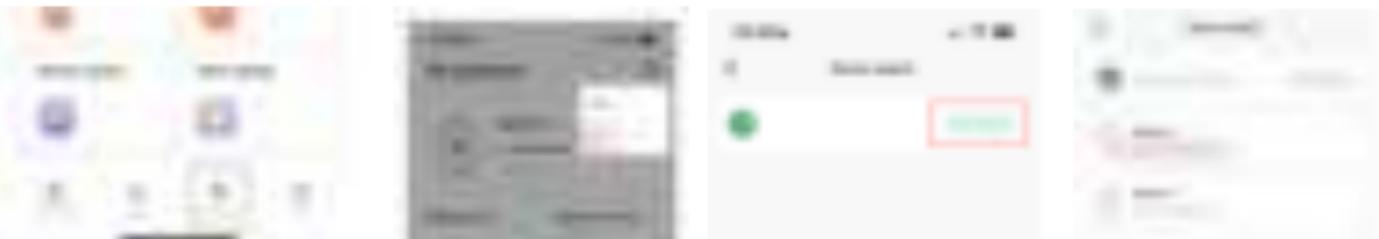

2. **Llamada de conexión Bluetooth:** abra la conexión Bluetooth del teléfono Bluetooth 3.0 (el nombre de Bluetooth es Watch 8_Audio), tenga en cuenta que debe verificar que su reloj tenga el bluetooth 3.0 encendido. que puede llamar y reproducir música. Bluetooth 3.0 admite contactos compartidos, audio multimedia y audio de comunicación.



¿Cómo verificar la dirección de Bluetooth en el reloj?

1. Verifique la dirección de Bluetooth en el reloj

2. Elija SET y elija "Acerca de" muestra la dirección BT



¿Cómo activar Bluetooth 3.0 en el reloj?

Deslizar hacia abajo/

ARRIBA

Centro de control abierto



Haga clic en el "primer icono con un teléfono bluetooth"

¿Qué debo hacer si el Bluetooth no se puede conectar?

1. Please confirm whether the mobile phone supports it (IOS 9.0 or Android 4.0 system or above).
2. Due to the problem of signal interference in the Bluetooth wireless connection, the connection time may vary each time. If you cannot connect for a long time, please make sure to connect in a place without magnetic field or interference from too many Bluetooth devices.
3. Turn off the Bluetooth of the mobile phone and turn it on again.
4. Clear the background application of the mobile phone or restart the mobile phone
5. Do not connect the mobile phone to other products of the same type at the same time.
6. Whether the application is still running in the background, if it is not running in the background, the connection cannot be made.

APP ¿No encuentras el reloj?

Si el teléfono móvil no busca la transmisión Bluetooth del reloj, por favor haga Asegúrese de que el reloj esté encendido y activado, y que no esté conectado a otros teléfonos móviles. Ponga la pulsera cerca del teléfono móvil para buscar de nuevo. Si sigue sin funcionar, apaga Bluetooth del teléfono móvil durante 20 segundos y vuelve a intentarlo. Encienda Bluetooth y busca de nuevo.

¿La conexión Bluetooth debe estar encendida todo el tiempo? Si está cerrado, ¿Seguirá habiendo datos?

Antes de que se sincronicen los datos, los datos de ejercicio y sueño se mantendrán en el host del reloj. Cuando el teléfono móvil y el reloj se conectan con éxito a través de Bluetooth, el reloj cargará automáticamente los datos en el teléfono móvil, pero los datos almacenados en el reloj son limitado y solo se puede almacenar durante aproximadamente una semana. Los datos de Bluetooth, cuando el espacio está lleno, sobrescribirá automáticamente los datos más antiguos para generar los datos más recientes, así que por favor sincroniza el reloj con el teléfono móvil a tiempo.

Observaciones: si activa la función de recordatorio de llamadas y SMS, debe mantener el Bluetooth conectado y el recordatorio del reloj despertador es compatible sin conexión. y la necesidad de sincronización de tiempo la conexión se encienda bluetooth.

¿Usar el brazalete durante mucho tiempo causará daño al cuerpo humano?

La radiación del equipo es mucho más baja que el estándar de la FCC de los Estados Unidos, que es básicamente insignificante, y el uso a largo plazo no causará daño por radiación al ser humano.

¿Cómo aumentar el volumen del reloj?

Cuando está conectado al Bluetooth del teléfono móvil, puede ajustar el volumen del reloj, a través de las teclas de volumen del teléfono móvil.

¿Por qué el reloj no puede recibir notificaciones automáticas y hacer llamadas / respuestas?

Para realizar llamadas y recibir mensajes a través de Bluetooth, debe conectar la aplicación con Bluetooth 3.0. Comprueba si la aplicación está conectada y Bluetooth 3,0, y si el reloj tiene desactivó Bluetooth 3.0.

¿Por qué no se puede mostrar la hora correcta?

La sincronización de tiempo necesita mantener la conexión Bluetooth, verifique si la conexión Bluetooth es normal.

¿Se puede usar el reloj para responder mensajes?

El reloj solo admite la recepción de mensajes, no la respuesta de mensajes.

¿Cómo configurar el idioma de tu reloj?

Abra el centro de configuración del reloj, seleccione "Idioma" y seleccione el idioma deseado de la lista desplegable.

El reloj es resistente al agua?

El reloj inteligente soporta la vida a prueba de agua, no sumerja el reloj en agua.

¿Por qué mi iphone no puede recibir mensajes, pero puedo hacer o recibir llamadas?

Para recibir información, debe conectarse a la aplicación, verifique si la aplicación está conectada normalmente. Si la aplicación no está conectada normalmente, vaya a Configuración-Bluetooth, busque el nombre "reloj 8" y elija ignorar. Vuelva a abrir la aplicación para conectarse al reloj.

¿Qué debo hacer si la pulsera no se puede cargar?

1. Confirme si la dirección del soporte de carga es correcta y si el la carga está en buen contacto con el reloj.
2. Cuando la potencia de la pulsera sea inferior a 3,6 V, habrá un periodo de precarga de la batería. Observaciones: después de enchufar el cargador, entrará en el estado de carga inmediatamente. Si no hay pantalla, tardará de 3 a 5 minutos en entrar en el estado de carga.

Precauciones

- No debe usarse cuando se baña o nada.
- Al sincronizar datos, conecte la mano.
- Utilice el cable de carga incorporado para cargar.
- No exponga el anillo del mango a un lugar con mucha humedad o temperatura extremadamente alta o baja durante mucho tiempo.
- La pulsera se reinicia inesperadamente. Verifique la información de la memoria del teléfono para borrarla y vuelva a intentarlo, o salga de la aplicación y vuelva a abrirla.

Ver mantenimiento

- No raye el sensor, protéjalo de daños
- Limpie la superficie de la mano con un paño húmedo y use agua jabonosa suave para eliminar el aceite o el polvo.
- No exponga la mano al medio ambiente con productos químicos fuertes, como gasolina, solventes de limpieza, propanol, alcohol o repelente de insectos. Los productos químicos dañarán la capacidad de sellado de la mano y la superficie de la carcasa.
- Evita que tu mano esté sujeta a fuertes impactos y exposición a altas temperaturas extremas.
- cuando la lente y la carcasa están intactas, es resistente al agua. El desmontaje violento afectará la impermeabilidad.

Introducción a la función



Paso



Excepto monitor de ritmo cardíaco



monitores de oxígeno en la sangre



cronógrafo



Código QR



Deporte




Camara Bluetooth



BT Música



Velocidad de configuración

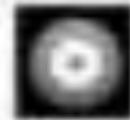

Cáma



marcar



registros de llamadas



monitores del sueño



presión arterial



información

PD: Función BT requiere conexión Bluetooth 3.0

Centro de control



Activar/desactivar BT 3.0



Buscar teléfono



Código QR de la aplicación



Estilo de marcación



Atenuación



Voz de IA



Al Cuando Bluetooth 3.0 está conectado, puede hacer una llamada marcando el número. En este momento, el teléfono marcará automáticamente y el teléfono puede configurar el dispositivo de llamada como reloj.



mantenga la información enviada por el teléfono móvil: puede ver los últimos 10 mensajes enviados.



Cámara remota: necesita estar conectado a la aplicación, abrir el teléfono con cámara remota abrirá la cámara, agitar el teléfono de mano para tomar una foto, la mano para salir del teléfono con cámara remota también saldrá de la cámara.



Música Bluetooth: solo se puede usar cuando está conectado al teléfono Bluetooth 3.0. La página de guía saltada de la APLICACIÓN por primera vez está conectada a 3.0 Bluetooth. Puede controlar la reproducción / pausa del modelo de música que se está reproduciendo en el teléfono móvil a través de la música Bluetooth.



Voz AI, necesita teléfono móvil para conectarse a Bluetooth 3.0

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.