

683-3, Yubang-Dong, Yongin-Si, Kyunggi-Do, Korea. 449-080 Tel: +82-31-321-2664 Fax: +82-31-321-1664 http://www.digitalemc.com

SBWVK4500

VK Cornoration

SAR TEST REPORT

Dates of Tests: January 23 ~ February 23, 2006 Test Report S/N:DR50110603O Test Site : DIGITAL EMC CO., LTD.

FCC ID	

APPLICANT

	VIX Corporation
FCC Classification:	Licensed Portable Transmitter Held to Ear (PCE)
EUT Type:	Quad-Band GSM850/GSM900/DCS1800/PCS1900 Mobile Phone
Model Name	VK4500
Test Device Serial No.:	Identical prototype
TX Frequency Range:	824.20 ~848.80 MHz (GSM850) 1850.20 ~ 1909.80 MHz (PCS1900)
RX Frequency Range:	869.2 ~893.8 MHz (GSM850) 1930.2 ~ 1989.8 MHz (PCS1900)
Max. RF Output Power:	0.740 W ERP GSM850 (28.69dBm)
	0.957 W EIRP PCS1900 (29.81dBm)
Max. SAR Measurement:	0.402 mW/g GSM850 Head SAR // 0.511 mW/g GSM850 Body SAR
	0.332 mW/g PCS1900 Head SAR // 0.257 mW/g PCS1900 Body SAR
Application Type:	Certification
Rule Part(s):	§2.1093; FCC/OET Bulletin Supplement C[July 2001]
Data of issue:	March 30, 2006

This wireless portable device has been shown to be capable of compliance for localized specific absorption rate (SAR) for uncontrolled environment/general population exposure limits specified in ANSI/IEEE Std. C95.1-1992 and had been tested in accordance with the measurement procedures specified in FCC/OET Bulletin 65 Supplement C (2001) and IEEE Std. 1528-2003.

I attest to the accuracy of data. All measurements reported herein were performed by me or were made under my supervision and are correct to the best of my knowledge and belief. I assume full responsibility for the completeness of these measurements and vouch for the qualifications of all persons taking them.

Tested by :

Sun-Kyu Ryu (Engineer)

Any

Harvey Sung (Chief Engineering Director)

Reviewed by :

TABLE OF CONTENTS

1. INTRODUCTION	3
SAR DEFINITION	3
2. SAR MEASUREMENT SETUP	4
Robotic System	4
System Hardware	4
System Electronics	4
3. DASY4 E-FIELD PROBE SYSTEM	5
Probe Measurement System	5
Probe Specifications	5
4. Probe Calibration Process	6
Dosimetric Assessment Procedure	6
Free Space Assessment	6
Temperature Assessment	6
5. PHANTOM & EQUIVALENT TISSUES	7
SAM Phantom	, 7
Brain & Muscle Simulating Mixture Characterization	, 7
Device Holder for Transmitters	, 7
6. TEST SYSTEM SPECIFICATIONS	8
Automated Test System Specifications	8
7. DOSIMETRIC ASSESSMENT & PHANTOM SPECS	9
Measurement Procedure	9
Specific Anthropomorphic Mannequin (SAM) Specifications	9
8. DEFINITION OF REFERENCE POINTS	10
EAR Reference Point.	10
Handset Reference Points.	10
9. TEST CONFIGURATION POSITIONS	11
Positioning for Cheek/Touch	11
Positioning for Ear /15° Tilt	12
Body Holster /Belt Clip Configurations	13
10. ICNIRP GUIDELINES RF EXPOSURE LIMITS	14
Uncontrolled Environment	14
Controlled Environment	14
11. MEASUREMENT UNCERTAINTIES	15
SAR Measurement Uncertainties	15
12. SYSTEM VERIFICATION	16
Tissue Verification	16
Test System Verification	16
13. SAR TEST DATA SUMMARY	17
See Measurement Result Data Pages	17
Procedures Used To Establish Test Signal	17
Device Test Conditions	17
EUT Handset Reference Points	17
14. SAR DATA SUMMARY	18 - 23
15. SAR TEST EQUIPMENT	24
Equipment Calibration	24
16. CONCLUSION	25
Measurement Conclusion	25
17. REFERENCES	26

1. INTROCUCTION/SAR DEFINITION

In 1974, the International Radiation Protection Association (IRPA) formed a working group on nonionizing radiation (NIR), which examined the problems arising in the field of Protection against the various types of NIR. At the IRPA Congress in Paris in 1977, this working group because the International Non-Ionizing Radiation Committee (INIRC).

In cooperation with the Environmental Health Division of the World Health Organization (WHO), the IRPA/INIRC developed a number of health criteria documents on NIR as part of WHO'S Environmental Health Criteria Programme, sponsored by the United Nations Environment Programme (UNEP). Each document includes an overview of the physical characteristics, measurement and instrumentation, sources, and applications of NIR, a thorough review of the literature on biological effects, and an evaluation of the health risks of exposure to NIR. These health criteria have provided the scientific database for the subsequent development of exposure limits and codes of practice relating to NIR.

At the Eighth International Congress of the IRPA (Monotreal, 18-22 May 1992), a new, independent scientific organization-the International Commission on Non-Ionizing Radiation Protection (ICNIRP)-was established as a successor to the IRPA/INIRC. The functions of the Commission are to investigate the hazards that may be association with the different forms of NIR, develop international guidelines on NIR exposure to static and extremely-low-frequency (ELF) electric and magnetic field have been reviewed by UNEP/WHO/IRPA (1984, 1987). Those publications and a number of others, including UNEP/WHO/IRPA (1993) and Allen et al. (1991), provided the scientific rationale for these guidelines.

A glossary of terms appears in the Appendix.

SAR Definition

Specific Absorption Rate (SAR) is defined as the time derivative (rate) of the incremental energy (dU) absorbed by (dissipated in) an incremental mass (dm) contained in a volume element (dV) of a given density (ρ) It is also defined as the rate of RF energy absorption per unit mass at a point in an absorbing body (see Fig. 1.1)

$$S A R = \frac{d}{d t} \left(\frac{d U}{d m} \right) = \frac{d}{d t} \left(\frac{d U}{\rho d v} \right)$$

Figure 1.1 SAR Mathematical Equation

SAR is expressed in units of Watts per Kilogram (W/kg).

$$\mathbf{SAR} = E^2 \mathbf{1} \quad \mathbf{p}$$

Where:

- σ = conductivity of the tissue-simulant material (S/m)
- ρ = mass density of the tissue-simulant material (kg/m3)
- E = Total RMS electric field strength (V/m)

NOTE: The primary factors that control rate of energy absorption were found to be the wavelength of the incident field in relations to the dimensions and geometry of the irradiated organism, the orientation of the organism in relation to the polarity of field vectors, the presence of reflecting surfaces, and whether conductive contact is made by the organism with a ground plane.[6]

2. SAR MEASUREMENT SETUP

Robotic System

Measurements are performed using the DASY4 automated dosimetric assessment system. The DASY4 is made by Schmid & Partner Engineering AG (SPEAG) in Zurich, Switzerland and consists of high precision robotics system (Staubli), robot controller, Pentium III computer, near-field probe, probe alignment sensor, and the generic twin phantom containing the brain equivalent material. The robot is a six-axis industrial robot performing precise movements to position the probe to the location (points) of maximum electromagnetic field (EMF) (see Fig. 2.1).

System Hardware

A cell controller system contains the power supply, robot controller, teach pendant (Joystick), and a remote control used to drive the robot motors. The PC consists of the Micron Pentium IV 500 MHz computer with Windows NT system and SAR Measurement Software DASY4, A/D interface card, monitor, mouse, and keyboard. The Staubli Robot is connected to the cell controller to allow software manipulation of the robot. A data acquisition electronic (DAE) circuit that performs the signal amplification, signal multiplexing, AD-conversion, offset measurements, mechanical surface detection, collision detection, etc. is connected to the Electro-optical coupler (EOC). The EOC performs the conversion from the optical into digital electric signal of the DAE and transfers data to the PC plug-in card.

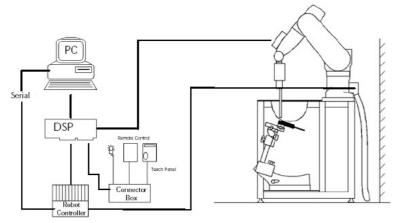


Figure 2.1 SAR Measurement System Setup

System Electronics

The DAE3 consists of a highly sensitive electrometer-grade preamplifier with autozeroing, a channel and gain-switching multiplexer, a fast 16 bit AD-converter and a command decoder and control logic unit. Transmission to the PC-card is accomplished through an optical downlink for data and status information and an optical uplink for commands and clock lines. The mechanical probe mounting device includes two different sensor systems for frontal and sidewise probe contacts. They are also used for mechanical surface detection and probe collision detection. The robot uses its own controller with a built in VME-bus computer. The system is described in detail in [7].

3. SAR MEASUREMENT SETUP

Probe Measurement System



The SAR measurements were conducted with the dosimetric probe ET3DV6, designed in the classical triangular configuration [7] (see Fig. 3.2) and optimized for dosimetric evaluation. The probe is constructed using the thick film technique; with printed resistive lines on ceramic substrates. The probe is equipped with an optical multifiber line ending at the front of the probe tip (see Fig. 3.3). It is connected to the EOC box on the robot arm and provides an automatic detection of the phantom surface. Half of the fibers are connected to a pulsed infrared transmitter, the other half to a synchronized receiver. As the probe approaches the surface, the reflection from the surface produces a coupling from the transmitting to the receiving fibers. This reflection increases first during the approach, reaches maximum and then decreases. If the probe is flatly touching the surface, the coupling is zero. The distance of the coupling maximum to the surface is independent of the surface reflectivity and largely independent of the surface to probe angle. The DASY4 software reads the reflection during a software approach and looks for the maximum using a 2nd order fitting (see Fig.3.1). The approach is stopped at reaching the maximum.

Figure 3.1 DAE System

Probe Specifications

Calibration:	In air from 10 MHz to 2.5 GHz	
	In brain and muscle simulating tissue at	54.7
	Frequencies of 450 MHz, 835 MHz, 900 MHz	
	1900MHz and 2450MHz	∆ -BEAM
Frequency:	10MHz to 6GHz	Figure 3.1 Triangular Probe
	Linearity: \pm 0.2dB (30 MHz to 3 GHz)	Configuration
Dynamic:	5uW/g to >100mW/g	
Range:	Linearity: ±0.2dB	
Dimensions:	Overall length: 330 mm	
	Tip length :16mm	21
	Body diameter :12mm	Ø
	Tip diameter :6.8 mm	
	Distance from probe tip to dipole centers:2.7	mm //
Application:	General dosimetry up to 3 GHz	Figure 2.2 Broke
	Compliance tests of mobile phones	Figure 3.2 Probe Thick-Film Technique
	Fast automatic scanning in arbitrary phantom	S

Probe Calibration Process

Dosimetric Assessment Procedure

Each probe is calibrated according to a dosimetric assessment procedure described in [8] with accuracy better than +/- 10%. The spherical isotropy was evaluated with the procedure described in [9] and found to be better than +/-0.25dB. The sensitivity parameters (NormX, NormY, NormZ), the diode compression parameter (DCP) and the conversion factor (ConvF) of the probe is tested.

Free Space Assessment

The free space E-field from amplified probe outputs is determined in a test chamber. This is performed in a TEM cell for frequencies below 1 GHz (see Fig. 4.1), and in a waveguide above 1GHz for free space. For the free space calibration, the probe is placed in the volumetric center of the cavity at the proper orientation with the field. The probe is then rotated 360 degrees.

Temperature Assessment *

E-field temperature correlation calibration is performed in a flat phantom filled with the appropriate simulated brain tissue. The measured free space E-field in the medium correlates to temperature rise in a dielectric medium. For temperature correlation calibration a RF transparent thermistorbased temperature probe is used in conjunction with the E-field probe (see Fig. 4.2).

where:

σ

0

$$SAR = C \frac{\Delta T}{\Delta t} \qquad SAR = \frac{|E|^2 \cdot \sigma}{\rho}$$


where:


 Δt exposure time (30 seconds), =

С heat capacity of tissue (brain or muscle), =

 $\Delta T =$ temperature increase due to RF exposure.

SAR is proportional to $\Delta T / \Delta t$, the initial rate of tissue heating, before thermal diffusion takes place. Now it's possible to quantify the electric field in the simulated tissue by equating the thermally derived SAR to the E- field;

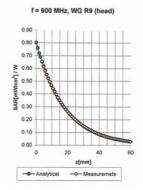

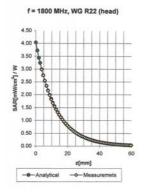

simulated tissue conductivity,

Tissue density (1.25 g/cm³ for brain tissue)

Figure 4.1 E-Field and Temperature Figure 4.2 E-Field and Temperature Measurements at 900MHz[7] Measurements at 1900MHz[7]

5. PHANTOM & EQUIVALENT TISSUES

SAM Phantom



Figure 5.1 SAM Twin Phantom

The SAM Twin Phantom V4.0 is constructed of a fiberglass shell integrated in a wooden table. The shape of the shell is based on data from an anatomical study designed to determine the maximum exposure in at least 90% of all users [11][12]. It enables the dosimetric evaluation of left and right hand phone usage as well as body mounted usage at the flat phantom region. A cover prevents the evaporation of the liquid. Reference markings on the Phantom allow the complete setup of all predefined phantom positions and measurement grids by manually teaching three points in the robot. (see Fig. 5.1)

Brain & Muscle Simulating Mixture Characterization



The brain and muscle mixtures consist of a viscous gel using hydroxethyl cellullose (HEC) gelling agent and saline solution (see Table 6.1). Preservation with a bacteriacide is added and visual inspection is made to make sure air bubbles are not trapped during the mixing process. The mixture is calibrated to obtain proper dielectric constant (permittivity) and conductivity of the desired tissue. The head tissue dielectric parameters recommended by the IEEE SCC-34/SC-2 have been incorporated in the following table. Other head and body tissue parameters that have not bee specified in P1528 are derived from the issue dielectric parameters computed from he 4-Cole-Cole equations The mixture characterizations used for the brain and muscle tissue simulating liquids are according to the data by C. Gabriel and G. Hartsgrove [13].(see Fig. 5.2)

Figure 5.2 Simulated Tissue

INGREDIENTS		SIMULATING TISSUE						
INGREDIENTS		835MHz Brain	835MHz Muscle	1900MHz Brain	1900MHz Muscle			
Mixture Percentage	Mixture Percentage							
WATER		41.45	52.50	54.90	40.40			
DGBE		0.000	0.000	44.92	58.00			
SUGAR		56.00 45.00 0.000 0.000						
SALT		1.450 1.400 0.180 0.500						
BACTERICIDE		0.100 0.100 0.000 0.100						
HEC		1.000	1.000	0.000	1.000			
Dielectric Constant	Target	41.50	55.20	40.00	53.30			
Conductivity (S/m)	Target	0.900	0.970	1.400	1.520			

Table 5.1 Composition of the Brain & Muscle Tissue Equivalent Matter

Device Holder for Transmitters



Figure 5.2 Mounting Device In combination with the SAM Twin Phantom V4.0, the Mounting Device (see Fig. 5.2) enables the rotation of the mounted transmitter in spherical coordinates where by the rotation point is the ear opening. The devices can be easily, accurately, and repeatably be positioned according to the FCC specifications. The device holder can be locked at different phantom locations (left head, right head, flat phantom).

 Note: A simulating human hand is not used due to the complex anatomical and geometrical structure of the hand that may produce infinite number of configurations [12]. To produce the worst-case condition (the hand absorbs antenna output power), the hand is omitted during the tests.

6. TEST SYSTEM SPECIFICATIONS

Automated Test System Specifications

Positioner

Robot: Stäubli Unimation Corp. Robot Model: RX60L

Repeatability:	0.02 mm
No. of axis:	6

Data Acquisition Electronic (DAE) System

Cell Controller		
Processor:	Pentium 4 CPU	
Clock Speed:	3 GHz	
Operating System:	Window 2000	
Data Card:	DASY4 PC-Board	Figure 6.1 DASY4 Test System
Data Converter		
Features:	Signal, multiplexer,A/D co	nverter. & control logic
Software:	DASY4	
Connecting Lines :	Optical downlink for data a	and status info
	Optical uplink for commar	nds and clock
PC Interface Card		
Function:	24 bit (64 MHz) DSP for r	eal time processing
	Link to DAE 3	
	16 bit A/D converter for s	urface detection system
	serial link to robot	
	direct emergency stop out	put for robot
E-Field Probes		
Model:	ET3DV6 S/N: 1703	
Construction:	Triangular core fiber optic o	letection system
Frequency:	10 MHz to 6 GHz	
Linearity:	\pm 0.2dB(30MHz to 3GHz)	
Phantom		
Phantom:	SAM Twin Phantom (V4.0)	
Shell Material :	Vivac Composite	
Thickness:	2.0 ± 0.2 mm	

7. DOSIMETRIC ASSESSMENT & PHANTOM SPECS

Measurement Procedure

The evaluation was performed using the following procedure:

1. The SAR measurement was taken at a selected spatial reference point to monitor power variations during testing. This fixed location point was measured and used as a reference value.

2. The SAR distribution at the exposed side of the head was measured at a distance of 3.9mm from the Inner surface of the shell. The area covered the entire dimension of the head and the horizontal grid spacing was 15mm x 15mm.

3. Based on the area scan data, the area of the maximum absorption was determined by spline interpolation. Around this point, a volume of $32mm \times 32mm \times 34mm$ (fine resolution volume scan, zoom scan) was assessed by measuring $5 \times 5 \times 7$ points. On this basis of this data set, the spatial peak SAR value was evaluated with the following procedure (see Fig. 7.1):

a. The data at the surface was extrapolated, since the center of the dipoles is 2.7 mm away from the tip of the probe and the distance between the surface and the lowest measuring point is 1.2mm. The extrapolation was based on a least square algorithm [15]. A polynomial of the fourth order was calculated through the points in z-axes. This polynomial was then used to evaluate the points between the surface and the probe tip.

b. The maximum interpolated value was searched with a straight-for war dalgorithm. Around this maximum the SAR values averaged over the spatial volumes (1g or 10g) were computed using the 3D-Spline interpolation algorithm. The 3D-spline is composed of three one-dimensional splines with the "Not a knot" condition (in x, y, and z directions) [15][16]. The volume was integrated with the trapezoidal algorithm. One thousand points (10 x 10 x 10) were interpolated to calculate the average. c. All neighboring volumes were evaluated until no neighboring volume with a

higher average value was found.

4. The SAR reference value, at the same location as procedure #1, was remeasured. If the value changed by more than 5%, the evaluation is repeated.

Specific Anthropomorphic Mannequin (SAM) Specifications

The phantom for handset SAR assessment testing is a low-loss dielectric shell, with shape and dimensions derived from the anthropometric data of the 90th percentile adult male head dimensions as tabulated by the US Army. The SAM Twin Phantom shell is bisected along the mid-sagittal plane into right and left halves (see Fig. 7.2). The perimeter sidewalls of each phantom halves are extended to allow filling with liquid to a depth that is sufficient to minimized reflections from the upper surface. The liquid depth is maintained at a minimum depth of 15cm to minimize reflections from the upper surface.



Figure 7.2 SAM Twin Phantom shell

8. DEFINITION OF REFERENCE POINTS

EAR Reference Point

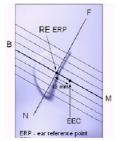


Figure 8.2 Close-up side view of ERPs

Figure 8.1 shows the front,, back and side views of the SAM Twin Phantom. The point "M" is the reference point for the center of the mouth, "LE" is the left ear reference point(ERP), and "RE" is the right ERP. The ERPs are 15mm posterior to the entrance to the Ear canal (EEC) along the B-M line (Back-Mouth), as shown in Figure 9.2. The plane Passing through the two ear canals and M is defined as the Reference Plane. The line N-F (Neck- Front) is perpendicular to the reference plane and passing through the RE (or LE) is called the Reference Pivoting Line (see Figure 8.2). Line B-M is perpendicular to the N-F line. Both N-F and B-M lines are marked on the external phantom shell to facilitate handset positioning [5]



Figure 8.1 Front, back and side view of SAM Twin Phantom

Handset Reference Points

Two imaginary lines on the handset were established: the vertical centerline and the horizontal line. The test device was placed in a normal operating position with the "test device reference point" located along the "vertical centerline" on the front of the device aligned to the "ear reference point" (See Fig. 8.3). The "test device reference point" was than located at the same level as the center of the ear reference point. The test device was positioned so that the "vertical centerline" was bisecting the front surface of the handset at it's top and bottom edges, positioning the "ear reference point" on the outer surface of the both the left and right head phantoms on the ear reference point.

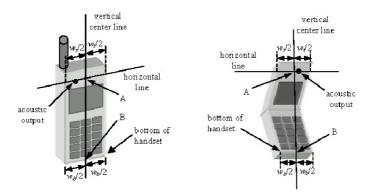


Figure 8.3 Handset Vertical Center & Horizontal Line Reference Points

9. TEST CONFIGURATION POSITIONS(Continued)

Positioning for Cheek/Touch

1. The test device was positioned with the handset close to the surface of the phantom such that point A is on the (virtual) extension of the line passing through points RE and LE on the phantom (see Figure 9.1), such that the plane defined by the vertical center line and the horizontal line of the phone is approximately parallel to the sagittal plane of the phantom.



Figure 9.1 Front, Side and Top View of Cheek/Touch Position

- 2. The handset was translated towards the phantom along the line passing through RE & LE until the handset touches the ear.
- 3. While maintaining the handset in this plane, the handset was rotated around the LE-RE line until the vertical centerline was in the plane normal to MB-NF including the line MB (reference plane).
- 4. The phone was hen rotated around the vertical centerline until the phone(horizontal line) was symmetrical was respect to the line NF.
- 5. While maintaining the vertical centerline in the reference plane, keeping point A on the line passing through RE and LE, and maintaining the phone contact with the ear, the handset was rotated about the line NF until any point on the handset made contact with a phantom point below the ear (cheek). See Figure 9.2)




Figure 9.2 Side view w/ relevant markings

9. TEST CONFIGURATION POSITIONS(Continued)

Positioning for Ear / 15 ° Tilt

With the test device aligned in the "Cheek/Touch Position":

1. While maintaining the orientation of the phone, the phone was retracted parallel to the reference plane far enough to enable a rotation of the phone by 15degree.

2. The phone was then rotated around the horizontal line by 15 degree.

3. While maintaining the orientation of the phone, the phone was moved parallel to the reference plane until any part of the phone touches the head. (In this position, point A was located on the line RE-LE). The tilted position is obtained when the contact is on the pinna. If the contact was at any location other than the pinna, the angle of the phone would then be reduced. The tilted position was obtained when any part of the phone was in contact of the ear as well as a second part of the phone was in contact with the head (see Figure 9.3).



Figure 9.3 Front, Side and Top View of Ear/15° Tilt Position




Figure 9.4 Side view w/ relevant markings

9. TEST CONFIGURATION POSITIONS

Body Holster /Belt Clip Configurations

Body-worn operating configurations are tested with the belt-clips and holsters attached to

the device and positioned against a flat phantom in a normal use configuration (see Figure 9.5). A device with a headset output is tested with a headset connected to the device. Body dielectric parameters are used.

Accessories for Body- worn operation configurations are divided into two categories: those that do not contain components and those that do contain metallic metallic components. When multiple accessories that do not contain metallic components are supplied with the device, the device is tested with only the accessory that dictates the closest spacing to the body. multiple accessories that contain Then metallic components are supplied with the device, the device is tested with each accessory that contains a unique metallic component. If multiple accessories share an identical metallic component (i.e. the same metallic belt-clip used with different holsters with no other metallic components) only the accessory dictates the that closest spacing to the body is tested.



Figure 9.5 Body Belt Clip & Holster Configurations

Body-worn accessories may not always be supplied or available as options for some Devices intended to be authorized for body-worn use. In this case, a test configuration where a separation distance between the back of the device and the flat phantom is used.All test position spacings are documented.

Transmitters that are designed to operate in front of a person's face, as in push-to-talk configurations, are tested for SAR compliance with the front of the device positioned to face the flat phantom. For devices that are carried next to the body such as a shoulder, waist or chest-worn transmitters, SAR compliance is tested with the accessory(ies), including headsets and microphones, attached to the device and positioned against a flat phantom in a normal use configuration.

In all cases SAR measurements are performed to investigate the worst-case positioning. Worst-case positioning is then documented and used to perform Body SAR testing. In order for users to be aware of the body-worn operating requirements for meeting RF exposure compliance, operating instructions and cautions statements are included in the user's manual.

10. ICNIRP GUIDELINES RF EXPOSURE LIMITS

Uncontrolled Environment

UNCONTROLLED ENVIRONMENTS are defined as locations where there is the exposure of individuals who have no knowledge or control of their exposure. The general population/uncontrolled exposure limits are applicable to situations in which the general public may be exposed or in which persons who are exposed as a consequence of their employment may not be made fully aware of the potential for exposure or cannot exercise control over their exposure. Members of the general public would come under this category when exposure is not employment-related; for example, in the case of a wireless transmitter that exposes persons in its vicinity.

Controlled Environment

CONTROLLED ENVIRONMENTS are defined as locations where there is exposure that may be incurred by persons who are aware of the potential for exposure, (i.e. as a result of employment or occupation). In general, occupational/controlled exposure limits are employment, who have been made fully aware of the potential for exposure and can exercise control over their exposure. This exposure category is also applicable when the exposure is of a transient nature due to incidental passage through a location where the exposure levels may be higher than the general population/uncontrolled limits, but the exposed person is fully aware of the potential for exposure and can exercise control over his or her exposure by leaving the area or by some other appropriate means.

	HUMAN EXPOSURE LIMITS	
	General Public Exposure (W/kg) or (mW/g)	Occupational Exposure (W/kg) or (mW/g)
Whole-Body average SAR (W/kg)	0.08	0.40
Localized SAR (head and trunk) (W/kg)	1.60	8.00
Localized SAR (limbs) (W/kg)	4.00	20.00

Table 10.1. Safety Limits for Partial Body Exposure [2]

11.IEEE P1528 – MEASUREMENT UNCERTAINTIES

France Description	Uncertaint	Probability	Divisor	(Ci)	Standard	vi 2 or
Error Description	value $\pm\%$	Distribution	DIVISOI	1g	(1g)	Veff
Measurement System					·	
Probe calibration	± 4.8	Normal	1	1	± 4.8 %	∞
Axial isotropy	± 4.7	Rectangular	√3	0.7	± 1.9 %	∞
Spherical isotropy	± 9.6	Rectangular	√3	0.7	± 3.9 %	∞
Probe Linearity	± 4.7	Rectangular	√3	1	± 2.7 %	œ
Detection limits	± 1.0	Rectangular	√3	1	± 0.6 %	∞
Boundary Effects	± 1.0	Rectangular	√3	1	± 0.6 %	∞
Readout Electronics	± 1.0	Normal	1	1	± 1.0 %	∞
Response time	± 0.8	Normal	√3	1	± 0.8 %	∞
Noise	± 0	Normal	√3	1	±0%	∞
Integration time	± 2.6	Normal	√3	1	± 2.6 %	∞
Mechanical Constraints					-	-
Scanning System	± 0.4	Rectangular	√3	1	± 0.2 %	∞
Phantom Shell	± 4.0	Rectangular	√3	1	± 2.3 %	145
Probe Positioning	± 2.9	Rectangular	1	1	± 1.7 %	
Device Positioning	± 2.9	Normal	1	1	± 2.9 %	
Physical Parameters						
Liquid conductivity (Target)	± 5.0	Rectangular	√3	0.64	± 1.2 %	∞
Liquid conductivity (Meas.)	± 2.5	Rectangular	1	0.64	± 1.1 %	∞
Liquid permittivity (Target)	± 5.0	Rectangular	√3	0.6	± 1.4 %	∞
Liquid permittivity (Meas.)	± 2.5	Rectangular	1	0.6	± 1.2 %	∞
Combined Standard Uncertainty					± 10.3 %	
Expanded Uncertainty (k=2)					± 20.6 %	

The above measurement uncertainties are according to IEEE P1528 (2003)

12. SYSTEM VERIFICATION

Tissue Verification

	MEASURED TISSUE PARAMETERS							
	Target	Dielectric o	constant: ε	Condu	ctivity: σ			
Date(s)	Frequency	Target	Measured	Target	Measured			
Jan. 23, 2006	1900MHz Brain	40.0	39.7	1.40	1.390			
Jan. 27, 2006	1900MHz Brain	40.0	38.4	1.40	1.400			
Feb. 20, 2006	835MHz Brain	41.5	42.3	0.90	0.910			
Feb. 23, 2006	835MHz Brain	41.5	41.8	0.90	0.898			

Table 12.1 Simulated Tissue Verification [5]

Test System Validation

Prior to assessment, the system is verified to the $\pm 10\%$ of the specifications at 835MHz and 1900MHz by using the system validation kit(s). (Graphic Plots Attached)

	Table 12.2 System Validation [5]					
	SYSTEM DIPO	DLE VALIDATION	FARGET & MEAS	JRED		
	(835MHz / 1900 MHz v	alues are normalize	d to a forward po	wer of 1/4 W)		
	Targeted SAR _{1g} Measured SAR _{1g} Deviation					
Date(s)	System Validation Kit:	Target Frequency	(mW/g)	(mW/g)	(%)	
Jan. 23, 2006	D-1900V2, S/N: 5d029	1900MHz Brain	9.925	10.3	3.78	
Jan. 27, 2006	D-1900V2, S/N: 5d029	1900MHz Brain	9.925	10.7	7.81	
Feb. 20, 2006	D-835V2, S/N: 464	835MHz Brain	2.375	2.28	-4.00	
Feb. 23, 2006	D-835V2, S/N: 464	835MHz Brain	2.375	2.25	-5.26	

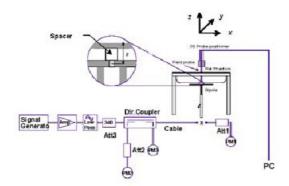




Figure 12.1 Dipole Validation Test Setup

13. SAR TEST DATA SUMMARY

See Measurement Result Data Pages

Procedures Used To Establish Test Signal


The handset was placed into simulated call mode (GSM850, PCS GSM) using manufacturers test codes. Such test signals offer a consistent means for testing SAR and are recommended for evaluating SAR [4]. When test modes are not available or inappropriate for testing a handset, the actual transmission is activated through a base station simulator or similar equipment. See data pages for actual procedure used in measurement.

Device Test Conditions

The handset is battery operated. Each SAR measurement was taken with a fully charged battery. In order to verify that the device was tested at full power, conducted output power measurements were performed before and after each SAR measurement to confirm the output power. If a conducted power deviation of more than 5% occurred, the test was repeated.

EUT Handset Reference Points

Figure 13.1 handset Reference Points

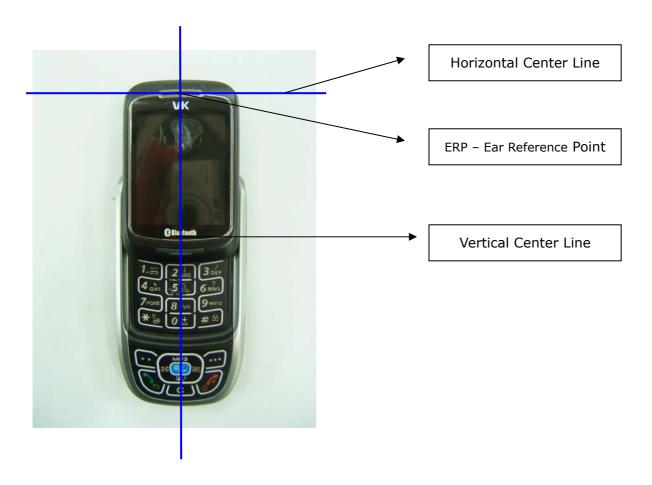

Mixture Type : <u>850MHz Head(Slide Up)</u>

14.1 ME	14.1 MEASUREMENT RESULTS (GSM850 Head SAR)						
FREQU	JENCY	Begin Power	End Power	Battery	Device Test	Device Test Antenna	
MHz	Ch	(dBm)	(dBm)	Туре	Position	Position	(W/kg)
824.2	128	31.92	31.88	Standard	Right Cheek/Touch	Intenna	0.312
836.6	190	32.10	31.95	Standard	Right Cheek/Touch	Intenna	0.402
848.8	251	32.19	32.16	Standard	Right Cheek/Touch	Intenna	0.379
836.6	190	32.10	32.04	Standard	Right Ear/15° Tilt	Intenna	0.153
824.2	128	31.92	31.99	Standard	Left Cheek/Touch	Intenna	0.302
836.6	190	32.10	31.88	Standard	Left Cheek/Touch	Intenna	0.318
848.8	251	32.19	32.05	Standard	Left Cheek/Touch	Intenna	0.362
836.6	190	32.10	31.89	Standard	Left Ear/15° Tilt	Intenna	0.152
836.6	190	32.10	31.90	Extended	Right Cheek/Touch	Intenna	0.365
836.6	190	32.10	31.92	Standard	Right Cheek/Touch	Intenna	*0.357
848.8	251	32.19	32.02	Extended	Left Cheek/Touch	Intenna	0.321
848.8	251	32.19	32.11	Standard	Left Cheek/Touch	Intenna	*0.351
ANSI / IEEE C95.1 1992 - SAFETY LIMIT Spatial Peak Uncontrolled Exposure/General Population				1.6 W/kg	e ad J (mW/g) ver 1 gram		

NOTE:

- 1. The test data reported are the worst-case SAR value with the antenna-head position set in a typical configuration. Test procedures used are according to FCC/OET Bulletin 65, Supp.C [July 2001].
- 2. All modes of operation were investigated, and worst-case results are reported.
- 3. Prior to testing the conducted output power was measured.
- 4. The EUT is tested 2nd hot-spot peak, if it is less than 2dB below the highest peak and with a peak SAR value greater than 0.5W/kg.
- 5. Battery is fully charged for all readings.
- 6.Test Signal Call Mode

 Continuous Tx On
 Manu.Test Codes
 BaseStation Simulator
- 7. Tissue parameters and temperatures are listed on the SAR plots.
- 8. Liquid tissue depth is 15.0 cm.±0.1
- 9. *Highest SAR value measurement in this band repeated with Bluetooth active.
- 10. Justification for reduced test configurations: Per FCC/OET Bulletin 65 Supplement C (July,2001), if the SAR measured at the middle channel for each test configuration (left, right, cheek/touch, tilt/ear, extended and retracted) is least 2.0 dB lower than the SAR limit, testing at the high and low channels is optional for such test configuration(s).

14.1 ME	14.1 MEASUREMENT RESULTS (GSM850 Head SAR)							
FREQU	JENCY	Begin Power	End Power	Battery	Device Test	Antenna	SAR	
MHz	Ch	(dBm)	(dBm)	Туре	Position	Position	(W/kg)	
824.2	128	31.92	31.86	Standard	Right Cheek/Touch	Intenna	0.176	
836.6	190	32.10	32.09	Standard	Right Cheek/Touch	Intenna	0.210	
848.8	251	32.19	32.16	Standard	Right Cheek/Touch	Intenna	0.216	
836.6	190	32.10	32.00	Standard	Right Ear/15° Tilt	Intenna	0.119	
824.2	128	31.92	31.81	Standard	Left Cheek/Touch	Intenna	0.149	
836.6	190	32.10	31.98	Standard	Left Cheek/Touch	Intenna	0.215	
848.8	251	32.19	32.14	Standard	Left Cheek/Touch	Intenna	0.215	
836.6	190	32.10	32.11	Standard	Left Ear/15° Tilt	Intenna	0.152	
848.8	251	32.19	32.13	Extended	Right Cheek/Touch	Intenna	0.197	
848.8	251	32.19	32.14	Standard	Right Cheek/Touch	Intenna	*0.225	
848.8	251	32.19	32.19	Extended	Left Cheek/Touch	Intenna	0.189	
848.8	251	32.19	32.13	Standard	Left Cheek/Touch	Intenna	*0.204	
	ANSI / IEEE C95.1 1992 - SAFETY LIMIT Spatial Peak Uncontrolled Exposure/General Population						ead J (mW/g) ver 1 gram	

Mixture Type : 850MHz Head(Slide Down)

NOTE:

1. The test data reported are the worst-case SAR value with the antenna-head position set in a typical configuration. Test procedures used are according to FCC/OET Bulletin 65, Supp.C [July 2001].

- 2. All modes of operation were investigated, and worst-case results are reported.
- 3. Prior to testing the conducted output power was measured.
- 4. The EUT is tested 2nd hot-spot peak, if it is less than 2dB below the highest peak and with a peak SAR value greater than 0.5W/kg.
- 5. Battery is fully charged for all readings.
- 6.Test Signal Call Mode 🛛 Continuous Tx On 🔅 Manu.Test Codes BaseStation Simulator
- 7. Tissue parameters and temperatures are listed on the SAR plots.
- 8. Liquid tissue depth is 15.0 cm.±0.1
- 9. *Highest SAR value measurement in this band repeated with Bluetooth active.
- 10. Justification for reduced test configurations: Per FCC/OET Bulletin 65 Supplement C (July,2001), if the SAR measured at the middle channel for each test configuration (left, right, cheek/touch, tilt/ear, extended and retracted) is least 2.0 dB lower than the SAR limit, testing at the high and low channels is optional for such test configuration(s).

14.1 MEASUREMENT RESULTS (GSM850 Head SAR)							
FREQUENCY		Begin Power	End Power	Battery	Device Test	Antenna	SAR
MHz	Ch	(dBm)	(dBm)	Туре	Position	Position	(W/kg)
824.2	128	31.92	31.92	Standard	1.5cm [w/o Holster]	Intenna	0.309
836.6	190	32.10	32.14	Standard	1.5cm [w/o Holster]	Intenna	0.490
848.8	251	32.19	32.19	Standard	1.5cm [w/o Holster]	Intenna	0.497
848.8	251	32.19	32.19	Extended	1.5cm [w/o Holster]	Intenna	0.511
848.8	251	32.19	32.16	Extended	1.5cm [w/o Holster]	Intenna	*0.507
	U	1.6 W/kg	ead J (mW/g) ver 1 gram				

Mixture Type : 850MHz body

NOTE:

1. The test data reported are the worst-case SAR value with the antenna-head position set in a typical configuration. Test procedures used are according to FCC/OET Bulletin 65, Supp.C [July 2001].

- 2. All modes of operation were investigated, and worst-case results are reported.
- 3. Prior to testing the conducted output power was measured.
- 4. The EUT is tested 2nd hot-spot peak, if it is less than 2dB below the highest peak and with a peak SAR value greater than 0.5W/kg.
- 5. Battery is fully charged for all readings.

6.Test Signal Call Mode

Continuous Tx On
Manu.Test Codes
BaseStation Simulator

7. Tissue parameters and temperatures are listed on the SAR plots.

- 8. Liquid tissue depth is 15.0 cm.±0.1
- 9. *Highest SAR value measurement in this band repeated with Bluetooth active.

Mixture Type : <u>1900MHz Head(Slide Up)</u>

14.4 MEASUREMENT RESULTS (PCS Head SAR)							
FREQUE	FREQUENCY		End		Device Test	Antenna	SAR
MHz	Ch	Power (dBm)	Power (dBm)	Battery	Position	Position	(W/kg)
1850.2	512	30.50	30.42	Standard	Right Cheek/Touch	Intenna	0.188
1880.0	661	30.17	30.17	Standard	Right Cheek/Touch	Intenna	0.193
1909.8	810	29.83	29.79	Standard	Right Cheek/Touch	Intenna	0.170
1880.0	661	30.17	30.18	Standard	Right Ear/15° Tilt	Intenna	0.059
1880.0	661	30.17	30.16	Extended	Right Cheek/Touch	Intenna	0.171
1880.0	661	30.17	30.15	Standard	Right Cheek/Touch	Intenna	*0.144
1850.2	512	30.50	30.44	Standard	Left Cheek/Touch	Intenna	0.180
1880.0	661	30.17	30.02	Standard	Left Cheek/Touch	Intenna	0.136
1909.8	810	29.83	29.82	Standard	Left Cheek/Touch	Intenna	0.144
1880.0	661	30.17	30.18	Standard	Left Ear/15° Tilt	Intenna	0.099
1850.2	512	30.50	30.40	Extended	Left Cheek/Touch	Intenna	0.209
1850.2	512	30.50	30.48	Extended	Left Cheek/Touch	Intenna	*0.194
	ANSI / IEEE C95.1 1992 - SAFETY LIMIT Spatial Peak Uncontrolled Exposure/General Population						ead J (mW/g) ver 1 gram

NOTE:

1. The test data reported are the worst-case SAR value with the antenna-head position set in a typical configuration. Test procedures used are according to FCC/OET Bulletin 65, Supp.C [July 2001].

- 2. All modes of operation were investigated, and worst-case results are reported.
- 3. Prior to testing the conducted output power was measured.
- 4. The EUT is tested 2nd hot-spot peak, if it is less than 2dB below the highest peak and with a peak SAR value greater than 0.5W/kg.
- 5. Battery is fully charged for all readings.
- 6.Test Signal Call Mode

 Continuous Tx On
 Manu.Test Codes
 BaseStation Simulator
- 7. Tissue parameters and temperatures are listed on the SAR plots.
- 8. Liquid tissue depth is 15.0 cm.±0.1
- 9. *Highest SAR value measurement in this band repeated with Bluetooth active.
- 10. Justification for reduced test configurations: Per FCC/OET Bulletin 65 Supplement C (July,2001), if the SAR measured at the middle channel for each test configuration (left, right, cheek/touch, tilt/ear, extended and retracted) is least 2.0 dB lower than the SAR limit, testing at the high and low channels is optional for such test configuration(s).

14.4 MEA	14.4 MEASUREMENT RESULTS (PCS Head SAR)							
FREQUENCY		-	End	.	Device Test	Antenna	SAR	
MHz	Ch	Power (dBm)	Power (dBm)	Battery	Position	Position	(W/kg)	
1850.2	512	30.50	30.44	Standard	Right Cheek/Touch	Intenna	0.324	
1880.0	661	30.17	30.16	Standard	Right Cheek/Touch	Intenna	0.241	
1909.8	810	29.83	29.80	Standard	Right Cheek/Touch	Intenna	0.207	
1880.0	661	30.17	30.08	Standard	Right Ear/15° Tilt	Intenna	0.239	
1850.2	512	30.50	30.48	Extended	Right Cheek/Touch	Intenna	0.332	
1850.2	512	30.50	30.45	Extended	Right Cheek/Touch	Intenna	*0.287	
1850.2	512	30.50	30.41	Standard	Left Cheek/Touch	Intenna	0.310	
1880.0	661	30.17	30.11	Standard	Left Cheek/Touch	Intenna	0.240	
1909.8	810	29.83	29.75	Standard	Left Cheek/Touch	Intenna	0.219	
1880.0	661	30.17	30.15	Standard	Left Ear/15° Tilt	Intenna	0.226	
1850.2	512	30.50	30.35	Extended	Left Cheek/Touch	Intenna	0.243	
1850.2	512	30.50	30.48	Standard	Left Cheek/Touch	Intenna	*0.271	
	ANSI / IEEE C95.1 1992 - SAFETY LIMIT Spatial Peak Uncontrolled Exposure/General Population						ead J (mW/g) ver 1 gram	

Mixture Type : <u>1900MHz Head(Slide Down)</u>

NOTE:

1. The test data reported are the worst-case SAR value with the antenna-head position set in a typical configuration. Test procedures used are according to FCC/OET Bulletin 65, Supp.C [July 2001].

- 2. All modes of operation were investigated, and worst-case results are reported.
- 3. Prior to testing the conducted output power was measured.
- 4. The EUT is tested 2nd hot-spot peak, if it is less than 2dB below the highest peak and with a peak SAR value greater than 0.5W/kg.
- 5. Battery is fully charged for all readings.
- 6.Test Signal Call Mode 🛛 Continuous Tx On 🔅 Manu.Test Codes 🔅 BaseStation Simulator
- 7. Tissue parameters and temperatures are listed on the SAR plots.
- 8. Liquid tissue depth is 15.0 cm.±0.1
- 9. *Highest SAR value measurement in this band repeated with Bluetooth active.
- 10. Justification for reduced test configurations: Per FCC/OET Bulletin 65 Supplement C (July,2001), if the SAR measured at the middle channel for each test configuration (left, right, cheek/touch, tilt/ear, extended and retracted) is least 2.0 dB lower than the SAR limit, testing at the high and low channels is optional for such test configuration(s).

14.6 MEASUREMENT RESULTS (PCS Body SAR)							
FREQUENCY		Begin Power	End Power	Battery	Device Test	Antenna	SAR
MHz	Ch	(dBm)	(dBm)		Position	Position	(W/kg)
1850.2	512	30.50	30.58	Standard	1.5cm [w/o Holster]	Intenna	0.209
1880.0	661	30.17	30.16	Standard	1.5cm [w/o Holster]	Intenna	0.207
1909.8	810	29.83	29.78	Standard	1.5cm [w/o Holster]	Intenna	0.159
1850.2	512	30.50	30.49	Extended	1.5cm [w/o Holster]	Intenna	0.229
1850.2	512	30.50	30.46	Extended	1.5cm [w/o Holster]	Intenna	*0.257
	ANS Uncoi	1.6 W/kg	ody g (mW/g) over 1 gram				

Mixture Type : <u>1900MHz body</u>

NOTE:

- 1. The test data reported are the worst-case SAR value with the antenna-head position set in a typical configuration. Test procedures used are according to FCC/OET Bulletin 65, Supp.C [July 2001].
- 2. All modes of operation were investigated, and worst-case results are reported.
- 3. Prior to testing the conducted output power was measured.
- 4. The EUT is tested 2nd hot-spot peak, if it is less than 2dB below the highest peak and with a peak SAR value greater than 0.5W/kg.
- 5. Battery is fully charged for all readings.
- 6.Test Signal Call Mode 🛛 Continuous Tx On 🔅 Manu.Test Codes 🔅 BaseStation Simulator
- 7. Tissue parameters and temperatures are listed on the SAR plots.
- 8. Liquid tissue depth is 15.0 cm.±0.1
- 9. *Highest SAR value measurement in this band repeated with Bluetooth active.

15. SAR TEST EQUIPMENT

EQUIPMENT SPECIFICATIONS							
	Туре	Calibration Date	Serial Number				
Robot		N/A	F02/5Q85A1/A/01				
Robot Controller		N/A	F02/5Q85A1/C/01				
Joystick		N/A	D221340031				
Hicron Computer 1.1GHz	Pentium Celeron ,Window 2000	N/A	N/A				
Data Acquisition Electroni	cs	March 2005	520				
Dosimetric E-Field Probe		March 2005	1703				
Dummy Probe		N/A	N/A				
Sam Phantom		N/A	N/A				
Probe Alignment Unit LB		N/A	321				
SPEAG Validation Dipole	0835MHz	January 2006	464				
SPEAG Validation Dipole	D1900MHz	March 2005	5d029				
Head/Body Equivalent Ma	tter(835MHz)	January 2006	N/A				
Head/Body Equivalent Ma	tter(1900MHz)	January 2006	N/A				
HP EPM-442A Power Mete	r	March 2006	GB37170267				
HP E4421A Signal Genera	tor	July 2005	US37230529				
Amplifier		January 2006	1020 D/C 0221				
Network Analyzer		March 2006	8753D				
HP85070D Dielectric Prob	e Kit	N/A	LISO1440118				
SEMITEC Engineering	300MHz~3000MHz	August 2004	Shield Room				

Table 15.1 Test Equipment Calibration

NOTE:

The E-field probe was calibrated by SPEAG, by temperature measurement procedure. Dipole Validation measurement is performed by Digital EMC. before each test. The brain simulating material is calibrated by Digital EMC using the dielectric probe system and network analyzer to determine the conductivity and permittivity (dielectric constant) of the brain-equivalent material.

16. CONCLUSION

Measurement Conclusion

The SAR measurement indicates that the EUT complies with the RF radiation exposure limits of the FCC. These measurements are taken to simulate the RF effects exposure under worst-case conditions. Precise laboratory measures were taken to assure repeatability of the tests. The tested device complies with the requirements in respect to all parameters subject to the test. The test results and statements relate only to the item(s) tested.

Please note that the absorption and distribution of electromagnetic energy in the body are very complex phenomena that depend on the mass, shape, and size of the body, the orientation of the body with respect to the field vectors, and the electrical properties of both the body and the environment. Other variables that may play a substantial role in possible biological effects are those that characterize the environment (e.g. ambient temperature, air velocity, relative humidity, and body insulation) and those that characterize the individual (e.g. age, gender, activity level, debilitation, or disease). Because innumerable factors may interact to determine the specific biological outcome of an exposure to electromagnetic fields, any protection guide shall consider maximal amplification of biological effects as a result of field-body interactions, environmental conditions, and physiological variables.

17. REFERENCES

- [1] Federal Communications Commission, ET Docket 93-62, Guidelines for Evaluating the Environmental Effects of Radiofrequency Radiation, Aug. 1996.
- [2] ANSI/IEEE C95.1 1991, American National Standard safety levels with respect to human exposure to radio frequency electromagnetic fields, 300kHz to 100GHz, New York: IEEE, Aug. 1992.
- [3] ANSI/IEEE C95.3 1991, IEEE Recommended Practice for the Measurement of Potentially Hazardous Electromagnetic Fields - RF and Microwave, New York: IEEE, 1992.
- [4] Federal Communications Commission, OET Bulletin 65 (Edition 97-01), Supplement C (Edition 01-01), Evaluating Compliance with FCC Guidelines for Human Exposure to Radiofrequency Electromagnetic Fields, July 2001.
- [5] IEEE Standards Coordinating Committee 34 IEEE Std. 1528-2003, Recommended Practice for Determining the Peak Spatial-Average Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques.
- [6] NCRP, National Council on Radiation Protection and Measurements, Biological Effects and Exposure Criteria for Radio Frequency Electromagnetic Fields, NCRP Report No. 86, 1986. Reprinted Feb. 1995.
- [7] T. Schmid, O. Egger, N. Kuster, Automated E-field scanning system for dosimetric assessments, IEEE transaction on Microwave Theory and Techniques, vol. 44, Jan. 1996, pp. 105-113.
- [8] K. Pokovic, T. Schmid, N. Kuster, Robust setup for precise calibration of E-field probes in tissue simulating liquids at mobile communications frequencies, ICECOM97, Oct. 1997, pp. 120-124.
- [9] K. Polovċ,T.Schmid,and N.Kuster ,E-field Probe with improved isotropy in brain simulating liquids. Proceedings of the ELMAR, Zadar, Croatia, June 23-25, 1996, pp. 172-175.
- [10] Schmid & Partner Engineering AG, Application Note: Data Storage and Evaluation, June 1998, p2.
- [11] V. Hombach, K. Meier, M. Burkhardt, E. Kuhn, N. Kuster, The Dependence of EM Energy Absorption upon Human Head Modeling at 900 MHz, IEEE Transaction on Microwave Theory and Techniques, vol. 44 no. 10, Oct. 1996, pp. 1865-1873.
- [12] N. Kuster and Q. Balzano, Energy absorption mechanism by biological bodies in the near field of dipole antennas above 300MHz, IEEE Transaction on Vehicular Technology, vol. 41, no. 1, Feb. 1992, pp. 17-23.
- [13] G. Hartsgrove, A. Kraszewski, A. Surowiec, Simulated Biological Materials for Electromagnetic Radiation Absorption Studies, University of Ottawa, Bioelectromagnetics, Canada: 1987, pp. 29-36.
- [14] Q. Balzano, O. Garay, T. Manning Jr., Electromagnetic Energy Exposure of Simulated Users of Portable Cellular Telephones, IEEE Transactions on Vehicular Technology, vol. 44, no.3, Aug. 1995.
- [15] W. Gander, Computermathematick, Birkhaeuser, Basel, 1992.
- [16] W.H. Press, S.A. Teukolsky, W.T. Vetterling, and B.P. Flannery, Numerical Recepies in C, The Art of Scientific Computing, Second edition, Cambridge University Press, 1992.
- [17] Federal Communications Commission, OET Bulletin 65, Evaluating Compliance with FCC Guidelines for Human Exposure to Radiofrequency Electromagnetic Fields. Supplement C, Dec. 1997.
- [18] N. Kuster, R. Kastle, T. Schmid, Dosimetric evaluation of mobile communications equipment with known precision, IEEE Transaction on Communications, vol. E80-B, no. 5, May 1997, pp. 645-652.
- [19] CENELEC CLC/SC111B, European Prestandard (prENV 50166-2), Human Exposure to Electromagnetic Fields High-frequency: 10kHz-300GHz, Jan. 1995.
- [20] Prof. Dr. Niels Kuster , ETH, Eidgen Össische Technische Technische Hoschschule Zürich, Dosimetric Evaluation of the Cellular Phone.