


骨传导游泳耳机

产品规格参数

无线版本:V5.0
型号: Q90 RUNNER PRO
本地播放音乐格式:WAV, FLAC,APE,MP3
内存容量: 32GB-TF卡
工作频率:20Hz- 20kHz
喇叭直径:11.2 mm
喇叭阻抗: 8ohm
电池:锂聚合物电池,280mAh
喇叭功率: 0.5W*2
音乐播放时长:8-10H
通话时长:6H
待机时长:15天
充电时间:2小时
充电端口:磁吸充电
无线传输距离:10米
麦克风: 6026
麦克风灵敏度:-42dB
耳机类型:骨传导IOS设备电量显示
主要材料:PC/ABS

耳机操作说明

充电接口，插上电脑自动弹出U盘模式，可下载传输MP3

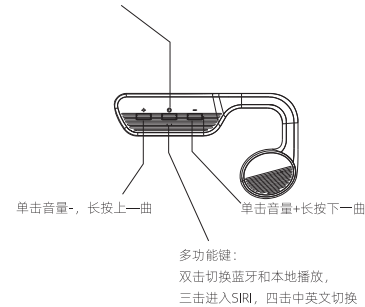

蓝牙状态/本地播放状态:
开关机:长按多功能键2秒开机,默认进入蓝牙模式。开机状态长按多功能键2秒则关机。
切换本地播放:双击多功能键可在“蓝牙模式”与“本地播放模式”间切换。

LED灯状态

开机	红蓝灯闪烁
关机	红灯灭
蓝牙配对	红蓝灯闪烁
蓝牙状态	灭灯
来电时	灭灯
拨打电话时	灭灯
播放音乐时	灭灯
充电显示	红灯常亮
充电完成	蓝灯常亮
电池低电压	语音提示+手机电量显示

产品功能

接听/拒接、音乐播放、音乐暂停、内置 32G内存、本地播放切换,8级防水,3米深度范围内游泳
适用产品
Android,5.0及IOS,8.0以上系统的手机、PSP、笔记本电脑等具备蓝牙功能终端设备

概述

感谢你选择我司的产品,本公司运动蓝牙耳机外观设计时尚、功能强大、兼容性好、让你真正体验到无线打电话、听音乐的乐趣!是你户外、游泳的最佳选择
本地播放
内置32G存储,可承载量高达5000首音乐,可摆脱手机，随时随地可听音乐
8级防水游泳耳机
游泳场景使用时,防止进水降低产品体验感与使用寿命,水深高度3m范围内。

操作说明


音量+: 单击音量加，长按下一曲
音量-: 单击音量减，长按上一曲
功能键: 长按2秒开机，长按2秒关机、单击暂停、单击播放
单击接听与挂断
MP3模式/蓝牙模式切换: 双击功能键可切换本地播放与蓝牙模式
数据传输模式: 磁吸线吸附耳机上,插上电脑自动弹出U盘模式，可下载传输音乐包与听书内容

充电方式

- 1.磁吸接口充电
- 2.连接充电插头充电
请使用1安及以下的充电器为耳机充电,充满电后请断开电源。
不建议使用移动电源为耳机充电
- 耳机有哪些功能
- 1.15天超长待机;
- 2.入耳舒适
- 3.高清立体声;
- 4.5.0蓝牙高速传输
- 5.可摆脱手机,随身听
6. 8级3m深度游泳
- 7.自带32GB内存,可储存5000首音乐
- 8.音效耳塞棉

耳机信号有效距离多远

蓝牙信号有效距离是10米,您可在3-5米内使用蓝牙耳机,因为太远的距离会导致手机传送无线信号中途造成的信号衰弱/去丢失/扰,此时就会听到断续的声音或者音效变差甚至断并连接
(断开后重新回到有效距离内耳机将会尝试重新连接)
耳机有噪音?
亲,耳机里的杂音或“静电噪音”起源于多方面因素,其中大多数原因是因为手机和耳机之间无线电信号干扰引起的,要提高通话效果,就要尽量保持手机和耳机之间没有无线电信号的干扰,同时尽量保证它们在传输信号的过程中没有任何阻碍,呈顺畅状态。
以下几点建议供参考
1、耳机和手机的佩戴尽量保持在身体的同一侧 2.避免手机放在提包内(帆布包产生的阻碍会少一些,皮包或者公文包产生的阻碍会多一些)
温馨提示
1.首次使用时会有微小振动,耳朵感觉酸,属于正常现象。2.控制70%音量为适中
3.如觉得声音偏小或者享受更好低音效果,可带上(海绵塞)
骨传导可清晰听到外围声音环境,给你带来更多生活方便,以及保护
着您的听力,让你生活更美好!

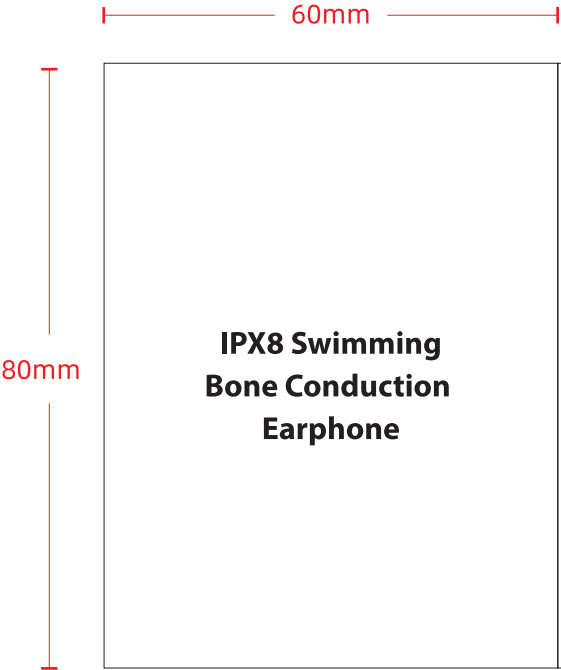


IPX8 Swimming
Bone Conduction
Earphone

Specification

Wireless:	BT V5.0
Model:	Q90 RUNNER PRO
IPX level:	IPX8, waterproof
Music format:	WAV,FLAC,APE,MP3
Memory:	32GB TF card (built-in)
Response frequency:	20Hz-20KHz
Speaker driver:	8ohm
Horn diameter	11.2mm
Speaker output:	0.5W*2
Battery:	280mAH
Playing time:	8-10 hours
Calling time:	6 hours
Standby time:	15 days
Charging time:	2 hours
Charging port:	mageitic
Wireless distance:	10m / 33fts
Microphone:	6026
Sensitivity:	-42dB
Main Material:	ABS

Instruction for the unit

Charging port: when connected to PC, a disk icon will be showed, you can copy the supported music files into the disk for playing.

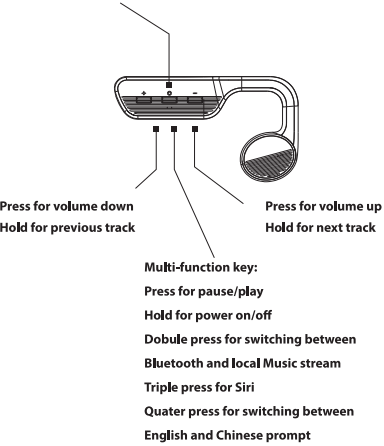

LED Status

Power On	Flashing in Red & Blue
Power Off	Red LED off
Pairing	Flashing in Red & Blue
Connected	Lights is off
Incoming call	Lights is off
Calling	Lights is off
Music play	Lights is off
Charging	Steady Red
Charge finish	Steady Blue
Low power	Voice prompt

Brief

Thanks for purchasing Q90 RUNNER PRO swimming bone conduction earphone, with its stylish and elegant design, multipul functions and easy to use, it would be your smart choice for enjoying music when swimming and other outdoor activities.

Local music stream: Upon the built-in 32GB TF card, you can store up to 5000 songs inside the unit and enjoy the music anywhere and anytime even without mobile phone nearby.

IPX8 level: it supports dive into the water within 3 meters, which is suitable for most of aquatic sports, dive and swimming.

Wireless music stream: Based on the Bluetooth V5.0 technology, the unit can connect with most of devices with Bluetooth function, included the mobiles with Android 5.0 or iOS 8.0 above, PSP, notebook and PC ect.

Handsfree calling: When connected with your mobilephone, the unit could be used to pick up incoming call and other calling operations.

Operations

Activate the Bluetooth function in your mobile phone, hold the MF button to turn on the unit, the Blue LED will blink quickly. Click Q90 RUNNER PRO from your Bluetooth device list and connect. You will see the Blue LED flash slowly and a prompt will be heard when connected successfully. To hold the MF button 4 seconds, the unit will be turned off.

Pause/Play: Press the MF button
Volume up: Press the + button
Volume down: Press the - button
Next track: Hold the + button
Previous track: Hold the - button

For switching between Bluetooth or local music stream, double press the MF button.

When there's an incoming calling, press the MF button once to pick up the calling, press again to hang up. Hold the MF button to reject the calling when an incoming calling in.

Charging

To use the attached charging cable, connect the unit by its magnetic port, another end connect to the power adaptor with DC 5V, 1A output.

You will see the LED in steady Red when charging is processing, it will be turned to steady Blue when charging is completed.

*****Attention*****
Please use the attached charging cable for charging. Please fully charge the unit before its first use. Please use the regular power adaptor with DC 5V, 500mA~1A output, any adaptor with excessive voltage or current may cause damage to the unit.

Store and Clean

Please store the unit in dry and tidy place, avoid moisture or liquid close to the unit.
Please keep the unit away from child to avoid any potential damage.
Please use the wet cloth to clean the unit if any dirty, do NOT use any chemical liquid to clean.

FAQs

- 1. Lost connection:**
The standard wireless distance is 10 meters, but if any obstacle between the mobile and the unit it will reduce the signal and cause interruption or noise.
Please try to close the unit and the mobile. To restart the unit is recommended if connection could not be built by above ways.
- 2. Noise from the unit:**
Please keep closer between mobile and the unit, and make sure no other wireless device nearby which may effect the signal.
- 3. Light vibration:**
The bone conduction earphone is using vibrators to generate the sound, the user may feel light vibration or uncomfortable feeling when first use. But it's good for user to hear the sound surround when enjoying music, especially for outdoor activities. Please reduce the volume level if you feel light vibration.
In the packages accessories we provided extra sponge eartips, which is helpful for improving user's experience and bass effect.
- 4. Could not turn on**
Please charge the unit if stored for a long time. We recommend to charge the unit fully one time in every month, it would be helpful for battery healthy.

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.