20220909 修改内容: 去掉法国logo

修改屏幕素材 (152改为155) 20220913 修改内容: 增加Magnetic 文字描述

增加Magnets的位置指示

20221008 修改内容:增加数据线描述

INKBIRD



Multi-Functional Thermometer

IHT-1M

USER MANUAL

Overview

thermometer integrates

functions of a foldable probe and infrared temperature measurement and sunnorts settings of various types of meat and tastes. We will get alerted when it reaches a preset target temperature. Its foldable probe responds fast and is easy to use. Infrared temperature measurement can avoid touching the food while measuring, which is safer and more hygienic. This food thermometer will be a good helper for you to make more delicious meals for your family and friends.


Features & Specifications

- Product Name: Multi-functional Thermometer
- Model: IHT-1M • Probe Readout Time: 2~3
- Seconds Probe Temperature Range: -58.0°F~572°F/-50.0°C ~ 300
- Probe Temperature Measurement Accuracy: ±1.0 °F/±0.5°C

• Probe Temperature Calibration Range: -9.9°F~9.9 °F/-4 9°C~4 9°C This multi-functional

- Infrared Temperature Range: -58.0°F~482°F/-50.0°C ~ 200°C
- Infrared Temperature Measurement Accuracy: ±2% of the reading
- Infrared Thermometer D:S
- = 1:1. 10+2CM
- Infrared Temperature Calibration Range: -9.9°F~9.9 °F/-4.9°C~4.9°C
- Magnetic
- Automatic Sleep Function . Any key and unfolding the probe to power on
- LCD with Backlight display, content-rich display of meat, taste, preset target value, etc.
- It has the function of reaching preset temperature
- Powered by a rechargeable lithium battery, can be fully charged in the fastest 1 hour. Warranty Period: 2 Years

Product Introduction

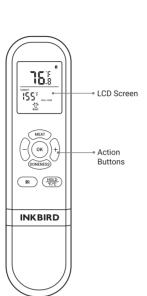


Action Button Instructions MEAT: Press it to select ____ Meat/Mustom /Timer mode

Infrared Temperature

Foldable

Magnets

USB Charge Cable



seconds to select the positive timer or countdown timer, then press the +/- button to adjust the value. IR: Press and hold it to

execute an infrared measurement, and release it to lock the temperature display. Once the display is locked, press any button to

OK: Confirm button

HOLD/°F/°C: When the probe is measuring the temperature, press it to lock/unlock the display of the measured temperature. In the timer mode, press it to start/stop timing. Press and hold it for 2 seconds to switch the temperature unit between °F and ℃.

How to set the meat type and doneness?

For example, select the meat type as Reef and the doneness as MEDIUM RARF Step1: Press the MEAT button to select "Beef"



Step2: Press the DONENESS button to select "MEDIUM RARF"



How to set custom temperature?

For example, set the custom temperature as 174°F. Step1: Press the MEAT button to select "Custom" The corresponding target temperature value will flash



Step2: Press the + or button to set the target temperature to 174°F



Step3: Press the OK button or no operation for 30 seconds to confirm and save the set

How to implement a timer (default timing mode)?

For example, set the countdown timer to run for 10 minutes and then sound an

Step1: Press the MEAT button to select . The time parameter will flash by this



Sten2: Confirm that the screen displays "Down". If not, press and hold the DONENESS button for 2 seconds to toggle the display. Step3: Press the + or button to adjust the time to 10MIN



Step4: Press the OK button or no operation for 30 seconds to confirm and save the set parameters. Step5: Press the HOLD button to start/stop the timer When

the timer st arts, the character "Down" will flash

COUR

Note: After the countdown starts, we can press the +/button to adjust the countdown time, then press the OK button to confirm and restart the countdown with the adjusted duration, or no operation for 10 seconds to resume the countdown before adjustment.

How to implement a positive

For example, set the positve timer to run for 10 minutes and then sound an alarm. Step1: Press the MEAT button to select . The time parameter will flash by this



Sten2: Press and hold the DONENESS button to toggle to the positive timer function The screen displays "UP" by this time



Step3: Press the + or button to adjust the time to 10MIN.



Step4: Press the OK button or no operation for 30 seconds


parameters. "UP" will flash.



starts, we can press the +/time, then press the OK operation for 10 seconds to resume the timer before adjustment

value of probe temperature/infrared temperature?

to confirm and save the set Step5: Press the HOLD button to start/stop the timer. When the timer starts, the character

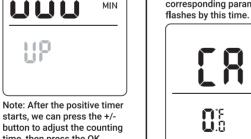

button to adjust the counting button to confirm and restart the timing with the adjusted duration, or no operation for 10 adjusted duration, or no

How to set the calibration

For example, set the calibration value of probe temperature as 0.5°F and the calibration value of infrared temperature as 1.0°F. Step1: Press and hold the MEAT button for 2 seconds to enter the setting of probe temperature calibration. The screen displays "CA" and the corresponding parameter



Sten2: Press the +/- button to adjust the parameter value to 0.5°F.



Step3: Press the MEAT button to display "IRCA" on the screen to set the calibration value of infrared temperature. Meanwhile, the corresponding parameter flashes.



Step4: Press the +/- button to adjust the parameter value to



Sten5: Press the OK hutton or no operation for 30 seconds to confirm and save the set parameters.

FCC Requirement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received.

including interference that may cause undesired

Note: This equipment has

been tested and found to

comply with the limits for a

Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However. there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

measures:

- Regrient or relocate the receiving antenna. - Increase the separation

between the equipment and receiver. - Connect the equipment into an outlet on a circuit different

from that to which the

receiver is connected

- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Annexed Table: Temperature Relationship Between Meat Type And

roneness					
MEAT	RARE	MEDIUM RARE	MEDIUM	MEDIUM WELL	WELL DONE
Chicken					165°F/74.0°C
Pork				142°F/62.0°C	150°F/65.0°C
Beef	125°F/52.0℃	133°F/56.0°C	140°F/60.0°C	150°F/66.0°C	155°F/68.0°C
Lamb			145°F/63.0℃	160°F/71.0°C	170°F/77.0°C
Turkey					165°F/74.0°C
Custom					165°F/74.0°C

INKBIRD TECH.C.L.

support@inkbird.com

Factory address: 6th Floor, Building 713, Pengji Llantang Industrial Area, NO.2 Pengxing Road, Luohu Disctrict, Shenzhen, China Office address: Room 1803, Guowei Building, NO.68 Guowei Road, Xianhu Community, Llantang, Lu











