



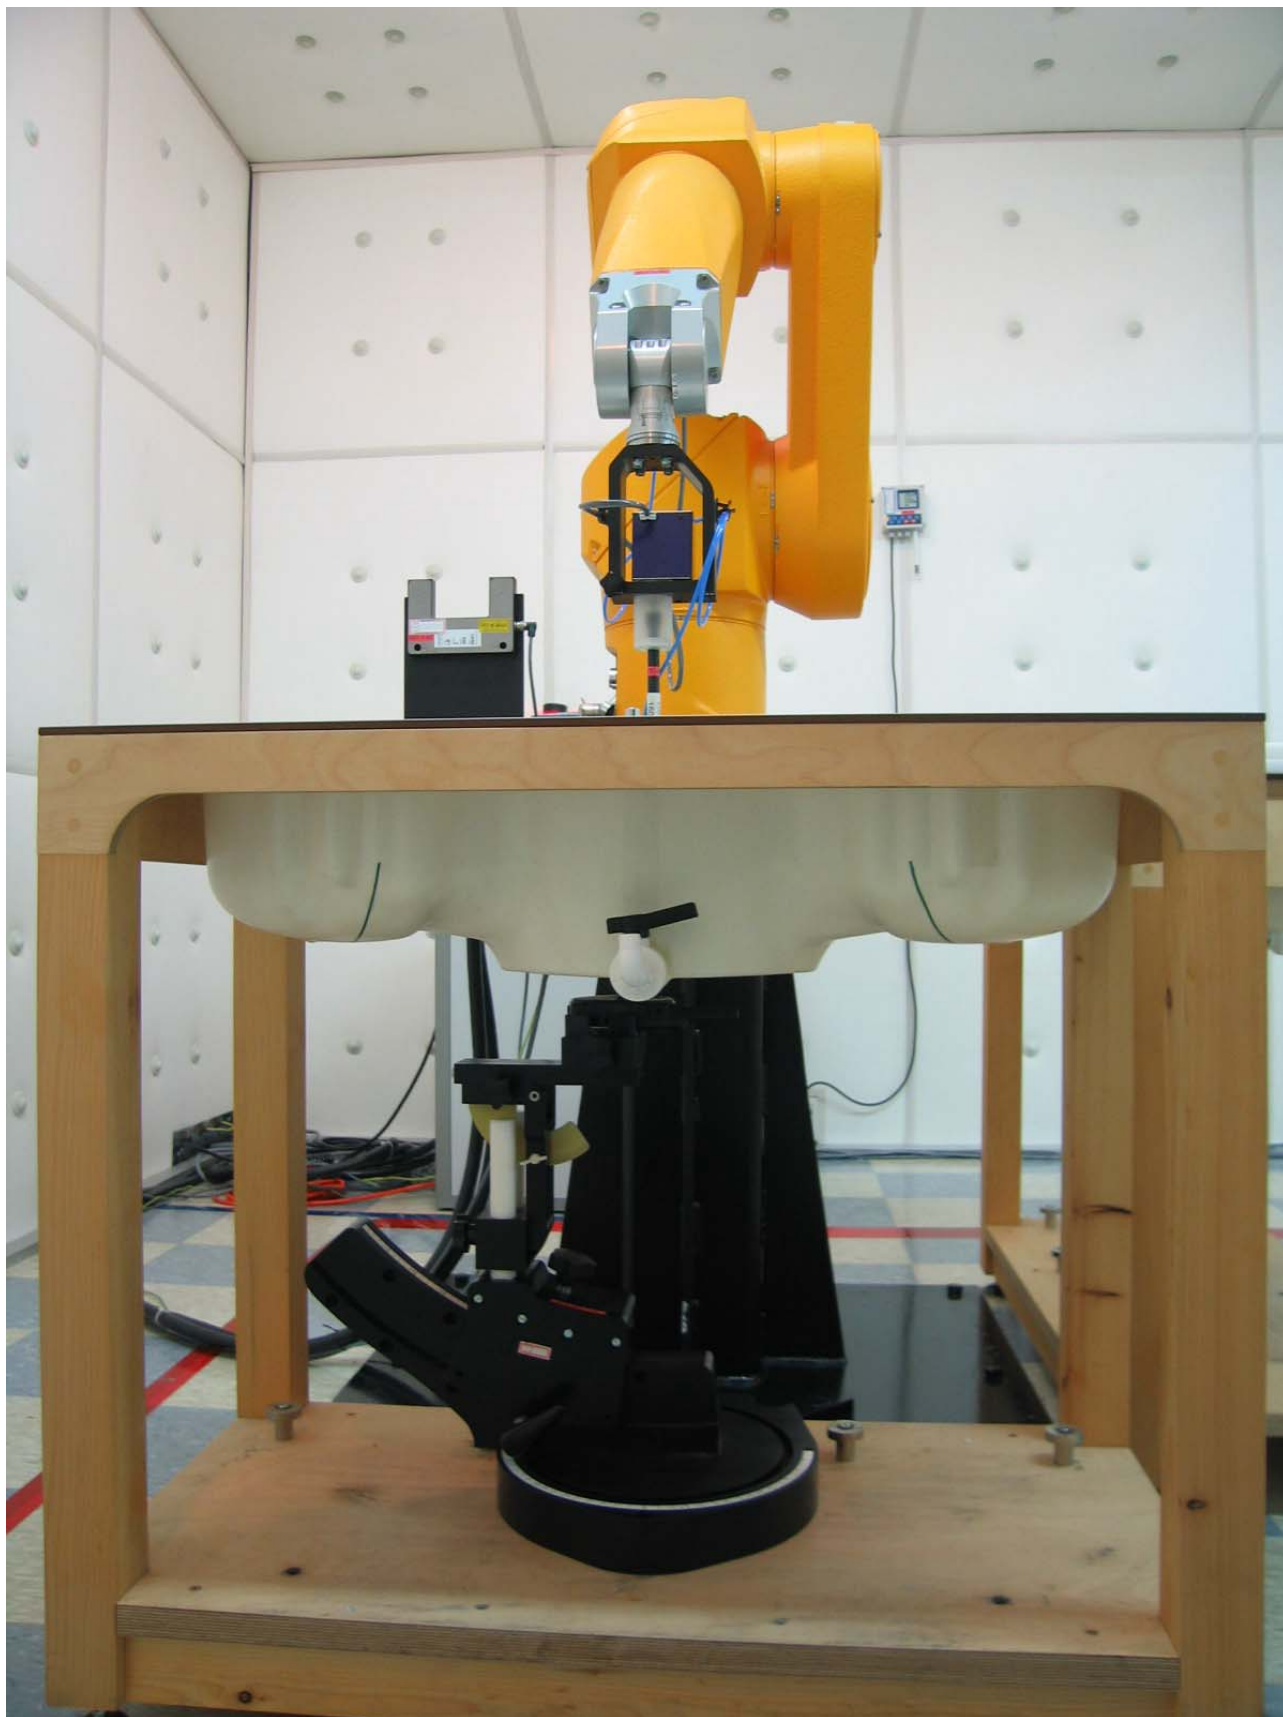


APPENDIX B – EUT TEST SETUP PHOTOGRAPHS

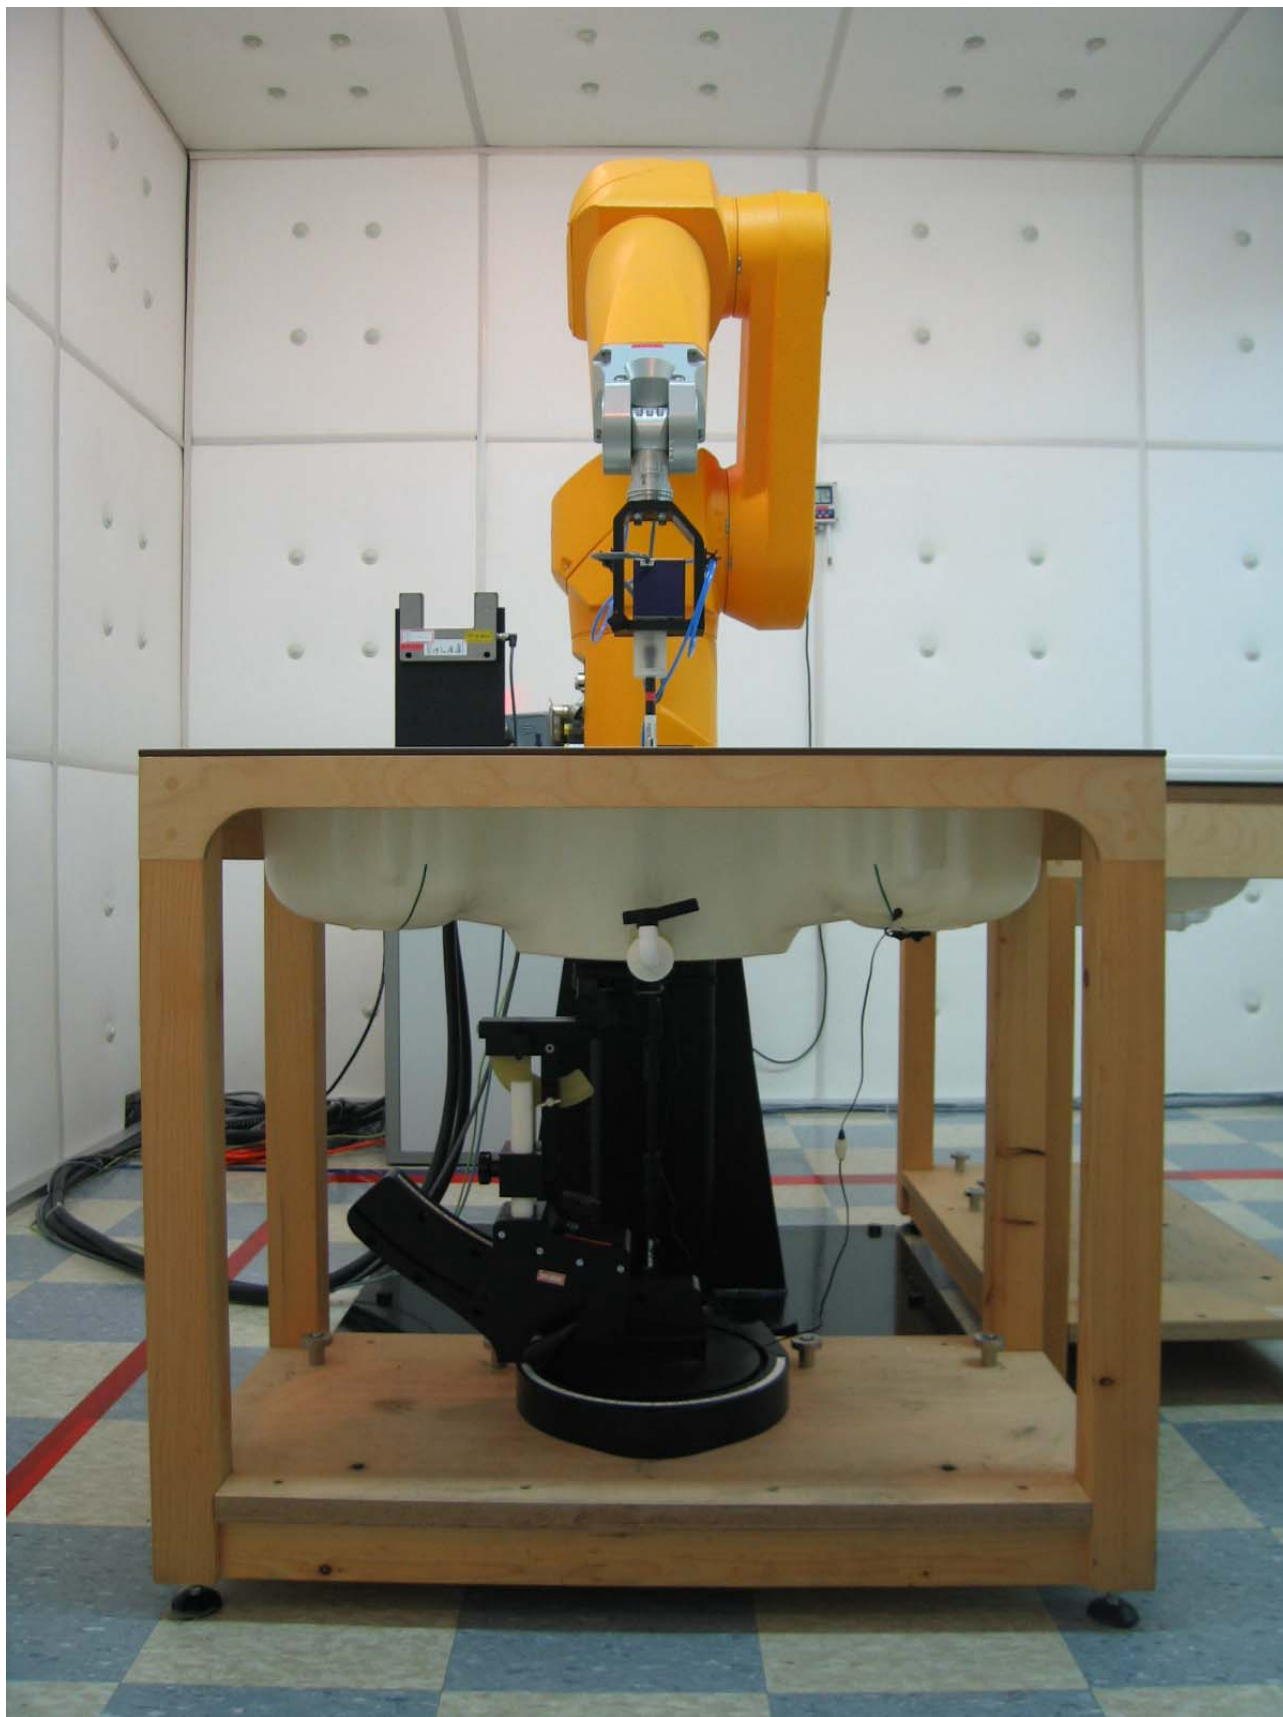


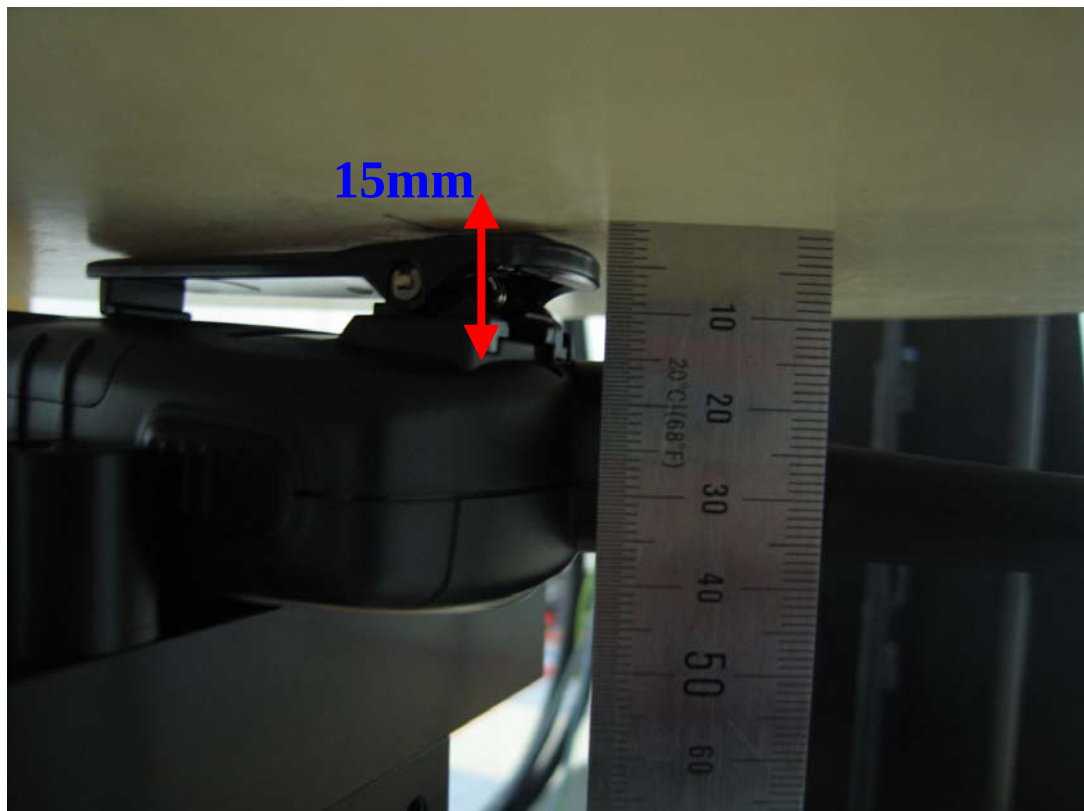

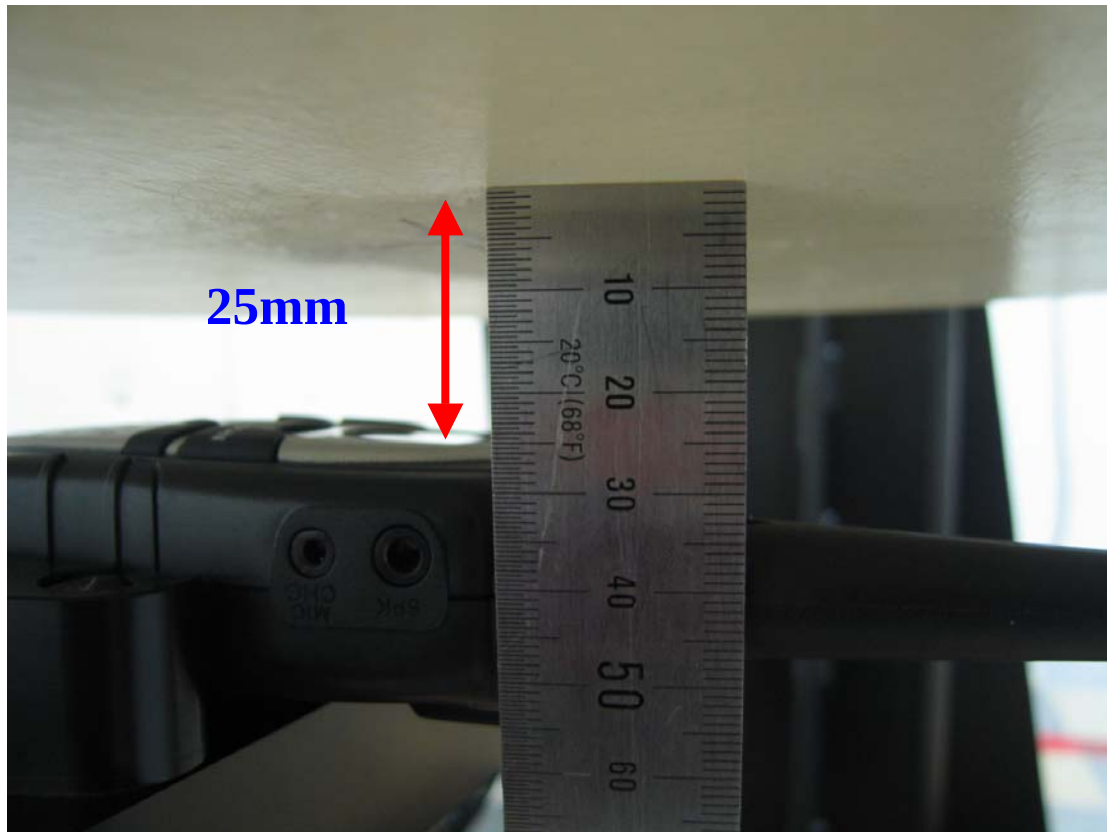

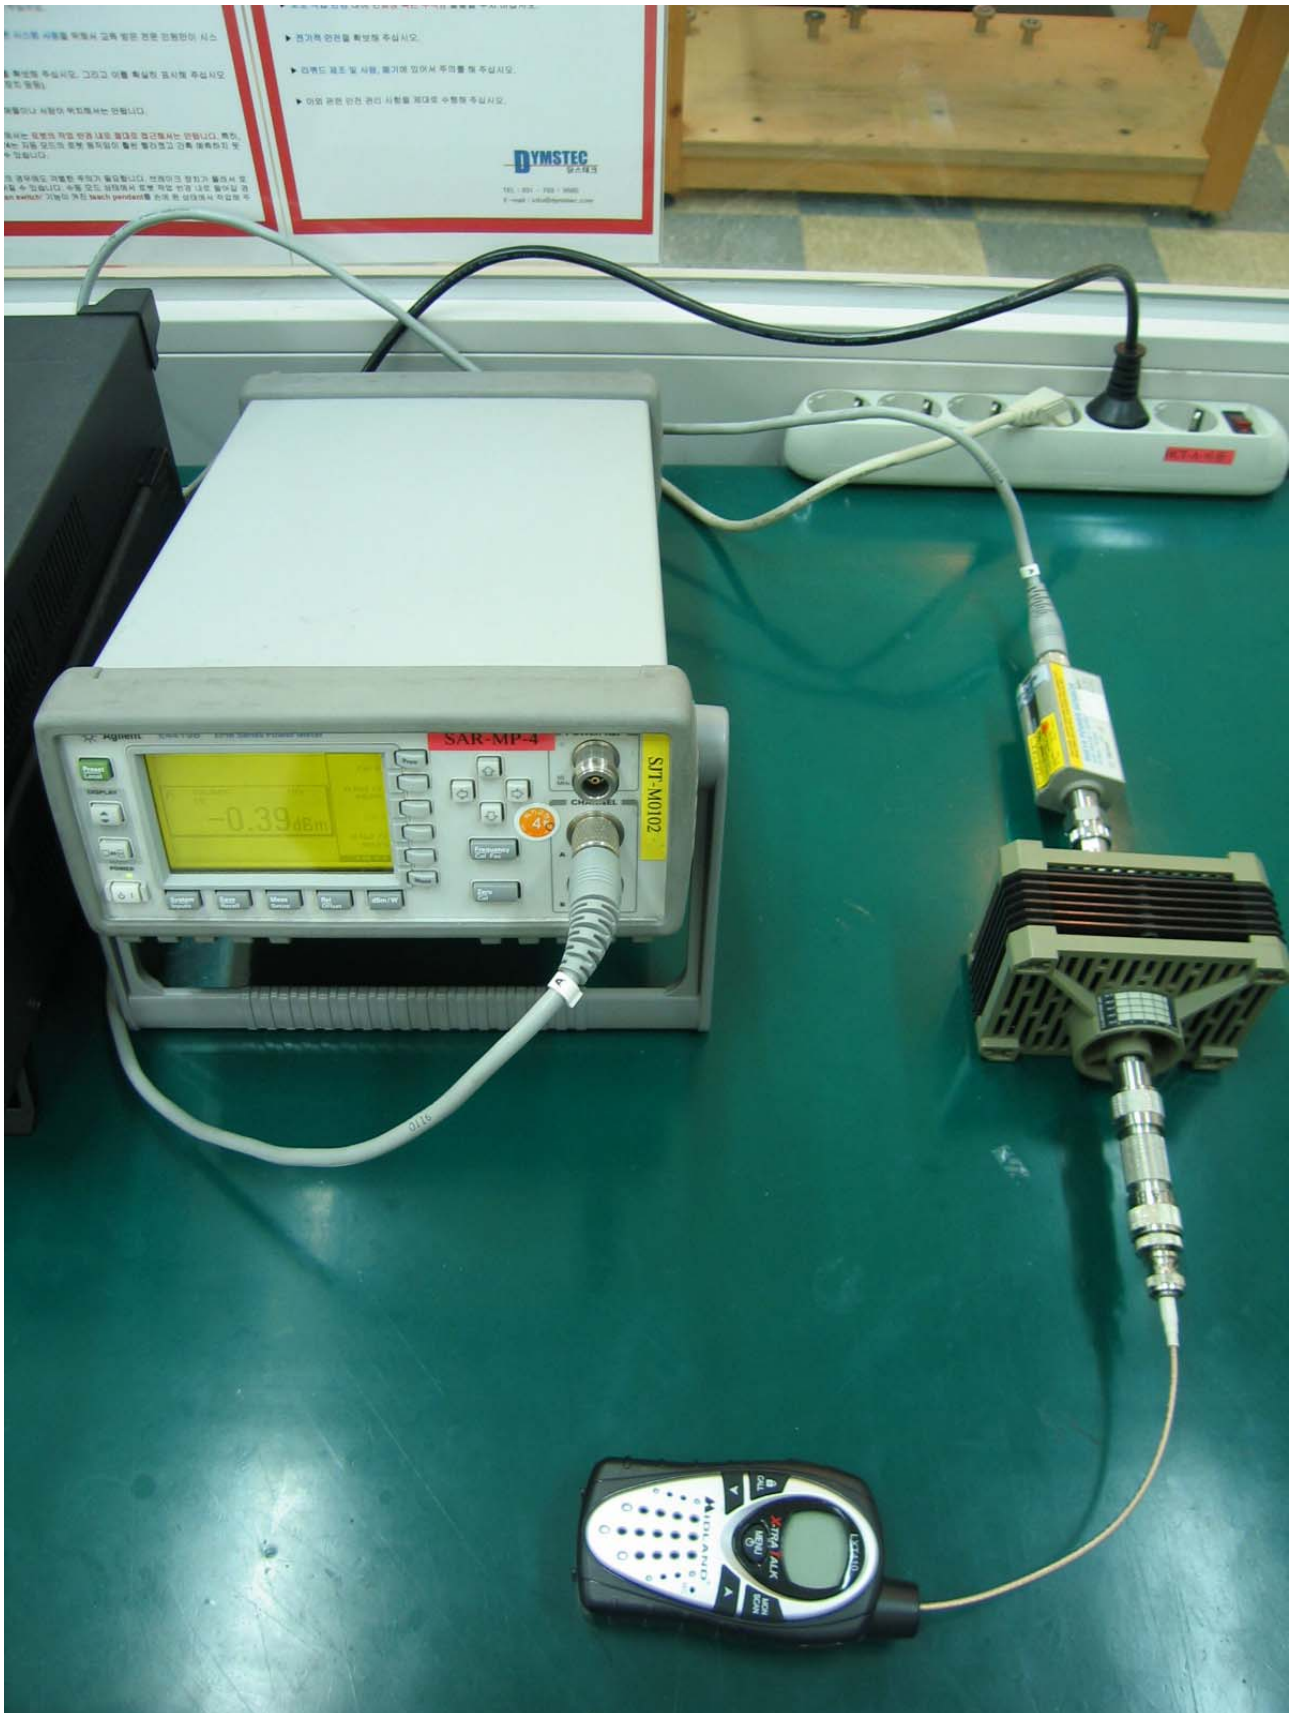


[Tissue Liquid Depth : 15cm]

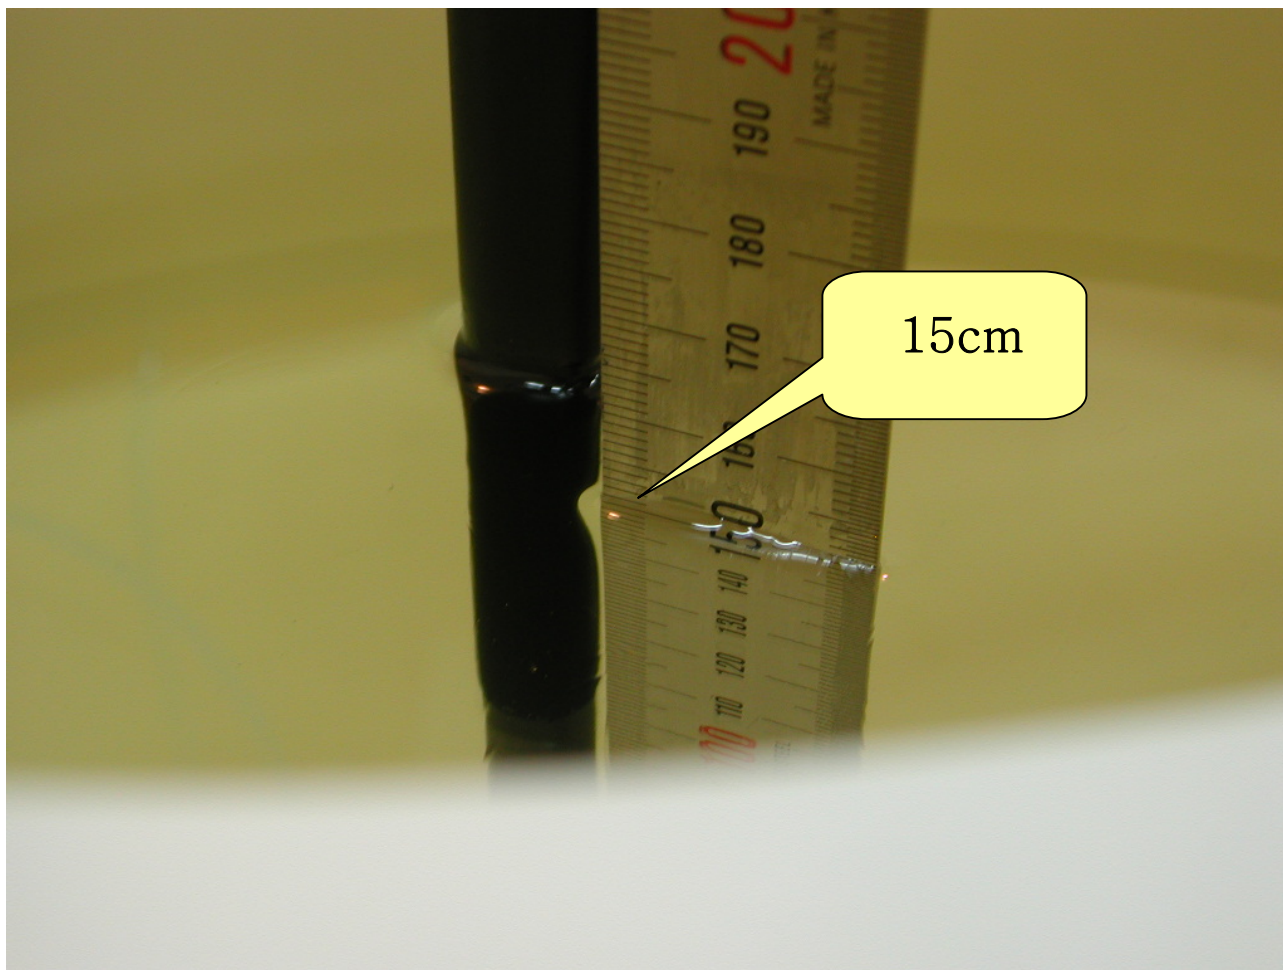


Battery Type: Rocket (Alkaline)

GMRS	
Time	Power Out
0	1.450
2	1.395
4	1.349
6	1.302
8	1.235
10	1.169
12	1.123
14	1.056
16	0.987
18	0.962
20	0.935
22	0.915
24	0.900
26	0.876
28	0.865
30	0.859
32	0.846
34	0.839
36	0.826
38	0.824
40	0.810

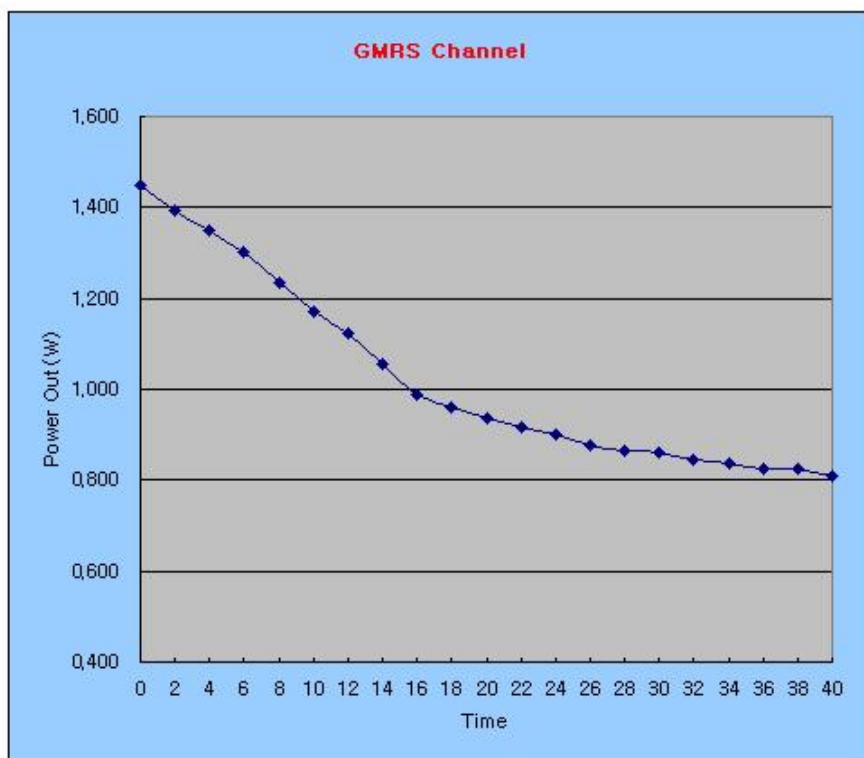

FRS	
Time	Power Out
0	0.574
2	0.535
4	0.501
6	0.469
8	0.449
10	0.426
12	0.416
14	0.406
16	0.398
18	0.385
20	0.376
22	0.364
24	0.355
26	0.347
28	0.339
30	0.331
32	0.328
34	0.320
36	0.316
38	0.311
40	0.309

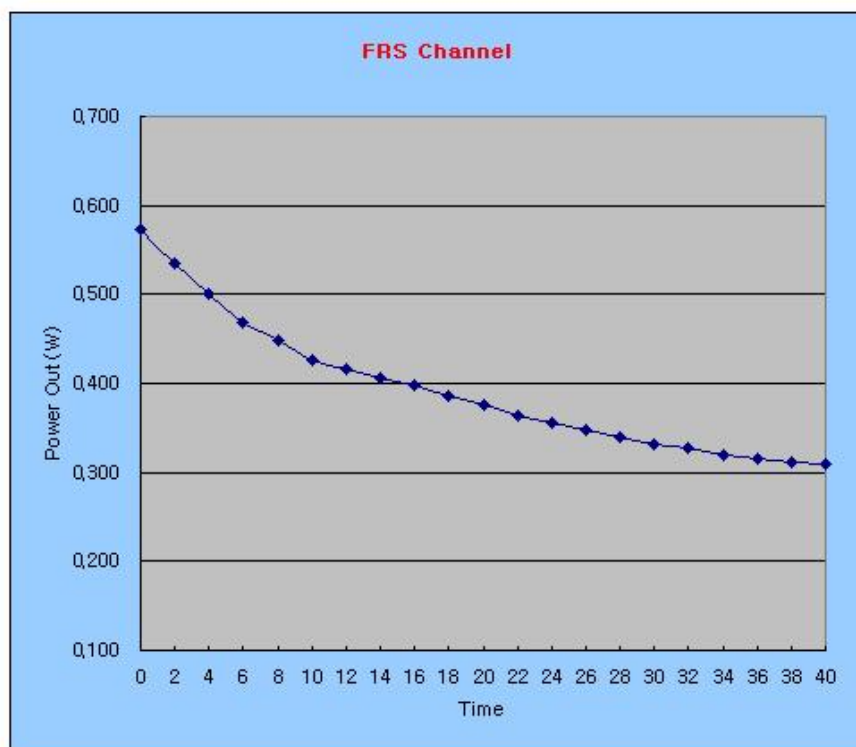

Date: February 25, 2005

Federal Communications Commission
Authorization and Evaluation Division
7435 Oakland Mills Road
Columbia, MD21046

Subject: LXT210 Model Battery Type

To whom it may concern

Here we would like to confirm that the 'AA' type batteries only should be used
For this subject model LXT210. (FCC ID: MMALXT210)

Sincerely Yours,
Global Link Corporation Limited.

Signed by

President



Feb' 24 '2005