

V6 MAX WIRELESS MECHANICAL KEYBOARD USER MANUAL





# **Fully Assembled Version**

### Keyboard

1x Fully Assembled Keyboard Including

1x Case

1x PCB

1x PC Plate

1x PET Film

1x Case Foam

1x Sound Absorbing Foam

8 Sets x Stabilizers

1 Set x Keycaps (PBT Double-shot)

1 Set x Switches

#### Cable

1x Type-C to Type-C Cable

1x Type-A to Type-C Adapter

1x Extension Adapter For Receiver

### Receiver

1x Type-A 2.4GHz Receiver 1x Type-C 2.4GHz Receiver


#### Tools

1x Keycap & Switch Puller

1x Screwdriver

1x Hex Key



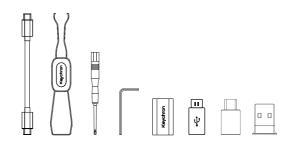

## **Barebone Version**

### Keyboard Kit

1x Keyboard Kit (Without Keycaps & Switches) **Including** 

- 1x Case
- 1x PCB
- 1x PC Plate
- 1x PET Film
- 1x Case Foam
- 1x Sound Absorbing Foam
- 8 Sets x Stabilizers

#### Cable

- 1x Type-C to Type-C Cable
- 1x Type-A to Type-C Adapter
- 1x Extension Adapter For Receiver


### Receiver

- 1x Type-A 2.4GHz Receiver
- 1x Type-C 2.4GHz Receiver

#### Tools

- 1x Keycap & Switch Puller
- 1x Screwdriver
- 1x Hex Key




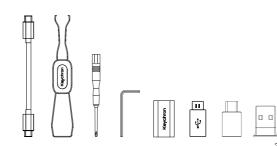

# **Quick Start Guide**


If you are a Windows user, please find the appropriate keycaps in the box, then follow the instructions below to find and replace the following keycaps.

### Mac / Windows

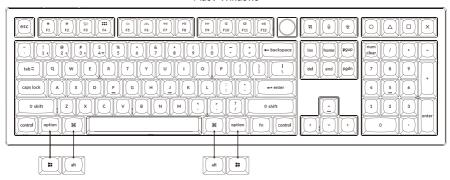

### 1 Switch To The Right System

Please make sure the system toggle on the top left corner has been switched to the same system as your computer's operating system.




## 2 Connect 2.4GHz Receiver

Connect the 2.4GHz receiver to the device USB port.



Switch toggle to 2.4GHz mode



2.4G = 2.4GHz

Type-C Extension Adapter For Receiver



Note: For the best wireless experience, we recommend using the extension adapter for receiver and putting the 2.4GHz receiver somewhere on your desk close to your keyboard for a low rate of latency and fewer signal interferences.

### 3 Connect Bluetooth



Switch toggle to Bluetooth



Press fn + 1 (for 4 seconds) and pair with device named Keychron V6 Max.



## 4 Connect Cable











### 5 The VIA Key Remapping Software

Please visit <u>usevia.app</u> to use the online VIA software to remap the keys. If the VIA cannot recognize your keyboard, please reach our support to get the instruction.



\*The online VIA software can only run on the latest version of Chrome, Edge, and Opera browsers yet.

\*VIA only works when the keyboard is connected by wire to the computer.

## 6 The Layers

There are four layers of key settings on the keyboard. The layer 0 and layer 1 are for the Mac system. The layer 2 and layer 3 are for the Windows system.

If your system toggle is switched to Mac, then the layer 0 will be activated

If your system toggle is switched to Windows, then the layer 2 will be activated. Remember that if you are using it in Windows mode, please make changes to the layer 2 instead of the top layer (the layer 0). This is a common mistake people are making.









### 7 The Backlight

Press fn + Q to change the lighting effect




Press fn + tab to turn the backlight on/off



## 8 Adjust The Backlight Brightness

Press fn + W to increase the backlight brightness



Press fn + S to decrease the backlight brightness

